


10/1/05  
PRINTED  
BY  
SILVER  
STRIKE

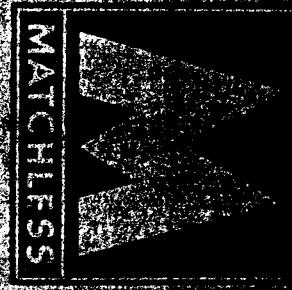

COLLECTOR'S  
ITEM

## INTRODUCTION.

---

We have pleasure in presenting this Spares List for the  
"Matchless" Models 34/F, 34/F4 and 35/F4.

Every part likely to be required can be readily found by  
reference to the various illustrations.

Every part has a distinctive number and in ordering care  
must be taken to give both description and part number.

Read carefully rules on Pages 3, 4 and 5.

Always quote both engine and frame number of your  
cycle when corresponding or ordering spare parts.

MATCHLESS MOTOR CYCLES (COLLIERS) LTD.

## TERMS OF BUSINESS.

८३

Our invaryable rule in this department is nett cash with order. Remittance to £1 in value may be sent by Postal Order, but over this amount it is advisable to remit by cheque. Cheques to be made payable to Matchless Motor Cycles (Colliers) Ltd., and crossed. When making a remittance by Telegraph Money Order, the name and address of sender should be included, as unless this is done, the Post Office do not give this information in the telegram. We frequently receive Telegraph Money Orders without sender's name, with the result that we cannot trace by whom the amount is sent and we have to await until the customer writes complaining about delay before the matter can receive attention. If remittance is not sufficient to pay for postage or carriage, goods will be sent "Carriage Forward" (Goods Train). All remittances accounts are strictly *nett cash* before delivery.

۱۰

**IMPORTANT NOTE RE C.O.D.—**Owing to the labour involved and to the fact that the minimum C.O.D. fee is 10d., only goods to the value of 5s. and over can be sent on the above system.

**DEPOSIT ACCOUNT.**

We strongly advise all owners of Matchless Motor Cycles to take advantage of our "Deposit System." It often occurs that parts are required by return, but unless customers have a current account, there is the inevitable delay while a pro forma invoice is sent, and we have to await receipt of the remittance before the goods can be despatched. This delay causes considerable inconvenience to the party concerned, and can be avoided by opening a Deposit Account.

A remittance of not less than £2 entitles a customer to this form of account, and when goods are ordered by phone, telegram, or letter they will be despatched at the earliest possible moment by the quickest route. Invoices will be sent for all goods supplied and a statement will be rendered when required showing amount of deposit in hand. Customers will be notified immediately their deposit becomes exhausted, so that they can renew same. We are at all times prepared to return balance of deposit upon request.

reference as shown on monthly statements.

FOREIGN ORDERS.

The conditions governing the supply of spares against Home orders equally apply to orders received from Overseas. It must be noted that the C.O.D. system (**Cash on Delivery or Value Payable by Post**) can only be used in connection with Overseas orders when those orders are accompanied with cash to not less than 25 per cent. of the value of the complete order. This condition is necessary because of the difficulties presented by foreign exchange and the expenses that may be incurred if delivery of the consignment cannot be made, such as might arise in the event of the client refusing to take delivery.

Therefore, Overseas orders should be totalled and 25 per cent. of that total should accompany the order.

Continental clients can best remit the deposit by sending a cheque drawn on a London Bank, or by an International Money Order, which is obtainable at most post offices.

Colonial clients can best remit the deposit by sending a cheque drawn on a London Bank or by Bankers' Draft, although it is always preferable to demand spares through the local agent, who generally can obtain same in the Colony, thereby saving time and money.

Under no circumstances can foreign C.O.D. (V.P.P.) consignments be sent without this deposit.

### **ESTIMATES.**

It is becoming a general practice for customers when sending their engines or complete motor cycles to us for repairs, to request a detailed estimate for the necessary repairs before proceeding with the work.

We are always pleased to furnish these estimates, but it must be distinctly understood that only approximate quotations can be given, as when re-erecting, it is often found that other repairs or new parts are necessary, which it was impossible to locate when dismantling.

In some instances, when an estimate has been submitted, several of the items quoted for are questioned as being unnecessary or not required. We may say that we only include in our quotations new parts and repairs that we consider essential to make the machine suitable and satisfactory for the road.

If an estimate is not accepted, i.e., the parts returned to the owner in their original condition, a nominal charge is made for taking down and re-assembling.

All repair accounts are strictly nett cash before delivery.

### **OVERHAULING.**

When sending us a complete motor cycle, engine, gear box or other part with the request that we overhaul same, we understand by the term "overhaul", that it is to be entirely dismantled, thoroughly renovated, and all badly worn parts renewed and put in perfect working order. In case a customer desires only certain parts attended to, explicit instructions should be given us to that effect, otherwise cost may be far in excess of what is anticipated.

### **DAMAGE IN TRANSIT.**

Our responsibility ceases when goods leave our works, and claims must be made on carriers in the event of damage occurring in transit. Any such damage should be immediately reported to the carriers.

NOTE.—By the Railway Companies' special regulations, unless damage in transit is reported within three days of receipt of goods no claim can be entertained. Goods not unpacked at the time of receipt should always be signed for as "Unexamined."

## **PROPRIETARY PARTS.**

The proprietary parts of equipment listed are those that are stocked and supplied as spares. For prices of other parts, application should be made to the manufacturers concerned.

### **HOW TO ORDER SPARES.**

State:—

- (1) Model of Machine.
- (2) Engine Number (with letters incorporated).
- (3) Serial number of item required.
- (4) Quantity required.
- (5) Description or name of parts.
- (6) Say how you wish spares to be sent.
- (7) Enclose remittance to cover cost of spares and carriage (unless you have a deposit account or wish goods to be sent C.O.D.).  
(NOTE.—Only goods value 5s. or over sent by C.O.D. Also please see previous pages re foreign orders.)
- (8) Your full name and address.

It is advisable to number and date your order and keep a copy for reference in case of misunderstanding.

### **NOTE.**

The prices of spares do not include the cost of carriage. Spares can only be sent "carriage forward" by goods train.

Each series of frames is numbered from zero upwards. Therefore, the quotation of a frame number does not enable a machine to be identified. Always quote the engine number as well.

### **ALL CORRESPONDENCE**

Should be addressed to:—

Messrs. MATCHLESS MOTOR CYCLES (COLLIERS) LIMITED,  
44-45, PLUMSTEAD ROAD,

PLUMSTEAD,  
LONDON, S.E.18.

### **ALL GOODS**

Should be addressed to:—

Messrs. MATCHLESS MOTOR CYCLES (COLLIERS) LIMITED,  
BURRAGE GROVE,  
PLUMSTEAD,  
LONDON, S.E.18.

1934  
H

## ENGINE PARTS

Q

DE	27	Bush for flywheel axle, timing side	3	0
RE	45	Bush for gudgeon pin	2	6
L4E	318A	Big end liner, or bush	2	6
CE	36	Bush for exhaust camshaft, crankcase side	1	9
FE	36	Bush for exhaust camshaft, timing gear	2	0
CE	36	Bush for inlet camshaft, crankcase or timing gear, cover side	1	9
RLS	15985	Bush, bronze, for overhead rocker axles (4 off)	2	3
RLS	7	Bearing, journal, for flywheel axle bearing, driving side (2 off)	10	0

1


C—contd.

Part Number	Description	Price Each £ s. d.
D2E 1216	Connecting rod, bare (less small and big end bushes) ...	16 0
D2E 1216A	Connecting rod with small and big end bushes	1 1 0
D2E 1216B	Connecting rod complete with small end bush and big end assembly (crankpin, crankpin washers, rollers, nuts and big end liner) ...	1 13 6
L4E 318A	Connecting rod big end liner	2 6
AE 17	Crankpin	4 9
L4E 306	Crankpin rollers (30 per set)	each 2
D8E 1818	Crankpin washers ...	1 0
FE 70	Crankpin fixing nuts	5
STD 15	Locking screw for above	1
DE 132	Camshaft, inlet	9
FE 131	Camshaft, exhaust	10 6
FE 239	Crankcase drain plug	4
R4E 1036	Cap for outer inlet camshaft bush	3
FE 63	Covering tubes for tappet push rods	3 6
M 2316/1E	Contact breaker cam, fits on exhaust cam-shaft	4 0
M 3660/3	Bolt securing above	2 2
KY 1002/1	Washer for above	1 1
KY 17	Contact breaker bakelite cover or cap complete with condenser	6 6
FE 91	Stud securing above	2 2
FE 91N	Nut for above	1 1
M 2890	Spring washer for above	1 1
<b>D</b>		
SE 39	Drain plug for crankcase	4 4
SE 57	Dowel peg, locating timing cover (fits in crankcase) ...	1 1
SE 56	Decompressor handle or lever	3 3
SE 60	Decompressor vertical shaft	3 6
SE 40	Decompressor cross shaft	2 6
SE 61	Decompressor rocker	3 6
SE 63	Decompressor plungers (2 off)	2 2
SE 62	Decompressor plunger springs (2 off)	1 1
<b>F</b>		
FE 1219	Flywheel, driving side	10 0
FE 1225	Flywheel, timing side	10 0
FE 20	Flywheel axle or shaft, driving side	9 5
FE 95	Keys for above	3 3

Part Number	Description	Price £	Each
L3E	70 Nut securing above axle to flywheel	5	5
STD	15 Lock screw for above	1	1
RLS	7 Ball or journal bearing for above shaft (2 off)	10	0
DE	26 Flywheel axle or shaft, timing side	8	0
LE	85/S Key for above (locates small timing pinion)	3	3
L3E	70 Nut securing above <b>axle</b> to flywheel	5	5
STD	15 Lock screw for <b>above</b>	1	1
RE	82 Nut securing small timing pinion (left-hand thread)	3	3
DE	27 Bush for timing side flywheel axle	3	0
<b>G</b>			
D2E	1214 Gudgeon pin	2	9
RE	12366 Gudgeon pin securing rings	4	0
FE	45 Guide for tappet	2	6
LE	83 Guide for valve	2	6
MB	148S Grease nipples for rocker box, plain type (3 off)	2	3
PJ	65 Grease nipple for rocker box, angular type (1 off)	2	2
BE	99 Oil pump plunger or shaft	6	0
AE	96 Oil pump plunger guide screw	6	0
AE	97 Oil pump plunger end caps	6	0
AE	98 Small hexagon-headed screws securing above. (8 off)	2	2
AE	95 Paper washers for oil pump plunger end caps	1	1
<b>O</b>			
D2E	1212 Piston, standard size	10	0
OD2E	1212 Piston, .020in. oversize	10	0
DE	11 Piston rings, standard size (3 off)	1	6
ODE	11 Piston rings, .020in. oversize (3 off)	1	0
D2E	1212A Piston complete with rings, gudgeon pin, and gudgeon pin securing rings (stan- dard size)	16	5
OD2E	1212A Piston, .020in. oversize, complete with rings, gudgeon pin and securing rings	16	5
R4E	1028 Pinion, small timing	3	9
LE	85/S Key for above	3	3
<b>P</b>			
D2E	1212 Piston, standard size	10	0
OD2E	1212 Piston, .020in. oversize	10	0
DE	11 Piston rings, standard size (3 off)	1	6
ODE	11 Piston rings, .020in. oversize (3 off)	1	0
D2E	1212A Piston complete with rings, gudgeon pin, and gudgeon pin securing rings (stan- dard size)	16	5

P—contd

Part Number	P—contd.	Price Each £. s. d.
RE 82	Nut securing above pinion (left-hand thread)	3
FE 13	Push rod only, less ends (7 $\frac{3}{8}$ in. long)	1
VE 79	Push rod hardened steel ball end, bottom	2
FE 79	Push rod end or sleeve nut, top	1
FE 10	Push rod adjusting screw or bolt	0
FE 23	Lock nut for above	9
FE 63	Push rod covering tubes	4
FE 74	Rubber rings for bottom end of above	6
FE 174	Rubber rings for top end of above...	3
CE 43	Screws securing push rod covering tubes to rocker box	1
CF 39	Peg, dowel, locating timing gear cover	1

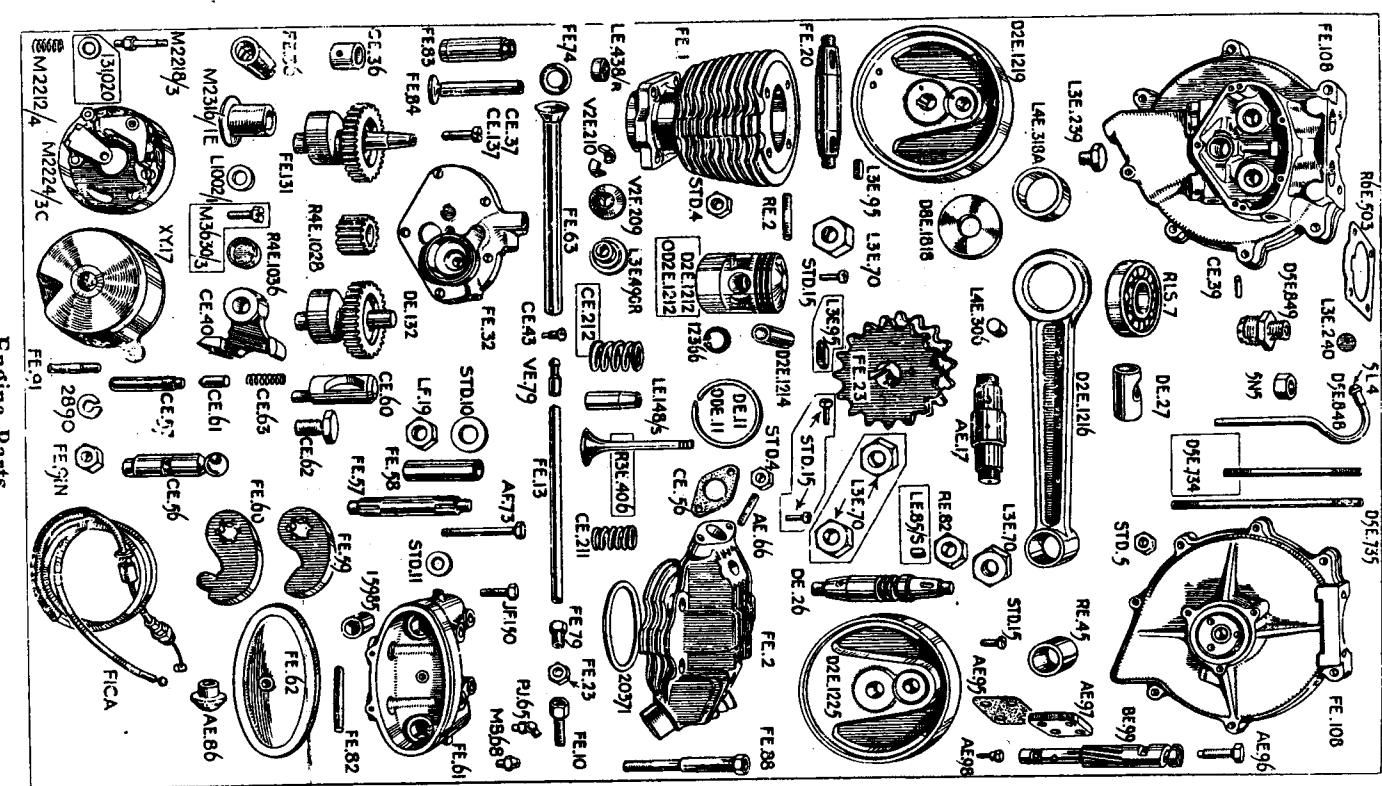

Engine Parts.

Part Number		S	Price Each £ s. d.
L3E	153	Spark plug with C. and A. washer (Lodge H.1)	6 0
L3E	246	Spark plug C. and A. washer only	2 0
CE	212	Spring, outer, for valves	1 0
CE	211	Spring, inner, for valves	6 0
FE	23	Sprocket, engine and dynamo drive (16 x 16 teeth)	8 6
L3E	95	Key for above	3 0
L3E	70	Nut securing sprocket	5 0
STD	15	Lock screw for above	1 0
DE	38	Sprocket for dynamo (12 teeth)	3 6
M	450/1A	Key for above	1 0
FE	186	Nut securing above sprocket	6 0
D5E	187	Locking washer for above	2 0
D5E	188	Retaining spring ring for above washer	1 0
CE	137	Screw securing timing gear cover, long (3 off)	2 0
CE	37	Screw securing timing gear cover, short (2 off)	2 0
CE	43	Screws securing top end of push rod covering tubes to rocker box	1 0
CE	63	Springs for decompressor plungers	1 0
STD	15	Screws for locking flywheel axle fixing nuts	1 0
FE	12366	Securing rings for gudgeon pin	4 0
FE	58	Sleeves, hardened steel, for rocker spindles	3 0
T			
FE	32	Timing gear cover with camshaft bushes only	12 6
CE	137	Screws securing above, long (3 off)	2 0
CE	37	Screws securing above, short (2 off)	2 0
DE	132	Timing gear camshaft, inlet	9 6
FE	131	Timing gear camshaft, exhaust	10 6
R4E	1036	Timing gear cover cap, covering outer inlet camshaft bush	3 0
R4E	1028	Timing gear small pinion (20 teeth)	3 9
LE	85/S	Key for above	3 0
RE	82	Nut securing above pinion ('left-hand thread')	2 0
FE	84	Tappet body	2 6
FE	83	Tappet guide	2 6
FE	63	Tappet push rod covering tubes	3 6
CE	43	Small screws securing top end of above to rocker box	1 0
FE	74	Rubber rings for bottom end of covering tubes	3 0
FE	174	Rubber rings for top end of covering tubes	1 0

## Part Number

## T—contd.

Price Each  
£ s. d.

FE	14	Tappet push rod assembled with ends, tappet adjusting screw and lock nut ...	4 3
FE	13	Tappet push rod only, less ends ( $7\frac{1}{8}$ in. long)	1 2
VE	79	Tappet push rod hardened steel ball end, bottom	1 0
FE	79	Tappet push rod end or sleeve nut, top	1 9
FE	10	Tappet adjusting screw or bolt	1 0
FE	23	Lock nut for above ...	4
<b>V</b>			
R3E	406	Valves, inlet or exhaust ...	7 6
R3E	406A	Valve, complete with springs, collars and valve spring caps ...	11 9
CE	212	Valve springs, outer ...	1 0
CE	211	Valve springs, inner ...	1 6
V2E	209	Valve spring top caps ...	1 2
L3E	490R	Valve spring bottom cap or seat (exhaust only) ...	10
V2E	210	Valve taper collars ... per pair	2 9
LE	148/S	Valve guide ...	2 3
LE	438/R	Valve stem hardened steel end cap ...	7

**Note.**—There is no bottom cap fitted under the inlet valve springs.

## IGNITION

XY	17	Contact breaker bakelite cover complete with condenser ...	5 6
FE	91	Stud securing above (screws in timing gear cover) ...	2
FE	91N	Nut for above ...	1
M	2890	Spring washer for above ...	1
M	2316/1E	Contact breaker cam ...	4 0
M	3630/3	Bolt securing above cam ...	2
L	1002/1	Washer for above ...	1
M	2224/3C	Contact breaker base complete, assembled with rocker arm and points, etc. ...	8 6
M	2218/3	Guide or locating stud for above ...	2
M	2212/4	Spring for above ...	1
ST	131020	Brass washer for above ...	1
FICA		Contact points or screws with rocker arm per pair	3 9
FICO		Ignition control cable complete, assembled ...	1 9
FICW		Ignition control inner wire only ...	6
H	3:27	Nipple for above, handlebar end ...	1
		Nipple for above, contact breaker end ...	1

## Ignition—contd.

Price Each  
£ s. d.

HE	36A	Armouring for outer casing ...	1 0 0
		Screwed gland nut for control cable (screws in timing gear cover) ...	5
		Adjuster for control cable (screws in above) ...	4
		Lock nut for above ...	1
		Rubber gland or sleeve covering adjuster and gland nut ...	3
		Spring for control cable ...	2
		Toggle for control cable, contact breaker end ...	5
		Screw securing above to contact breaker base ...	2
		Ignition coil with clip ...	1 0 0
		Pinch bolt for coil clip ...	3
		Spring washer for above ...	1 1 0
		Nut for above ...	1 6
		H.T. cable only (2ft. 10in. long) ...	6
		Terminal end only, for above ...	3
		Bakelite screwed collar securing H.T. cable to coil ...	4
		Small brass washer for H.T. cable, coil end ...	1 1 0
		Nuts securing wires to coil ...	1 1 0

## EXHAUST PIPE

FE	STD	104A	Low, or standard exhaust pipe ...
		4	Nut securing front end of above to engine bolt ...
			Silencer ...
			Silencer clip, front end ...
			Pinch bolt for above ( $1\frac{1}{8}$ in. under head) ...
			Threaded collar for above ...
			Plain collar for above ...
			Clip supporting rear end of silencer ...
			Pinch bolt for above ( $\frac{3}{8}$ in. long under head) ...
			Nut for above ...
			Spring washer for above ...
			Bolt securing clip to frame ( $9/16$ in. under head) ...
			Spring washer for above ...
			Nut for above ...
			Competition or high exhaust pipe ...
			Long engine bolt securing front end of above ( $8\frac{1}{8}$ in. long) ...
			Nuts for above ...
			Clip for front end of competition exhaust pipe silencer ...
			Bolt securing above to frame (carries saddle spring, $4\frac{1}{8}$ in. long) ...

### **Exhaust Pipe—contd.**

Part Number	Price Each £ s. d.	
STD 4 Inside nut for above ... ... ... ...	2 2	
HFF 63 Outside nut for above ... ... ... ...	2 2	
STD 11 Washer for above ... ... ... ...	1 1	
LM 17 Distance piece for above bolt (2 5/16in. long) ... ... ... ...	1 1	
D2E 1262A Clip supporting rear end of competition exhaust pipe silencer ... ... ... ...	1 6	
	Pinch bolt for above (4in. long under head) ... ... ... ...	
	Spring washer for above ... ... ... ...	3 3
JF 150 Nut for above ... ... ... ...	2 2	
	Bolt securing clip to mudguard and mud-guard stay when carrier is fitted (1 3/16in. long under head) ... ... ... ...	
HF 96 Ditto, when carrier is not fitted (15/16in. long under head) ... ... ... ...	4 4	
STD 4 Nuts for above (2 off) ... ... ... ...	4 4	
STD 11 Washer for above ... ... ... ...	2 2	
<b>ENGINE PLATES AND BOLTS</b>		
FE 50SA Engine plates (2 off) ... ... ... ...	4 0	
RE 50 Top, rear, engine plate bolt (passes through frame and engine plates), 3 7/16in. long x 3/8in. dia. ... ... ... ...	3 3	
STD 3 Nuts for above ... ... ... ...	3 3	
ME 54 Top rear engine plate bolt (passes through frame and engine plates), only when electric horn is fitted, 3 11/16in. long x 3/8in. dia. ... ... ... ...	6 6	
STD 3 Nuts for above ... ... ... ...	3 3	
STD 10 Washer for above ... ... ... ...	1 1	
RE 50 Bottom front, engine plate bolt, 3 7/16in. long x 3/8in. dia. ... ... ... ...	3 3	
STD 3 Nuts for above ... ... ... ...	3 3	
LE 15 Top front engine plate bolt (passes through crankcase and engine plates, 3 9/16in. long x 5/16in. dia.) ... ... ... ...	3 3	
	Nuts for above ... ... ... ...	
STD 4 Centre front engine plate bolt (passes through crankcase and engine plates, carries gear box adjuster block, 3 9/16in. long x 5/16in. dia.) ... ... ... ...	2 2	
	Nut for above ... ... ... ...	
STD 515 Long bottom engine plate fixing bolt (passes through frame and engine plates, 9/8in. long x 5/16in. dia.) ... ... ... ...	3 3	
	Long distance piece for above (2 4/5in. long) ... ... ... ...	
L4M 133 Washers for above ... ... ... ...	3 3	
STD 11 Nuts for above ... ... ... ...	1 1	
STD 4 Nuts for above ... ... ... ...	2 2	

## ENGINE PLATES AND BOLTS

Part Number	Price Each £. s. d.
DE 15	Top front crankcase or engine fixing bolt (passes through frame and crankcase, 8 $\frac{1}{4}$ in. long x 5 $\frac{1}{16}$ in. dia.) ... ...
STD 11	Washers for above ... ...
STD 4	Nuts for above ... ...
DE 23	Bottom front crankcase bolt (passes through frame and crankcase, 8in. long x 5 $\frac{1}{16}$ in. dia.) ... ...
STD 4	Nuts for above ... ...
DF 66	Distance collars for above, 2in. long (2 off)
	<b>FRAME</b>
FF 23	Front portion of main frame ... ...
FF 24	Rear portion of main frame ... ...
LF 40	Rear chain adjusting screws ... ...
STD 5	Lock nuts for above ... ...
BF 40	Distance collars for above, $\frac{1}{8}$ in. long ... ...
DF 123	Saddle lug bolt, carries earth wire terminal, passes through top end of rear frame and saddle lug, 3 $\frac{1}{8}$ in. long ... ...
STD 4	Nuts for above ... ...
STD 11	Washers for above ... ...
STD 79	Nut securing earth wire terminal to above bolt ... ...
	<b>PROP STAND</b>
D5F 844	Centre or prop stand ... ...
D5F 812	Fixing bolt for above, 5in. overall length
L4M 133	Long distance piece for above, 2 $\frac{1}{4}$ in. long
STD 4	End nuts for above ... ...
R2F 250	Plain metal washers (fit under above) ...
HT 6	Double spring washers (fit under above) ...
CF 247	Flanged bushes for fixing bolt ... ...
D5F 545	Prop stand pull-up spring ... ...
FE 63	Anchor pin for pull-up spring ... ...
HFF	Nut for above ... ...
	<b>MUDGUARDS (FRONT AND REAR) AND NUMBER PLATES</b>
FM 2	Front mudguard only ... ...
FM 30	Front mudguard stays (4 off) ... ...
HM 7	Bolts fixing top end of mudguard stays to mudguard (4 off) ... ...
STD 12	Plain metal washers for above ... ...
TF 100	Spring washers for above ... ...
STD 5	Nuts for above ... ...


## MUDGUARDS (FRONT AND REAR) AND

PROP STANI

Part Number	Price Each £ s. d.
DE 15 Top front crankcase or engine fixing bolt (passes through frame and crankcase, 8 $\frac{1}{4}$ in. long x 5/16in. dia.)	6 0
STD 11 Washers for above	1 0
STD 4 Nuts for above	1 0
DE 23 Bottom front crankcase bolt (passes through frame and crankcase, 8in. long x 5/16in. dia.)	2 0
STD 4 Nuts for above	2 0
DF 66 Distance collars for above, 2in. long (2 off)	3 0
<b>FRAME</b>	
FF 23 Front portion of main frame	2 15 0
FF 24 Rear portion of main frame	2 0
LF 40 Rear chain adjusting screws	2 0
STD 5 Lock nuts for above	9 0
BF 40 Distance collars for above, 8in. long	2 0
DF 123 Saddle lug bolt, carries earth wire terminal, passes through top end of rear frame and saddle lug, 3 $\frac{1}{8}$ in. long	2 0
STD 4 Nuts for above	6 0
STD 11 Washers for above	2 0
STD 79 Nut securing earth wire terminal to above bolt	1 0
<b>PROP STAND</b>	
D5F 844 Centre or prop stand	12 0
D5F 812 Fixing bolt for above	6 0
L4M 133 Long distance piece for above, 2 $\frac{1}{4}$ in. long	4 0
STD 4 End nuts for above	3 0
R2F 250 Plain metal washers (fit under above)	2 0
HT 6 Double spring washers (fit under above)	1 0
CF 247 Flanged bushes for fixing bolt	2 0
D5F 545 Prop stand pull-up spring	3 0
FE 50C Anchor pin for pull-up spring	7 0
HFF 63 Nut for above	2 0
<b>MUDGUARDS (FRONT AND REAR) AND NUMBER PLATES</b>	
FM 2 Front mudguard only	10 0
FM 30 Front mudguard stays (4 off)	9 0
HM 7 Bolts fixing top end of mudguard stays to mudguard (4 off)	3 0
STD 12 Plain metal washers for above	1 0
TF 100 Spring washers for above	1 0
STD 5 Nuts for above	1 0

**Mudguards (Front and Rear) and Number Plates—contd.**

Part Number	Price Each £ s. d.
LF 39	Bolt fixing bottom end of mudguard stay to fork girder ( $\frac{3}{8}$ in. long under head) ...
FM 7	Distance collar for above ( $\frac{1}{8}$ in. thick) ...
STD 11	Plain metal washer for above ...
HM 7	Bolt fixing mudguard to fork girder ...
TF 100	Spring washer for above ...
STD 5	Nut for above ...
RM 10	Front number plate, bare ...
STD 16	Fixing screws for above ...
STD 24	Nuts for above ...
RM 27	Licence holder rim only ...
RM 28	Transparent licence holder panel ...
RM 29	Rubber ring for licence holder ...
RM 33	Cardboard back plate for licence holder ...
RM 34	Licence holder fixing screws ...
RM 35	Nuts for above ...
RM 9	Front number plate assembled with licence holder ...
FM 4	Rear mudguard complete (two portions, front and rear) ...
FM 4F	Front portion of rear mudguard ...
FM 4R	Rear portion of rear mudguard ...
TF 41	Bolt securing bottom end of front portion to frame ( $1\frac{3}{8}$ /16in. long under head) ...
TF 100	Spring washer for above ...
STD 5	Nut for above ...
RF 71	Bolt securing top end of front portion to frame ( $1\frac{7}{16}$ in. long under head) ...
TF 100	Spring washer for above ...
STD 5	Nut for above ...
STD 3	Nut for mudguard joint stud ...
STD 10	Washer for above ...
FM 29	Rear mudguard stay, rear end (long) ...
HM 7	Bolt securing above stay to mudguard ...
STD 12	Plain metal washer for above ...
TF 100	Spring washer for above ...
STD 5	Nut for above ...
FF 1000	Rear mudguard arch ...
CF 58	Stud securing bottom end of rear mudguard arch and mudguard stays to frame (1in. long) ...
HFF 63	Lock nuts for above (inside) ...
STD 4	Nut for above (outside) ...
LF 39	Bolts securing rear mudguard arch to mudguard ( $9/16$ in. long under head) ...
STD 11	Washers for above ...

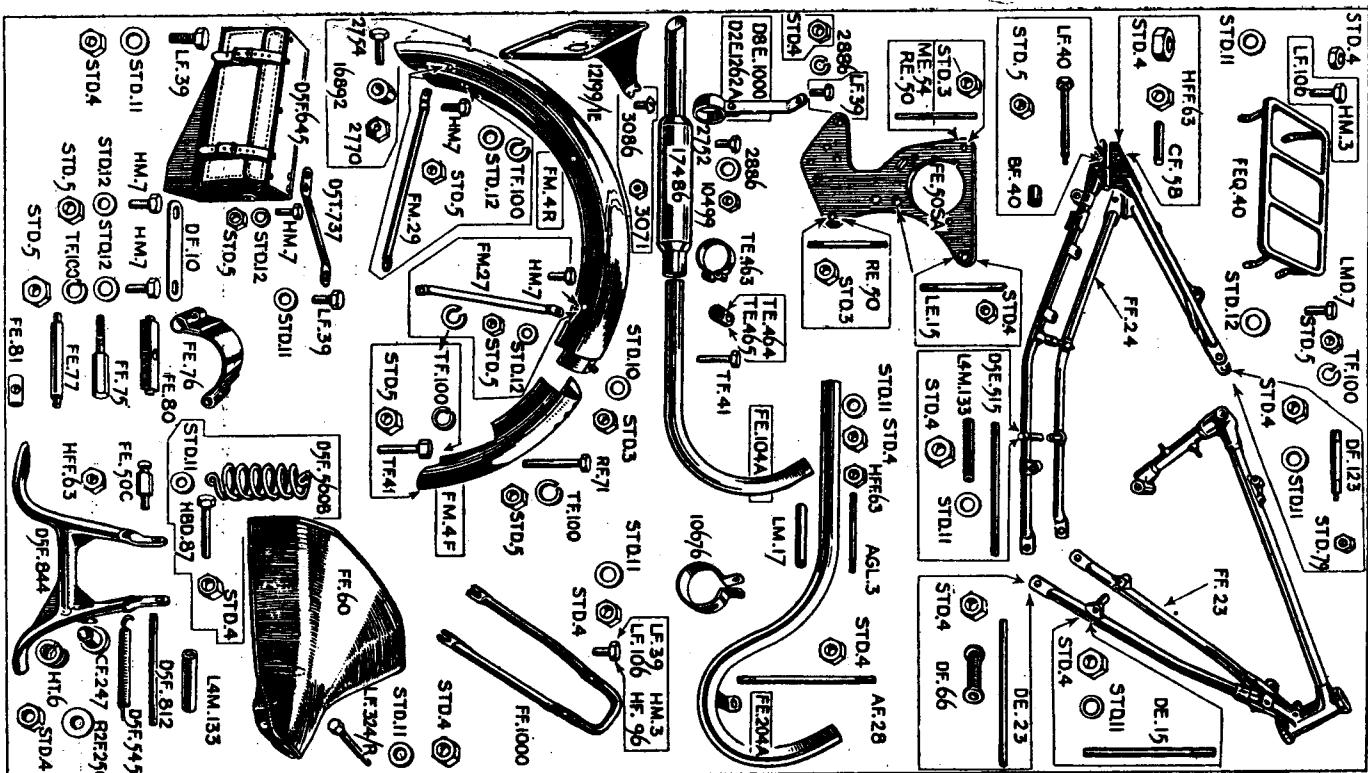

Frame, Exhaust Pipes, Rear Mudguard, etc

**Mudguards (Front and Rear) and Number Plates—contd.**

Part Number	Price Each £ s. d.
STD 4	Nuts for above ... ...
HM 3	Bolts securing rear mudguard arch to mudguard when carrier only is fitted (1/4in. under head) ...
HF 96	Bolt securing rear mudguard arch to mudguard, off side, when high exhaust pipe only is fitted (1in. long under head) ...
STD 4	Nuts for above two bolts ...
STD 11	Washers for above ...
LF 106	Bolt securing rear mudguard arch to mudguard, off side, when carrier and high exhaust pipe are fitted (1 5/16in. under head) ...
STD 4	Nuts for above ...
STD 11	Washers for above ...
HM 7	Bolt securing above to mudguard ...
STD 5	Nut for above ...
STD 12	Washer for above ...
TF 100	Spring washer for above ...
12199/IE 3086	Rear number plate ...
	Screws securing above to rear mudguard (round head) ...
3071	Nuts for above ...
2754	Bolt securing bottom of number plate to mudguard (1/4in. long under head) ...
16892	Distance collar for above ...
2770	Nut for above ...

**PARTS USED ONLY WHEN CHROMIUM-EDGED MUDGUARDS ARE FITTED**

Part Number	Price Each £ s. d.
FM 102	Front mudguard ... ...
RM 30	Front mudguard stays ... ...
LF 39	Bolt fixing bottom end of stays to fork girder ...
FM 7	Distance collar for above (1in. thick) ...
STD 11	Washer for above bolt ...
HM 7	Bolt fixing top end of stays to mudguard ...
TF 100	Spring washer for above ...
STD 5	Nut for above ...
HM 7	Bolt fixing mudguard to fork girder ...
TF 100	Spring washer for above ...
STD 5	Nut for above ...
TFF 67	Front stand ...
LF 32	Front stand fixing bolt (1/4in. under head) ...
STD 11	Washer for above ...

**Parts used only when Chromium-Edged Mudguards are fitted—contd.**

Part Number	Price Each £ s. d.
HFF 63	Nut for above ...
RM 31	Front stand clip bolt ...
STD 12	Washers for above ...
STD 5	Nuts for above ...
D8M 804	Rear mudguard complete (two portions, front and rear) ...
D8M 804F	Rear portion of rear mudguard ...
STD 3	Front portion of rear mudguard ...
STD 10	Nut for mudguard joint stud ...
TF 41	Washer for above ...
TF 100	Bolt fixing bottom end of front portion to frame (1 1/4in. long under head)
STD 5	Spring washer for above ...
RF 71	Nut for above ...
TF 100	Bolt fixing top end of front portion to frame (1 1/4in. long under head)
STD 5	Spring washer for above ...
D8F 800	Nut for above ...
HM 7	Rear mudguard arch assembly ...
TF 100	Bolt securing top of above to mudguard ...
STD 5	Spring washer for above ...
LF 32	Nut for above ...
	Bolt securing rear end of mudguard arch to mudguard, also carries number plate stay (1/4in. long under head) ...
STD 4	Nut for above ...
CF 58	Stud securing bottom end of mudguard arch to frame (1in. long)
HFF 63	Inside lock nut for above ...
AF 59	Collared nut for above stud (outside)
LF 32	Bolts securing rear mudguard inner strap to mudguard arch (1in. long under head)
STD 12	Washers for above ...
STD 5	Nuts for above ...
HM 3	Bolts securing rear mudguard inner strap to mudguard arch when carrier only is fitted (1/4in. long under head)
STD 12	Washers for above ...
STD 5	Nuts for above ...
LF 106	Bolt securing rear mudguard inner strap to mudguard arch, off side only, when competition exhaust pipe only is fitted (1 5/16in. long under head) ...
STD 11	Washers for above ...
STD 4	Nuts for above ...

Parts used only when Chromium-Edged Mudguards are fitted—contd

Parts used only when Chromium-Edged Mudguards are fitted—contd.						Price Each £ s. d.
Part Number						
LF	106	Bolt securing rear mudguard inner strap to mudguard arch, off side only, when carrier and competition exhaust pipe is fitted ('1/5" 16in. long under head)	4			
STD	11	Washers for above	1			
STD	4	Thick nut for above	1			
HFF	63	Thin nut for above	1			
BM	70	Rear number plate	2	0		
D5M	514	Rear number plate centre stay or strap	6	0		
D5M	505R	Rear number plate side stay or strap, off side	9	0		
D5M	505L	Rear number plate side stay or strap, near side	9	0		
STD	40	Screw securing side stay to number plate	1	0		
STD	24	Nut for above	2	0		
HM	7	Bolt securing rear number plate (3 off)	3	0		
STD	12	Washers for above	1	0		
STD	5	Nuts for above	2	0		
<b>REAR CARRIER (Standard Type)</b>						
FEO	40	Rear carrier only	13	6		
LMD	7	Bolts fixing front end of carrier (11/16in. long. under head)	3	0		
STD	5	Nuts for above	2	0		
STD	12	Plain metal washers for above	1	0		
TF	100	Spring washer for above	1	0		
HM	3	Bolts fixing rear end of carrier (4in. long under head)	3	0		
STD	4	Nuts for above	2	0		
STD	11	Washer for above	1	0		
LF	106	Bolt fixing rear end of carrier, off side only, when high exhaust pipe is fitted (1 5/16in. long under head)	4	0		
STD	4	Nuts for above	2	0		
STD	11	Washers for above	1	0		
<b>REAR CARRIER</b>						
<b>(When Chromium-Edged Mudguards are Fitted)</b>						
D5F	540	Rear carrier only	13	6		
LMD	7	Bolts fixing front end of carrier (11/16in. long under head)	3	0		
STD	5	Nuts for above	2	0		
STD	12	Washers for above	1	0		
HM	3	Bolts fixing rear end of carrier (4in. long under head)	3	0		

## REAR CARRIER

**REAR CARRIER**  
ium-Edged Mudguards are Fitted

LM	17	Distance piece for above (2 5/16in. long)	4
STD	4	Inside nut for above bolt	3
HFF	63	Outside nut for above bolt	2
STD	11	Washer for above	2
		end (when high exhaust pipe is fitted,	
L	200,023	Dynamo complete	10
	200,025	Dynamo commutator strap or cover	0
L	1304,1/2C	Pinch screw for above	0
	200,027	Dynamo brushes (per set of 3)	0
DE	38	Dynamo driving sprocket (12 teeth)	0
M	450,1A	Key locating above	0
FE	186	Fixing nut for above sprocket	0
D5E	187	Locking washer for above	0
D5E	188	Retaining spring ring for above washer	0
NC	402/14	Metal tags or plugs for dynamo positive and negative wires	0
L	4953,1	Insulated strip securing above	0
L	4991,4	Long screw fixing above to dynamo	0
FE	76	Strap securing dynamo	0
FE	77	Round cross bar for above	6
FE	80	Square cross bar for above	4
FE	75	Long hexagon headed bolt, passes through above	9

## SADDLE AND PARTS

<b>DYNAMO AND PARTS</b>	
dynamo complete	...
dynamo commutator strap or cover	...
inch screw for above	...
dynamo brushes (per set of 3)	
dynamo driving sprocket (12 teeth)	
key locating above	...
fixing nut for above sprocket	...
locking washer for above	...
retaining spring ring for above	...
retail tags or plugs for dynamo	...

FF	60	Saddle top complete assembled (Lysets)	1	10
D5F	560B	Saddle coil spring ... ...	1	0
HBD	87	Bolt fixing bottom end of saddle spring (1½in. long under head)	3	1
STD	4	Nut for above ... ...	2	1
STD	11	Washer for above ... ...	1	8
LF	324/R	Saddle nose bolt ... ...	8	2
STD	4	Nut for above ... ...	2	1
STD	11	Washer for above ... ...	2	1
AGL	3	Stud fixing off side saddle spring, bottom end (when high exhaust pipe is fitted, 4½in. long)	3	1
LM	17	Distance piece for above (2 5/16in. long)	4	3
STD	4	Inside nut for above bolt ... ...	2	2
HFF	63	Outside nut for above bolt ... ...	2	2
STD	11	Washer for above ... ...	1	1
<b>DYNAMO AND PARTS</b>				
L	200,023	Dynamo complete ... ...	2	10
	200,025	Dynamo commutator strap or cover ...	1	0
	1304½C	Pinch screw for above ... ...	1	0
DE	200,027	Dynamo brushes (per set of 3) ...	3	0
	38	Dynamo driving sprocket (12 teeth) ...	3	6
M	450/1A	Key locating above ... ...	1	6
FE	186	Fixing nut for above sprocket ...	2	2
D5E	187	Locking washer for above ...	1	1
D5E	188	Retaining spring ring for above washer ...	1	1
NC	402/14	Metal tags or plugs for dynamo positive and negative wires ...	1	1
L	4953/1	Insulated strip securing above ...	2	2
L	4991/4	Long screw fixing above to dynamo ...	2	2
FE	76	Strap securing dynamo ...	1	6
FE	77	Round cross bar for above ...	4	4
FE	80	Square cross bar for above ...	8	8
FE	75	Long hexagon headed bolt, passes through above ...	5	5
FE	81	Round collar for above bolt ...	1	1

Handlebar complete assembled with levers,  
twist grip, horn switch cable and dip-

ping switch cable, less control cables 2 19 0

Handlebar, bare, less all fittings 1 2 6

Locating rings for twist and dummy grips 1 1 0

Grub screws for above 1 1 1

Shim washers for twist and dummy grips  
(4 off) 1 1 1

Twist grip sleeve with rubber only 3 2 3

Twist grip and dummy grip rubbers only 1 1 3

Dummy grip sleeve with rubber 2 3 2

Cap washers for inner ends of grips 5 5 1

End plug for handlebars 1 0 1

Screw securing above 1 1 1

Twist grip and dummy grip outer end caps  
Fixing bolts for above 1 0 1

Plain metal washer for end plug (twist  
grip end only) 3 3 2

Double spring washer for end plug (twist  
grip end only) 2 2 2

Twist grip inner slider 9 9 9

Screws for above securing nipple or outer  
casing 9 9 9

Clutch lever 3 0 1

Ignition lever 2 6 2

Air lever 1 9 1

Front brake lever 3 0 3

3266

Bush for clutch and front brake lever 3 3 3

Bush for ignition and air lever 3 3 3

Long fulcrum screw for levers (1 1/8 in. long  
under head) 3 3 3

Double spring washer for above 5 5 5

Plain metal washer for above 1 1 1

Collared nut for above 3 3 3

Lock nut for above 2 2 2

Horn switch knurled ebonite ring 2 0 2

Dipping switch knurled ebonite ring 2 6 2

Horn switch push button 6 6 6

Ebonite contact block for horn switch 1 6 1

Ebonite contact block for dipping switch 2 0 2

Revolving nipples for clutch and front brake  
levers 3 0 3

Adaptor for front brake control outer casing 3 3 3

Adaptor for air control outer casing 3 3 3

Adaptor for clutch control outer casing 3 3 3

**Handlebar Group—contd.**

Part Number	Handlebar Group—contd.	Price Each £ s. d.
H 3488	Adaptor for ignition control outer casing	3
F DSC	Dipping switch cable only	0
FHSC	Horn switch cable only	6
<b>FRONT FORK</b>		
FFF 1A	Front forks complete assembled with crown and stem, links, fork spindles, spring, etc., less mudguard and stand	7 6
FFF 1	Front fork girder only	4 7 6
FFF 19	Front fork crown and stem	2 12 0
FFF 21	Head clip	13 0
FFF 21B	Handlebar clip	7 6
JF 150	Bolt securing above to head clip (2 off)	10
FFF 32	1½in. under head	4
HF 47	Front fork spring	3 0
	Top front fork spring fixing bolt (2 3/16in. under head)	6
FEQ 4	Top front fork spring fixing bolt, 3½in. long	3
	(Used only when speedometer is fitted)	
STD 10	Washer for above two bolts	1
STD 3	Nut for above	1
MAMD 158	Distance piece for above long bolt	3
V2FF 51	Steering head frame races (3 off)	2 5
T3FF 52	Fork crown ball race	3 2
T3FF 59	One set of 50 balls for above	1 1
L4FF 42	Steering head adjusting nut	1 8
L4FF 46	Dome lock nut for steering head	1 6
FFF 28	Front fork spindle, top front or rear	1 5
FFF 27	Front fork spindle, bottom, front	1 6
FFF 18	Front fork spindle, bottom, rear	1 5
	Lock nuts for spindles (3 off)	1 3
2768 20326	Front fork spindle washers, thin (4 off)	1 1
STD 10	Front fork spindle washers, thick (4 off)	1 1
MB 68	Grease nipples for fork spindles (5 off)	1 2
20356	Left side top front fork link (threaded hole)	1 3
20355	Right side top front fork link (plain hole)	1 3
20358	Left side bottom front fork link (threaded hole)	1 6
20357	Right side bottom front fork link (plain hole)	1 6
20359	Front fork damper ferodo friction discs	1 6
AF 37	Front fork damper star spring washer	8
MBD 206	Double spring washer for above	6
AFF 100	Ratchet washer for above	2
TFF 101S	Front fork damper hand adjusting knob	1 6

**TOOL BOX**



Part Number	Tool Box only	Price Each £ s. d.
D5F	Tool box only	3
LF	Bolts securing bottom of above to frame (½in. long under head)	6
STD 4	Nuts for above	5
STD 11	Washers for above	6
DF 10	Strap for tool box, fixes on mudguard	3
HM 7	Bolt securing above to tool box	3
STD 5	Nut for above	2
STD 12	Plain metal washer for above	1
HM 7	Bolt fixing above strap to mudguard	1
STD 5	Nut for above	3
TF 100	Spring washer for above	2
STD 12	Plain metal washer for above	1
D5T 737	Top strap or stay, fixes to oil tank	1
HM 7	Bolts securing above to tool box	6
STD 5	Nuts for above	3
STD 12	Washers for above	2
LF 39	Bolt securing strap to oil tank (½in. long under head)	1
STD 11	Washer for above	3
		1
<b>PETROL TANK WITH FITTINGS AND PETROL PIPES</b>		
FT 5SA	Petrol tank bare, less all fittings	7 6
BT 30	Petrol tank filler cap	3 0
DT 4R	Right side kneegrip	3 0
DT 4L	Left side kneegrip	2 6
AT 4F	Kneegrip fixing plate	6
LT 8	Screw for above	2
STD 12	Washer for above	1
D5T 500L	Chromium-plated embossed M, left side	1 6
D5T 500R	Chromium-plated embossed M, right side	1 6
STD 150	Screws securing above to tank	2
16527	Petrol tap	0
11504	Fibre washer for above, small bore	3 0
11503	Fibre washer for above, large bore	2
20657	Petrol U pipe (connecting two halves of tank)	4
4L4	Nipple for above	6
4N4	Nut for above	3
16190	Banjo union for above	4
11505	Union for petrol U pipe, screws into tank	8
11504	Fibre washer for above	3
FT 54	Petrol feed pipe	2
4L4	Nipples for above	3 0
4N4	Union nuts for above	3 4
20617	Petrol tank fixing bolt, rear end	4

Petrol Tank with Fittings and Petrol Pipes—contd.

Part Number	Description	Price Each £	Price Each s.	Price Each d.
16413	Rubber pad for above	...	...	2
DT	Patrol tank fixing bolt, front end	...	...	6
M37	Rubber pad for above	...	...	3
HT	Plain metal washer for above	...	...	2
DFQ	Speedometer driving cable clip (fits on petrol tank front end fixing bolt)	4		

## OIL TANK WITH FITTINGS AND OIL PIPES

D5T	745/1	Oil tank bare, less all fittings	...	...	...	...
STD	4	Oil tank fixing nuts	...	...	...	...
STD	11	Washers for above	...	...	...	...
D8E	1841	Oil feed pipe (tank to engine)	...	...	...	3
D8E	1843	Oil return pipe (engine to tank)	...	...	...	3
BT	30L	Oil tank filter cap	...	...	...	6
AT	87	Oil tank gauze filter	...	...	...	1
D5T	571	Oil tank felt cartridge filter	...	...	...	6
D5T	577	Oil tank filter cap	...	...	...	1
D5T	572	Cork washer for above	...	...	...	2
D5T	576	Spring for oil filter	...	...	...	4
D5T	573	Recessed washer for above spring	...	...	...	3
D5T	737	Stay for oil tank, fits on tool box	...	...	...	6
LF	39	Bolt securing above stay to oil tank (8in. long under head)	...	...	...	3
STD	11	Washer for above	...	...	...	1
STD	70	Bolts securing stay to tool box	...	...	...	3
STD	5	Nuts for above	...	...	...	2
STD	12	Washers for above	...	...	...	1
FC	10A	Rear chain guard	...	...	...	18
	12327	Long hexagon-headed bolt fixing front end of rear chain guard	...	...	...	6
LF	2885	Spring washer for above	...	...	...	6
	39	Bolt fixing rear end of chain guard (8in. under head)	...	...	...	1
STD	11	Washer for above	...	...	...	1
STD	70	Bolt fixing bottom extension of chain guard to frame	...	...	...	1
TF	100	Spring washer for above	...	...	...	1
STD	12	Plain washer for above	...	...	...	1
STD	5	Nut for above	...	...	...	2
FC	1/6	Front chain case, back or inner portion	...	...	...	6
	17285	Bolt securing above to crankcase (3 off)	...	...	...	6
	17286	Locking plates for above (3 off)	...	...	...	6
FC	1/1	Front chain case, outer portion	...	...	...	6
	12320-2-9	Rubber band for front chain case	...	...	...	6

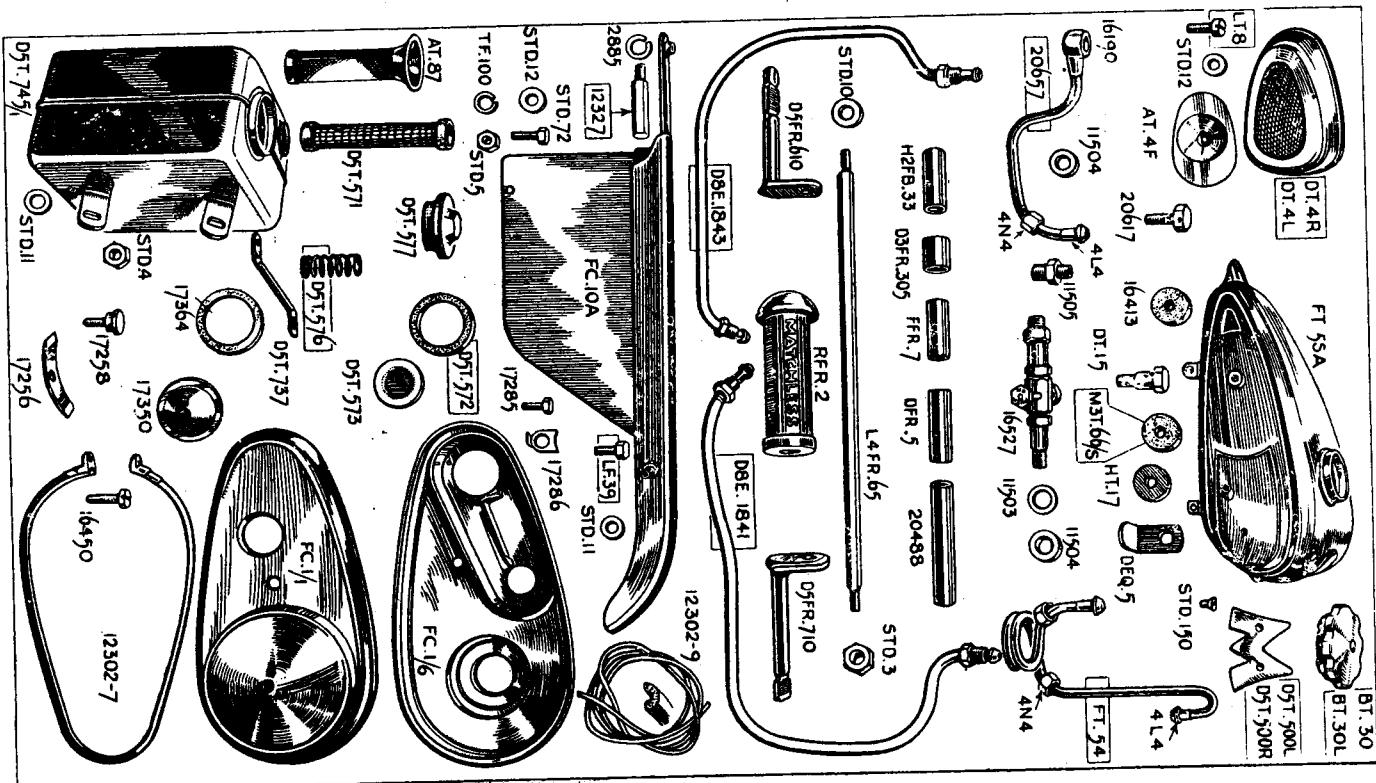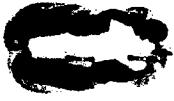

## Tanks, Chain Guards, Oil Pipes, Footrests, etc

#### **Chains and Chain Guards Group—contd**


				Price Each
12302-7	Metal band for front chain case	...	...	\$ 5.00
16450	Pinch screw for above	...	2	5
17350/1	Front chain guard inspection cover complete	...	1	4
17350	Front chain guard inspection cover only	...	4	4
17364	Cork washer for above	...	2	2
17256	Fixing plate for inspection cover	...	4	4
17258	Screw for above	...	4	4
FE	Front or rear driving chain cranked link	...	6	6
TC	Dynamo driving chain, endless (36 links, 1/8in. x 3/16in.)	...	4	4
8L3	Front or rear driving chain connecting link complete	...	7	7
8CL3	Rear driving chain (112 links, 1/8in. x .305)	...	12	9
DE	Front driving chain (65 links, 1/8in. x .305)	...	7	7
L4FR	Rear chain adjusting screws or bolts	...	1	9
STD	Distance collars for above (1/8in. long)	...	9	9
STD	Lock nuts for above screws	...	2	2
<b>FOOTREST GROUP</b>				
L4FR	Footrest rod (12 1/4in. long)	...	1	9
STD	Footrest rod end nut	...	3	3
STD	Washer for above nut	...	1	1
D5FR	Left side footrest hanger	...	1	6
D5FR	Right side footrest hanger	...	1	9
RFR	Footrest rubber or pad	...	1	6
DFR	Footrest rod distance piece (fits between engine plates, 2 1/2in. long)	...	3	3
FRR	Right side footrest rod distance piece (3 5/8in. long)	...	6	6
FRR	Distance piece for footrest rod (fits behind chaincase, 1 1/8in. long)	...	4	4
D3FR	Distance piece for footrest rod (fits inside chaincase, 1in. long)	...	5	5
H2FB	Distance piece for footrest rod (fits outside chaincase, 2in. long)	...	4	4
<b>GEAR BOX GROUP</b>				
BS	201B Gear box shell only	1	5	0
BS	202C Gear box end plate or cover	16	0	16
CS	9 Short studs fixing end plate (4 off)	3	3	3
BS	217 Long stud fixing end plate (1 off)	3	3	3
CS	10 Nuts for above studs (5 off)	2	2	2
CS	11 Spring washers for above studs (5 off)	3	3	3
BS	58B Gear box end plate paper washer	per set	3	3

#### **Gear Box Group—contd**

Part Number	Price Each
BS 253 Gear box main axle or shaft ( $7\frac{3}{4}$ in. long)	£ 11.00
TS 8 Nut for above (secures clutch hub)	5.00
CS 118 Washer for above	1.00
BS 105 Gear box layshaft or axle ( $4\frac{1}{2}$ in. long)	9.00
BS 8A Mainshaft high-speed or sleeve pinion (23 teeth)	12.60
BS 215 Journal bearing for above	6.00
BS 226 Large steel washers for above (2 off)	1.00
BS 216 Distance collar for high-speed or sleeve pinion	1.00
TS 44B Gear box sprocket for rear chain (20 teeth)	7.60
BS 112 Felt washers for above (2 off)	2.00
TS 31 Lock nut for sprocket	8.00
CS 63 Locking plate for above	4.00
S 35 Screw securing above	1.00
BS 9B Middle gear sliding pinion for mainshaft (19 teeth)	7.00
BS 13 Middle gear sliding pinion for layshaft (23 teeth)	7.00
BS 108 Main axle small pinion (13 teeth)	3.60
BS 107 Layshaft small pinion (18 teeth)	4.60
BS 14 Low gear and kickstarter pinion (28 teeth)	8.60
TS 62 Thrust washer for gear box main axle	1.00
BS 192A Peg for above (fits in mainshaft)	1.00
DIV 34A Kickstarter axle ( $5\frac{1}{8}$ in. overall length)	11.60
DIV 68 Steel bush for above (fits in end plate)	1.60
LS 438 Kickstarter pawl	1.00
LS 439A Kickstarter pawl pin	1.00
BS 24 Kickstarter pawl plunger	3.00
BS 23 Kickstarter pawl plunger spring	1.00
LS 436 Kickstarter crank	11.00
LS 110 Kickstarter crank pinch bolt	3.00
CS 74 Spring washer for above	1.00
BS 100A Kickstarter crank return spring	1.00
LS 395G Kickstarter crank return spring cover	1.00
BS 63G Kickstarter axle distance tube ( $1\frac{1}{8}$ in. long)	3.00
BS 109A Bronze bush for main axle (fits in end plate)	2.00
BS 110C Adjusting bolt for main axle	4.00
BS 110B Shim washers for above	1.00
BS 106A Bronze bush for layshaft (presses in gear box shell)	4.00
BS 204 Gear operating rack with index plate	2.00
BS 209 Pivoting stud for above (hexagon head)	4.00
BS 210 Trunnion ball for gear operating rack (plain type)	4.00
BS 211 Trunnion ball for gear operating rack	4.00
BS 34 Gear striker or slipper	2.00

## Gear Box Group—contd

Part Number	Detail Description	Price Each
		s. d.
BS 205	Steel shaft or spindle for gear control	2 0
BS 206B	Forked arm for above	1 3
BS 207A	Short gear lever (fits on above shaft)	2 6
BS 208...	Long bolt securing above to shaft (2½in. under head)	9
CC 18	Nut for above	2 2
CS 151...	Spring washer for above	1 1
BS 212...	Plunger for index plate	3 3
E 880...	Spring for above	2 2
E 879	Steel housing for above (hexagon head)	1 0
CS 8E	Gear box filling plug	8 8
ML 184D	Grease nipple for above	3 6
DE 59	Top gear box fixing bolt (4 11/16in. long)	6 6
DE 58	Bottom gear box pivot bolt (3 11/16in. long)	6 6
STD 2	Nuts for above (4 off)	4 4
STD 60	Distance collar for top gear box fixing bolt (5 15/16in. thick)	3 3
DE 120	Gear box eye adjusting bolt	6 6
STD 4	Nuts for above (2 off)	2 2
DE 121	Gear box adjuster block (screws on engine fixing bolt)	4 4
SD 27	Gear box speedometer drive complete	9 0
LS 341	Cover covering hole in gear box shell when speedometer drive is not fitted	3 3
LS 411A/413	Speedometer drive large pinion (21x11 teeth)	2 6
LS 461	Speedometer drive aluminium casing only	3 0
LS 412	Shaft for above	1 3
LS 326	Locking screw for above	1 1
LS 414	Speedometer drive small pinion (15 teeth)	1 0
LS 415	Shaft for above	1 3
LS 323	Brass bush for above	1 6
LS 326	Locking screw for above	1 1
LS 349A	Screw securing speedometer drive to gear box shell (2 off)	2 2
LS 331	Spring washer for above (2 off)	1 1
<b>CLUTCH GROUP</b>		
BS 65	Clutch hub	12 0
BS 68	Clutch back plate (thick dished)	2 2
TS 34	Clutch sprocket bearing ball retainer with balls	3 10
BS 66A	Clutch sprocket with cork inserts (42 teeth)	16 0
TS 56	Large clutch cork inserts (23 off) per doz.	4 4
TS 57	Small clutch cork inserts (23 off) per doz.	4 4
LS 116	Large clutch ferodo inserts (23 off)	1 1

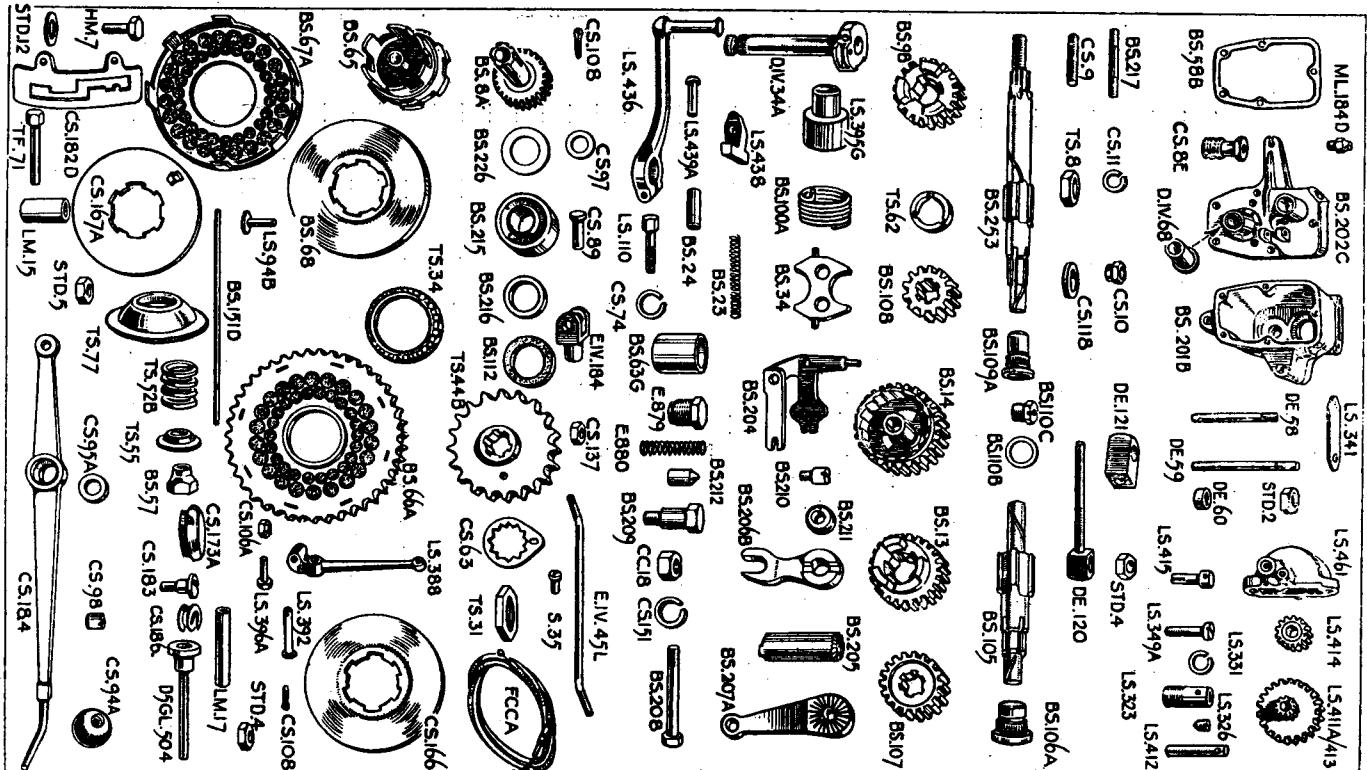

Gear Box Parts.

**Clutch Group—contd.**

Part Number	Price Each
LS 116A	Small clutch ferodo inserts (23 off)
CS 166	Clutch centre plate (thin dished) ...
BS 67A	Clutch friction plate with fibre inserts (8 tongues) ...
CS 167A	Clutch outer plate with peg ...
TS 77	Clutch spring cup ...
TS 52B	Clutch spring ...
TS 55	Dished washer for above ...
BS 57	Clutch spring adjusting nut ...
CS 173A	Clutch spring cap ...
BS 151D	Clutch thrust or push rod (7 11/16in. long)
LS 94B	Clutch thrust pin (1 1/4in. long under head)
LS 396A	Clutch adjusting screw ...
CS 106A	Lock nut for above ...
LS 388	Clutch operating lever or arm ...
LS 392	Pin for above ...
CS 108	Split pin for above ... per doz.
FCCA	Clutch control cable complete, assembled ...
CS 191	Clutch control outer casing only (50in. long)
K 133	Clutch control inner cable only (54in. long)
CS 43	Spring for clutch cable ...
CS 106	Adjuster with lock nut for clutch cable ...
K 126	Nipple for handlebar end ...
K 73	Nipple for gear box end ...

**GEAR CHANGE PARTS**

Part Number	Price Each
CS 184	Gear lever only ...
CS 94A	Gear lever knob ...
CS 98	Screwed collar securing above ...
CS 95A	Thick washer (fits under knob) ...
CS 183	Fulcrum screw for gear lever ...
CS 186	Spring washer for above ...
D5GL	Long gear washer for above (3 1/4in. over all length) ...
LM 17	Distance piece for above (2 5/16in. long)
STD 4	Nut for fulcrum bolt ...
CS 182D	Gear lever gate ...
HM 7	Bolt securing above, rear end ...
STD 12	Washer for above ...
TF 71	Bolt securing gear gate, front end (1 1/8in. long under head) ...
LM 15	Distance piece for above (1 3/16in. long)
STD 5	Nut for bolt ...
EIV 45L	Gear rod ...
EIV 184	Gear rod yoke end only ...
CS 89	Gear rod yoke end pin ...
CS 97	Washer for above ...

**Gear Change Parts—contd.**

Part Number	Price Each
CS 108	Split pin for above ...
CS 137	Lock nut for yoke end ...
FH	<b>REAR WHEEL AND BRAKE PARTS</b>
FBH	31CA Rear wheel complete with all fittings (spindle, bearings and brake, etc.), less tyre and sprocket
FBH	31 Rear wheel, less all hub and brake fittings
FBH	13 Rear wheel chain sprocket (48 teeth) ...
FBH	12 Fixing bolts for above (5 off) ...
FBH	11 Nuts for above ...
FBH	10 Spring washers for above ...
FBH	9CA Rear brake cover plate assembled with shoes, expander and expander lever, etc.
FBH	9 Rear brake cover plate only ...
FBH	8 Rear brake shoe with linings (per pair) ...
FBH	7 Own brake shoes relined and ground (per pair) under Messrs. Ferodo Ltd. service arrangement ...
FBH	6 Internal brake shoe springs ...
FBH	5 Rear brake shoe expander ...
FBH	4 Rear brake shoe expander lever ...
FBH	3 Nut securing above to expander ...
STD	2 Spring washer for above nut ...
STD	1 Rear brake cover plate anchor bolt ...
STD	1 Plain metal washer for above ...
STD	1 Nut for above ...
STD	2 Split pin for above ...
FBH	36 Cross head for rear brake expander lever
FBH	2 Rear brake rod ...
FBH	5A Rear brake thumb adjusting knurled nut
DB	1 Rear brake foot pedal ...
DB	1 Rear brake foot pedal pull-off spring ...
DB	1 Bush for rear brake pedal ...
DB	1 Rear brake pedal fulcrum bolt (1 5/16in. long under head) ...
DB	1 Nut for above ...
STD	4 Rear wheel axle (8 1/2in. long) ...
FBH	14 Rear wheel axle adjusting cone ...
FBH	15 Rear wheel axle fixed cone ...
FBH	16 Rear wheel hub cups ...
FBH	17 Rear wheel hub caps ...
5/16B	1 set 20 rear wheel balls (5/16in. dia.) ...
FBH	18 Metal dust cap for rear wheel hub end ...
FBH	19 Locking washer for adjusting cone ...
FBH	20 Thin nut locking adjusting cone ...
10215	Axle end nuts ...

**Gear Change Parts—contd.**


Part Number	Price Each
CS 108	Split pin for above ... per doz.
CS 137	Lock nut for yoke end ...
FH	<b>REAR WHEEL AND BRAKE PARTS</b>
FBH	31CA Rear wheel complete with all fittings (spindle, bearings and brake, etc.), less tyre and sprocket
FBH	31 Rear wheel, less all hub and brake fittings
FBH	13 Rear wheel chain sprocket (48 teeth) ...
FBH	12 Fixing bolts for above (5 off) ...
FBH	11 Nuts for above ...
FBH	10 Spring washers for above ...
FBH	9CA Rear brake cover plate assembled with shoes, expander and expander lever, etc.
FBH	9 Rear brake cover plate only ...
FBH	8 Rear brake shoe with linings (per pair) ...
FBH	7 Own brake shoes relined and ground (per pair) under Messrs. Ferodo Ltd. service arrangement ...
FBH	6 Internal brake shoe springs ...
FBH	5 Rear brake shoe expander ...
FBH	4 Rear brake shoe expander lever ...
FBH	3 Nut securing above to expander ...
STD	2 Spring washer for above nut ...
STD	1 Rear brake cover plate anchor bolt ...
STD	1 Plain metal washer for above ...
STD	1 Nut for above ...
STD	2 Split pin for above ...
FBH	36 Cross head for rear brake expander lever
FBH	2 Rear brake rod ...
FBH	5A Rear brake thumb adjusting knurled nut
DB	1 Rear brake foot pedal ...
DB	1 Rear brake foot pedal pull-off spring ...
DB	1 Bush for rear brake pedal ...
DB	1 Rear brake pedal fulcrum bolt (1 5/16in. long under head) ...
DB	1 Nut for above ...
STD	4 Rear wheel axle (8 1/2in. long) ...
FBH	14 Rear wheel axle adjusting cone ...
FBH	15 Rear wheel axle fixed cone ...
FBH	16 Rear wheel hub cups ...
FBH	17 Rear wheel hub caps ...
5/16B	1 set 20 rear wheel balls (5/16in. dia.) ...
FBH	18 Metal dust cap for rear wheel hub end ...
FBH	19 Locking washer for adjusting cone ...
FBH	20 Thin nut locking adjusting cone ...
10215	Axle end nuts ...

Rear Wheel and Brake Parts—contd

Part Number	Price £	Each	s.	d.
STD 8		Washers for above		
F BH 21		Thin distance collar (fits between fixed cone and brake cover plate)		
F BH 22		Long distance collar (fits between brake cover plate and fork end of frame, 1in. long)		
FBH 23		Grease nipple for rear wheel hub		
FH 244		Brake drum side rear wheel spoke (20 off), (8 13/16in. long 9 x 11G) butted		
FH 43		Rear wheel spokes, sprocket side (20 off), (8 1/2in. long x 11G)		
FH 34		Nipples for above (40 off)		
FH 21		Rear wheel rim, drilled and enamelled		
FBH 24		Rear hub shell only, with brake drum		
FOC 2		Outer cover or tyre (26in. x 3.25in.)	1	12 0
FIT 2		Inner tube	1	4 0
FRT 2		Rim tape	6	6 0
			6	6 0
			9	9 0
<b>FRONT WHEEL AND BRAKE PARTS</b>				
FH		45CA Front wheel complete with all fittings (spindle, bearings and brake, etc.), less		
FH		Front wheel, less all hub and brake fittings	2	18 0
FBH		25CA Front brake cover plate assembled with	1	13 0
		brake shoes, expander and expander		
		lever, etc.		
FBH 25		Front brake cover plate only	13	2
FBH 8		Front brake shoes with linings (per pair)	7	2
		Own brake shoes refined and ground (per pair) under Messrs. Ferodo Ltd. service arrangement	6	0
FBH 7		Front brake shoe internal springs	5	0
FBH 26		Front brake shoe expander	3	0
FBH 27		Expander lever	1	9 0
FBH 4		Nut securing above to expander	2	0
FBH 3		Spring washer for above	2	0
FBCA		Front brake cable complete assembled with	1	0
		spring box	3	6
FBCW		Front brake inner cable only	6	0
FBCO		Front brake outer cable only	1	9 0
H 993		Nipple for inner cable, handlebar end	1	0
11753		Screwed nipple for above, brake rod end	3	0
11751		Front brake cable adjuster	4	0
11750		Lock nut for above	1	0
11756		Outer or case portion of spring box	1	6 0

## FRONT WHEEL AND BRAKE PARTS

FH		(spindle, bearings and brake, etc.), less	2	18	0
FH		tyre	1	13	0
FBH	45	Front wheel, less all hub and brake fittings			
FBH	25	Front brake cover plate only	...	...	...
FBH	25CA	Front brake cover plate assembled with			
		brake shoes, expander and expander			
		lever, etc.	...	...	...
FBH	25	Front brake shoe internal springs	...	...	...
FBH	26	Front brake shoe expander	...	...	...
FBH	27	Expander lever	...	...	...
FBH	4	Nut securing above to expander	...	...	...
FBH	3	Spring washer for above	...	2	a
FBCA		Front brake cable complete assembled with			
		spring box	...	...	...
FBCW		Front brake inner cable only	...	...	...
FBCO		Front brake outer cable only	...	...	...
H	993	Nipple for inner cable, handlebar end	...	...	...
	11753	Screwed nipple for above, brake rod end	...	...	...
	11751	Front brake cable adjuster	...	...	...
	11750	Lock nut for above	...	...	...
	11756	Outer or case portion of spring box	...	...	...
	1		1	6	

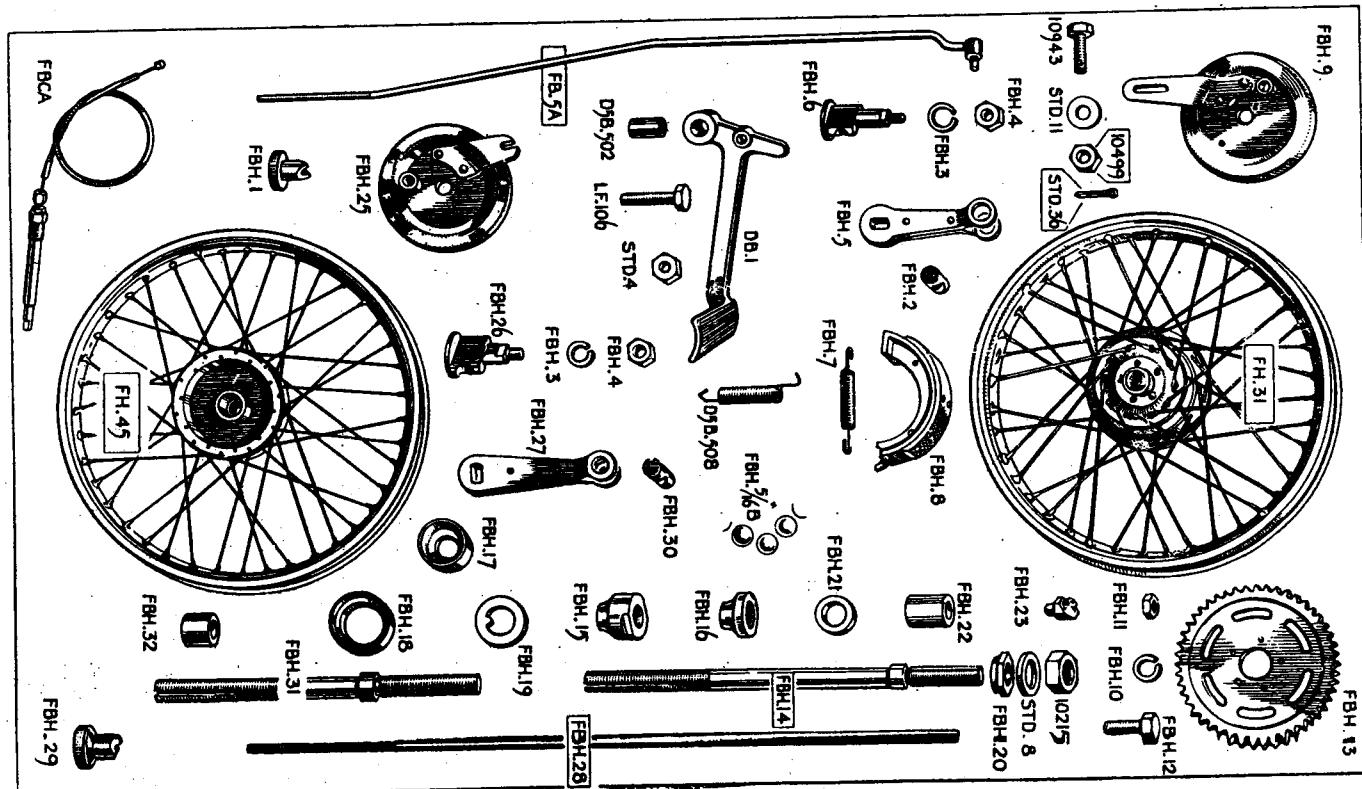

## Wheel and Brake Parts.

**Front Wheel and Brake Parts—contd.**

Part Number	Description	Price Each £ s. d.	Part Number	Description	Price Each £ s. d.
11752	Reducing nipple (screws on end of brake rod)	1.11	DE	181/B	Bottom battery carrier fixing strap
FBH	Front brake rod	1 0	STD	40	Screw securing above to battery carrier
FBH	Front brake knurled thumb adjusting nut	6	STD	4	Nuts fixing battery carrier to frame
FBH	Cross head for front brake expander lever	6	STD	11	Washers for above
FBH	Front hub grease nipple	4	515,211	Head lamp complete with switch cables and all fittings	3 0 0
FBH	Front wheel axle (6 5/16in. long)	4	SK	49	Head lamp switch knob
FBH	Front wheel adjusting cone	1.11			Screw securing above
FBH	Front wheel fixed cone	1.11			Head lamp rim
FBH	Front wheel hub cups	1.11			Large head lamp bulb (12 watts 6 volts)
FBH	1 set (20) ball bearings for front hub (5 1/16in. dia.)	6	NB	330/18	Small head lamp bulb (3 watts 6 volts)
FBH	Metal dust caps for hub end	5	BAS	8S	Warning light bulb
FBH	Locking washer for adjusting cone	2	MES	252A	Head lamp brackets, long
FBH	Thin nut locking adjusting cone	2	DFF	173	Head lamp brackets, short
10215	Axle end nuts	3	FFF	73	Bolts securing brackets to fork girder
STD	Washers for above	4	HM	7	Washers for above
FBH	Thin distance collar (fits between fixed cone and brake cover plate)	1	STD	12	Head lamp fixing nuts
FBH	Distance collar (fits between brake cover plate and front fork girder, 11/16in. long)	3	NG	25/4/CP	Rear lamp complete
FBH	Front wheel hub shell only, with brake drum	3	MT	210	Main portion of rear lamp with red glass
FH	Front wheel rim, drilled and enamelled	10	NB	438/13	Back portion of rear lamp, less bulb
FH	Left side front wheel spoke (20 off)	6	NB	438/14	Rear lamp bulb (3 watts 6 volts)
FH	8 7/16in. long x 11G	8	BAS	8S	Adaptor for rear lamp wire
FH	Long brake drum side front wheel spoke (20 off), 8 1/8in. long 9 x 11G butted	0	BH	15	Screws securing rear lamp to number plate
FH	Nipples for above (40 off)	1		117,541	Nuts for above
FOC	Outer cover or tyre (26in. x 3.25in.)	1		165,051	Spring clips for lighting cables (3 11/16in. long)
FIT	Inner tube	4	T3EQ	100	Spring clips for lighting cables (3in. long)
FRT	Rim tape	0	AEO	21	Spring clips for lighting cables (2in. long)
		6	AEO	20	Spring clips for lighting cables (1 1/4in. long)
		9			(For horn switch see handlebar group)

**BATTERY AND LAMPS, ETC.**


PUW	ZEI	Description	Price Each £ s. d.
S	2171B	Battery only, less lid	15 0
LES	26	Lid for battery	2 6
LES	28	Rubber sleeve for connector	2
LES	27	Plain brass collar for connector	1
LES	29	Plug for connector (external thread)	6
LTT		Socket for connector (internal thread)	6
STD	79	Terminal end for earth wire...	2
DF	285	Nut securing above to frame bolt	1
AE	180	Battery carrier only	4 0
AE	177	Battery carrier pinch bolt	4 0
AE	178	Screwed collar for above	5 5
		Plain collar for above	3 3

**Battery and Lamps, etc.—contd.**

Part Number	Description	Price Each £ s. d.
HF	317/6/AO	H.F. electric horn
L	4215/3	H.F. electric horn bracket
FEO	3	Metal strap supporting horn bracket
ME	54	Long bolt securing above to engine plates (3 11/16in. long x 3/8in. dia.)
		Nuts for above
STD	3	Washers for above
STD	10	Bolt securing horn bracket to support strap
DF	73	Nut for above
STD	3	Washer for above
STD	10	(For horn switch see handlebar group)

This section was made possible by the AJS/Matchless Engine. A special note on commaterial use just intended for internal or material gain by any one by any means. This section was made possible by the AJS/Matchless Engine. A special note on commaterial use just intended for internal or material gain by any one by any means.

## SPEEDOMETER GROUP

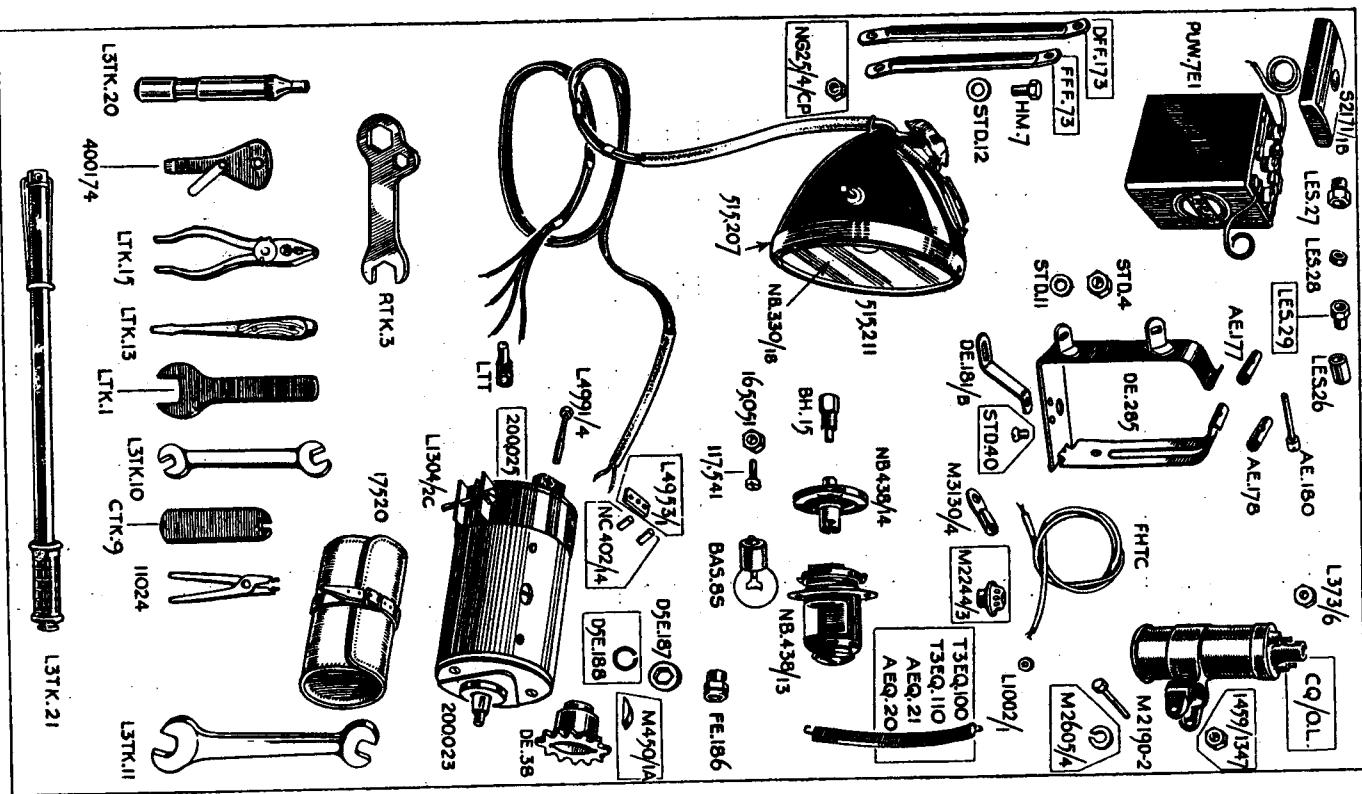

(For gear box drive parts see gear box group)

## TOOLS

Part Number	Description	Price Each
S 106	Speedometer head only (non-trip type)	£ 1 5 0
S 70	Speedometer head only (trip type)	1 10 0
J 1 824	Speedometer head fixing plate	1 5
J I	Distance piece for above	3
M 4M D 158	Nut securing plate to speedometer head	3
STD 3	Clamp securing outer driving casing to speedometer head	2
N J 2905	speedometer head	4
J 2906 S 2081	Screw for above	2
	Screw fixing inner driving cable to speedometer head shaft	2
F S C A	Speedometer drive cable complete (55in. long)	16 0
F S O	Speedometer drive outer casing only (55in. long)	8 0
F S W	Speedometer drive inner cable only (55in. long)	8 0
D E Q 5	Flat metal spring clip securing speedometer driving cable to front petrol tank fixing bolt	4
L 7520/1	Tool bag, complete with all tools	14 0
L 7520/2	Tool bag only	2 6
L 3 T K 11	Large forged spanner (1 in. x 3 in.)	1 6
L 3 T K 10	Small forged spanner (1 in. x 5/16 in.)	1 3
R T K 3	Plug spanner	1 0
C T K 9	Tappet adjusting spanner	1 9
L T K 15	Pliers	1 6
L T K 11024	Gudgeon pin pliers	6
L T K 13	Screwdriver	9
L T K 20	Grease gun	4 0
L T K 1	Cone adjusting spanner	6
400174	Combined screwdriver and gauge for contact breaker point adjustment	6
L 3 T K 21	Tyre pump or inflator	3 9
T T K 8	Valve spring compressor (not in standard tool kit)	5 9
11520	Valve grinding tool or tommy clamp (not in standard tool kit)	6
B G G	Special oil gun for control cables (not in standard tool kit)	5 9

CARBURETOR GROUP

Part Number	Price Each £	Quantity
5/154/CA Carburettor complete, less control cables	10	1
5/154 Carburettor body or mixing chamber	13	1
4/061 Studs securing above to cylinder head	10	1
4/061 Nuts for above	13	1
4/063 Sprayer base (size 30)	5	1
4/063 Venturi air intake or funnel	6	1
5/058 Jet holder (screws in above)	9	1
4/063 Carburettor main jet (size 130)	5	1
4/063 Stop screw for throttle slide	6	1
16/010 Lock nut for above	2	1
13/129 Pilot jet air adjusting screw	6	1
16/010 Lock nut for above	2	1
156 Gasket for inlet port	2	1
4/062 Bottom mixing chamber nut securing sprayer base	1	1
4/040 Fibre washer for above	6	1
22/006/15HZ Float chamber	2	1
13/153 Float chamber drain plugs (2 off)	8	1
14/039 Fibre washers for above	6	1
22/016 Float	2	1
22/013 Float needle	6	1
22/012 Float chamber cap	2	1
22/021 Tickler	7	1
14/032 Tickler spring	2	1
14/033 Split pin for tickler	1	1
4/043 Large hollow bolt securing float chamber to spraying chamber	2	1
4/053 Fibre washers for above (2 off)	2	1
5/052 Throttle valve or slide (size 5/3)	10	1
5/045 Air valve or slide	6	1
5/065 Jet taper needle	3	1
4/041 Spring cotter securing above to throttle valve	4	1
4/060 Split pin for throttle valve (securing control cable)	2	1
4/037 Spring for throttle valve	2	1
4/046 Spring for air valve	3	1
4/047 Brass sleeve or guide for air valve	3	1
4/032 Mixing chamber top cap	2	1
4/035 Control cable adjusters (screw in above)	3	1
4/031 Knurled lock ring securing mixing chamber cap	4	1
D8E Rubber sleeve (fits over above)	2	1
FACA Air control cable complete, assembled	3	1
FTCA Throttle control cable complete, assembled	3	1
FTCO Throttle control outer casing only	3	1

**MODEL 34/F (4-SPEED MODEL) PARTS  
WHICH DIFFER FROM 3-SPEED MODEL**

ENGINE GROUP

FB			
FE	50		
STD	89		
FE		Rear engine plate, left or right	...
STD		Special O.H.V. rocker box bolt for steady	...
FE		stay	...
STD	4	Nut securing cylinder head steady stay	...
FE	110	Cylinder head steady stay	...
LF	20403	Frame tube clip for steady stay	...
STD	32	Pinch bolt for steady stay clip	...
STD	4	Nut for steady stay clip bolt	...
STD	11	Washer for steady stay clip bolt	...
2888		Spring washer for special rocker box bolt	...

## FRAME GROUP

FF	223	Front portion of frame	(hand gear change)	3	0	0
FF	124	Rear portion of frame	(foot gear change)	2	5	0

MUDGUARD GROUP

FM D8M	4R/1 804R/1	Rear portion of rear mudguard (standard) Rear portion of rear mudguard (chromium edge)	13
12199/IE	Rear number plate (drilled for steady stays)	16	8
20663R	Rear number plate steady stay (right side)	6	6
20663L	Rear number plate steady stay (left side)	6	6
STD	Screw securing stay to rear number plate	6	6
106	Nut for securing stay to rear number plate	6	6
STD	Screw securing stay to rear mudguard	6	6
106	Nut securing stay to rear mudguard	6	6
STD	Nut securing stay to rear mudguard	6	6
24	...	6	6

## REAR BRAKE GROUP

Part Number	Price Each £ s. d.	Description
DB 201A	8 6	Rear brake pedal and shaft (foot change only) ...
DB 211	6	Rear brake pedal shaft lever (foot change only) ...
LF 19	6	Nut securing pedal shaft lever (foot change only) ...
STD 10	2	Washer for nut securing pedal shaft lever (foot change only) ...
AB 68	1	Left side grease nipple for brake pedal shaft ...
P 65	2	Right side angular grease nipple for shaft ...
DB 208	6	Rear brake pedal pull off spring (foot change only) ...
FB 105A	2	Rear brake rod (foot change only) ...
2512	6	Rear brake rod yoke end pin (foot change only) ...
STD 14	1	Split pin for yoke end pin (foot change only) ...
17236	2	Spring washer for brake pedal shaft (foot change only) ...

## GEAR BOX PARTS (BURMAN 4-SPEED)

### SHELL GROUP


IHP/111	1	Gear box shell only ...
2H	5	Gear box end plate ...
60X	16	Studs securing gear box end plate ...
63X	6	Nuts securing gear box end plate ...
71H	2	Grease cap or cover for gear box shell ...
138X	1	Studs securing grease cover ...
63X	6	Nuts securing grease cover ...

## FIXING BOLT GROUP

D5E 558	8	Bottom gear box fixing bolt with extension ...
D8E 859	3	Extended nut for top bolt (right-hand side) ...

## GEAR BOX BEARING GROUP

267X	12	Ball bearing (2½in. x 7/16in. x 1 3/16in.) for high-speed sleeve pinion ...
259X	3	Grease retaining washer for sleeve pinion bearing ...
78X	4	Spring ring retaining sleeve pinion bearing ...
260X	3	Shim washer (1 11/16in. x 1 3/16in. hole) for sleeve pinion bearing ...
268X	10	Ball bearing in end plate (36 mm. x 11 mm. x 15 mm.) ...
255X	3	Bush for layshaft in gear box shell ...

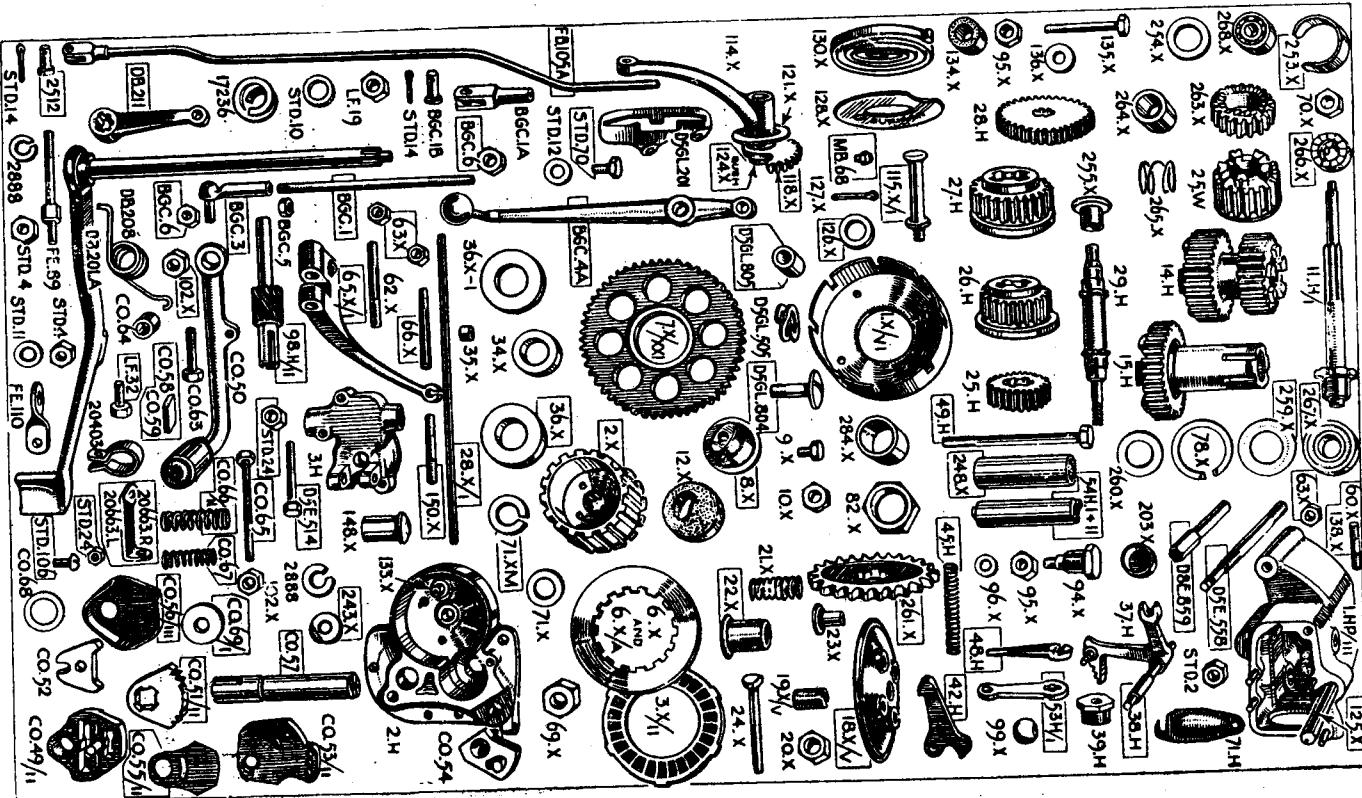

Parts of Four-speed Gear Model which differ from Three-speed Type.

**Gear Box Bearing Group—contd.**

Part Number	Price Each £ s. d.
255X Bush for layshaft in end plate	3 0
254X External washer for mainshaft bearing (1 9/16in. x 29/32in. hole)	3
253X Retaining spring ring for ball bearing in end plate	1 0
<b>GEAR AND SHAFT GROUP</b>	
11H/1 Mainshaft (10 5/8in. long overall)	1 5 0
29H Layshaft (7 1/2in. long overall)	1 5 0
15H High-speed sleeve pinion, with bushes (29 teeth)	1 12 6
14H Mainshaft sliding gear wheel (23 and 26 teeth)	1 5 0
25W Mainshaft low gear pinion, with collar (17 teeth)	12 0
28H Layshaft low gear pinion (32 teeth)	12 0
27H Layshaft sliding pinion (26 teeth)	17 6
26H Layshaft sliding pinion (23 teeth)	17 6
25H Layshaft high gear pinion (20 teeth)	10 0

**GEAR OPERATING GROUP, INTERNAL**

Part Number	Price Each £ s. d.
37H Gear changing bell crank, less spindle	8 6
39H Bush for gear change bell crank (screws in shell)	1 0
48H Gear operating lever (inside box)	4 0
99X Ball for end of gear operating lever	1 6
54H/1 & 11 Hollow shaft for internal lever (hand change)	4 0
CO 57 Hollow shaft for internal lever (foot change)	5 0
248X Steel bush for hollow shaft (hand change), fits in end plate	3 0
38H Bell crank spindle only	2 6
CO 54 External gear change lever (fits on hollow shaft)	5 0
53H/1 Bolt securing internal and external levers, 3 3/16in. x 5/16in. (hand change)	1 0
CO 65 Bolt securing internal lever and foot change mechanism, 4 1/8in. x 5/16in. (foot change model only)	1 3
243X Lock washer for bolt head (inside box)	1
2888 Spring washer for bolt outside end	1

**Gear Operating Group, Internal—contd.**

Part Number	Price Each £ s. d.
CO 69/1 Large washer for bolt outside end (foot change only)	1
CO 102X Nut for bolt outside end	3
42H Gear indexing lever or pawl	2 0
94X Bolt securing gear index pawl (screws in shell)	1 3
95X Nut for bolt securing gear index pawl	3
96X Washer for bolt securing gear index pawl	1
203X Cap for head of bolt supporting gear index pawl	2
45H Spring for gear indexing pawl	9
<b>GEAR OPERATING GROUP, EXTERNAL</b>	
BGC 4A Hand gear change lever with knob	10 0
D5GL 804 Fulcrum screw for hand change lever	9
D5GL 805 Tubular bush for fulcrum screw	3
D5GL 505 Spring washer for fulcrum screw	2
D5GL 201 Gate for hand gear change	3 6
STD 70 Bolt securing gate to tank	2
STD 72 Washer for bolt securing gate to tank	1
BGC 1A Hand gear change rod only	2 0
BGC 1B Top gear rod yoke end	1 6
STD 14 Pin for top gear rod yoke end	4
BGC 3 Split pin for yoke end pin	1
BGC 6 Bottom gear rod ball joint	2 6
BGC 6 Nut securing ball joint to lever on gear box	3
BGC 5 Locking nut for top gear rod yoke end	3
BGC 5 Locking nut for bottom gear rod ball joint	3
CO 50 Foot gear change pedal	5 0
CO 63 Anchoring bolt for foot change pedal	1 3
CO 64 Distance collar for anchor bolt	1
CO 102X Nut for foot change pedal anchor bolt	2
CO 49/1 Foot gear change control body (aluminium)	6 0
CO 55/1 Back plate for control body	1 0
CO 56/11 Outer cap or cover for foot gear control	3 6
CO 53/11 Main plate for foot control (to which pedal is fixed)	3 6
51/11 Foot gear change index plate	4 0
52 Foot gear change index pawl	1 6
66/11 Foot change control spring, long	6
CO 67 Foot change control spring, short	4
CO 58 End plate for short spring	2
CO 59 End plate for long spring	2
CO 68 Shim washer for foot change control	1

## FINAL DRIVE GROUP

Part Number	Price Each £ s. d.	Part Number	Price Each £ s. d.
261X	36X	Hardened steel washer for clutch sprocket (thick) ...	9
284X	36X-1	Hardened clutch sprocket washer (thin) ...	9
82X	21X	Clutch springs (4 off) ...	6
	22X	Clutch spring thimbles (4 off) ...	6
	24X	Clutch spring bolts (4 off) ...	4
	23X	Clutch spring adjusting nuts (4 off) ...	4
	12X	Shock absorber rubber for clutch sprocket (4 off) ...	2
121X	3	Metal retainer for clutch shock absorber rubber (4 off) ...	9
118X	10	Bolt securing metal retainer (4 off) ...	2
124X	0	Nut for bolt securing metal retainer (4 off) ...	1
114X	9	Clutch lever bracket (aluminium) ...	6
125X	4	Long stud securing clutch lever bracket ...	4
MB	6	Short stud securing clutch lever bracket ...	3
127X	2	Nuts securing clutch lever bracket (2 off) ...	2
126X	1	Clutch actuating lever (fits on bracket) ...	2
115X/1	3	Fulcrum screw for clutch actuating lever ...	0
266X	0	Lock nut for clutch lever fulcrum screw ...	2
70X	4		
263X	5		
264X	0		
265X	2		
130X	9		
128X	2		
135X	0		
95X	2		
134X	4		
133X	3		
136X	8		

## CLUTCH GROUP

Part Number	Price Each £ s. d.
Clutch sprocket (50 teeth x 7/16in. pitch)	1
28X/1	0
Clutch thrust rod (11 1/8in. x 3/16in. diam.)	0
6X	1
6X/A	0
3X/11	2
1X/VI	0
18X/V	0
19X/V	0
Clutch plate with fabric inserts (3 off)	5
Clutch plate, plain, thick (1 off) ...	0
Screwed centre stud for pressure plate ...	0
Lock nut for pressure plate stud ...	6
Clutch hub ...	6
Nut securing clutch hub to mainshaft ...	1
Plain washer for clutch hub fixing nut ...	0
Locking washer for clutch hub fixing nut ...	3
Hardened roller race for clutch sprocket ...	2
Clutch sprocket rollers (24 off) ... per set	6

## SPEEDOMETER DRIVE GROUP

Part Number	Price Each £ s. d.
Speedometer drive worm (fits in clutch lever bracket) ...	5 0
148X	3 6
D5E	3 3
STD	2 2
FSCA/B	13 0
FSIW/B	6 6
FSOC/B	6 6

This section was made possible by the AJS/Matchless Engine. English for non-commercial use only intended for internal or material gain by anyone - <http://www.yahoodi.com/gb/auso/ismatchless/>

## Clutch Group—contd.

Part Number	Price Each £ s. d.
Speedometer drive cable, inner only ...	6 6
Speedometer drive cable, outer only ...	6 6

## CLUTCH GROUP

Part Number	Price Each £ s. d.
KICKSTARTER GROUP	
121X	3
Kickstarter crank washer ...	0
Kickstarter crank toothed quadrant ...	10
Kickstarter crank bush (retaining quadrant) ...	1
Kickstarter crank only ...	6
Kickstarter axle (fits in shell) ...	9
Grease nipple for kickstarter crank ...	0
Split pin retaining kickstarter crank ...	4
Washer retaining kickstarter crank ...	6
Pedal pin for kickstarter crank ...	10
Kickstarter ratchet plate (fits on mainshaft) ...	3H
Nut for mainshaft, kickstarter end ...	62X
Kickstarter ratchet pinion (14 teeth) ...	150X
Bush for K.S. ratchet pinion ...	63X
Spring for K.S. ratchet pinion ...	65X/1
Spring for K.S. crank return ...	66X
Cover plate for K.S. return spring ...	63X
Bolt retaining K.S. cover plate ...	
Nut for bolt retaining K.S. cover plate ...	98-H/11
Rubber buffer for K.S. return ...	
Supporting bush for rubber buffer (fits in end plate) ...	
Washer for bolt retaining K.S. cover plate ...	

## FINAL DRIVE GROUP

Part Number	Price Each £ s. d.
KICKSTARTER GROUP	
121X	3
Kickstarter crank washer ...	0
Kickstarter crank toothed quadrant ...	10
Kickstarter crank bush (retaining quadrant) ...	1
Kickstarter crank only ...	6
Kickstarter axle (fits in shell) ...	9
Grease nipple for kickstarter crank ...	0
Split pin retaining kickstarter crank ...	4
Washer retaining kickstarter crank ...	6
Pedal pin for kickstarter crank ...	10
Kickstarter ratchet plate (fits on mainshaft) ...	3H
Nut for mainshaft, kickstarter end ...	62X
Kickstarter ratchet pinion (14 teeth) ...	150X
Bush for K.S. ratchet pinion ...	63X
Spring for K.S. ratchet pinion ...	65X/1
Spring for K.S. crank return ...	66X
Cover plate for K.S. return spring ...	63X
Bolt retaining K.S. cover plate ...	
Nut for bolt retaining K.S. cover plate ...	98-H/11
Rubber buffer for K.S. return ...	
Supporting bush for rubber buffer (fits in end plate) ...	
Washer for bolt retaining K.S. cover plate ...	

# 35/F4 PARTS WHICH DIFFER FROM 34/F4

## FLYWHEEL GROUP (Engines 970 and over)

Part Number	Description	Price Each
20821	Flywheel axle, transmission side ...	11 6
FE 419	Flywheel only, transmission side ...	10 0
11955	Nut for securing flywheel axle to flywheel ...	5 5
12074,6	Key for flywheel axle, transmission side ...	2 2

## CRANKCASE GROUP (Engines 2000 and over only)

Part Number	Description	Price Each
20822	Spacer washer between ball races in crank-case ...	6 6
FE 109	Crankcase complete with studs and bushes (Valve lifter type) ...	3 15 0
FE 432/L	Timing cover with bushes only ...	12 6
FE 283	Exhaust tappet guide ...	4 0

## TIMING GEAR GROUP (Engines 2000 and over only)

Part Number	Description	Price Each
FE 284	Exhaust tappet body ...	3 3
FE 532	Inlet cam shaft ...	9 6
FF 531	Exhaust cam shaft ...	10 3
D/8E 2860	Collar for valve lifter (fits on tappet body)	1 0

## VALVE LIFTER GROUP (Engines 2000 and over only)

Part Number	Description	Price Each
D/8E 2861	Valve lifter lever and spindle ...	3 6
D/8E 2863	Spring for valve lifter lever ...	3 3
D/8E 2862	Valve lifter cable cross head ...	9 9
STD 74	Lock nut for cable cross head ...	2 2
	(For valve lifter cable see Cable Group.)	

## SPROCKET AND CHAIN GROUP (Engines 970 and over)

Part Number	Description	Price Each
20815/16	Engine and dynamo sprocket, 16x17 teeth	9 6
20816	Distance piece behind engine sprocket ...	6 6
D/8E 2805	Cam for shock absorber ...	3 9
D/5E 701	Spring for shock absorber ...	1 6
D/8E 2802	Cap for shock absorber spring ...	8 8
D/8E 2806	Nut for shock absorber ...	6 6
20862	Dynamo sprocket ...	3 6
20865	Nut for above ...	6 6

## CHAINCASE GROUP (Engines 970 and over)

Part Number	Description	Price Each
20817/1	Front chaincase, outer half ...	16 6

## IGNITION GROUP (Engines 970 and over)

Part Number	Description	Price Each
200,171	Lucas dynamo, 30 watt, Type E3A ...	2 10 0

## HANDLEBAR GROUP (Engines 2000 and over only)

Part Number	Description	Price Each
XFF	166 Handlebar fitted with valve lifter bracket ...	1 2 6
H	3306 Exhaust valve lifter lever ...	2 6
H	3282 Fulcrum screw for above ...	5 5
H	8 Nut for above ...	2 2
H	3283 Adapter for valve lifter cable ...	3 3

## FORK GROUP

Part Number	Description	Price Each
FFF	1/3 Front fork girder only ...	2 12 0
20853	Front fork spindle top, front or rear (6 31/32in. long under head) ...	1 5
20852	Front fork spindle bottom, rear (7 3/16in. long under head) ...	1 6
	Front fork spindle bottom, front ...	1 6
	Right side top front fork link (plain hole) ...	1 3
	Left side top front fork link (threaded hole) ...	1 6
20851	Right side bottom fork link (plain hole) ...	1 6
20848	Left side bottom fork link (threaded hole) ...	1 9
20849	Lock nut for spindles (4 off) ...	3 3
11643	Front fork spindle washer (4 off), thin ...	1 1
11642	Front fork spindle washer ...	7 1
3067/P	Front fork crown and stem ...	6 0
16405	Head clip ...	13 0
STD	Front fork spindle washer ...	7 1
21/3	Front fork crown and stem ...	7 6
FFF	Front fork crown and stem ...	7 0
FFF	Front fork crown and stem ...	13 0

## FRAME GROUP

Part Number	Description	Price Each
FF	223 Front portion of main frame, hand gear change ...	3 7 6
FF	23 Front portion of main frame, foot gear change ...	2 15 0

Sprocket and Chain Group (Engines 970 and over)—contd.

Part Number	Description	Price Each
D/5E	187 Locking washer for nut ...	2 2
DE	188 Spring ring to fix locking plate on nut ...	1 1
20881	Dynamo chain, 47 links, 3/8x.225 pitch ...	5 .6

## PETROL TANK GROUP

Part Number	Price Each £ s. d.	Description
FT 5B	5	Petrol tank, less all fittings, for hand gear change
FT 105	105	Petrol tank, less all fittings, for foot gear change
	3 5 0	

## CABLE GROUP (Engines 2000 and over only)

	Price Each £ s. d.	Description
35CA 60	3 0	Valve lifter cable complete (assembled) ...
35CC 60	1 6	Valve lifter cable outer case, 2ft. 6in. long (with thimbles) ...
35CWV 60	6	Valve lifter cable inner wire, 2ft. 10in. long
HG 91	5	Valve lifter cable adjuster, short ...
VL 16884	4	Lock nut for above ...
VL 4	1	Nipple for inner wire, each end ...

In the event of any difficulty with any part of the Lucas electrical equipment, no matter how trivial, Messrs. Lucas will be only too pleased to give every assistance possible. The best course to adopt is to call at the nearest Lucas Service Depot (the addresses of which are given below), when the equipment can be examined as a whole. The depots are not only at your disposal for repairs, overhauls and adjustments, but to give free advice.

## LUCAS SERVICE DEPOTS

- BELFAST—35, Calvin Street, Mountpottinger.  
Telephone: Belfast 7017. Telegrams: "Servdep, Belfast."
- BIRMINGHAM—Great Hampton Street, Birmingham.  
Telephone: Central 8401 (10 lines). Telegrams: "Lucas, Birmingham."
- BRIGHTON—Old Shoreham Road, Hove.  
Telephone: Preston 3001 (4 lines). Telegrams: "Luserv, Brighton."
- BRISTOL—345 Bath Road.  
Telephone: Bristol 8400 (4 lines). Telegrams: "Kingly, Bristol."
- CARDIFF—54a Penarth Road.  
Telephone: Cardiff 4603 (4 lines). Telegrams: "Lucas, Cardiff."
- COVENTRY—Priory Street.  
Telephone: Coventry 3068 and 3841. Telegrams: "Lucas, Coventry."
- DUBLIN—41 Middle Abbey Street.  
Telephone: Dublin 653. Telegrams: "Autolite, Dublin."
- EDINBURGH—32 Stevenson Road, George IV Bridge.  
Telephone: Edinburgh 62921 (4 lines). Telegrams: "Luserv, Edinburgh."
- GLASGOW—227-229 St. George's Road.  
Telephone: Douglas 3075 (5 lines). Telegrams: "Lucas, Glasgow."
- LEEDS—44 Roseville Road.  
Telephone: Leeds 28591 (5 lines). Telegrams: "Luserdep, Leeds."
- LIVERPOOL—450-456 Edge Lane.  
Telephone: Old Swan 1408 (3 lines). Telegrams: "Luserv, Liverpool."
- LONDON—Dordrecht Road, Acton Vale, W.3.  
Telephone: Riverside 3160 (10 lines). Telegrams: "Dynomagna, Act, London."
- LONDON—759 High Road, Leyton, E.10.  
Telephone: Walthamstow 2161 (3 lines). Telegrams: "Luserdep, Walt, London."
- LONDON—155 Merton Road, Wandsworth, S.W.18.  
Telephone: Putney 5131 (6 lines) and 5501. Telegrams: "Luserv, Wards, London."
- MANCHESTER—Talbot Road, Stretford.  
Telephone: Longford 1101 (5 lines). Telegrams: "Lucas, Stretford."
- NEWCASTLE-ON-TYNE—64-66 St. Mary's Place.  
Telephone: Central 3571 (3 lines). Telegrams: "Motolite, Newcastle-on-Tyne."

		FRAME GROUP		
FF	223	Front portion of main frame, hand gear change	3	7 6
FF	23	Front portion of main frame, foot gear change	2	15 0

**PETROL TANK GROUP**

FT	5B	Petrol tank, less all fittings, for hand gear change	3	7 6
FT	105	Petrol tank, less all fittings, for foot gear change	3	5 0

**CABLE GROUP (Engines 2000 and over only)**

35CA	60	Valve lifter cable complete (assembled)	3	0
35CC	60	Valve lifter cable outer case, 2ft. 6in. long, (with thimbles)	1	6
35CW	60	Valve lifter cable inner wire, 2ft. 10in. long	6	
HG	91	Valve lifter cable adjuster, short	5	
VL	16884	Lock nut for above	4	
VL	4	Nipple for inner wire, each end	1	

**35/F4 PARTS which  
differ from**

**34/F4**

**Matchless**  
IN NAME & REPUTATION

# ENGINE SECTION.

Part Number.

Description of Part.

£ Price.  
s. d.

Part Number.	Description of Part.	£ Price. s. d.
D/8E 2802	Cap for shock absorber spring	8
D/8E 2806	Nut for shock absorber	6
20862	Dynamo sprocket	3
20865	Nut for above	6
D/5E 187	Locking washer for nut	2
DE 188	Spring ring to fix locking plate on nut	1
20881	Dynamo chain, 47 links, 8x.225 pitch	5 6

## FLYWHEEL GROUP (Engines 970 and over)

FE 419	Flywheel axle, transmission side	11 6
11955	Flywheel only, transmission side	10 0
12074/6	Nut for securing flywheel axle to flywheel	5
	Key for flywheel axle, transmission side	2

## CRANKCASE GROUP (Engines 2000 and over only)

20822	Spacer washer between ball races in crank-case	6
	Crankcase complete with studs and bushes (Valve lifter type)	3 15 0
FE 283	Timing cover with bushes only	12 6
	Exhaust tappet guide	4 0

## TIMING GEAR GROUP (Engines 2000 and over only)

FE 284	Exhaust tappet body	3 3
FE 532	Inlet cam shaft	9 6
FF 531	Exhaust cam shaft	10 3
D/8E 2860	Collar for valve lifter (fits on tappet body)	1 0

## VALVE LIFTER GROUP (Engines 2000 and over only)

D/8E 2861	Valve lifter lever and spindle	3 6
D/8E 2863	Spring for valve lifter lever	3
D/8E 2862	Valve lifter cable cross head	9
STD 74	Lock nut for cable cross head	2
	(For valve lifter cable see Cable Group.)	

## SPROCKET AND CHAIN GROUP (Engines 970 and over)

20815/16	Engine and dynamo sprocket, 16x17 teeth	9 6
20816	Distance piece behind engine sprocket	6
D/8E 2805	Cam for shock absorber	3 9
D/5E 701	Spring for shock absorber	1 6

## CHAINCASE GROUP (Engines 970 and over)

20817/1	Front chaincase, outer half	16 6
---------	-----------------------------	------

200,171	Lucas dynamo, 30 watt, Type E3A	2 10 0
---------	---------------------------------	--------

## HANDLEBAR GROUP (Engines 2000 and over only)

XFF 166	Handlebar fitted with valve lifter bracket	1 2 6
H 3306	Exhaust valve lifter lever	2 6
H 3282	Fulcrum screw for above	5
H 8	Nut for above	2
H 3283	Adapter for valve lifter cable	3

## FORK GROUP

	FFF 1/3	Front fork girder only
	20853	Front fork spindle top, front or rear (6. 31/32in. long underhead)
	20852	Front fork spindle bottom, rear (7. 3/16in. long underhead)
	20851	Front fork spindle bottom, front
	20848	Right side top front fork link (plain hole)
	20849	Left side top front fork link (threaded hole)
	11643	Right side bottom fork link (plain hole)
	11642	Left side bottom fork link (threaded hole)
	3067/P	Lock nut for spindles (4 off)
	16405	Front fork spindle washer (4 off), thin
	STD 10	Front fork spindle washer
	FFF 21/3	Head clip
	FFF 19/3	Front fork crown and stem