

# Master Spares List

COVERING ALL STANDARD MATCHLESS MODELS—1941 TO 1954 BOTH INCLUSIVE  
—SUPERSEDING ALL PREVIOUS LISTS

APRIL, 1954



APRIL, 1954

PARTS LISTED IN NUMERICAL  
AND ALPHABETICAL SEQUENCE  
SEE INDEX FOR SECTION DETAILS

As prices shown are gross retail prices  
current at April 1954

## MATCHLESS MOTOR CYCLES

Proprietors  
ASSOCIATED MOTOR CYCLES LTD.  
PLUMSTEAD, LONDON, S.E.18  
ENGLAND

SOLE EXPORT AGENTS: MATCHLESS, WOL LONDON  
INDIAN MOTORCYCLES, DE 31, 1954  
MATCHLESS MOTORCYCLES, Bombay, India

Printed in England

PRICE FIVE SHILLINGS

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
				£ s. d.
000001	STD 1	NUT	$\frac{1}{2}$ in. by 26 T.P.I. plain	general purpose... Doz. 4 10
000002	STD 2	"	$\frac{3}{8}$ in. by " " " "	Doz. 4 10
000003	STD 3	"	$\frac{1}{2}$ in. by " " " "	Doz. 3 7 1/2
000004	STD 4	"	$\frac{3}{8}$ in. by " " " "	Doz. 3 7 1/2
000005	STD 5	"	$\frac{1}{2}$ in. by " " " "	Doz. 3 7 1/2
000006	STD 6	PIN	split $\frac{3}{8}$ in. by $\frac{3}{8}$ in.	Doz. 1 2 1/2
000008	STD 8	WASHER	$\frac{1}{2}$ in. hole	Doz. 1 2 1/2
000009	STD 9	"	$\frac{3}{8}$ in. " "	Doz. 1 2 1/2
000010	STD 10	"	$\frac{1}{2}$ in. " "	Doz. 1 2 1/2
000011	STD 11	"	$\frac{3}{8}$ in. " "	Doz. 1 2 1/2
000012	STD 12	"	$\frac{1}{2}$ in. " "	Doz. 1 2 1/2
000014	STD 14	PIN	split $\frac{3}{8}$ in. by $\frac{1}{8}$ in.	Doz. 1 2 1/2
000015	STD 15	SCREW	$\frac{3}{8}$ in. by 3 B.A.	Doz. 1 2 1/2
000021	STD 21	BALL	$\frac{1}{2}$ in. diameter	Doz. 1 2 1/2
000024	STD 24	NUT	1 B.A.	Doz. 1 2 1/2
000025	STD 25	WASHER	1 B.A. plain	Doz. 1 2 1/2
000039	STD 39	"	$\frac{1}{2}$ in. hole	Doz. 1 2 1/2
000040	STD 40	SCREW	$\frac{3}{8}$ in. by 1 B.A.	Doz. 1 2 1/2
000044	STD 44	"	$\frac{1}{2}$ in. by 1 B.A.	Doz. 3 7 1/2
000051	STD 51	NIPPLE	Grease, $\frac{1}{2}$ in. by 26 T.P.I., straight	Doz. 6 0
000054	STD 54	"	" " $\frac{1}{2}$ in. by 26 T.P.I., elbow	Each 1 5
000070	STD 70	BOLT	$\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	general purpose... Doz. 3 7 1/2
000071	STD 71	NUT	plain, thin, $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000072	STD 72	BALL	$\frac{1}{2}$ in. diameter, steering head	for 56 Doz. 1 1 1/2
000073	STD 73	NUT	plain, thin, $\frac{3}{8}$ in. by 26 T.P.I.	Doz. 3 7 1/2
000074	STD 74	"	$\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 1/2
000075	STD 75	ROLLER	$\frac{1}{2}$ in. by $\frac{1}{2}$ in.	for crankpin assembly... Doz. 3 7 1/2
000079	STD 79	NUT	3 B.A. plain	general purpose... Doz. 1 2
000080	STD 80	"	plain 2 B.A.	Doz. 1 2
000105	STD 105	RIVET	$\frac{1}{2}$ in. by $\frac{1}{4}$ in.	for brake shoe linings... Set of 16 5
000113	STD 113	"	$\frac{3}{8}$ in. by $\frac{1}{2}$ in.	" " set of 12 3
000140	STD 140	SCREW	$\frac{1}{2}$ in. by 1 B.A.	general purpose... Doz. 3 7 1/2
000149	STD 149	"	3 B.A. by $\frac{1}{2}$ in.	Doz. 1 2
000150	STD 150	"	$\frac{1}{2}$ in. by 3 B.A., bright head	for petrol tank motif... Doz. 2 5
000151	STD 151	"	$\frac{1}{2}$ in. by 3 B.A., black head	Doz. 2 5
000152	STD 152	"	$\frac{1}{2}$ in. by 3 B.A., bronze head	Doz. 2 5
000153	STD 153	"	$\frac{1}{2}$ in. by 3 B.A., chrome head	Doz. 2 5
000162	STD 162	WASHER	$\frac{3}{8}$ in. P.I.P.	for steering damper knob... Doz. 3 7
000164	STD 164	"	lock, dyno. sprocket nut	Doz. 3 7
000165	STD 165	"	lock, chaincase bolt	tab washer... Doz. 1 2
000172	STD 172	"	$\frac{1}{2}$ in. hole, large diameter	general purpose... Doz. 2 5
000173	STD 173	"	$\frac{1}{2}$ in. " "	Doz. 3 7
000174	STD 174	"	$\frac{1}{2}$ in. hole " "	For brake shoe adjustment... Doz. 1 2
000178	STD 178	"	for brake rod	$\frac{1}{2}$ in. hole $\frac{1}{8}$ in. thick... Doz. 1 2
000183	STD 183	"	fibre $\frac{1}{2}$ in. gas	general purpose... Doz. 3 7
000185	STD 185	"	3 B.A. ...	Doz. 1 2
000189	STD 189	"	$\frac{1}{2}$ in. double spring	Doz. 1 2
000190	STD 190	"	$\frac{1}{2}$ in. single spring	Doz. 1 2
000191	STD 191	"	$\frac{1}{2}$ in. single spring	Doz. 1 2
000192	STD 192	"	$\frac{1}{2}$ in. single spring	Doz. 1 2
000193	STD 193	"	$\frac{1}{2}$ in. single spring	Doz. 2 5
000194	STD 194	"	$\frac{1}{2}$ in. single spring	Doz. 2 5
000195	STD 195	"	$\frac{1}{2}$ in. double spring	Doz. 4 10
000200	STD 200	"	fibre $\frac{3}{8}$ in. hole	Doz. 3 7
000201	STD 201	"	$\frac{1}{2}$ in. " "	Doz. 3 7
000202	STD 202	"	Oakenstrong $\frac{1}{8}$ in. hole	Doz. 2 5
000203	STD 203	"	fibre $\frac{1}{2}$ in. hole	Doz. 1 2
000205	STD 205	"	" 2 B.A. ...	Doz. 1 2
000211	STD 211	NUT	spigot $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7
000213	STD 213	"	spigot $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000214	STD 214	"	$\frac{1}{2}$ in. by 22 B.S.F.	Doz. 4 10

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price £ s. d.
000215	STD 215	NUT	spherical $\frac{1}{4}$ in. by 26 T.P.I.	Doz. 4 10
000216	STD 216	"	hardened $\frac{1}{4}$ in. by 26 T.P.I.	Doz. 4 10
000217	STD 217	"	double hexagon $\frac{3}{8}$ in. by 26 T.P.I.	Doz. 7 3
000220	STD 220	"	plain, thin, $\frac{1}{4}$ in. by 26 T.P.I.	Each 8 ½
000221	STD 221	"	plain, left-hand thread, $\frac{1}{4}$ in. by 26 T.P.I.	Doz. 4 10
000230	STD 230	"	plain $\frac{3}{8}$ in. by 20	Doz. 4 10
000233	STD 233	"	plain $\frac{1}{2}$ in. by 20	Each 8 ½
000234	STD 234	"	$\frac{1}{2}$ in. by 20	Each 1 7 ½
000236	STD 236	"	$\frac{1}{2}$ in. by 20	Each 1 6
000236	STD 236	"	1 in. by 26 T.P.I.	Each 1 6
000250	STD 250	STUD	$\frac{1}{2}$ in. by 2 B.A.	Each 10
000251	STD 251	"	$\frac{1}{2}$ in. by 2 B.A.	Doz. 3 7 ½
000261	STD 261	"	$\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000270	STD 270	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000271	STD 271	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000272	STD 272	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000273	STD 273	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000274	STD 274	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000275	STD 275	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000277	STD 277	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000278	STD 278	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000280	STD 280	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000290	STD 290	NUT	5 ½ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000291	STD 291	STUD	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000300	STD 300	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000302	STD 302	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000303	STD 303	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000304	STD 304	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000312	STD 312	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000313	STD 313	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 1 0
000315	STD 315	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 1 0
000316	STD 316	"	7 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 1 5
000318	STD 318	"	4 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 1 5
000340	STD 340	BOLT	chin head $\frac{1}{2}$ in. by $\frac{1}{2}$ in. by WHIT	Each 1 0
000341	STD 341	"	chin head $\frac{1}{2}$ in. by $\frac{1}{2}$ in. by WHIT	Each 1 0
000342	STD 342	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000343	STD 343	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000344	STD 344	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000345	STD 345	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000346	STD 346	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000347	STD 347	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000348	STD 348	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000350	STD 350	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000361	STD 361	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000362	STD 362	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000363	STD 363	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000364	STD 364	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000365	STD 365	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000366	STD 366	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 0
000368	STD 368	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000369	STD 369	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000370	STD 370	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000372	STD 372	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000376	STD 376	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
000402	STD 402	"	2 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000403	STD 403	"	2 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 11
000407	STD 407	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000410	STD 410	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000413	STD 413	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000414	STD 414	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 8 ½
000440	STD 440	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 7 3
000450	STD 450	SCREW	$\frac{1}{2}$ in. by 0 B.A.	Doz. 7 3
			$\frac{1}{2}$ in. by 2 B.A. roundhead	Doz. 3 7 ½
				Doz. 2 5

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price £ s. d.
000451	STD 451	SCREW	$\frac{1}{2}$ in. by 2 B.A.	Doz. 3 7 ½
000452	STD 452	"	$\frac{1}{2}$ in. by 2 B.A.	Doz. 3 7 ½
000453	STD 453	"	1 in. by 2 B.A.	Doz. 3 7 ½
000455	STD 455	"	$\frac{1}{2}$ in. by 2 B.A.	Doz. 3 7 ½
000482	STD 482	"	1 in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000484	STD 484	"	$\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 3 7 ½
000485	STD 485	"	$\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 1 2 ½
000508	STD 508	UNION	$\frac{1}{2}$ in. by B.S.P.	Doz. 7 3
000510	STD 510	"	$\frac{1}{2}$ in. by B.S.P. with gauze	Each 2 7 ½
000513	STD 513	NUT	Union for Petrol Pipe	Doz. 6 0
000524	STD 524	CLIP	cable, rubber, $\frac{1}{4}$ in.	Doz. 2 5
000525	STD 525	"	cable, metal	Doz. 2 5
000526	STD 526	CASING	outer No. 11	Doz. 1 2 ½
000527	STD 527	WIRE	inner No. 11	Doz. 1 2 ½
000528	STD 528	FERRULES	for No. 11 casing	Doz. 1 2 ½
000529	STD 529	CASING	outer No. 12	Doz. 1 2 ½
000530	STD 530	WIRE	inner No. 12	Doz. 1 2 ½
000531	STD 531	FERRULES	for No. 12 casing	Doz. 1 2 ½
000535	STD 535	WIRE	inner, throttle	Doz. 1 2 ½
000540	STD 540	TERMINAL	for 5 m/m. cable	Doz. 2 5
000541	STD 541	"	7 m/m. cable	Doz. 3 7 ½
000542	STD 542	CABLE	5 m/m. low tension	6 ft. for 1 6
000543	STD 543	"	7 m/m. H.T. cable	per foot 1 0
000570	STD 570	KEY	crankshaft	Doz. 4 10
000572	STD 572	"	No. 3 woodruff	Doz. 3 7 ½
000573	STD 573	"	No. 6 woodruff	Doz. 4 10
000575	STD 575	PLUG	drain crankcase	Doz. 7 3
000576	STD 576	"	oil feed valve	Doz. 4 10
000577	STD 577	PIN	dowel	Doz. 1 2 ½
000580	STD 580	WASHER	cork, inspection cap	Doz. 3 7 ½
000581	STD 581	"	paper, carburettor	Doz. 3 7 ½
000582	STD 582	"	paper, pump end cap	Doz. 1 2 ½
000583	STD 583	"	cork, oil filter cap	Doz. 3 7 ½
000591	STD 591	BOLT	pump, end cap	Doz. 3 7 ½
000592	STD 592	SCREW	tappet, adjusting	Each 1 11
000593	STD 593	"	inspection cap	Each 1 6
000594	STD 594	BOLT	front chain adjuster	Each 1 0
000597	STD 597	STUD	seat lug	Each 1 0
000599	STD 599	PLUG	oil tank drain	replaced by 012019 Doz. 4 10
000610	STD 610	NUT	engine shock absorber	Each 1 0
000611	STD 611	"	dynamo sprocket	Each 1 0
000615	STD 615	"	knurled, rear brake rod	Each 3 5
000622	STD 622	"	lock, cable adjuster	Doz. 3 7 ½
000623	STD 623	"	knurled, rocker side cover stud	Each 8 ½
000632	STD 632	COLLAR	gear box fixing stud	Doz. 4 10
000633	STD 633	"	chain adjuster bolt	Doz. 3 7 ½
000638	STD 638	"	for exhaust tappet	Each 1 11
000639	STD 639	"	steering damper anchor bolt	Doz. 3 7 ½
000650	STD 650	BUSH	timing side flywheel axle	interchanges with 015780 Each 7 10
000651	STD 651	"	camshaft short	Each 3 5
000652	STD 652	"	" long	Each 3 5
000661	STD 661	GUIDE	tappet inlet	Each 4 11
000662	STD 662	"	exhaust	Each 7 11
000670	STD 670	TAPPET	inlet	same as 017316 Each 6 5
000671	STD 671	"	exhaust	same as 017024 Each 8 2
000676	STD 676	VALVE	inlet 350	marked "inlet" on stem Each 11 0
000677	STD 677	"	exhaust 350	marked "exh." on stem Each 11 0
000678	STD 678	"	inlet 500	marked "inlet" on stem Each 11 0

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price. £ s. d.
000679	STD 679	VALVE	exhaust 500 ... ..	marked "Exh." on stem ... .. Each 17 6
000685	STD 685	CAP	end for valve $\frac{3}{8}$ in. ... ..	Each 1 1 $\frac{1}{2}$
000686	STD 686	COLLET	for valve (2 pieces) ... ..	Each 1 5
000691	STD 691	GLAND	rubber for cover tube bottom ... ..	Doz. 4 10
000700	STD 700	SPRING	valve lifter lever ... ..	Doz. 4 10
000701	STD 701	"	crankcase oil feed valve ... ..	Doz. 3 7 $\frac{1}{2}$
000702	STD 702	"	engine shock absorber ... ..	Each 2 7 $\frac{1}{2}$
000703	STD 703	"	" ... ..	Each 3 8 $\frac{1}{2}$
000704	STD 704	"	oil tank filter ... ..	Doz. 7 3
000708	STD 708	CIRCLIP	dynamo sprocket nut ... ..	Doz. 1 2 $\frac{1}{2}$
000709	STD 709	ARMOURING	for valve lifter cable ... ..	Doz. 4 10
000720	STD 720	END	sleeve, push rod ... ..	Each 1 5
000721	STD 721	"	" ... ..	Each 1 11
000725	STD 725	SPROCKET	dynamo ... ..	Each 8 4
000726	STD 726	"	magneto on armature shaft ... ..	Each 6 7
000727	STD 727	"	magneto on engine shaft ... ..	Each 6 7
000735	STD 735	YOKE	end for brake rod ... ..	Doz. 1 7 $\frac{1}{2}$
000736	STD 736	PIN	clevis, for yoke end ... ..	Doz. 4 10
000738	STD 738	SCREW	lamp, rear, fixing ... ..	Doz. 3 7 $\frac{1}{2}$
000739	STD 739	NUT	number, front ... ..	Each 3 5
000741	STD 741	PLATE	number, plate, front ... ..	Doz. 7 3
000742	STD 742	CLIP	exhaust pipe ... ..	replaced by 011845 Each 9 7
000744	STD 744	PLATE	number, rear ... ..	Each 1 11
000745	STD 745	CLIP	gudgeon pin ... ..	Doz. 7 3
000750	STD 750	CIRCLIP	release, crankcase ... ..	Each 2 9
000755	STD 755	PIPE	timing side flywheel ... ..	stamped "SS" on end ... .. Each 15 10
000760	STD 760	AXLE	oil pump ... ..	stamped "SS" on end ... .. Doz. 4 10
000765	STD 765	CAP	in timing gear cover, for cam bush ... ..	Each 13 8
000770	STD 770	SHAFT	oil pump ... ..	Each 1 0
000772	STD 772	CAP	pump, end, rear ... ..	Each 2 10
000773	STD 773	"	pump, end, front ... ..	Each 2 7 $\frac{1}{2}$
000780	STD 780	"	chaincase, inspection ... ..	Each 1 2 $\frac{1}{2}$
000785	STD 785	CROSSHEAD	gear box adjusting bolt ... ..	use 014457 Each 7 3
000791	STD 791	PIN	hinge for dynamo strap ... ..	Each 2 11
000795	STD 795	CAP	oil filter compartment ... ..	Each 4 11
000796	STD 796	FILTER	oil tank, felt ... ..	Doz. 4 10
000797	STD 797	WASHER	cap for oil tank filter ... ..	Each 4 6
000805	STD 805	RACE	fork crown ... ..	Each 4 7
000806	STD 806	"	frame ... ..	Each 1 0
000812	STD 812	DISC	friction for steering damper ... ..	Each 9 11
000830	STD 830	CAM	engine shock absorber ... ..	Each 1 4
000831	STD 831	CAP	engine shock absorber spring ... ..	Doz. 3 7 $\frac{1}{2}$
000835	STD 835	DIAPHRAGM	crankcase release valve ... ..	Each 1 11
000836	STD 836	BODY	crankcase release valve ... ..	Doz. 1 11
000861	STD 861	SCREW	front number plate fixing ... ..	Each 1 2 $\frac{1}{2}$
000908-6	STD 908	PIPE	petrol flex 6 in. long ... ..	Each 1 1
000908-6 $\frac{1}{2}$	STD 908	"	petrol flex 6 $\frac{1}{2}$ in. long ... ..	Each 1 1
000908-7 $\frac{1}{2}$	STD 908	"	petrol flex 7 $\frac{1}{2}$ in. long ... ..	Each 1 1
000908-8	STD 908	"	petrol flex 8 in. long ... ..	Each 1 2
000908-9 $\frac{1}{2}$	STD 908	"	petrol flex 9 $\frac{1}{2}$ in. long ... ..	Each 1 4 $\frac{1}{2}$
009183	38-G3-F392	TRANSFER	oil tank level ... ..	Doz. 3 7 $\frac{1}{2}$
009184	38-G3-F391	"	chaincase oil level ... ..	Doz. 3 7 $\frac{1}{2}$
009186	38-G3-F393	"	chaincase "Patent" ... ..	Doz. 3 7 $\frac{1}{2}$
009187	"	"	tool box (monogram) ... ..	Doz. 1 2 $\frac{1}{2}$
009188	38-G3-F385	"	rear mudguard (Matchless) ... ..	Doz. 4 10
009189	38-G3-F383	"	front fork "Patent" ... ..	Doz. 7 3
009192	"	"	front fork "Patent" ... ..	Doz. 7 3
009193	"	"	petrol tank "Reserve" ... ..	Doz. 7 3
009195	"	"	"Made in England" ... ..	Doz. 3 7 $\frac{1}{2}$
009196	"	"	chain stay bearing (Patent) ... ..	Doz. 1 2 $\frac{1}{2}$
009197	"	"	"Fill to Here" ... ..	Doz. 1 2 $\frac{1}{2}$
009198	"	"	for valve, narrow prong ... ..	Doz. 2 5
010004	SPRING	"	for valve, narrow prong ... ..	use 016962 Each 7 10

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.
010017		SEAT	for valve spring ... .. Each
010079		PIN	guide screw, oil pump plunger ... .. Each
010093		WASHER	felt, for rear fork bearing ... .. Each
010094		SPOKE	for rear fork bearing ... .. Doz.
010095		CAP	for rear fork bearing, right side ... .. Each
010096		CAP	for rear fork bearing, left side ... .. Doz.
010098		GASKET	for rear fork bearing caps ... .. Doz.
010116		TUBE	for rear fork ... .. Each
010138		SCREW	guide, oil pump plunger ... .. $\frac{3}{8}$ in. diameter external ... .. Each
010143		BEARING	plain, for connecting rod, top half ... .. use 018643 ... .. Each
010262		BUSH	for pivots, rear suspensions ... .. Each
010293		SPROCKET	and brake drum, for rear wheel 42 T, 5-hole fixing ... .. Doz.
010308		SPRING	main, for front fork, solo ... .. free length 10 $\frac{1}{2}$ in. ... .. Each
010312		ROD	connecting, with liner and bush ... .. 7 ins. centres ... .. Each
010339		GASKET	for magneto flange ... .. Doz.
010347		BOLT	anchor, rear brake cover plate 2 $\frac{1}{4}$ in. long (square head) ... .. Each
010356		NUT	gland, oil feed pipe ... .. Doz.
010360		SPRING	buffer, for front fork ... .. Each
010372		NUT	locking speedo gear box ... .. Each
010392		SPRING	for valve, wide prong ... .. use 016963 ... .. Each
010395	37-G8-E18	CAGE	for crankpin rollers ... .. Each
010437		NUT	lock, for rear hub bearing adjusting ring ... .. Each
010438		SPANNER	hook, for rear hub bearing adjusting ring ... .. Each
010440	3836-2	LININGS	brake, per pair of, less rivets ... .. un-drilled ... .. per pair
010441	3836-3	LININGS	brake, per pair of, less rivets ... .. un-drilled ... .. per pair
010474		BUSH	plain, for camshafts ... .. Each
010505	12389	DRUM	front brake ... .. Each
010555		HUB	rear wheel, shell only ... .. use 016964 ... .. Each
010579	41-G3L-H50	RING	sealing, hub bearings (rubber) ... .. replaces 017279 felt models ... .. Doz.
010589		WASHER	plain, engine shock absorber locking bolt ... .. Doz.
010590		CAP	for engine shock absorber spring ... .. Doz.
010604		CROSSHEAD	in eye of dynamo retaining strap ... .. Doz.
010622		CAM	for engine shock absorber ... .. Doz.
010624		STUD	retaining carburettor to inlet manifold $1\frac{1}{2}$ in. by $\frac{1}{4}$ in. by 26 and 22 T.P.I. ... .. Doz.
010625		STUD	retaining inlet manifold $1\frac{1}{2}$ in. by $\frac{1}{4}$ in. by 26 and 20 T.P.I. ... .. Doz.
010628	16866	WASHER	spacing, between bearings (SKEFKO) ... .. when SKEFKO driving side bearings are used ... .. Doz.
010629	35-G3-E124	SPACER	collar, for engine sprocket ... .. Each
010631		RING	compression, normal size ... .. 66m/m. by $\frac{1}{4}$ in. ... .. Each
010632		RING	scraper, normal size ... .. 66 m/m. by $\frac{1}{4}$ in. ... .. Each
010634	D3-E111	RING	compression, normal size ... .. 2 $\frac{3}{8}$ in. by $\frac{1}{4}$ in. ... .. Each
010635	38-G3-E111	RING	scraper, normal size ... .. 2 $\frac{3}{8}$ in. by $\frac{1}{4}$ in. ... .. Each
010636	D5-E611	RING	compression, normal size ... .. 3 $\frac{1}{2}$ in. by $\frac{1}{4}$ in. ... .. Each
010637	36-G8-E111	RING	scraper, normal size ... .. 3 $\frac{1}{2}$ in. by $\frac{1}{4}$ in. ... .. Each
010639		RING	compression (chrome plated), normal size ... .. 3 $\frac{1}{2}$ in. by $\frac{1}{4}$ in. ... .. Each
010643	38-G3-E358	SCREW	needle adjusting, inlet valve oil feed ... .. Each
010644	CE-211	SPRING	inner, for valve ... .. free length 1 $\frac{1}{2}$ in. ... .. Each
010645	CE-212	SPRING	outer, for valve ... .. free length 2 $\frac{1}{2}$ in. ... .. Each
010646	39-8-E190	HUT	valve spring ... .. Doz.
010647	39-8-E191	SLEEVE	spacing, exhaust valve spring seat ... .. Doz.
010650	D3E-1614	PIN	gudgeon ... .. Each
010651	D5E-611	PIN	for crankpin ... .. Each
010653	39-G8-E118	WASHER	rubber, top of cover tube ... .. Each
010672	38-G4-E368	GASKET	for carburettor, $\frac{3}{8}$ in. wide, 1 in. bore ... .. Doz.
010676	41-G3L-E167	SPACER	for carburettor, $\frac{3}{8}$ in. wide, 1 $\frac{1}{4}$ in. bore ... .. Each
010677	37-G3-E167	SPACER	knurled, for tool box lid ... .. Each
010690	37-8-F53	SCREW	bottom, for fork inner tube ... .. Each
010692	40G12mFF191	BUSH	bottom, for fork inner tube ... .. Each

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
010693	41G3L-FF421	BOLT	fixing front stand to slider $1\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 22 T.P.I.	Each 1 0
010694	41G3L-FF422	BOLT	fixing front stand to slider $1\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 22 T.P.I.	Each 1 0
010696	40G12m-FF78	BRACKET	for speedometer head	Each 1 0
010697	40G12m-FF54	BOLT	fixing damper tube to slider	Each 1 0
010698	40G12m-FF126	WASHER	leather, fork spring seating	Each 1 0
010699	40G12m-FF95	WASHER	paper, for inner tube oil seal	Doz. 3 7 $\frac{1}{2}$
010700	40G12m-FF41	BUSH	bakelite, guide fork inner tube	Doz. 1 2 $\frac{1}{2}$
010701	40G12m-FF128	PLATE	threaded, locating top cover tube	Each 3 0
010702	40G12m-FF127	PLATE	plain, locating bottom cover tube	Doz. 7 3
010703	40G12m-FF186	CAP	for fork top cover tube	Doz. 3 7 $\frac{1}{2}$
010705	41G32-FF184T	TUBE	fork cover, top	Each 1 5
010706	40G12m-FF80	WASHER	fibre, damper tube bolt	Each 3 5
010707	40G12m-FF56	SLEEVE	plunger, fork damper rod	Doz. 1 2 $\frac{1}{2}$
010708	WASHER		lock, sprocket retaining nut	Doz. 7 3
010709	40G12m-FF190	WASHER	plank, fork inner tube top bolt	Doz. 1 2 $\frac{1}{2}$
010710	40G12m-FF192	CIRCLIP	fork inner tube bottom bush	Doz. 4 10
010711	40G12m-FF185a	EXTENSION	for fork slider	Doz. 1 2 $\frac{1}{2}$
010712	L4-FF46	NUT	lock (domed) for fork crown stem	use 018161 or Each 8 1
010713	40G12m-FF195	STUD	securing fork slider cap	Each 3 5
010714	40G12m-FF93	CIRCLIP	retaining damper rod sleeve	Doz. 4 10
010715	40G12m-FF92	CIRCLIP	for fork crown stem	Doz. 1 2 $\frac{1}{2}$
010716	40G12m-FF129	SCREW	retaining both locating plates	Doz. 1 2 $\frac{1}{2}$
010717	40G12m-FF189	EOLT	top, fork inner tube	Doz. 3 7 $\frac{1}{2}$
010718	40G12m-FF91	OIL SEAL	for fork inner tube (leather)	use 016718 Each 2 5
010719	40-18-FF57	SEAT	for fork damper valve	interchangeable with 017569 Each 6 4
010720	40-18-FF58	VALVE	for fork damper	Doz. 3 7 $\frac{1}{2}$
010721	40-18-FF59	PIN	stop, for fork damper valve	Doz. 7 3
010724	H6D52	WASHER	spring, front stand fixing bolt	Doz. 1 2 $\frac{1}{2}$
010734	37-12-H17	BOLT	retaining sprocket to rear hub	Doz. 3 7 $\frac{1}{2}$
010740	16265	RING	spring, locating rear hub bearings	Doz. 4 10
010741	16264	CUP	for rear hub bearing oil seal	Doz. 3 7 $\frac{1}{2}$
010742	16262	RING	retaining rear hub bearing oil seals	Doz. 4 10
010743	16263	RING	spacing, for rear hub bearing oil seals	Doz. 1 2 $\frac{1}{2}$
010745	16258	RING	adjusting, for rear hub bearing	Each 1 1 $\frac{1}{2}$
010788	38-12-F71	BOLT	fixing stand to fork end $1\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 1 4
010795	41-G3L-M38	BOLT	fixing mudguard bridge to slider $\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 22 T.P.I.	Each 1 0
010807		DRAW BOLT	for steering damper	Doz. 4 10
010808	AFF114	CAP	for top of steering stem	Each 1 5
010819		PLATE	engine, front	when steering damper is fitted Doz. 7 3
010820		PLATFORM	for magneto	Each 3 11
010821		SPACER	$1\frac{1}{2}$ in. long by $\frac{1}{2}$ in. internal platform	Each 8 11
010822		SPACER	front fixing stud	Doz. 4 10
010823		STUD	rear fixing stud	Doz. 4 10
010824		STUD	fixing platform front, $6\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Doz. 4 10
010836	D8-E2931	CAMSHAFT	fixing platform at rear, $6\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 T.P.I.	Each 1 0
010837	42-G3L-E132	CAMSHAFT	assembly with shaft	Each 10
010843	35-G3-F345	SPRING	assembly with shaft	Each 1 3 1
010847	16315	PAD	return, for prop stand	use 021261 Each 1 6 5
010850	AE180	BOLT	rubber for footrest arm	pillon or rider Each 8 $\frac{1}{2}$
010851	AE177	NUT	clamping battery carrier	Each 1 10
010852	39-G3-E182	CARRIER	battery carrier clamping bolt	Doz. 7 3
010854	XE184	PIN	battery, front portion only (black enamel only)	Each 8 $\frac{1}{2}$
010854		PIN	hinge, battery carrier front	use 012581 Each 2 5
010854		TANK	petrol, bare enamelled and lined (Matchless)	Doz. 3 7 $\frac{1}{2}$
010855	41-G3-LE550	PLATE	engine, front	use 011886 Each 9 4 10
010901		MUDGUARD	rear, bare (Matchless)	Each 5 11
				Each 1 19 7

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
010906	38-G3-T4L	GRIP	knee, left hand side (Matchless)	Each 4 11
010907	38-G3-T4R	GRIP	knee, right hand side (Matchless)	Each 4 11
010908	38-G3-T34L	PLATE	for left hand knee grip (Matchless)	Each 1 0
010909	38-G3-T34R	PLATE	for right hand knee grip (Matchless)	Each 1 0
010911		SPACER	footrest rod, $1\frac{1}{2}$ in. long	Doz. 7 3
010912		WASHER	spigot, footrest rod	Doz. 2 5
010913		ROD	footrest, bare	Each 2 5
010921		MUDGUARD	front, bare	Each 1 4 8
010923	39-8-E61	ROCKER BOX	bare	Each 1 9 7
010924	CFR-6	SPACER	footrest rod, $3\frac{1}{2}$ in. long	Each 1 4
010925	4518	ARM	for footrests	Each 9 6
010926	39-8E279	CROSS BAR	square, dynamo clamping strap	Each 2 5
010927	39-8-E3	WASHER	paper, cylinder base	Doz. 1 2
010930		BOLT	fixing rocker box, with extension for rocker box	Each 1 4
010931		STAY	securing head to barrel	Each 1 5
010932	39-8-E89	BOLT	timing side only with bushes and studs	Each 4 19 6
010933		CRANKCASE	for cylinder oil feed valve	Each 1 9 8
010934	39-8-E510	BODY	bare, driving side	Each 1 9 8
010935	39-G9-E19	FLYWHEEL	bare, timing side	Each 2 3 10
010936	39-G9-E25	FLYWHEEL	driving side only with studs	use 018860 Each 7 2 10
010937	39-8-E30	CRANKCASE	complete with bushes and studs	Each 6 8 5
010938		CRANKCASE	cylinder, less valve guides	Each 6 8 5
010939	39-18-E2	HEAD	chaincase stud, $3\frac{1}{2}$ in. long	error in spares lists, not used
010940	208H-1	SPACER		
010941	39-G9-E113	ROD	long, push, bare	Each 2 5
010942	39-G9-E114	ROD	long, push, complete	Each 8 5
010943	39-G9-E83E	GUIDE	tappet, exhaust	Each 7 11
010944	39-G9-E83I	GUIDE	tappet, inlet	Each 4 11
010946	38-G9-E4	GASKET	cylinder head	Each 1 7
010947		BARREL	cylinder	Each 4 19 6
010949	39-G9-E84E	TAPPET	exhaust, bare	Each 8 5
010950	39-G9-E84I	TAPPET	inlet, bare	Each 6 5
010952	39-G9-E163	TUBE	cover, for long push rod	Each 4 11
010953	39-G9-C27	SPACER	centre bolt, front chaincase, $1\frac{1}{2}$ in. long	Doz. 4 10
010955	38-G9-E12	PISTON	bare, normal size	Compression Ratio, without compression plate, 7 to 1
010956	20815-21	SPROCKET	engine, bare, 21 teeth	21 teeth by 17 teeth dynamo, OBS use 014021
010957	39-G9-G59	BOLT	gear box, top fixing, $5\frac{1}{2}$ in. by $\frac{1}{2}$ in. by 26 TPI	Each 2 5
010962	39-G9-E275	STRIP	dynamo, locating	Each 1 5
010963	39-G9-E282	PIN	hinge, dynamo clamping strap	Doz. 7 3
010964	39-G9-E279	CROSSBAR	square dynamo clamping strap	Each 2 5
010966	39-G9-E76	PLATFORM	for magneto	same as 011193
010967	39-8-E379	WASHER	plain, top of gasket, $\frac{1}{4}$ in. thick	Doz. 4 11
010970		CLIP	for rocker box stay	Each 1 4
011000	16413	PAD	rubber, thick, tank fixing bolt	Doz. 3 3
011001	16414	PAD	rubber, thin, tank fixing bolt	Doz. 3 3
011002	39-G3-T15	BOLT	fixing tank (hexagon head)	Each 1 6
011003	35-G3-T130	CAP	filler, for petrol tank	Each 7 11
011012	39-8-H54	SPOKE	rear, left or right, $8\frac{1}{2}$ in. by 6 G by 9 G	for 20 8
011013	12344	NIPPLE	rear, left or right, 250 by 9 G	for 20 4
011014	12399	SPOKE	front, right, $8\frac{1}{2}$ in. by 9 G by 11 G	for 20 6 1
011015	41-G3L-H51	SPOKE	front, left, $8\frac{1}{2}$ in. by 8 G by 10 G	for 20 6 1
011016	20678	NIPPLE	front, right, 225 in. by 11 G	for 20 2 1
011017	20680	NIPPLE	front, left, 225 in. by 10 G	for 20 2 1
011018	37-X-H51	SPOKE	front, left $8\frac{1}{2}$ in. by 8 G by 10 G	for 20 6
011020	41-G3L-H45	WHEEL	front, bare, less all fittings	black rim Each 5 7 1
011021	41-G3L-H31	WHEEL	rear, bare, less all fittings	black rim Each 4 14 1
011038		HANDLE	lifting, bare	Each 8 1
011042	20815-18	SPROCKET	engine, bare, 18 teeth	18 teeth by 17 teeth dynamo, OBS use 014018
011045	37-8-E3	WASHER	paper, cylinder base	Doz. 1

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
011051	41-G3L-T57	TRANSFER petrol tank, monogram (silver "M")		Each 1 0
011052	41-G3L-E1	BARREL cylinder		Each 3 19 2
011053	41-G3L-E2	HEAD cylinder, less valve guides		Each 5 10 10
011055	40-G2M-C27	SPACER chaincase centre stud, 1 1/4 in. long		Doz. 4 10
011062		HORN electric, with bracket		Each 1 15 0
011064		CARBURETTER complete (less controls)		Each 3 6 0
011065		SADDLE with rear springs		Each 3 13 8
011068		CARBURETTER complete (less controls)		Each 3 17 7
011081		GEAR BOX complete, with clutch, footchange lever and K/4 lever		price upon application
011082	420208	MAGNETO type NI-3A-0		Each 7 0 0
011086	39-G9-G61	SPACER gear box fixing bolt		Doz. 4 10
011087	39-G4-E379	WASHER plain, metal, top of gasket, 2 1/2 in. thick		Doz. 4 10
011088		COVER only 26 in. by 3-25 in.		See Maker's Lists
011089		TUBE inner only 26 in. by 3-25 in.		
011090		TAPE for 19 in. rim		Each 1 9
011094	39-G3-EQ13	BUSH for exhaust pipe		Each 2 11
011095	38-G3-T15A	rubber, lamp wire		Doz. 4 10
011096		STUD fixing tank		Each 1 0
011099	41-G3L-E461	SILENCER fixing saddle to frame (also supports horn)		Doz. 7 3
011111		bar		Each 1 18 7
011119	39-G3-E461	SILENCER locating valve guides		Doz. 1 24
011126		SPRING bars		Each 1 18 7
011130	35-G3-F342	STAND prop. bar		Each 1 0
011131		PLUG handlebar end	use 014398	Each 18 0
011161		PIPE assembly, petrol feed		Each 1 2
011164		BOX tool, base (Matchless)	use 017081	Each 10 11
011188	11024	PLIERS for gudgeon pin circlips		Each 1 4 8
011191	38-G9-E3P	PLATE compression, cylinder barrel base		Each 1 11
011193	39-G9-E76	PLATFORM for magneto		Each 3 5
011201		SPEEDOMETER trip 80 m.p.h., complete	same as 010966	Each 8 11
011202		SPEEDOMETER trip 120 m.p.h., complete		Each 5 0 0
011203		SPEEDOMETER trip 140 k.p.h., complete		Each 5 0 0
011204		SPEEDOMETER trip 180 k.p.h., complete		Each 5 0 0
011217	36-G8c-E167	SPACER for carburetter 3/4 in. thick		Each 5 0 0
011221	42-G3L-M30	STAY front mudguard		Each 2 11
011231		SPACER for seat tube bottom lug bolt		Each 1 4
011232	39-G3-E567	STAY for silencer		Doz. 7 3
011236		SPINDLE bars, pillion footrest		Each 2 14
011238		BOLT unkiting front and rear frame	same as 011518	Each 3 7 1/2
011241		MUDGUARD front, bare		Doz. 7 3
011245		PIPE exhaust, bare		Each 1 4 8
011255	PUW-7E	BATTERY with lid, dry and uncharged		Each 2 0 7
011264		PLATE engine, rear, left or right side		Each 2 2 6
011267		PAIR of PILLION rests complete with bolts, nuts and rubbers		Each 11 10
011273		BOLT fixing top pivot 2 1/2 in. by 3/4 in. by 26 T.P.I.	per pair	12 7
011286		STAND front, bare		Each 10
011290		COLLAR on rear wheel solid spindle		Each 9 11
011309		SEAT pillion, with fixing bolts, washers and nuts		Each 1 6 5 1/2
011310		STAND prop. bar		Each 17 5
011312		SILENCER bare		Each 2 0 7
011313		DEFLECTOR water, fits under sprocket nut		Each 1 6
011317		ROD bare, rear braka		Each 2 2 1/2
011318		BOLT top, for fork inner tube	use 016718	Each 2 5
011348		STAY front mudguard		Each 1 4
011369		ADJUSTER front brake cable		Each 2 5
011372		CONNECTION rubber, for oil feed pipe		Doz. 7 3
011373		PIN chain adjusting, for right fork end		Each 8 1/2
011374	17418	NUT lock, for chain adjusting pin		Doz. 2 5
011381	36-G8-E384	CONNECTION rubber, for oil feed pipe		Doz. 7 3
011382		CONNECTION rubber, for rocker feed pipe		Each 1 0
		CLIP metal, holding rear lamp cable inside mud-guard		
011392	41-G3L-F311	CLIP for speedometer drive cable		Doz. 2 5
011399		TRANSFER chainstay bearing		Doz. 3 7 1/2
011438		ARM footrest		Doz. 1 2 1/2
				Each 13 6

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
011439		ARM footrest		Each 13 7
011446		PIPE exhaust, bare		Each 1 15 5
011449		PIPE exhaust, bare		Each 2 4 1
011518		SPINDLE bare, pillion footrests	same as 011236	Each 3 7 1/2
011533		PLATE number, rear		Each 6 1
011542		WASHER for crankshaft		Each 10 10
011543		BEARING roller, for crankshaft (RLS 12 1/2)		Each 1 9 5
011544		PINION on crankshaft 30 teeth		Each 12 7
011547		BEARING plain, for centre bearing (in halves) per pair		per pair 18 5
011553		BODY oil return pump for 3/4 in. gears		Each 19 8
011554		PLATE dowel, locating oil return pump end plate		Each 14 8
011556		PIN driving, for oil return pump, 3/4 in. wide, 1/2 in. shaft		Doz. 1 2 1/2
011559		GEAR driven, for oil return pump, 3/4 in. wide, 1/2 in. shaft		Each 12 0
011560		GEAR bulb		Each 10 5
011569		HORN front, left, 7 in. by 8 G by 10 G		Each 12 4
011593	39-26T-H51	SPOKE hinge, for pillion footrest spindle, 1 1/4 in. by 3/4 in. by 26 T.P.I.		for 20 10 0
011599		BOLT		Doz. 7 3
011617		WASHER paper, between oil return pump and carry-ing plate		Doz. 1 2 1/2
011620		GEAR on camshaft, 60 teeth		Each 1 0
011621		GEAR intermediate, with bush, 60 teeth		Each 1 2 2
011623		SHAFT in timing side crankcase for intermediate gear		Each 6 11
011626		SPINDLE for camshaft followers		Each 3 0
011627		SPACER between camshaft followers, 1 1/4 in. long		Each 10
011628		STUD in crankcase for cylinder and head 3/4 in. by 1/2 in. by 26 by 22		Each 3 4
011633		MANIFOLD inlet, bare (no studs)	018654 can be used in lieu	Each 1 0 5
011634		SPACER 3/4 in. long, for head retaining nuts		Doz. 3 7 1/2
011635		NUT retaining cylinders and heads		Each 11
011642		WASHER fibre, crankcase release valve housing cap		Doz. 2 5
011644		SPRING oil relief valve ball		Doz. 3 7 1/2
011645		BALL 3/4 in., steel, for oil relief valve		Doz. 2 5
011646		PLUG retaining oil relief valve ball spring		Each 1 7 1/2
011648		CAP housing, for crankcase release valve		Each 2 7 1/2
011649		PIN banjo, retaining feed and return oil pipes		Each 2 5
011652		ADAPTOR to accommodate oil feed and return pipes banjo pins		Each 2 2 1/2
011653		NUT retaining camshaft gears		Each 8 1/2
011654		BUSH flanged, for camshafts (in timing side crankcase)		Each 3 11
011655		UNION banjo, for oil feed and return pipes		Each 5 5
011657		WASHER fibre, for banjo pin adaptors		Doz. 1 2 1/2
011684		MUDGUARD front, bare (alloy)		Each 2 0 7
011693		RIM front, 19 in. by 3 in. (chrome)	same as 018247 (silver enamel) or replaced by 021151	Each 1 15 6
011694		RIM front, 21 in. by 2 1/2 in. (chrome)		Each 1 15 6
011698		PLATE number, front		Each 3 2 1/2
011702		GUIDE front brake cable		Each 11
011707		BOLT security for rear wheel (3 in. rim)		Each 4 10
011708		BOLT security for front wheel (2 1/2 in. rim)		Each 4 10
011713		CYLINDER barrel only		Each 3 0 0
011714		STUD for centre web 2 1/4 in. by 1/4 in. by 18 and 18 T.P.I.		Each 1 7 1/2
011715		GASKET for cylinder head		Each 4 2
011716		WASHER paper, for cylinder base		Doz. 1 2 1/2
011731		PIN gudgeon		Each 5 0
011738		STAY for tool box		Doz. 4 10
011755		STUD fork crown, pinch		Each 1 0
011760		BOLT clamping rocker spindle		Each 1 5
011769		SPRING outer, for valve		Each 1 6

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price. £ s. d.
011770		SPRING	inner, for valve	Each 10
011771		GASKET	between manifold and cylinder heads	Doz. 1 2½
011775		BOLT	locking engine shock absorber assembly threaded ½ in. by 20 T.P.I.	Each 11
011776		BOLT	retaining crankshaft pinion threaded ½ in. by 26 T.P.I.	Each 11
011779		STAY	mudguard, rear-rear position	Each 13 4
011780		STAY	mudguard, rear-front position	Each 14 1
011781		COVER	for timing gear "M"	Each 1 19 7
011784		CAMSHAFT	inlet	Each 1 17 2
011785		CAMSHAFT	exhaust	Each 1 17 2
011786		STAY	front mudguard, front position	Each 11 2
011787		STAY	front mudguard, rear position	Each 14 2
011800		GEAR	on dynamo shaft	Each 10 2
011801		STRAP	retaining dynamo to crankcase	Each 11
011802		NUT	tensioning dynamo strap	Doz. 4 10
011803		STUD	in timing side crankcase for dynamo strap 1½ in. by ½ in. by 26 by 20	Doz. 3 7½
011804		LAMP	rear complete with bulb (LUCAS 53056A)	Each 12 6
011806		SPINDLE	centre, solid, rear wheel (special steel)	Each 6 8
011819		SCREW	retaining timing gear cover	Doz. 7 3
011820		SCREW	retaining timing gear cover	Doz. 7 3
011826		STUD	fixing centre web	Doz. 3 7½
011827		ARCH	tubular, rear mudguard	Each 1 10 0
011833		DYNAMO	Type E3-L-L1-0 (LUCAS 20009)	Each 7 10 0
011834		STUD	in timing side crankcase for pump carrying plate	Doz. 3 7½
011835		PLATE	number, front	Each 3 5
011836		STUD	retaining, front number plate	Each 1 2½
011840		NUT	for centre web bearing cap stud	Each 8½
011842		NUT	securing pump carrying plate to timing side crankcase, 7/8 B.S.F.	Each 8½
011843		NUT	for centre web fixing studs	Doz. 6 0
011845		PLATE	number, rear	Each 9 7
011846		NUT	for rocker spindle clamping bolt	Doz. 3 7½
011848		PISTON	bare, normal size	compression ratio without plate 6.5 to 1. Use 013504 wire wound
011848A		PISTON	complete, normal size	compression ratio without plate 6.5 to 1. Use 018301 wire wound
0/011848		PISTON	bare, plus .020 oversize	compression ratio without plate 6.5 to 1. Use 013621 wire wound
0/011848A		PISTON	complete, plus .020 oversize	compression ratio without plate 6.5 to 1. Use 018302 wire wound
011849		PISTON	bare, normal size	compression ratio without plate 7 to 1. Use 013505 wire wound
011849A		PISTON	complete, normal size	compression ratio without plate 7 to 1. Use 016858 wire wound
0/011849		PISTON	bare, plus .020 oversize	compression ratio without plate 7 to 1. Use 013622 wire wound
0/011849A		PISTON	complete, plus .020 oversize	compression ratio without plate 7 to 1. Use 016938 wire wound



PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
011853		MUDGUARD rear, bare (Matchless) ... ..	Each	1 19 7
011858		PIPE exhaust, bare ... ..	Each	2 0 7
011859		CABLE complete, assembled, front brake ... ..	Each	7 6
011860		WIRE inner, front brake, finished length 40½ in. ... ..	Doz.	7 3
011862		SPACER ¾ in. wide, top for s/c type fork spring ... ..	Each	2 8½
011863		SPACER footrest rod between arms and plates ... ..	Each	11
011865		CARRIER rear, bare ... ..	Each	1 6 8
011873		CHAINGUARD rear, bare ... ..	Each	1 14 7
011874		DISTANCE PIECE oil tank fixing ... ..	Each	11
011880		PISTON bare (high compression) ... ..	without compression plate 9-4 to 1	Each 1 19 0
011886		TANK petrol, bare enamelled and lined (Matchless)	replaces 010894 ...	Each 9 4 10
011889		FILLET rubber, front number plate ... ..	Doz.	6 0
011907		CLIP rubber, cable, size 1½ in. ... ..	Doz.	2 5
011908		CLIP rubber, cable, size 3 in. ... ..	Doz.	2 5
011909		CLIP rubber, cable, size 4½ in. ... ..	Doz.	2 5
011913		PLUNGER oil pump. 1947 only ... ..	¾ in. grooved and stamped 2-5 on end ... ..	Each 13 8
011914		AXLE timing side flywheel. Use 015781 ... ..	stamped 2-5 on end, single oil drilling, same as 011942 ...	Each 18 0
011915		SCREW guide, oil pump plunger ... ..	⅜ in. diameter outside, 1947 models only	Each 11
011916		PIN guide screw oil pump plunger ... ..	¾ in. diameter, 1947 models only	Doz. 6 0
011917		PIPE oil feed assembly ... ..	Each	6 11
011919		TANK oil, bare ... ..	Each	2 5 0
011920		CRANKCASE complete with bushes and studs ... ..	Each	9 3 4
011921		CRANKCASE complete with bushes and studs ... ..	Each	7 2 10
011922		CRANKCASE timing side only, with bushes and studs ... ..	Each	4 19 0
011923		CRANKCASE timing side only, with bushes and studs ... ..	Each	4 15 1
011924		UNION oil feed pipe (engine end) ... ..	Each	1 2½
011925		NUT oil feed union ... ..	Doz.	7 3
011928		LETTER "M" and wings ... ..	Each	3 7½
011930		PISTON bare (high compression) ... ..	compression ratio without plate 8.5 to 1	Each 2 17 0
011940		MUDGUARD rear, bare (Matchless) ... ..	Each	1 19 7
011942		AXLE timing side flywheel use 015781 ... ..	replaces 011914 and stamped 2-5 on end	Each 18 0
011945		SPRING suspension, for rear leg ... ..	free length 8½ in.	Each 15 0
011957		"TEKALL" ½-pint, rust preventative ... ..	in tins	Each 2 0
011958		"TEKALL" 1-pint, rust preventative ... ..	in tins	Each 3 0
012019		PLUG oil tank, drain ... ..	replaces 000599 ...	Doz. 4 10
012057		CHAINGUARD rear, bare ... ..	Each	1 16 0
012081		UNION with filter, oil, feed from tank ... ..	Each	2 7½
012116		WASHER fibre, for oil union feed ... ..	Doz.	1 2½
012119		TUBE cover, top, for rear leg spring ... ..	Each	4 10
012120		TUBE cover, bottom, for rear leg spring ... ..	Each	5 2
012123		TUBE bottom, for rear leg damper ... ..	Each	14 5
012124		NUT carrier, located on bottom tube by 012125	dowel pin ... ..	Each 4 10
012125		PIN dowel, locating ring 012124 ... ..	Doz.	1 2-
012126		WASHER fibre, under rear leg bottom damper tube ... ..	Doz.	1 2-
012131		CAP screwed, securing rear leg damper oil seal ... ..	Each	1 4
012132		OIL SEAL for rear leg damper tube ... ..	Each	5 1
012133		STAY for exhaust pipe (enamelled) ... ..	Each	10
012133		STAY for exhaust pipe (chrome) ... ..	Each	2 11
012146	40G12m-FF65	STUD for handlebar clip ... ..	Doz.	4 10
012176		SPRING inner, for valve. 1948 only ... ..	Each	1 0
012177		SPRING outer, for valve. 1948 only ... ..	Each	1 11
012219		RIM front 19 in. by 2½ in. chrome edges, black centre, silver line (Matchless) ... ..	Each	1 13 8

This scan was made possible by the AJS/Matchless Egroup. Explicit for non-commercial use, not intended for financial or material gain by anyone - http://autos.groups.yahoo.com/group/Ajsmatchless/



PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price. £ s. d.
012220		RIM rear 19 in. by 2½ in. chrome edges, black centre, silver line (Matchless) ...	Each	1 13 8
012221		WHEEL front, assembly, with all fittings (Matchless), black centre, silver line ...	Each	9 11 6
012222		WHEEL rear, assembly, with all fittings (Matchless), black centre, silver line ...	Each	7 13 4
012225		WHEEL front, bare, less all fittings (Matchless), black centre, silver line ...	Each	5 7 10
012226		WHEEL rear, bare, less all fittings (Matchless), black centre, silver line ...	Each	4 14 10
012230		WHEEL Rear, less all fittings (competition) ...	Each	5 13 6
012233		PEG securing timing side bush ...	Doz.	1 2½
012291	A-E-178	SEAT battery carrier clamping bolt ...	Doz.	4 10
012333		BODY oil feed pump, for ¼ in. gears ...	Each	16 2
012336		GEAR driving, for oil feed pump, ¼ in. wide, ½ in. shaft ...	Each	12 0
012337		GEAR driven, for oil feed pump, ¼ in. wide, ½ in. shaft ...	Each	10 10
012341		BUSH rubber, for top and bottom pivot ...	Doz.	7 3
012431		DAMPER steering, complete set of parts. (1946 Matchless) ...	Each	1 5 2
012433		DAMPER steering, complete of parts (1947 Matchless) ...	Each	18 0
012436		SPACER collar, between bearing and oil seal ...	Each	11
012444		WASHER felt, between engine sprocket and crankcase ...	Doz.	4 10
012472	36-2-H-34	NIPPLE rear, left or right .300 by 6G ...	for 20	4 2
012478		SLEEVE rubber, for front brake cable inner wire ...	Doz.	6 0
012508		WEB centre, with cap, studs, washers and nuts (no bearing) ...	Each	1 18 10
012537		TANK petrol, bare chrome and panelled (Matchless) ...	Each	12 4 10
012560		BADGE monogram for driving side crankcase (Matchless) ...	Each	5 1
012565		BOLT fixing stay to mudguards, ½ in. by 2 B.A. ...	Doz.	3 7½
012569		CAP for bottom of fork top cover tube ...	Each	11
012570		SPROCKET and brake drum for rear wheel, 42 teeth, 6-hole fixings ...	Each	2 2 0
012572		PLATE cover, front brake ...	Each	1 3 8
012574		PLATE cover, rear brake ...	Each	18 0
012575		HUB front wheel, shell only, with brake drum ...	Each	3 1 2
012576		LEVER for front brake shoe expander ...	Each	3 0
012577		LEVER for rear brake shoe expander ...	Each	4 2
012581		CARRIER battery, front portion only (enamelled) ...	replaces 010852	Each 2 5
012581		CARRIER battery, front portion only (chrome) ...	replaces 010852	Each 9 0
012594		RACE ball, for frame head, top ...	Each	14 2
012595		RACE ball, for frame head, bottom ...	Each	16 6
012620		BALL RACE for handlebar lug ...	Each	4 5
012694		CAMSHAFT (high lift) (special use only) ...	with threaded shaft	Each 1 10 0
012695		CAMSHAFT (high lift) (special use only) ...	with plain shaft	Each 1 4 2
012720		FRAME front portion only, bare ...	Each	6 8 8
012722		RING felt, for rocker axle sleeve ...	Doz.	3 7½
012756		SPACER rear solid spindle (next to cover plate) ...	Each	1 4
012758		SPACER rear solid spindle (fits in fork end) ...	Each	11
012772		COVER tyre, 26 in. by 3.50 in. ...	See Maker's Lists	
012786		SPOKE front, left, 6½ in. by 8 G by 10 G ...	for 20	10 0
012798		BOLT clamping battery carrier, 1½ in. by ¼ in. by 26 T.P.I. ...	replaces 010850	Doz. 7 3
012812		TUBE inner, 26 in. by 3.50 in. ...	See Maker's Lists	
012825		SPINDLE with roller bearings, front wheel ...	Each	2 2 7
012837	11905	SPINDLE hollow with roller bearings, rear wheel ...	Each	1 14 7
012870		STUD for handlebar clip ...	Doz.	4 10
012875		RIM front, 19 in. by 2½ in., chrome, red centre (Matchless) ...	Each	1 13 8
012876		RIM rear, 19 in. by 2½ in., chrome, red centre (Matchless) ...	Each	1 13 8
012877		SPRING saddle rear ...	Each	6 0
012880		STUD saddle spring (screws in frame) ...	Doz.	6 0
012890		FRAME rear portion only, bare ...	Each	7 16 0

This scan was made possible by the AJS/Matchless Egroup. Explicit for non-commercial use, not intended for financial or material gain by anyone - http://autos.groups.yahoo.com/group/Ajsmatchless/

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
012891		EXPANDER	for brake shoes	Each 4 11
012892	16485	SPRING	for brake shoes	Doz. 4 10
012916		FRAME	rear portion only, bare	Each 7 16 0
012954		DAMPER CONE	for forks	Each 1 0
012960		FRAME	front portion only, bare	Each 6 8 8
012965		SPINDLE	rear, brake pedal	Each 10
012967		PLUNGER	oil pump	Each 13 8
012972	SPRING	front fork main	free length 11 in. 016526 can be used in lieu	Each 7 10
012973	TRANSFER	petrol tank "RESERVE"		Doz. 3 7½
012999	SPACER	gear box top fixing bolt		Doz. 4 10
013177	CASING	outer, front brake.		Each 1 5
013178	CABLE	complete assembled, front brake.		Each 6 6
013179	FLYWHEEL	bare, timing side	use 016968 and discard crank-pin washers	Each 1 9 8
013180	FLYWHEEL	bare, driving side	use 016967 and discard crank-pin washers	Each 1 9 8
013191	BARREL	cylinder (1948 only)	engines after 8,000 on STD and 700c on competition	Each 3 19 2
013291	PIN	chrust, brake expander adjusting		Each 11
013324	CAP	filler, for oil tank		Each 6 5
013325	CAP	filler for petrol tank		Each 6 5
013332	PLUG	filling, for rear leg pivot		Each 10
013333	CRANKCASE	driving side only, with studs	use 018201	Each 6 4 2
013334	CRANKCASE	timing side only, with bushes and studs	use 018292	Each 10 8 10
013345	OIL PUMPS	complete, assembled on carrying plate		Each 6 19 6
013347	SHUTTLE	for fork damper		Each 1 8½
013348	TUBE	fork, inner		Each 1 17 11
013351	NUT	sleeve, revolution counter	conversion for racing	Each 1 0
013352	WASHER	revolution counter		Doz. 1 2½
013353	RUBBER	revolution counter		Doz. 2 5
013388	SPRING	saddle, rear		Each 6 0
013452	TANK	oil, bare		Each 2 5 0
013457	DAMPER	steering, complete set of parts (Matchless)		Each 18 0
013459	MUDGUARD	rear, bare		Each 3 3 5
013483	NUT	outside, securing front brake cover plate		Each 10
013504	PISTON	bare, normal compression, wire wound	compression ratio without plate, 6.5 to 1, replaces 011848	Each 1 3 8
013505	PISTON	bare, normal compression, wire wound	compression ratio without plate, 7 to 1, replaces 011849	Each 1 9 8
013551	PIPE	oil feed, with union nuts		Each 6 11
013552	PIPE	oil return, with union nuts		Each 6 11
013561	SPRING	buffer, fork inner tube		Each 10
013564	SPRING	for non-return ball valve		Doz. 2 5
013589	40G12mFF183c CAP	for slider, left or right	error in some lists as 013509	Each 4 11
013602	BOLT	fixing rocker box, long head	use in place of 017028	Each 1 1½
013607	WHEEL	front, assembly with all fittings, black centre, silver line (Matchless)		Each 11 3 4
013609	WHEEL	front assembly with all fittings		Each 11 4 5
013611	WHEEL	front, assembly with all fittings, red centre, silver line (Matchless)		Each 11 3 4
013612	WHEEL	front, bare, less all fittings, red centre, silver line (Matchless)		Each 6 0 2
013615	WHEEL	rear, with all fittings, red centre, silver line (Matchless)		Each 7 13 4

This scan was made possible by the AJS/Matchless Egroup. Explicit for non-commercial use, not intended for financial or material gain by anyone - http://autos.groups.yahoo.com/group/Ajsmatchless/

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price. £ s. d.
013617		WHEEL	front, bare, less all fittings, black centre, silver line (Matchless) ...	Each 6 0 2
013619		WHEEL	rear, bare, less fittings, red centre, silver line (Matchless) ...	Each 4 4 10
013620	39-8-871A	SHOES	pair of, for rear or front brake, with linings and thrust pins ...	per pair 1 4 7
013621		PISTON	bare, normal compression, .020 oversize, wire wound	compression ratio without plate, 6.5 to 1, replaces 0/01848
013622		PISTON	bare, normal compression, .020 oversize, wire wound	compression ratio without plate, 7 to 1, replaces 0/01849
013623		PISTON	complete, normal compression, .020 oversize, wire wound	compression ratio without plate, 6.5 to 1, use 018302
013624		PISTON	complete, normal compression, .020 oversize, wire wound	compression ratio without plate, 7 to 1, use 016938
013625		PISTON	complete, normal compression, STD size, wire wound	compression ratio without plate, 6.5 to 1, use 018301
013626		PISTON	complete, normal compression, STD size, wire wound	compression ratio without plate, 7 to 1, use 016858
013627		WHEEL	front bare, less all fittings ...	Each 2 7 8
013629		CLIP	half only, for handlebar lug ...	Each 6 1 6
013631		LUG	for handlebar and steering head ...	Each 7 10
013632		SLIDER	fork, right side, with cap, studs and nuts ...	Each 2 5 7
013633		SLIDER	fork, left side, with cap, studs and nuts ...	Each 2 11 5
013637		FORKS	front, complete assembly ...	Each 20 3 2
013638		INNER TUBE	assembly complete, fork ...	Each 3 5 8
013639		PLATE	compression, for cylinder base ...	Each 3 5 5
013645	39-10-E2ASS	HEAD	cylinder, with valve guides ...	Each 6 18 7
013655		CRANKCASE	complete, with bushes and studs ...	Each 9 3 4
013656		CRANKCASE	timing side only, with bushes and studs ...	Each 4 15 1
013657		CRANKCASE	timing side only, with bushes and studs ...	Each 4 19 0
013658		CRANKCASE	complete, with bushes and studs ...	Each 7 2 10
013661	0/D5-E611	RING	compression 3 1/4 in. plus .020 by 1/8 in.	Each 2 1 1/2
013662	0/36-GB-E111	RING	scraper, 3 1/4 in. plus .020 by 1/8 in.	Each 3 4
013668		SADDLE	with rear springs ...	Each 3 13 8
013669		SADDLE	with rear springs ...	Each 3 13 8
013677		PLATE	engine, rear ...	Each 11 10
013679		CHAINCASE	back half, bare ...	Each 13 4
013682		CHAINCASE	rear, bare ...	Each 1 14 7
013685	AT30C	WASHER	only, for petrol and oil tank filler caps	Doz. 4 10
013688		COVER	only, rear (19 in. by 4.0 in.)	See Maker's Lists
013689		TUBE	inner only (19 in. by 4.0 in.)	" " 9
013690		TAPE	rim, only ...	" " 9
013691		COVER	only, front (21 in. by 3.00 in. ribbed)	See Maker's Lists
013692		TUBE	inner only, front (21 in. by 3.00 in.)	" " 9
013693		TAPE	Rim, only ...	" " 9
013694		TUBE	fork, cover, top right, with lamp lug	Each 10 2
013695		TUBE	fork, cover, top left, with lamp lug	Each 10 2
013705		PISTON	complete, high compression, STD size	compression ratio without plate, 9.4 to 1, use 018304
013706		PISTON	complete, high compression STD size	compression ratio without plate, 8.5 to 1, use 016859

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price. £ s. d.
013711		PISTON	bare, high compression plus .020 oversize...	compression ratio without plate, 9.4 to 1 ... Each 1 19 0
013712		PISTON	complete, high compression plus .020 oversize	compression ratio without plate, 9.4 to 1, use 018305 ... Each 2 16 0
013713		PISTON	bare, high compression plus .020 oversize...	compression ratio without plate, 8.5 to 1 ... Each 2 17 0
013714		PISTON	complete, high compression plus .020 oversize	compression ratio without plate, 8.5 to 1, use 016939 ... Each 3 15 0
013748		CAP	filler, petrol tank ...	Each 7 10
013750		WHEEL	rear, complete assembly ...	Each 7 13 0
013772		FRAME	front, portion, only ...	Each 7 1 7
013773		FRAME	rear, portion, only ...	Each 7 16 0
013778		CRANKSHAFT	plugged, but bare ...	Each 10 19 4
013786		MUDGUARD	rear, bare (Matchless) ...	Each 1 19 7
013791		BARREL	cylinder, only ...	Each 3 6 0
013792		BARREL	cylinder, only ...	Each 3 18 0
013793		GASKET	cylinder head ...	Each 1 7 1/2
013815		TANK	oil, bare ...	Each 2 8 7
013824		CARRIER	battery, back portion only ...	Each 13 10
013826		SPACER	seat tube bottom lug bolt, left	Doz. 7 3
013827		SPACER	seat tube bottom lug bolt, right	Doz. 7 3
013837		SPACER	footrest rod, outside plates	Each 1 4
013840		STAY	battery carrier to chainguard	Each 1 0
013861		CROWN	assembly comprising crown, stem and circlip	Each 2 8 10
013868		SPACER	1/2 in. bottom, for sidecar fork main spring	Each 4 11
013870		SPINDLE	centre, solid, for rear wheel	Each 18 0
013872		PIVOT	top, bare ...	Each 3 1 8
013873		SADDLE	less rear springs ...	Each 3 13 8
013874		SADDLE	with rear springs ...	Each 1 10 0
013885		ARCH	tubular, rear mudguard ...	Each 13 4
013901		STAY	rear mudguard, rear position	Each 14 1
013903		STAY	rear mudguard, front position	Each 3 3 5
013906		MUDGUARD	rear, bare (Matchless) ...	Each 7 16 0
013916		FRAME	rear portion only ...	Each 5 18 10
013922		HEAD	cylinder, less valve guides ...	Each 2 5 0
013925		TANK	oil, bare ...	Each 6 6
013927		COVER	for carburettor ...	Each 13 5
013928		STAY	front mudguard, front position	Each 14 2
013929		STAY	front mudguard, rear position	Each 2 4
013933		ROD	long-push, bare, 8 1/2 in. long	Each 1 2 1/2
013936		PIN	split, 1 1/4 in. by 3/8 in.	Doz. 9 0
013939		CHAINCASE	front back half only ...	Each 9 2
013942		PLATE	engine, rear ...	Each 2 5
013943		PLATE	engine, front, left side	Each 2 5
013944		PLATE	engine, front, right side	Each 2 0 7
013947		MUDGUARD	front, bare ...	Each 4 5
013948		ARM	rocker, tappet end, inlet and exhaust	Each 4 11
013949		ARM	rocker, valve end, inlet and exhaust	Each 6 8 8
013955		HEAD	cylinder, less valve guides ...	Each 1 19 7
013958		BOX	rocker, bare ...	Each 11 1
013969		LEVER	exhaust lifter ...	Each 4 10
013970		SPRING	for valve lifter lever ...	Each 6 11
013980		COVER	side, for rocker box ...	Each 1 0
013984		GASKET	for rocker box ...	marked inlet on stem ... Each 11 0
013985		VALVE	inlet ...	marked exh. on stem ... Each 11 0
013986		VALVE	exhaust ...	marked exh. on stem ... Each 11 0

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
013987		ADJUSTER	for gear box and front chain	
013988		VALVE	inlet ... .. marked inlet on stem	Each 2 1 1/2
013989		VALVE	exhaust ... .. marked exhaust on stem	Each 11 0
013990		COLLAR	for valve spring	Each 17 6
013992		CARRIER	rear, bare	Each 5 1
013993		SPRING	saddle, rear	Each 1 5 2
013998		FERRULE	exhaust lifter cable, engine end	Each 6 0
014015		SPROCKET	engine, bare, 15 teeth	Doz. 1 2 1/2
			15 teeth engine by 21 teeth dynamo, in lieu 017303	
014016		SPROCKET	engine, bare, 16 teeth	Each 1 9 2
			16 teeth engine by 21 teeth dynamo, in lieu 017079	
014017		SPROCKET	engine, bare 17 teeth	Each 1 9 2
			17 teeth engine by 21 teeth dynamo, in lieu 017304	
014018		SPROCKET	engine, bare, 18 teeth	Each 1 9 2
			18 teeth engine by 21 teeth dynamo, in lieu 011042	
014019		SPROCKET	engine, bare, 19 teeth	Each 1 9 2
			19 teeth engine by 21 teeth dynamo, in lieu 017305	
014020		SPROCKET	engine, bare, 20 teeth	Each 1 9 10
			20 teeth engine by 21 teeth dynamo, in lieu 017306	
014021		SPROCKET	engine, bare, 21 teeth	Each 1 9 10
			21 teeth engine by 21 teeth dynamo, in lieu 010956	
014033		CAP	or lid, for cool box	Each 1 9 10
014034		CAP	filler for petrol tank	Each 14 6
014060		CABLE	complete, assembled, exhaust lifter	Each 9 11
014061		NIPPLE	engine end, exhaust lifter, inner wire	Each 4 6
014084		SPACER	1 1/2 in. long, on chaincase stud	Doz. 1 2 1/2
014114		END	lower, for push rod	Each 8 1/2
014115		END	upper, for push rod	Each 3 1 1/2
014116		ROD	push, bare	Each 3 11
014119		WASHER	shake-proof	Each 3 11
014120		WASHER	shake-proof	Doz. 1 2 1/2
014126		ROD	push, assembled with ends	Doz. 1 7 1/2
014128		PIPE	exhaust (straight through)	Each 10 11
014131		TRANSFERS	exhaust (straight through)	Each 2 0 2
014132		TRANSFERS	complete set of 9 (Matchless)	per Set 2 8 0
014139		NUT	complete set of 7 (Matchless)	per Set 4 10
014141		GASKET	prop stand hinge bolt	Doz. 3 3
014147		BOLT	between dynamo and crankcase crankcase, rear, bottom position, 3/4 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
014149		SPINDLE	center, solid, rear wheel	Doz. 7 3
014150		SADDLE	with rear springs	Each 6 8
014151		SPRING	saddle	Each 3 13 8
014154		FOLLOWER	for camshaft	Each 6 0
014159		BOX	rocker, complete, assembled	Each 15 4
014163		VALVE	inlet	Each 6 0 6
014165		VALVE	exhaust	Each 10 6
014167		COLLET	for valve stems (2 halves)	Each 15 0
014168		COLLAR	for valve springs	Each 1 1 1/2
014169		SEAT	for valve springs	Each 2 1 1/2

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
014170		GUIDE	for inlet valves	Each 3 0
014171		GUIDE	for exhaust valves	Each 3 0
014175		BOLT	fixing rocker box, short, 1 1/2 in. by 1/2 in. by 22 T.P.I.	Doz. 7 3
014176		BOLT	fixing rocker box, long, 2 1/2 in. by 1/2 in. by 22 T.P.I.	Each 1 1 1/2
014177		BOLT	fixing rocker box, with extension 2 1/2 in. by 1/2 in. by 22 with extension	Each 1 7 1/2
014185		CARBURETTER	complete (less controls), type 76AE-IAK...	Each 3 8 0
014194		BRACKET	long, for horn	Each 1 6
014195		BRACKET	short, for horn	Doz. 6 0
014202		COVER	rear, engine plate	Each 1 1 1/2
014221		ROD	connecting assembly (no big end bearings)	Each 3 13 2
014222		SPINDLE	for rockers	Each 13 6
014225		ADJUSTER	valve, lifter cable	Each 8 1/2
014226		WASHER	spring, rocker spindle	Doz. 1 2 1/2
014227		ARM	footrest (with rod), left	Each 14 0
014229		FILLET	rubber, rocker box side cover	Doz. 4 10
014235		FILTER	felt, for engine crankcase	Each 7 2
014238		CAP	for felt filter housing (also accommodates oil non-return valve)	Each 6 11
014239		SEAT	for oil felt filter	Doz. 7 3
014240		VALVE	relief, for oil felt filter	Each 4 6
014241		SPRING	for oil felt filter relief valve	Doz. 2 5
014243		SEAT	for non-return valve ball	Doz. 1 2 1/2
014245		BUSH	for rockers (2 in each rocker)	Each 6 1/2
014246		DISTRIBUTOR	oil	Each 3 2 1/2
014247		CAP	housing for oil distributor	Each 6 4
014248		VALVE	relief, for oil felt filter	Each 4 6
014249		SPACER	magneto platform rear fixing bolt	Each 1 0
014260		PLATE	number, rear	use 015671 Each 13 80
014275		WASHER	plain, rocker axle	Doz. 2 5
014278		NUT	dome, 1/2 in. by 26 T.P.I.	Doz. 7 3
014279		TRUNNION	for connecting rod	Each 3 0
014280		RIVET	locating connecting rod stud	replaced by 015279 Doz. 2 5
014281		STUD	for connecting rod, 2 1/2 in. by 1/4 in. by 26 T.P.I.	Each 11
014283		CIRCLIP	for gudgeon pin	Doz. 3 7 1/2
014284		ROCKER	with bushes (left inlet and right exhaust)	Each 1 7 4
014285		ROCKER	with bushes (right inlet and left exhaust)	Each 1 7 4
014288		CARBURETTER	complete (less wires and levers). Type 76AG/1AU	Each 3 5 2
014289		PLATE	tie, for cylinder heads and steady stays	Each 3 4
014292		BOLT	clamping crankcase throat 3 1/4 in. by 1/2 in. by 22 T.P.I.	Each 11
014293		SEAT	twin	use 021220 Each 8 8 0
014294		SPROCKET	engine, bare, 21 teeth	Each 1 7 2
014295		SPACER	(collar) 3/2 in. wide for engine sprocket	Each 4 6
014296		PLUG	sparking, type H 14/S	Each 5 0
014297		WASHER	composition, for oil seal	for use with 010718 oil seal only Doz. 2 5
014307		FORK	rear	Each 4 17 11
014313		PIN	locating, damper tube shuttle	Doz. 1 2 1/2
014339		ARM	footrest, right side	obsolete, use 010925 Each 9 0
014340		SPACER	head lamp fixing bolt	Doz. 4 10
014341		EXTENSION	for fork slider	use 018161 or 018214 Each 8 1
014352		BUSH	in rocker standard, for rocker spindle	Each 11
014354		BOLT	top, for fork inner tube	use 016718 Each 2 5
014355		RING	sealing, for fork inner tube top bolt	Doz. 3 7 1/2
014358		SPACER	under rear leg spring	Each 1 0
014359		RAIL	frame, right side	Each 2 8 0
014360		RAIL	frame, left side	Each 2 12 0
014364		BOX	rocker, with bushes	Each 2 11 10
014373		STAY	for rocker box	Each 1 6
014380		ROD	for footrests (overall length 9 in.)	Each 2 10
014381		COVER	for rockers	Each 12 7

## PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
014387		OIL SEAL	for rear hub bearings	Doz. 4 10
014398		STAND	prop. bare	Each 18 0
014399		STAY	for silencer	Each 2 1½
014404		PIPE	oil feed, assembly with union nuts	cut in middle makes 016368 and 016369
014406		PIPE	oil return, assembly with union nuts	cut in middle makes 015851 and 015852
014411		GASKET	for rocker covers	Each 8 1
014412		BOLT	short head, retaining rocker covers 2 B.A. by 1½ in. under head	Doz. 3 7½
014413		BOLT	long head, retaining rocker covers 2 B.A. by 1½ in. under head	Doz. 3 7½
014414		SPRING	saddle, rear	Doz. 3 7½
014420		LOOP	rear, frame	Each 5 8
014429		SADDLE	complete, with rear springs	replaced by C1651 Each 4 17 2
014450		STAND	centre, bare	Each 3 13 1
014453		CLIP	metal, holding cable behind rear lamp	use 016438 Doz. 3 7½
014456		STAY	front brake cover, plate anchor (enamelled)	Each 7 10
014456		STAY	front brake cover plate, anchor (chrome)	Each 14 7
014457		CAP	assembled, inspection, front chaincase	Each 2 7
014460		PLATE	cover, front brake	Each 1 0 8
014464		GEAR	on magneto shaft	Each 1 12 5
014471		PLATE	cover, rear brake	Each 18 0
014475		CARRIER	battery, back portion only	Each 12 4
014477		LEG	Teledraulic, rear, complete assembly	Each 6 1 10
014478		STUD	for seat lug, below saddle 4½ in. by ½ in. by 26 T.P.I.	Each 1 1½
014482		CARRIER	battery, complete (enamelled front)	Each 16 5
014482		CARRIER	battery, complete (chrome front)	Each 1 3 0
014483		SHIELD	for crankcase	Each 7 6
014484		SPACER	¾ in. thick for footrest rod	Each 10 8
014489		CHAINGUARD	rear, bare	Each 1 0 8
014493		PIPE	assembly, petrol feed with union nuts	Each 10 11
014501		BRACKET	for bottom of rear mudguard	Doz. 4 10
014505		PIPE	exhaust, bare	Each 2 0 7
014507		PIPE	exhaust, bare	use 015779 with integral baffle
014510		GUIDE	for exhaust valve	Each 2 0 7
014511		SCREW	knurled, for tool box lid	Each 4 11
014512		STUD	for rear loop at bottom 12 in. by ½ in. by 26 T.P.I.	Each 1 1½
014514		BUSH	for rear brake foot pedal	Each 4 9
014515		SPACER	¾ in. long, for mudguard to oil tank bolt	Each 1 2½
014520		ROD	bare, rear brake	Doz. 3 7½
014521		BOLT	fixing top pivot, rear leg, 3½ in. by ½ in. by 26 T.P.I.	Each 2 1
014523		RING	sealing, for valve lifter lever	Each 1 7½
014532		TOOL KIT	complete, with tyre inflator	Doz. 4 10
014533		TOOL KIT	complete, less tyre inflator	Each 3 1 2
014534		CHAINCASE	complete, assembly, front	Each 2 12 2
014540		SPANNER	box, with tommy, for rocker cover bolts	Each 2 19 4
014551		PIPE	oil, feed, with union nuts	Each 1 10
014553		PIPE	oil, return, with union nuts	Each 8 5
014556		GEAR BOX	complete, with clutch, kickstart and foot control levers	Each 8 5
014559		BOLT	fixing chainguard at rear, 2½ in. by ½ in. by 26 T.P.I.	price on application
014560		SPACER	1½ in. long (located inside chainguard) on 014559 bolt	Each 8½
014561		SPACER	¾ in. long (located between chainguard and frame) on 014559 bolt	Doz. 6 0
014571		HEAD	cylinder, with valve guides	Doz. 4 10
014572		HEAD	cylinder, with valve guides	Each 6 8 8
014573		MAGNETO	complete, type K2F (Lucas number 42108A)	use 016586 Each 6 18 7

## PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
014576		SILENCER	bare	Each 1 18
014577		BOLT	short, fixing tool box, ½ in. by ½ in. by 26 T.P.I.	Doz. 2
014583		CLEANER	air	Each 1 0
014584		CLIP	for vent pipe	Doz. 2
014586		RUBBER	vent pipe, for oil tank	Each 1
014587		BOX	tool, bare (but with lid only) (Matchless)	Each 1 6
014588		BOX	tool, bare (but with lid only) (Matchless)	Each 1 1
014589		MUDGUARD	bare, rear (in 2 pieces) (Matchless)	Each 4 15
014591		ADAPTOR	for air cleaner	Each 1
014592		ADAPTOR	for air cleaner	Each 1
014598		DISC	timing	use 013955 Each 4
014603		WASHER	metal, ½ in. thick, located over 010672 rubber	Doz. 5
014605		COMPRESSOR	for valve spring removal	Each 4
014609		TUBE	top, for rear leg damper	Each 5
014614		TANK	petrol, bare, chrome and panelled (Matchless)	replaces 016229... Each 12 4
014615		TANK	petrol, bare, enamelled and lined (Matchless)	replaces 015529... Each 9 4
014623		STAND	centre, bare	use 016340 Each 1 12
014626		BUSH	for centre stand, 7 in. long	Each 3
014627		SPRING	return, for centre stand	Each 1
014628		SPRING	stop, for centre stand	Each 1
014629		STUD	hinge, for centre stand, 8½ in. by ½ in. by 26 T.P.I.	Each 2
014630		SPACER	central, for centre stand hinge stud 4-2 in. long	Each 1
014669		SHUTTLE	for rear leg damper	Each 1
014672		BUSH	for rear fork bridge	Doz. 1
014673		STAY	for silencer (enamelled)	Each 1
014673		STAY	exhaust pipe (chrome)	Each 1
014674		LAMP	rear, complete, with bulb (LUCAS No. 53139A)	Each 1
014698		STAY	exhaust pipe...	Each 1
014700		CAM	on rear wheel solid spindle, right side	Each 1
014703		SPINDLE	centre solid for rear wheel	Each 1
014704		SLEEVE	on rear wheel locating brake cover plate for 1½ in. long, on rear wheel solid spindle for speedometer gear box	Each 1
014705		SPACER	2½ in. long, between bearings, rear hub	Each 1
014706		SPACER	on rear wheel solid spindle, left side	Each 1
014710		CAM	hinge, for prop stand, 2½ in. by ½ in. by 26 T.P.I.	Each 1
014713		BOLT	prop, bare	Each 1
014715		STAND	prop, bare	Each 1
014719		STAND	prop, bare	compression ratio without plate 6-5 to 1
014723		PISTON	bare, plus .040 oversize, wire wound	Each 1
014724		PISTON	complete, plus .040 oversize, wire wound...	compression ratio without plate 6-5 to 1, use 018303
014734		NUT	¾ in. by 26 T.P.I. (small hexagon)	replaced by 000004 general purpose nut
014735		SILENCER	bare	Doz. 1
014736		BOLT	passing through crankcase and front engine plates 5 in. by ½ in. by 26	Each 1
014746		SLEEVE	assembly, bushed rear fork	Each 1
014747		STAY	for silencer (enamelled)	Each 1
014747		STAY	for silencer (chrome)	Each 1
014752		PIPE	rubber, connection for feed and return oil pipes	Doz. 1

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
014754	STAY	for exhaust pipe, left side (enamelled) ...	Each	10
014754	STAY	for exhaust pipe (chrome) ...	Each	3 7½
014755	STAY	for exhaust pipe, right side (enamelled) ...	Each	10
014755	STAY	for exhaust pipe (chrome) ...	Each	3 7½
014756	PIPE	exhaust, bare, left side ...	Each	1 7 8
014758	PIPE	exhaust, bare, right side ...	Each	1 7 8
014760	BAFFLE	for exhaust pipes ...	Each	3 11
014773	SILENCER	bare, left side (Matchless) ...	Each	1 16 11
014774	SILENCER	bare, right side (Matchless) ...	Each	1 16 11
014779	WASHER	shakeproof, ½ in. hole ...	Doz.	1 2½
014783	PIPE	assembled, for petrol feed with union nuts	interchangeable with 018548	Each 12 7
014785	PIPE	oil, feed assembly with union nuts ...	Each	12 7
014789	PIPE	hose, vent from oil tank ...	Each	1 8½
014791	PEDAL	foot, for rear brake ...	Each	1 0 8
014794	WASHER	spigot, for tank fixing bolt, when air cleaner fixed	not used, error in lists	Each 1 0
014796	SCREW	retaining lower end of dynamo strap ¼ in. by ½ in. by 20 T.P.I. ...	Doz.	2 5
014802	ARM	footrest (with rod), left side ...	Each	14 5
014804	ARM	footrest, bare, right side ...	Each	9 0
014807	BOLT	fixing anchor stay to front cover plate, ½ in. by ½ in. by 26 T.P.I. ...	Doz.	3 7½
014808	PIPE	oil feed with union nuts ...	cut in halves makes 016356	Each 9 7
014810	PIPE	oil return with union nuts ...	cut in halves makes 016357 and 016358	Each 8 8
014816	STUD	pinch, fork crown ...	Each	11
014817	CIRCLIP	retaining non-return valve seat ...	Doz.	1 2½
014820	PISTON	for rear leg damper ...	Each	8 2
014821	PIVOT	bottom, bare, for rear Teledraulic leg ...	Each	15 0
014822	SPRING	return, rear brake pedal ...	Each	8½
014828	ADJUSTER	stop, for ignition cable ...	Each	4 2
014830	WASHER	spacing, between ball bearings (HOFFMAN)	when Hoffman driving side bearings are fitted	Doz. 4 10
014831	ROD	long, push complete ...	Each	8 4
014832	ROD	long, push complete ...	Each	8 4
014833	FORKS	complete, front, assembly (solo) ...	Each	20 3 2
014834	FORKS	complete, front, assembly (sidecar) ...	Each	20 3 2
014835	CARRIER	battery, complete (enamelled front) ...	Each	17 11
014835	CARRIER	battery, complete (chrome front) ...	Each	1 4 6
014836	TUBE	front fork inner assembly (sidecar) ...	Each	3 5 8
014839	PLATE	compression ...	Each	2 3
014853	CRANKCASE	complete, with bushes and studs ...	Each	6 1 10
014854	CRANKCASE	timing side only, with bushes and studs ...	Each	4 18 0
014855	PIPE	rocker box oil feed, top half with union nut ...	Each	4 1
014856	PIPE	rocker box oil feed, bottom half with union nut ...	Each	6 0
014862	WHEEL	rear, with all fittings (chrome, black centre) (Matchless) ...	Each	7 13 4
014863	WHEEL	bare, with chrome rim (black centre) (Matchless) ...	Each	4 14 10
014864	WHEEL	rear, with all fittings (chrome, red centre) (Matchless) ...	Each	7 13 4
014865	WHEEL	rear, bare (chrome rim, red centre) (Matchless) ...	Each	4 14 10
014868	BEARING	roller, for rear hub ...	Each	14 10
014869	NUT	for rear wheel solid spindle ...	Doz.	7 3
014874	CARRIER	rear, bare ...	Each	1 5 2
014877	WHEEL	rear, with all fittings, 19 in. by 3 in. rim (competition) ...	Each	8 7 8
014878	WHEEL	rear, bare, 19 in. by 3 in. rim (competition) ...	Each	6 4 8

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
014879	TUBE	supporting rear of mudguard, right side ...	Each	13 6
014880	TUBE	supporting rear of mudguard, left side ...	Each	13 6
014883	SPRING	main, rear leg (heavy) ...	free length 8½ in. Each	15 0
014885	DEFLECTOR	oil, for crankcase ...	Each	3 4
014892	SPINDLE	rear wheel, centre, solid ...	Each	2 5
014893	SPACER	1¼ in. long on right hand of rear solid spindle ...	Each	1 2½
014894	SLEEVE	on rear wheel spindle locating brake cover plate ...	Each	3 7½
014895	SPACER	¾ in. long on rear spindle for speedometer gear box ...	Each	2 5
014896	SPACER	¾ in. long on rear spindle for speedometer gear box ...	Doz.	7 3
014903	NUT	for connecting rod stud ...	Doz.	1 2½
014904	WASHER	plain, connecting rod stud ...	Each	1 2½
014911	BOLT	passing through main frame and crankcase, 5½ in. by ½ in. by 26 ...	Each	1 2½
014912	SPACER	for pivot rubber bush, ½ in. long ...	Doz.	3 7½
014917	UNION	to accommodate crankcase release valve pipe ...	Doz.	7 3
014919	SCREW	fixing twin seat at rear to loop ...	Each	1 2½
014929	STRAP	fixing regulator to battery carrier ...	Each	10
014936	HOSE	from oil tank to metal vent pipe ...	Each	11
014950	SPRING	main, front fork (sidecar) ...	free length 11 in. use 016782 in lieu ...	Each 7 6 Doz. 4 10
014951	CLIP	for oil pipe ...	Each	4 8
014957	MUDGUARD	front, bare ...	use 021029	Each 18 6
014964	HARNES	case, main lighting and horn with socket ...	Each	19 0
014975	TANK	oil, bare ...	use 010843 or 021261	Each 8½
014991	SPRING	return, prop stand ...	Each	4 10
014995	PAD	rubber, thick (½ in.) for tank fixing bolts ...	Doz.	2 5
014996	PAD	rubber, thin (¼ in.) for tank fixing bolts ...	Doz.	2 5
014997	BOLT	fixing tank, all positions, 1½ in. by ½ in. by 26 ...	Each	10
014998	SLEEVE	for tank fixing bolt ...	Doz.	2 5
014999	WASHER	metal, for tank fixing bolt ...	Doz.	3 7½
015000	STUD	brake anchor ...	replaced by 010624	Doz. 4 10
015001	SCREW	securing return pump, bleed valve spring, ½ in. by ½ in. by 22 ...	Doz.	2 5
015002	SPRING	main, front forks (solo) ...	free length 12.09 in. ...	Each 7 10 Each 5 1
015015	STAY	for front mudguard ...	Each	16 2
015017	PLATE	carrying oil pumps, bare ...	Doz.	1 2½
015021	WASHER	plain, for rocker spindle clamping bolt ...	Each	7
015023	SPANNER	double end, with gauge, for contacts (LUCAS 415116) ...	Each	2 5 2
015030	MUDGUARD	rear, bare, includes both halves and 2 bolts (Matchless) ...	use 016727 or 018131	Each 2 5 2 Doz. 1 2
015034	GASKET	paper, for oil filter chamber ...	conversion for racing	Each 2 3
015066	RASKET	bare, rear brake ...	Each	2 4 0
015070	REGULATOR	complete unit (Type MCR1-L31) (LUCAS 35108-A) ...	use 018644 per 2 halves	Each 2 4 0 16 0
015071	BEARING	plain, for connecting rod, in halves (per 2 halves) ...	per 2 halves	1 4 5
015072	BEARING	plain, for centre bearing, 1st UNDERSIZE (per 2 halves) ...	per 2 halves	1 4 5
015073	BEARING	plain, for centre bearing, 2nd UNDERSIZE (per 2 halves) ...	per 2 halves	1 4 5
015085	ARM	footrest, bare, left or right ...	Each	12 7
015087	REGULATOR	complete unit (Type MCR2) (LUCAS 37097) ...	Each	2 4 0
015090	PEDAL	foot, for rear brake ...	Each	18 1
015100	ARCH	tubular, rear mudguard ...	use 016883	Each 1 9 1
015106	FRAME	rear, bare ...	Each	7 16 1
015117	BOLT	clamping halves of rear mudguard ...	Each	11

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
015118		PIPE vent (rubber) for oil tank (includes insertion)		Each 2 5
015119		PIPE vent (rubber) for oil tank (no insertion)		Each 1 4
015120		PIPE vent (metal insertion) for oil vent pipe		Each 10
015131		SPACER steering damper anchor bolt 000344		Doz. 2 5
015136		SPRING saddle, rear		Each 8 5
015137		SLEEVE assembly, steering damper		Each 6 10
015138		PIPE vent, metal	replaces 017009	Each 2 4
015146		FRAME rear, portion only		Each 7 19 10
015166		MUDGUARD rear, bare (Matchless)		Each 3 10 10
015168		STAY tubular, for rear mudguard front position		Each 13 1
015170		STAY tubular, for rear mudguard rear position		Each 13 1
015173		CHAINGUARD rear, bare		Each 1 9 8
015175		PEDAL foot, rear brake		Each 16 10
015181		PIPE exhaust, bare		Each 2 0 7
015183		PIPE exhaust, bare		Each 2 0 7
015189		PLUG screwed, for oil in rear fork end cap		Each 7 2
015190		CABLE complete assembly (ignition)		Each 2 0
015198		FILTER metal gauze, for oil feed pipe		Each 1 7 2
015203		SPROCKET engine, bare, 19 teeth		Each 2 0
015204		SPROCKET engine, bare, 20 teeth		Each 3 17 7
015213		SPANNER box, for cylinder head nuts		Each 3 6 0
015223		CARBURETTER complete (less controls) 89M-1AK		Each 3 9 9
015224		CARBURETTER complete (less controls) 76AL-1AK		Each 3 9 9
015245		BRACKET only, for electric horn		Each 10
015246		SLEEVE fixing, horn bracket		Doz. 7 3
015247		NUT for horn bracket, fixing sleeve		Doz. 7 3
015248		BOLT fixing tank, front left position, 1 1/2 in. by 1/2 in. by 26 T.P.I.		Doz. 7 3
015250		STAY engine, steady, right side		Each 2 1 1/2
015251		STAY engine, steady, left side		Each 2 1 1/2
015252		CLIP half only, on frame tube for steady stay		Each 3 5
015257		HORN with bracket, HF1234 (LUCAS 069225)		Each 1 19 0
015263		SHIELD crankcase		Each 7 6
015264		SPANNER for rocker spindle clamping bolts		Doz. 4 10
015266	038-G9-E12	PISTON bare, plus .040 oversize	compression ratio without plate 7 to 1	Each 9 9
015267		PISTON complete, plus .040 oversize	" " 7 to 1	Each 9 8
015269		PISTON complete, plus .040 oversize (wire wound)	" " 7 to 1	Each 2 4 8
015270		BOLT retaining steady stays and tie plate to head, 1 1/2 in. by 1/2 in. by 22 T.P.I.	use 016857	Each 2 7 8
015273		EXTRACTOR for timing pinion and magneto gear		Doz. 4 10
015278		BUSH for intermediate gear		Each 5 5
015279		RIVET locating connecting rod stud		Each 1 0
015282		TRANSFER "Made in England"	replaces 014280	Doz. 2 5
015286	40-G12M-FF41	BUSH plastic for fork inner tube	replaces 010700	Doz. 1 2 1/2
015298		BRACKET rear, number plate		Each 3 0
015301		PLATE number, rear		Each 8 1/2
015306		WASHER fan disc		Each 4 4
015308		PLATE number, rear		Doz. 1 2 1/2
015316		HUB rear wheel, shell only		Each 13 2
015319		STAY for rear mudguard, left side		Each 2 14 8
015320		STAY for rear mudguard, right side		Each 6 7
015324		TUBE supporting rear mudguard		Each 6 7
015326		LOOP rear frame		Each 1 1 3
015329		BRIDGE for rear fork, includes bushes and studs	replaced by 018064	Each 6 12 0
015330		KEY driving side flywheel axle		Each 2 12 5
015348		HEAD cylinder, less valve guides	obsolete, use 016311	Doz. 4 10
015350		STUD for cylinder base, 7/8 in. by 1/2 in. by 26 by 18 T.P.I.		Each 10 7 0
015351		NUT sleeve, retaining cylinder head and barrel to crankcase		Each 5 8
				Each 3 4

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
015353		BOLT fixing rocker box, short, 1 1/2 in. by 1/2 in. by 22 T.P.I.		Doz. 6
015354		BOLT fixing rocker box, long, 2 1/2 in. by 1/2 in. by 22 T.P.I.		Doz. 7
015355		BOLT fixing rocker box, long, 2 1/2 in. by 1/2 in. by 22 with extension		Each 1 1
015356		BOLT fixing rocker box, centre position, 3 1/2 in. by 1/2 in. by 22 T.P.I.		Each
015359		GEARBOX complete with clutch, kickstarter and foot-change lever	Price on application	
015362		MUDGUARD rear, bare		Each 4 9
015364		CARRIER battery, back portion only		Each 14
015365		BRACKET battery carrier to chainguard		Doz. 7
015366		CARRIER battery, complete (enamelled front)		Each 1 5
015366		CARRIER battery, complete (chrome front)		Each 1 5
015367		CARRIER rear, bare (SWISS)		Each 2 13
015373		BOLT fixing rocker box, 3 1/2 in. by 1/2 in. by 22 T.P.I.		Doz. 6
015374		EXTRACTOR for camshaft gears		Each 5
015375		CARRIER rear, bare	use 016418	Each 1 5
015379		HEAD cylinder, less valve guides	obsolete use 016310	Each 9 6
015381		WASHER paper, cylinder base		Doz. 1
015386		ARM footrest, bare, left or right		Each 8
015388		BARREL cylinder		Each 4 10
015389		BARREL cylinder		Each 4 10
015390		BARREL cylinder		Each 5 2
015391		BARREL cylinder		Each 5 2
015399		COVER waterproof, for sparking plug		Each 1 1
015400		CRANKCASE complete, with bushes, studs and centre web	use 018509	Each 21 16
015402		BEARING plain, for connecting rod, 1st undersize (2 halves)	use 018654	2 halves for 1 0
015403		BEARING plain, for connecting rod, 2nd undersize (2 halves)		1 0
015405		BEARING plain, for connecting rod, 3rd undersize (2 halves)		1 0
015406		BEARING plain, for centre bearing, 3rd undersize (2 halves)		1 4
015408		PIVOT top, assembled for rear leg assembly		Each 10
015409		PIVOT bottom, assembled for rear leg assembly		Each 16
015411		SLEEVE metal 1/2 in. long, for tank fixing bolts		Doz. 2
015412		BOLT fixing tank, front position, 2 1/2 in. by 1/2 in. by 26 T.P.I.		Each
015413		SUPPORT for front of tank		Each 2
015414		SPACER 1/2 in. thick, for cylinder head sleeve nut		Doz. 2
015419		TANK petrol, bare (Matchless)		Each 11 5
015422		BOX rocker, bare		Each 1 19
015423		PIPE assembly, petrol feed, with union nuts		Each 13
015435		PLATE compression 1/2 in. thick		Each 3
015457		BOX rocker, assembled		Each 6 1
015458		BOX rocker, with bushes only		Each 2 11
015487		MAGNETO type NRI (LUCAS 42179)		Each 23 12
015488		PIPE vent (rubber) for magneto		Doz. 7
015489		NUT rear wheel centre solid spindle (large hexagon)		Doz. 7
015491		BOX tool, bare		Each 15
015498		PIPE vent (rubber) for oil tank		Each
015509		ROD long, push, bare, 7 1/2 in. long		Each 2
015511		ROD long, push, bare, 7 1/2 in. long		Each 2
015512		ROD long, push, bare		Each 2
015518		PISTON bare, normal size	compression ratio without plate 7 to 1	Each 1 1
015522		RING compression plus .020 oversize	66 m/m. plus .020 in. by 1/2 in.	Each 1
015523		RING scraper, plus .020 oversize	66 m/m. plus .020 in. by 1/2 in.	Each 1



PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
015528		WASHER steel, oil union	replaces 012116 in some locations	Doz. 1 2 1/2
015529		TANK petrol, bare enamelled and lined (Matchless)	use 014615	Each 9 4 10
015538		PLUG sparking, KLG-F80	same as 015547	Each 5 0
015546		PLUG sparking, KLG-F80	same as 015538	Each 5 0
015547		PLUG sparking, KLG-F80	same as 015538	Each 5 0
015548		PIPE top part only, petrol feed	same as 015538	Each 5 0
015553		WHEEL front, with all fittings, chrome, red centre (Matchless)		Each 9 11
015556		WHEEL rear, bare, less fittings, chrome, red centre (Matchless)		Each 11 10 0
015561		SPEEDOMETER trip, 120 m.p.h. complete		Each 5 15 5
015362		SPEEDOMETER trip, 180 k.p.h., complete		Each 5 0 0
015365		WHEEL rear complete, with all fittings, chrome, red centre (Matchless)		Each 5 0 0
015567		BODY oil return pump, 3/8 in. gears, with 1/2 in. shaft		Each 7 9 4
015568		BODY oil feed pump, 3/8 in. gears with 1/2 in. shaft		Each 15 4
015573		PLATE back end, for oil pump feed body		Each 11 8
015576		PLATE front end, for oil pump feed body		Each 15 4
015577		GEAR driving, for oil return pump, 3/8 in. wide, 1/2 in. shaft		Each 13 8
015578		GEAR driven, for oil return pump, 3/8 in. wide, 1/2 in. shaft		Each 12 0
015579		GEAR driving, for oil feed pump, 3/8 in. wide, 1/2 in. shaft		Each 10 6
015580		GEAR driven, for oil feed pump, 3/8 in. wide, 1/2 in. shaft		Each 11 8
015583		FRAME rear portion only		Each 9 11
015585		SADDLE less rear springs		Each 8 0 0
015586		SADDLE with rear springs		Each 2 15 2
015597		PIPE vent, metal for magneto		Each 3 7 2
015599		PIN dowel, for oil feed pump		Each 3 5
015667		STUD for centre web bearing cap 2 1/2 in. by 3/4 in. by 20 T.P.I.		Doz. 1 2 1/2
015670		WEB centre, with cap, studs, washers and nuts		Each 1 1 1/2
015671		PLATE number, rear		Each 2 1 5
015674		FRAME front portion only	suitable for 014260	Each 13 10
015678		COVER side, for rocker box		Each 7 9 0
015689		PIPE oil return, tank end		Each 7 10
015691		PIPE oil return, engine end		Each 4 2
015698		TANK oil, bare		Each 11 5
015701		BUSH plastic, upper, for rear leg damper tube		Each 2 8 7
015702		BUSH plastic, lower, for rear leg damper tube (recessed)		Each 1 10
015703		RING sealing, between damper tube plastic bushes		Each 1 10
015705		NUT sleeves, for horn fixing bolt		Each 8 1
015706		WASHER rubber, for horn fixing bolt		Each 11
015707		WASHER plain, for horn fixing bolt		Doz. 2 5
015722		CHAINCASE front, complete, with band, rubber and cap		Doz. 1 2 1/2
015725		CROWN and STEM assembly comprising crown, stem and circlip		Each 2 11 0
015736		MUDGUARD rear, rear detachable portion (Matchless)	use 016730	Each 2 8 10
015737		MUDGUARD rear, forward fixed portion (A.J.S. and Matchless)	use 016729	Each 17 8
015779		PIPE exhaust, bare with integral baffle	replaces 014507	Each 1 7 6
015780		BUSH timing side flywheel axle	same as 000650	Each 2 0 7
015781		AXLE timing side flywheel. Replaces 011914	two oil ways and stamped 2.5 on end	Each 7 10
015788		FRAME rear portion only		Each 18 0
015792		PIPE bottom part only, petrol feed		Each 7 16 2
015803		PISTON bare, plus .020 oversize	compression ratio without ratio 7 to 1	Each 2 8 1/2
015804		PISTON complete, normal size		Each 1 1 0
015805		PISTON complete, plus .020 oversize		Each 1 14 6

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
				£ s. d.
015848		PIPE oil feed, assembly, long portion		Each 5
015849		PIPE oil feed, assembly, short portion		Each 3
015851		PIPE oil return, assembly, long portion	with rubber con-	Each 4
015852		PIPE oil return, assembly short portion	nection, in lieu of 014406	Each 3
015865		FORK complete, assembly, SOLO		Each 19 18
015867		INNER-TUBE front fork, assembly		Each 3 16
015869		GASKETS complete set of decarbonising only, TWIN		Each 11
015870		GASKETS complete set of TWIN		Each 14
015871		STAY for exhaust pipe		Each 3
015872		STAY for exhaust pipe		Each 3
015874		SHIELD for magneto		Each 3
015875		SPACER for carburettor, 3/4 in. wide, 1 1/2 in. bore		Each 2
015876		HOSE vent, pipe		Doz. 7
015898		TRANSFERS complete set of, for (Matchless)		Each 3
015899		TOOL KIT complete, with tyre inflator		Each 3 7
015900		TOOL KIT complete, less tyre inflator		Each 2 17
015917		PIPE exhaust, bare		Each 2 4
015918		PIPE exhaust, bare		Each 2 4
015919		PIPE exhaust, bare		Each 2 4
015922		TUBE fork damper	replaces 014598	Each 6
015955		DISC timing		Each 4
015956		CRANKCASE complete, with bushes and studs (Matchless)		Each 7 1
015957		CRANKCASE complete, with bushes and studs (Matchless or A.J.S.)		Each 8 1
015958		HEAD cylinder, with valve guides	obsolete, use 016853	Each 9 15
015959		HEAD cylinder, with valve guides	obsolete, use 016855	Each 10 16
015961		GASKETS complete set of		Each 9
015962		GASKETS complete set of		Each 9
015963		GASKETS complete set of		Each 8
015964		CRANKCASE timing side, with bushes and studs		Each 4 18
015965		CRANKCASE timing side, with bushes and studs		Each 5 7
015966		ROD long, push complete		Each 8
015967		ROD long, push complete		Each 8
015968		CRANKCASE driving side only with studs		Each 2 3
015969		CRANKCASE driving side only with studs	replaced by 018861	Each 2 14
015970		GASKETS set of decarbonizing		Each 5
015971		GASKETS set of decarbonizing		Each 5
015972		BOX tool, bare (Matchless)		Each 1 4
015987		PIN gudgeon (special for use with 011880 Piston)		Each 6
016000		CHAINGUARD rear, bare		Each 1 10
016002		SPINDLE centre, solid, rear wheel		Each 8
016004		PLATE cover, rear brake, bare		Each 10
016005		SPACER 1 1/2 in. long, for rear brake cover plate		Doz. 7
016006		SPACER 1 1/2 in. long, for speedo gear box (carrier nut)		Each 2
016025		RUBBER tank, rear fixing		Each 1 11
016038		CHAINCASE front, front half only	replaces 017000	Each 3
016049		GASKETS set of decarbonizing		Each 4
016056		BODY for oil relief valve		Doz. 7
016057		PISTON for oil relief valve piston		Doz. 3
016058		SPRING top, bare, for rear leg		Each 17
016059		PIVOT bottom, bare, for rear leg		Each 12
016061		SPRING main, for rear Teledraulic leg (heavy)	free length 5 1/2 in.	Each 11
016072		SLEEVE plunger, for damper rod		Doz. 7
016075		BUSH lower end of inner tube, rear leg		Each 3
016077		BUSH for outer tube, rear leg		Each 2
016078		COLLAR retaining oil seal, rear leg		Each 2
16082		WASHER leather, at both ends of main spring, rear leg		Doz. 3
016093		FORKS complete assembly (SOLO)		Each 20 5
016094		FORKS complete assembly (SIDE CAR)		Each 19 5
016095		INNER TUBE assembly, front fork (SIDE CAR)		Each 3 19
016096		INNER TUBE assembly, front fork (SOLO)		Each 3 16
016098		TOOL KIT complete, with tyre inflator		Each 3 2
016100		HUB front wheel, shell only with brake drum	use 018046	Each 3 1
016101		HUB rear wheel, shell only	use 016964	Each 2 1 1/2

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
				£ s. d.
016110		LEG	rear TELEDRHAULIC, complete assembly ...	Each 6 9 2
016111		BEARINGS	roller, for rear hub ...	Each 12 8
016112		TOOL KIT	complete, less tyre inflater ...	Each 2 13 6
016119		SPEEDOMETER	trip 80 m.p.h., complete (RIGID) ...	Each 5 0 0
016120		SPEEDOMETER	trip 80 m.p.h., complete (SPRINGER) ...	Each 5 0 0
016121		SPEEDOMETER	trip 120 m.p.h., complete (RIGID) ...	Each 5 0 0
016122		SPEEDOMETER	trip 140 k.p.h., complete (RIGID) ...	Each 5 0 0
016123		SPEEDOMETER	trip 140 k.p.h., complete (SPRINGER) ...	Each 5 0 0
016124		SPEEDOMETER	trip 180 k.p.h., complete (RIGID) ...	Each 5 0 0
016126		TRANSFERS	complete set of (Matchless) ...	Each 3 0
016127		TRANSFERS	complete set of (Matchless) ...	Each 3 6
016128		TRANSFERS	complete set of (Matchless) ...	Each 4 4
016132		WHEEL	front, complete with all fittings, chrome, black centre (Matchless) ...	Each 11 10 0
016133		WHEEL	rim (Matchless) ...	Each 11 13 7
016135		WHEEL	rear, complete with all fittings, chrome, black centre (Matchless) ...	Each 7 18 6
016136		CHAINCASE	complete with metal band, rubber and inspection cap ...	Each 2 19 4
016137		GASKET	oval, behind pump carrying plate ...	Doz. 1 2½
016138		GASKET	round, behind pump carrying plate ...	Doz. 1 2½
016148		BUFFER	rubber, for fork inner tube ...	Doz. 6 0
016165		WHEEL	rear, bare, less all fittings, chrome, black centre (Matchless) ...	Each 5 15 5
016167		PLATE	engine, bare, rear, left or right ...	Each 18 7
016169		SPACER	3½ in. long, for footrest rod ...	Each 1 4
016170		WASHER	fibra, for oil feed tank union ...	Doz. 1 2½
016176		SEAL	rubber, for oil relief valve ...	Doz. 3 7½
016177		TUBE	metal centre, for relief valve rubber seal ...	Doz. 2 5
016179		CAP	for felt filter housing ...	Each 8 1
016190		TUBE	supporting rear of rear mudguard, right side ...	Each 11 8
016191		TUBE	supporting rear of rear mudguard, left side ...	Each 11 8
016205		BOLT	fixing top pivot, rear leg, 3¼ in. by ½ in. by 26 T.P.I. ...	Each 1 7½
016206		SPACER	for top and bottom pivot rubber bush ...	Doz. 3 7½
016208		CHAINGUARD	rear, bare ...	Each 1 10 0
016209		PINION	on crankshaft 30 teeth ...	Each 10 6
016210		SPACER	½ in. long, for crankshaft pinion ...	Each 1 1½
016214		CARRIER	assembled (SV/ISS) ...	Each 1 7 0
016228		COLLAR	on rear wheel solid spindle (against fork end) ...	Each 1 7½
016229		TANK	petrol, bare, chrome and panelled (Matchless) ...	use 014614 ... Each 12 4 10
016251		BUFFER	for rear Teledraulic leg ...	Each 1 1½
016291		RING	sealing inner tube at top, rear leg ...	Each 1 2½
016292		HEAD	cylinder, less valve guides ...	Each 7 0 11
016293		HEAD	cylinder, less valve guides ...	Each 7 9 5
016294		RUBBER	band, for chaincase ...	replaces 017200 ... Each 1 7½
016297		SPRING	main, rear Teledraulic leg ...	free length 5½ in. ... Each 6 0
016304		VALVE	for damper, rear leg ...	Each 1 2½
016310		HEAD	cylinder, less valve guides ...	replaces 015379 ... Each 7 10 0
016311		HEAD	cylinder, less valve guides ...	replaces 015348 ... Each 7 19 6
016320		STUD	pinch, fork crown ...	Each 1 1
016322		TUBE	fork, inner ...	Each 1 8 5
016324		WASHER	sealing lower end of inner tube, rear leg ...	Doz. 1 2½
016339		CLIP	locating plunger sleeve ...	Doz. 1 2½
016340		STAND	centre, bare ...	replaces 014623 ... Each 1 12 8
016342		ROD	for damper rear leg ...	Each 1 2½
016343		COLLAR	for top end of damper rod ...	Each 1 2½
016344		PANNIERS	complete set of bags, frames, bolts, washers and nuts ...	for springer m/cs. per set only ... 6 6 0
016349		TUBE	for damper, rear leg ...	Each 7 10
016350		PIVOT	top, assembled, rear leg ...	Each 18 11
016351		PIVOT	bottom, assembled, rear leg ...	Each 14 2
016352		BRACKET	for bottom of rear guard ...	Doz. 6 0

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
				£ s. d.
016355		PIPE	oil feed, short portion ...	Each 4 2
016356		PIPE	oil feed, long portion ...	Each 6 7
016357		PIPE	oil return, short portion ...	Each 3 11
016358		PIPE	oil return, long portion ...	Each 5 8
016359		BOLT	fixing bottom pivot rear leg, 2½ in. by ½ in. by 26 T.P.I. ...	Each 8½
016362		TANK	petrol, bare enamelled and lined (Matchless) ...	Each 12 3 0
016367		PLATE	tool box fixing ...	Each 14 0
016368		PIPE	oil feed, short portion ...	Each 4 2
016369		PIPE	oil feed, long portion ...	Each 6 7
016376		SADDLE	with rear springs ...	Each 3 18 6
016377		TUBE	fork, inner ...	Each 2 0 5
016379		PIPE	exhaust, bare ...	Each 1 10 5
016382		PIPE	exhaust, bare ...	Each 1 10 2
016385		PIPE	exhaust, bare ...	Each 1 13 0
016388		PIPE	exhaust, bare ...	Each 6 14 10
016390		LEG	Teledraulic, rear, complete assembly ...	Each 1 10 2
016391		PIPE	exhaust, bare ...	Each 1 15 10
016393		PIPE	exhaust, bare ...	Each 1 0
016399		SPRING	stop, for centre stand ...	Each 18 0
016404		DAMPER	steering, complete set of parts (Matchless) ...	Each 12 2
016406		TUBE	inner (fits in top pivot recess) ...	Each 1 3 2
016407		TUBE	outer (screws in bottom pivot) ...	Each 8 8
016408		TUBE	outer, covering top end of main spring ...	Each 7 0
016409		TUBE	outer, covering bottom end of main spring ...	Each 11 7
016410		SPRING	main, rear leg ...	free length 6 in. ... Each 1 5 7
016411		CARRIER	rear, bare ...	replaces 015375 ... Each 7 4
016424		NUT	retaining bottom outer cover tube ...	Each 3 4
016427		BUTTON	or switch for horn ...	Each 1 11 1
016429		HANDLEBAR	bare, with hole for horn button ...	Doz. 7 1
016435		BUSH	for centre stand, ½ in. long ...	Doz. 15 1
016437		PLATE	engine, rear ...	replaces 014450 ... Each 12 1
016438		STAND	centre, bare ...	Each 1 12 1
016441		RING	compression, plus -040, oversize ...	66 m/m. plus -040 in. by ½ in. ... Each 1 1
016442		RING	scraper, plus -040, oversize ...	66 m/m. plus -040 in. by ½ in. ... Each 1 1
016443		RING	compression, plus -020, oversize ...	2½ in. plus -020 in. by ½ in. ... Each 1 1
016444		RING	compression, plus -040, oversize ...	2½ in. plus -040 in. by ½ in. ... Each 1 1
016445		RING	scraper, plus -020, oversize ...	2½ in. plus -020 in. by ½ in. ... Each 2
016446		RING	scraper, plus -040, oversize ...	2½ in. plus -040 in. by ½ in. ... Each 2
016447		RING	compression, plus -040, oversize ...	3½ in. plus -040 in. by ½ in. ... Each 2
016448		RING	scraper, plus -040, oversize ...	3½ in. plus -040 in. by ½ in. ... Each 3
016449		RING	compression, plus -020, oversize (chrome) ...	3½ in. plus -020 in. by ½ in. ... Each 5
016450		RING	compression, plus -040, oversize (chrome) ...	3½ in. plus -040 in. by ½ in. ... Each 5
016459		GEAR BOX	complete with clutch, kickstart and foot-change levers ...	price on application ... Each 18
016461		ARM	footrest, bare ...	Each 2
016462		ROD	footrest, bare length 10½ in. ...	Each 1 13
016466		EXTENSION	exhaust pipe, bare ...	Each 1 5
016467		EXTENSION	exhaust pipe, bare ...	Each 1 5
016472		TUNNEL	camshaft ...	Each 11
016485		CARRIER	battery, rear portion only ...	Each 3
016488		SLEEVE	rubber, for air cleaner ...	Each 6 8
016489		FRAME	front portion only ...	Each 11 6
016495		CRANKSHAFT	plugged, but bare ...	Each 15
016498		CARRIER	battery, complete (enamelled front) ...	Each 1 2
016498		CARRIER	battery, complete (chrome front) ...	Each 1 2

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
016519		STRIP	fixing regulator to battery carrier	Each 1 11
016522		SPRING	for oil relief valve piston	Doz. 1 2 1/2
016524		PISTON	for oil relief valve	Each 1 0
016526		SPRING	main, front fork	free length 12 1/2 in. use in place of 012972
016581		GEAR BOX	complete, with clutch, kickstart and foot change lever	price on application
016582		GEAR BOX	complete with clutch, kickstart and foot change lever	" "
016583		GEAR BOX	complete with clutch, kickstart and foot-change lever	" "
016584		CAM	engine shock absorber	Each 14 5
016586		MAGNETO	complete, type K2F (LUCAS 42230A)	replaces 014573
016587		HEAD	for engine shock absorber spring	Each 10 0 6
016592		HEAD	for cylinder, bare, left	Each 2 2 1/2
016593		HEAD	for cylinder, bare, right	Each 5 15 1
016599		DYNAMO	type E3N (LUCAS 20028A)	Each 5 15 1
016606		TUBE	fork damper	Each 7 10 0
016632		SPRING	engine shock absorber	Each 6 2
016635		STAY	for exhaust pipe (enamelled)	Each 3 8 1/2
016635		STAY	for exhaust pipe (chrome)	Each 10
016638		TANK	petrol, bare, enamelled and lined (Matchless)	Each 4 2
016648		WASHER	thrust, for centre bearing	Each 11 11 0
016649		BEARING	plain, for centre bearing (2 halves)	Each 1 0
016665		SPROCKET	engine, bare, 18 teeth	for 2 halves 6 10
016670		BEARING	plain, for centre bearing -010 undersize (2 halves)	Each 1 4 2
016673		BOLT	locking, shock absorber assembly, threaded 1/2 in. by 20 T.P.I.	for 2 halves 6 10
016674		PLUG	retaining, crankcase release valve	Each 2 7 1/2
016676		DIAPHRAGM	for crankcase release valve	Each 1 0
016677		PIPE	rocker box oil feed, top portion	Doz. 1 2 1/2
016678		PIPE	rocker box oil feed, bottom portion	Each 2 9
016681		SHEATH	for horn cable, 18 in. long	Each 7 5
016682		SHEATH	for dynamo cable, 8 1/2 in. long	Doz. 6 0
016708		GEAR BOX	complete, with clutch, kickstart and foot-change levers	Doz. 3 7 1/2
016709		GEAR BOX	complete, with clutch, kickstart and foot-change levers	price on application
016710		GEAR BOX	complete, with clutch, kickstart and foot-change levers	" "
016711		GEAR BOX	complete, with clutch, kickstart and foot-change levers	" "
016712		NUT	sleeve, for pivot bolt	Doz. 7 3
016718		BOLT	top, for fork inner tube	replaces 011317 and 014354
016724		BOLT	retaining carburettor to inlet manifold, 3/8 in. by 1/8 in. by 22 T.P.I.	Each 2 5
016725		PEDAL	foot, rear brake	Doz. 6 0
016727		MUDGUARD	rear, bare (includes both halves and binding bolts) (Matchless)	Each 1 0 7
016728		EYE BOLT	for front chain and gear box adjustment	can be used in place of 018131 and 015030
016729		MUDGUARD	rear, forward fixed portion (A.J.S. and Matchless)	Each 2 5 2
016730		MUDGUARD	rear, rear detachable portion only (Matchless)	Each 1 5 2
016740		STUD	1 1/2 in. by 1/8 in. by 26 by 26 T.P.I., for oil tank and air cleaner	Each 16 10
016782		SPRING	main front fork (SIDECAR)	use 018641 free length 12 1/2 in. use in place of 014950
016788		TANK	oil, bare	Each 7 6
016791		CLEANER	air	Each 2 2 7
016844		ADAPTOR	for clutch cable adjuster	Each 1 11 6
016845		NUT	3/8 B.S.F. (SIMMONDS)	Each 1 5
				Doz. 3 7 1/2

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
016847		SHIM	washer -005 thick for exhaust camshaft	Doz. 2 5
016848		SHIM	washer -010 thick for exhaust camshaft	Doz. 2 5
016849		STAY	for silencer (enamelled)	Each 1 0
016849		STAY	for silencer (chrome)	Each 2 11
016850		STUD	driving dynamo to crankcase 2 1/2 in. by 2 B.A.	Doz. 4 10
016851		NUT	for dynamo draw stud	Each 11
016852		HEAD	cylinder, with valve guides	Each 7 10 6
016853		HEAD	cylinder, with valve guides	replaces 015958
016854		HEAD	cylinder, with valve guides	Each 7 19 2
016855		HEAD	cylinder, with valve guides	replaces 015959
016856		PISTON	complete, plus -040 oversize	compression ratio without plate 6.5 to 1, use 018303
016857		PISTON	complete plus -040 oversize	compression ratio without plate 7 to 1
016858		PISTON	complete, normal size	compression ratio without plate 7 to 1, replaces 011849A and 013626
016859		PISTON	complete, normal size (high compression)	compression ratio without plate 8.5 to 1, replaces 013706
016860		ROD	long, push, bare, with sleeve end, 8 3/8 in. long	Each 4 1
016861		ROD	long, push, bare, with sleeve end, 8 1/2 in. long	Each 4 1
016864		COVER	magneto chaincase	Each 18 7
016866		PANNIERS	complete set, comprising bags, frames, nuts, bolts, washers (RIGID)	for rigid m/s. only per set plus purchase tax 6 6 0
016869		COVER	for timing gear (Matchless)	Each 2 3 0
016873		WASHER	for rear leg sleeve nut	Each 1 2
016876		PLATE	engine, rear	Each 8 5
016877		PLATE	engine, rear	Each 16 6
016878		PLATE	engine, rear	Each 13 8
016883		ARCH	tubular, rear mudguard	replaces 015100
016886		STAY	for rear mudguard, left side	Each 6 7
016887		STAY	for rear mudguard, right side	Each 6 7
016891		FORK	assembly, complete (SOLO)	Each 20 10 4
016892		FORK	assembly, complete (SIDECAR)	Each 20 11 0
016893		FORKS	assembly, complete	Each 19 16 8
016894		FORKS	assembly, complete	Each 19 18 7
016895		INNER TUBE	assembly, front fork	Each 4 0 11
016896		INNER TUBE	assembly, front fork	Each 4 2 5
016897		INNER TUBE	assembly, front fork	Each 4 2 5
016902		CASE	and chainwheel, assembled	Each 2 9 4
016903		CASE	and chainwheel, assembled	Each 2 9 4
016904		QUADRANT	and spindle, assembled for kickstarter	Same as 199XA-49
016906		PIPE	oil, feed, with nuts	Each 13 10
016908		PIPE	oil, return, with nuts	Each 12 7
016913		TRANSFERS	complete set of (Matchless)	Each 2 4
016914		TRANSFERS	complete set of (Matchless)	Each 2 10
016919		CRANKCASE	timing side only with bushes and studs	Each 5 7 1
016920		CRANKCASE	complete, with bushes and studs	Each 8 1 1
016938		PISTON	complete, plus -020 in. oversize (high compression)	compression ratio without plate 7 to 1, replaces 011849A and 013624
016939		PISTON	complete, plus -020 in. oversize (high compression)	compression ratio without plate 8.5 to 1, replaces 013714

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
016944		WASHER	metal $\frac{3}{4}$ in. thick for push rod cover tube...	Doz. 4 10
016945		BRACKET	for speedometer head ...	Each 8 1/2
016947		SCREW	for handlebar clip, $\frac{3}{8}$ in. by $\frac{1}{2}$ in. by 26 T.P.I. (socket head) ...	Each 11
016948		SPACER	$\frac{1}{2}$ in. thick, for tool box fixing bolt ...	Doz. 2 5
016949		GASKETS	complete set of decarbonizing only ...	Each 6 0
016950		GASKETS	complete set of decarbonizing only ...	Each 6 0
016951		GASKETS	complete set of ...	Each 4 6
016952		GASKETS	complete set of ...	Each 9 9
016953		GASKETS	complete set of ...	Each 9 10
016954		GASKETS	complete set of ...	Each 8 4
016955		TOOL KIT	complete, less tyre inflator ...	Each 2 13 6
016956		TOOL KIT	complete, with inflator ...	Each 3 2 6
016957		WHEEL	rear, less all fittings, chrome (Matchless and A.J.S.) ...	Each 5 6 10
016958		WHEEL	rear, complete with all fittings, chrome (Matchless and A.J.S.) ...	Each 7 0 6
016962		SPRING	valve, narrow prong ...	Each 7 10
016963		SPRING	valve, wide prong ...	Each 7 10
016964		HUB	rear wheel shell only ...	Each 2 14 8
016967		FLYWHEEL	bare, driving side ...	Each 1 9 8
016968		FLYWHEEL	bare, timing side ...	Each 1 9 8
016969		FLYWHEEL	bare, driving side ...	Each 1 9 8
016970		FLYWHEEL	bare, timing side ...	Each 1 9 8
016982		ELEMENTS	set of, for air cleaner ...	Each 8 0
016983		ELEMENTS	set of, for air cleaner ...	Each 8 0
017000	40-G2M-C1	CHAINCASE	locating, front brake cover plate ...	Doz. 1 11 7
017003	40-G12M-H47	NUT	tyre ...	Doz. 4 10
017007	40-G3-TK29	LEVER	for steering damper draw bolt ...	Each 1 3
017008	40-G12M-FF97	PLATE	for steering damper draw bolt ...	Each 1 11
017009	40-G12M-FF97A	SLEEVE	back half, bare ...	Each 6 10
017013	40-G2M-C6	CHAINCASE	footrest, bare ...	Each 1 4 8
017015	40-G2M-FR8	ROD	bare, chrome ...	Each 2 4
017016	40-G2M-FF66	HANDLEBAR	for tool box ...	Each 1 11 6
017017	40-G3-F158	STAY	for valve, inlet ...	Each 1 0
017019	39-12-E148	GUIDE	only ...	Each 4 11
017020	39-G8-E17	CRANKPIN	between engine plates, $2\frac{1}{2}$ in. long ...	Doz. 4 10
017022	20841	SPACER	for rocker box ...	Doz. 7 3
017023	39-8-E440	GASKET	exhaust, bare ...	Each 8 2
017024	000671	TAPPET	for timing side axle ...	Each 1 0
017025	R137	BEARING	fixing battery carrier to chainguard ...	Each 1 0
017026	D8E-181-B	STAY	long, push, bare, $8\frac{1}{2}$ in. long ...	Each 2 4
017027	20818	ROD	fixing rocker box, long head ...	Each 1 1 1/2
017028	39-8-E451	BOLT	cover, for long push rod ...	Each 4 11
017029	39-16-E163	TUBE	sightening, dynamo strap ...	Each 1 5
017030	41-G3L-E280	BOLT	rear, chain adjusting ...	Each 1 5
017031	41-G3L-F32	BOLT	fork cover, bottom ...	Each 3 11
017036	41-G3L-FF184B	TUBE	end, footrest arm ...	Each 3 5
017037	41-G3L-FR25	CAP	rear solid spindle (for speedometer gear box) ...	Doz. 4 10
017038	41-G3L-H26a	SPACER	bars, rear wheel, shell only ...	Each 2 14 8
017039	41-G3L-H2	HUB	for exhaust pipe ...	Each 1 11
017041	41-G3L-E406	STAY	for silencer ...	Each 1 11
017042	41-G3L-E567	STAY	headlamp, top, left ...	Each 1 0
017043	41-G3L-FF74-L	STAY	headlamp, top, right ...	Each 1 0
017044	41-G3L-FF74-R	STAY	headlamp, bottom, left ...	Each 1 0
017045	41-G3L-FF73-L	STAY	headlamp, bottom, right ...	Each 1 0
017046	41-G3L-FF73-R	STAY	END	Each 1 7 1/2
017049	16482	END	for petrol feed, with filter ...	Each 5 11
017050	41-G3L-T93	TAP	copper, 5 ft. by 20 S.W.G. ...	Doz. 3 7 1/2
017051	41-G3L-T97	WIRE	double end, $\frac{1}{2}$ in. by $\frac{1}{2}$ in. ...	Each 2 11
017052	41-G3L-TK1	SPANNER	double end, $\frac{1}{2}$ in. by $\frac{1}{2}$ in. long, push complete ...	Each 4 5
017053	41-G3L-TK2	SPANNER	security for tyre, 19 in. by $2\frac{1}{2}$ rim ...	Each 8 4
017058	20818-1	ROD	centre, solid, rear wheel ...	Each 4 10
017060	41-G3L-H132	BOLT		Each 4 11
017062	41-G3L-H4A	SPINDLE		Each 4 11

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
017074	41-G3L-E85	COVER	side, for rocker box ...	Each 6 11
017075	41-G3L-E89	BOLT	securing head to barrel, short ...	Each 1 7
017076	41-G3L-E3P	PLATE	compression, cylinder barrel base ...	Each 3 5
017077	D8-E-1865	RING	felt, for rocker axle ...	Doz. 3 7
017078	41-V-2	CABLE	complete, assembled exhaust lifter ...	Each 6 11
017079	20815-16	SPROCKET	engine, bare, 16 teeth ...	16 teeth engine by 17 teeth dynamo, use 014016
017081	41-G3L-T54	PIPE	petrol feed, with nuts ...	Each 1 9 2
017084	41-G3L-E25	FLYWHEEL	bare, timing side ...	Each 1 4 8
017085	41-G3L-E19	FLYWHEEL	bare, driving side ...	Each 1 7 8
017090	41-G3L-E250-A	PLATE	engine, bare, rear, right side ...	Each 11 10
017091	41-G3L-E250-L	PLATE	engine, bare, rear, left side ...	Each 11 10
017094	36-8-C28	BOLT	fixing chainguard to chaincase ...	Doz. 7 3
017095	36-G3-B18	SPRING	for rear brake rod ...	Doz. 4 10
017097	36-2-H51	SPOKE	rear, wheel, left or right, $8\frac{1}{2}$ in. by 6 G ...	20 for 6 8
017099	36-G3-E181A	CARRIER	battery, rear portion only ...	Each 7 11
017102	36-G3-E185A	CARRIER	complete battery (enamelled front) ...	Each 12 4
017103	36-G3-E185A	CARRIER	battery, complete (chrome front) ...	Each 18 11
017103	38-G4-E204	BUSH	for rocker box ...	Each 2 11
017104	37-8-E30	CRANKCASE	driving side only with studs ...	Each 4 6 6
017105	12268	GASKET	cylinder head ...	Each 8
017107	38-G3-F44	STAND	rear, bare ...	1 18 7
017111	35-18T-H51	SPOKE	front wheel, $9\frac{1}{2}$ in. by 9 G by 11 G ...	for 20 8 0
017112	38-12-H18	WASHER	lock, rear wheel sprocket fixing bolt ...	Doz. 1 2
017113	38-12-B30	LEVER	for rear brake shoe expander ...	Each 3 0
017114	38-G3-EQ2	INFLATOR	tyre ...	Each 9 0
017115	FE-59	ARM	rocker, valve end, inlet or exhaust ...	Each 4 11
017123	11751	ADJUSTER	exhaust lifter cable ...	Each 8
017126		CABLE	clutch, assembled ...	Each 9 2
017127	41-G3L-FF32	SPRING	main, front fork ...	free length 10 in. Each 7 10
017128	38-G4-E65	FILET	rubber, rocker box side cover ...	Doz. 3 7
017131	38-G3-F245	SPRING	return, rear stand ...	Each 2 0
017132	38-G3-E142	PIPE	oil return, with union nuts ...	Each 6 11
017141	35-G3-E29	COVER	magneto chain case ...	Each 12 10
017142	35-2-C29	SPACER	centre bolt, inside front chain case, $\frac{1}{2}$ in. long ...	Doz. 4 10
017143	35-G3-E56	NUT	for magneto platform fixing bolt, right side ...	Each 1 5
017145	35-G3-E277	SLEEVE	threaded, eye for dynamo strap ...	Each 8
017147	35-G3-F341	BOLT	tube, prop stand ...	Doz. 7 3
017148	20493-1	BAFFLE	for exhaust pipe ...	Each 5 2
017152	20493-1	CLIP	clamping silencer to exhaust pipe ...	Each 1 11
017167	35-G3-E275	STRIP	dynamo locating ...	Each 1 5
017168	35-G3-E279	CROSSBAR	square, dynamo, clamping strap ...	Each 1 9
017169	37-G8-E20	AXLE	driving side flywheel ...	Each 1 13 0
017174	37-G3-B1	PEDAL	foot, rear brake ...	Each 14 10
017175	37-G3-B2	SPINDLE	rear brake foot pedal ...	Each 1 5
017176	37-G3-B3	BUSH	rear brake foot pedal ...	Each 1 0
017177	37-G3-B8	SPRING	return, rear brake foot pedal ...	Each 1 0
017178	37-8-B7	BOLT	anchor, rear brake cover plate ...	Each 1 6
017180	37-12-E385	NUT	union, bottom end rocker feed pipe ...	Each 1 11
017182	37-8-E78	WASHER	paper, timing gear cover ...	Doz. 3 7
017183	37-12-E380A	PIPE	rocker box oil feed, complete ...	Each 10 1
017187	37-G3-C85	ROD	bare, rear brake ...	Each 2 3
017190	37-G3-E76	PLATFORM	magneto, bare ...	Each 8 11
017191	RLS-8	BEARING	ball, for driving side axle ...	Each 17 2
017192	FE57	AXLE	rocker ...	Each 6 11
017194	16889A	SPACER	washer, between bearings ...	Doz. 3 7
017195	R4-E1028	PINION	timing, on flywheel axle ...	Each 2 11
017197	FE76	CLAMP	for dynamo ...	Each 1 0
017198	CF-147	SPACER	magneto platform fixing bolt metal, front chaincase ...	Each 9 1
017199	12302-7	BAND	rubber, front chaincase band ...	replaced by 016294 Each 9 11
017200	12302-9	BAND	rubber, front chaincase band ...	Each 1 7
017216	FE60	ARM	rocker, tappet end, inlet and exhaust ...	Each 4 5
017217	16363	NUT	lock, front brake cable adjuster ...	Doz. 7 3
017218	45-A-1	CABLE	complete assembled air control ...	Each 3 3

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
				£ s. d.
017219	11910	RING	spring, locating bearings in shell	Doz. 3 7 1/2
017220	11911	CUP	for hub bearing felt washer	Doz. 4 10
017221	11912	WASHER	spacing for hub bearing felt washer	Doz. 7 3
017222	11913	WASHER	retaining felt washer	Doz. 3 7 1/2
017223	11914	NUT	lock, hub bearing adjusting ring	Each 2 5
017224	11915	RING	adjusting, for hub bearing	Each 2 11
017227	11772	CLIP	adjusting, rear end of brake rod	Each 2 11
017231	12221	NUT	rear wheel spindle, right side	Each 1 0
017238	18-088	NIPPLE	handlebar end, clutch and front brake inner wire	Doz. 3 7 1/2
017240	40-058	NIPPLE	handlebar end, exhaust lifter inner wire	Doz. 3 7 1/2
017241	4	NIPPLE	gear box end clutch cable inner wire	Doz. 1 2 1/2
017242	1482	NIPPLE	carburettor end, throttle and air inner wire	Doz. 2 5
017246	LTK20	GUN	grease	Each 7 4
017248	LTK15	PLIERS	sidecutting	Each 4 7
017249	LTK12	WRENCH	adjustable	Each 10 10
017250	11914-5	SPANNER	hook, for hub bearing lock nut	Each 1 4
017251	LTK-5	SPANNER	double end with gauge for contacts	Each 1 7
017252	17634	SPANNER	box, with tommy, sparking plug for tools	Each 1 11
017253	17520	BAG	single end, dynamo chain adjustment	Each 4 11
017254	RKT1	SPANNER	triple end .80 in. by 1-011 in. by 1-2 in.	Each 1 0
017255	RTK3	SPANNER	double end, 3/4 in. by 3/8 in.	Each 1 11
017256	LTK13	SCREWDRIVER	control, for steering damper (Matchless)	Each 3 4
017259	TFF101-S	KNOB	control, for steering damper (Matchless)	Each 1 7 1/2
017261	41-C-2	CABLE	complete, assembled, clutch	Each 4 2
017262	41-T-2	CABLE	complete, assembled, throttle	Each 9 2
017263	41-A-1	CABLE	complete, assembled, air	Each 6 4
017266	12-034	NIPPLE	handlebar end, throttle and air inner wire	Each 3 3
017267	V2-E209	COLLAR	for valve spring	Doz. 2 5
017268	18-455	LEVER	assembly, clutch and front brake	Each 2 4
017269	12-171	LEVER	assembly, ignition	Each 9 11
017270	39-1-1	CABLE	complete, assembled, ignition	Each 7 11
017271	12-161	LEVER	assembly, air	Each 9 11
017272	16117CE	TWIST GRIP	complete, assembly	Each 11 7
017273	16-069	GRIP	rubber, dummy	Each 1 8
017274	45-1-1	CABLE	complete, assembled, ignition	Each 5 3
017276	45-T-2	CABLE	complete assembled, throttle	Each 6 4
017278	12403	STAND	front, bare	Each 9 11
017279	11909	WASHER	felt for hub bearing	replaced in late models by 010579 rubber Doz. 3 7 1/2
017288	D8-E2861	LEVER	with spindle, exhaust lifter	Each 10 2
017289	D8-E2862	CROSSHEAD	for valve lifter cable	Each 1 5
017291	20876	ADJUSTER	for rocker axle	Each 8 1/2
017292	FES8	SLEEVE	for rocker axle	use 014225 Each 5 11
017294	110038-46	CHAIN	magneto, 46 links 3/4 in. by .225 in.	Each 7 7
017295	110038-47	CHAIN	dynamo, 47 links 3/4 in. by .225 in.	Each 7 9
017296	110038-49	CHAIN	dynamo, 49 links 3/4 in. by .225 in.	Each 8 0
017297	110038-58	CHAIN	magneto, 58 links 3/4 in. by .225 in.	Each 9 6
017298	110046-66	CHAIN	front, 66 links 1/2 in. by .305 in.	Each 1 1 1/2
017299	110046-67	CHAIN	front, 67 links 1/2 in. by .305 in.	Each 1 1 5
017300	110056-91	CHAIN	rear, 91 links 1/2 in. by .380 in.	Each 2 2 8
017301	110056-94	CHAIN	rear, 94 links 1/2 in. by .380 in.	Each 2 4 1
017303	20815-15T	SPROCKET	engine, bare, 15 teeth	15 teeth engine by 17 teeth dynamo OBS, use 014015 Each 1 9 2
017304	20815-17T	SPROCKET	engine, bare, 17 teeth	17 teeth engine by 17 teeth dynamo, OBS, use 014017 Each 1 9 2

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
				£ s. d.
017305	20815-19T	SPROCKET	engine, bare, 19 teeth	19 teeth engine by 17 teeth dynamo, OBS, use 014019 Each 1 9
017306	20815-20T	SPROCKET	engine, bare, 20 teeth	20 teeth engine by 17 teeth dynamo, OBS, use 014020 Each 1 9
017316	000670	TAPPET	inlet, bare	Each 5
017317	L3-E89	BUSH	for gudgeon pin	Each 4
017318	RC28	SPACER	for tool box seat stay bolt	Each 2 1
017321	41-G3L-B15	SPROCKET	and brake drum, rear wheel, 42 teeth	Each 1 5
017323	41-G3L-B20	PLATE	cover, rear brake, bare	Each 1 3
017324	41-G3L-B54	SPACER	rear solid spindle (fits in fork end)	Each 6
017326	40-G12M-B60	PLATE	cover front brake, bare	Each 18
017327	40-G12M-B65	LEVER	for front brake shoe expander	Each 2
017328	41-12-B71A	SHOES	pair of, with linings and collars, front or rear brake	use 017605 Each 7
017329	41-8-B73	COLLAR	thrust, brake expander adjusting	Doz. 1 18
017334	40-G12M-8100	WASHER	locating, front brake cover plate	Each 1 1
017335	40-G12M-8115	DRUM	front brake, bare	Each 1 14
017336	40-G2M-C10	CHAINGUARD	rear, bare	Each 2 6
017339	37-G8-E44	ROD	connecting, with liner and bush	Each 1
017341	38-12-E96	SCREW	guide, oil pump plunger	Each 6
017342	38-G3-E140	PIPE	oil feed, with union nuts	Each 9 3
017343	41-G3-E108	CRANKCASE	complete, with bushes and studs	Each 2 0
017345	41-G3L-E404	PIPE	exhaust, bare	Each 5
017346	41-G3L-E541	SLEEVE	for timing side roller bearing	Each 6 8
017348	41-G3L-F23	FRAME	front, portion only	Each 6 4
017349	41-G3L-F24	FRAME	rear, portion only	now obsolete
017352	41-G3L-F250L	STAY	support, for pannier frame, left side	now obsolete
017353	41-G3L-F250R	STAY	support, for pannier frame, right side	now obsolete
017355	41-G3L-FF3	TUBE	fork, inner	Each 1 12
017356	42-G3L-FF21	LUG	for handlebar	Each 1 18
017357	41-G3L-FF55	ROD	fork, damper	Each 1
017359	40-G12M-FF60A	TUBE	damper, front forks	Each 6
017361	40-G12M-FF183L	SLIDER	fork, left side, with cap and studs	Each 2 9
017362	40-G12M-FF183R	SLIDER	fork, right side, with cap and studs	Each 2 3
017365	40-G2M-H19	HUB	front wheel, shell only	Each 2 19
017375	110056-96	CHAIN	rear, 96 links	Each 2 5
017376	110056-98	CHAIN	rear, 98 links	Each 2 5
017377	41-G3L-E27	BUSH	timing side flywheel axle	OBS use 017489 bush Each 4
017379	MC4	NIPPLE	magneto end, ignition inner wire	Doz. 7
017380	110056-90	CHAIN	rear, 90 links	Each 2 2
017381	110046-65	CHAIN	front, 65 links	Each 1 0
017382	41-G3L-H20	RIM	front, 19 in. (black enamel)	use 018244 Each 1 3
017383	41-G3L-H21	RIM	rear, 19 in. (black enamel)	use 018245 Each 1 3
017390	41-G3L-F300LP	STAY	for rear mudguard, left side, to accommodate panniers	Each 19
017391	41-G3L-F300PP	STAY	for rear mudguard, right side, to accommodate panniers	Each 15
017400	37-G8-E16A	LINER	for big end bearing	Each 15
017403	41-G3L-F423	STAY	for pannier frames	now obsolete
017405	39-8-E452	BOLT	securing rocker box, short head (centre)	Each 1
017420	41-G3L-FF15	DRAW BOLT	for steering damper	Each 1
017421	45-G3L-FF200	PLATE	anchor for steering damper	Each 1
017424	41-G3L-FF21C	CLIP	half, for handlebar lug	Each 1
017425	41-G3L-FR22	ARM	footrest, bare, left or right	Each 1 1/2
017456	41-G3L-EQ40	CARRIER	rear, bare	Each 1 1/2
017460	42-G3L-FF17A	CROWN	and STEM assembly, comprises crown, stem and circlip	Each 2 1
017474	41-G3-E31	CRANKCASE	timing side, with bushes and studs	Each 4 1
017482	11520A	TOOL	valve grinding	Each
017486	40-G12M-H46	NUT	securing front cover plate	Each
017487	36-12-B51	EXPANDER	for brake shoes	Each

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
017488	20408	SPRING	for brake shoes	
017489		BUSH	timing side flywheel axle	Doz. 3 7 1/2
017493	35-G3-E32A	COVER	timing, with bushes	Each 10 10
017494	000075-D/S	ROLLER	for big end bearing plus .001 oversize	Each 1 14 4
017497	40-G3-F66	SPACER	for frame unisig bolt	Doz. 3 7 1/2
017498	39-8-E61ASS	BOX	rocker, assembled	Doz. 7 3
017499	39-8-E61B	BOX	rocker, with bushes	Each 5 16 1
017500	V2-FR6	SPACER	footrest rod, between engine plates	Each 2 12 1
017505	L/4M133	SPACER	for engine plate extension	Each 8 1/2
017506	35-G3-CA	CHAINCASE	complete, front, with band, rubber and cap	Each 8 1/2
017516	41-G3L-H106	SPACER	rear solid spindle, next to cover plate	Each 3 8 8
017517	41-B-2	CABLE	assembled complete, front brake	Doz. 4 10
017519	41-G3L-FF201	INNER TUBE	assembly, front fork	Each 8 4
017520	37-12-E380T	PIPE	rocker feed, top portion only with nut	Each 3 12 8
017521	37-12-E380B	PIPE	rocker feed, bottom portion only with nut	Each 4 1
017522	40-G12M-B7F	BOLT	anchor, front brake cover plate	Each 6 0
017523	38-G3-F60T	TOP	saddle only	Each 2 5
017532	42-G3L-FF1	FORKS	complete assembly	Each 1 12 4
017549	41-G3L-H45A	WHEEL	front complete, with all fittings (black rim)	Each 18 9 7
017551	41-G3L-FF202	TUBE	dampner, assembly	Each 9 11 8
017552	40-G12M-T45	TANK	oil, bare	Each 10 1
017553	4178	SPACER	thick, oil tank bracket bolt	Each 2 5 0
017554	4178/S	SPACER	thin, oil tank bracket bolt	Doz. 7 3
017555	16365	ADJUSTER	front brake cable	Doz. 7 3
017569		OIL SEAL	front, forks and rear leg (rubber)	Each 1 11
017579		MUDGUARD	detachable portion only (springers)	Each 6 4
017580	17520-I-ASS	TOOL KIT	complete, with tyre inflator	Each 1 5 7
017581	17520-ASS	TOOL KIT	complete, less tyre inflator	Each 2 15 7
017586	41-G3L-H31A	WHEEL	rear, complete with all fittings (black rim)	Each 2 6 7
017603	41-G3L-E2ASS	HEAD	cylinder, with valve guides	Each 7 13 3
017605	39-12-B71A	SHOES	pair of, with linings, front or rear brake	Each 6 8 8
017606	39-12-B73	PIN	thrust, brake shoe adjusting	replaces 017328 ... per pair 18 5
017632	3261	SPANNER	1/2 in. by 1/2 in. open end	Each 1 11
017642	D3-E312	PISTON	bare, normal size	Each 5 1
017651	038-G9-E12-1 020	PISTON	bare, plus .020 oversize	Each 1 3 8
017652	D3-E312A	PISTON	complete, normal size	Each 1 9 9
017653	OD3-E312+020	PISTON	bare, plus .020 oversize	Each 1 15 1
017654	OD3-E312A+020	PISTON	complete, plus .020 oversize	Each 1 3 8
017655	OD3-E312+040	PISTON	bare, plus .040 oversize	Each 1 15 1
017656	OD3-E312A+040	PISTON	complete, plus .040 oversize	Each 1 3 8
017657	38-G9-E12A	PISTON	complete, normal size	Each 1 15 1
017658	038-G9-E12A+020	PISTON	complete, plus .020 oversize	Each 2 4 9
017659	45-EQ-1	GASKETS	complete set of	Each 2 4 9
017660	45-EQ-2	GASKETS	complete set of	Each 8 2
017661	45-EQ-3	GASKETS	complete set of	Each 9 2
017662	45-EQ-4	GASKETS	complete set of	Each 4 0
017663	48-EQ-1	GASKETS	complete set of	Each 5 0
017664	48-EQ-2	GASKETS	complete set of	Each 8 2
017665	49-EQ-1	GASKETS	complete set of	Each 4 0
017666	49-EQ-2	GASKETS	complete set of	Each 9 10
017667	49-EQ-3	GASKETS	complete set of	Each 9 11
017668	49-EQ-4	GASKETS	complete set of	Each 5 5
017670	39-12-B74	WASHER	for brake shoe adjusting pin 017606	Each 5 6
018002		BOLT	tightening dynamo strap, 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 1 2 1/2
018012		CLIP	rubber, cable 5 in. long	Each 1 1
018014		PLATE	engine, rear	Doz. 3 7 1/2
018020		CRANKCASE	timing side only	Each 5 1
018022		PLATE	number, rear	Each 10 8 10
				Each 7 2

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
018023		LAMP	rear with bulb (LUCAS 53056A)	Each 12 6
018024		PISTON	bare, plus .040 oversize	compression ratio without plate 7 to 1
018025		PISTON	complete, plus .040 oversize	Each 1 1 0
018026		SHIELD	magneto	Each 1 14 6
018029		CARRIER	battery, back portion only	Each 4 2
018031		CRANKCASE	complete with bushes, studs and centre web	Each 12 0
018033		CARRIER	battery, back portion only	Each 21 16 1
018034		CHAINCASE	front, complete with band, rubber and caps	Each 14 1
018035		HEAD	for cylinder, guides, circlip and manifold studs	Each 2 15 0
018036		HEAD	for cylinder, guides, circlips and manifold studs	Each 6 2 8
018037		PLATE	with oil pumps assembled	Each 6 2 8
018040		PLATE	cover, front brake	Each 6 16 0
018043		CARRIER	battery, complete (enamelled front)	Each 2 0 0
018044		CARRIER	battery, complete (chrome front)	Each 4 6
018044		CARRIER	battery, complete (enamelled front)	Each 1 1 1
018046		CARRIER	battery complete (chrome front)	Each 16 10
018046		HUB	front, shell only with brake drum	Each 1 3 5
018051		LOOP	rear frame	Each 3 1 2
018053		KEY	for handlebar slip screws	replaces 014420 ... Each 4 17 2
018058		MUDGUARD	rear, rear detachable portion (Matchless)	Each 8 1/2
018061		PLATE	number, rear	Each 17 8
018062		STAY	battery carrier to chainguard	Each 11 8
018063		MOTIF	petrol tank ('M' and wings) (Matchless)	Each 8 1/2
018064		LOOP	rear, frame	Each 9 7
018067		CARRIER	battery, complete (enamelled front)	replaces 015326 ... Each 6 12 0
018068		CARRIER	battery complete (chrome front)	Each 16 10
018070		CARRIER	battery, back portion only	Each 1 3 5
018071		PIN	fulcrum for brake shoes	Each 14 1
018071		NUT	outside, securing front brake cover plate	Each 8 1/2
018090		TRANSFERS	complete set of (Matchless)	Each 2 7 1/2
018092		PLUG	for dynamo spigot	Each 3 8 1/2
018093		CUP	for front bearing oil seal	Each 4 6
018094		CUP	for rear bearing oil seal	replaces 017222 ... Doz. 3 7 1/2
018095		RING	retaining, rear hub bearing oil seal	replaces 010741 ... Doz. 4 10
018096		RING	retaining, front hub bearing oil seal	replaces 010742 ... Doz. 1 2 1/2
018098		RING	compression DTD485, normal size	Doz. 1 2 1/2
018102		RING	compression, normal size	conversion for racing. 66 m/m by 1/2 in. Each 2 1
018103		VALVE	exhaust comp. 350 c.c.	545 cc. ... Each 2 0
018109		PISTON	bare, normal size	compression ratio without plate 8 to 1 ... Each 17 6
018111		CHAINCASE	front half, bare	Each 1 1 0
018112		CAP	over clutch	Each 17 10
018115		STAY	for exhaust pipe (enamelled)	Doz. 7 3
018115		STAY	for exhaust pipe (chrome)	Each 1 11
018116		WASHER	for clutch cap	Each 3 1
018120		CAP	or seat for oil felt filter	Doz. 2 5
018121		CAP	for engine shock absorber spring	Doz. 4 10
018122		TANK	oil, bare	Each 2 1 1/2
018125		PIPE	oil feed, long portion	Each 2 1 4
018127		PIPE	oil return, long portion	Each 8 11
018129		PIPE	oil return, short portion	Each 6 11
018131		MUDGUARD	rear, bare (includes both halves and jointing bolts) (Matchless)	Each 4 6
018137		TANK	oil, bare	can be used in place of 015030 and 016727 ... Each 2 5 2
018139		PIPE	exhaust, bare	Each 2 3 2
018141		CABLE	complete, assembled, clutch	Each 1 11 8
				Each 7 7

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
018142		PIPE exhaust, bare	Each	£ s. d. 1 14 1
018144		PIPE exhaust, bare	Each	1 17 4
018146		PIPE exhaust, bare	Each	1 15 0
018148		PIPE exhaust, bare	Each	1 18 0
018151		LAMP head type SSU-700-P-1 (no cable harness)	Each	5 2 6
018153		SPANNER for petrol taps	Each	8½
018155		CLEAT for clutch cable	Doz.	3 7½
018157		PIPE petrol feed, with union nuts	Interchangeable with 018587	Each 18 10 Doz. 1 2½
018160		NUT for regulator fixing bolt	Each	8 1
018161		EXTENSION for fork slider	can be used for 018214, 010711 and 014341	Each 8 1 Doz. 2 7 6
018162		GEAR BOX for revolution counter (type 36362/1)	Each	4 0 0
018164		HEAD revolution counter (type RC-95)	Each	1 11
018168		ROD push, bare	Each	3 18 0
018169		BARREL cylinder, bare	Each	3 15 0
018171		PISTON complete, normal size, high compression	with compression plate 8-3 to 1, without 9-8 to 1	Each 2 17 0 Each 2 5 2
018172		PISTON bare, normal size, high compression	Each	1 10
018175		TANK oil, bare	Each	4 2
018178		SPANNER double end, 1-010 in. by 1-2 in.	Each	1 19 6
018184		SHIELD for magneto	Each	2 4
018185		TANK oil, bare	Each	6 4 2
018188		HOSE vent, pipe, for oil tank, 12 in. long	Each	11 6 2
018201		CRANKCASE driving side only, with studs	replaces 013333	Each 6 1
018203		CRANKSHAFT plugged, but bare	Each	6 2
018214		EXTENSION for fork slider	replaces 018161 and 010711	Each 8 1 Each 1 5
018215		CAP for bottom of top cover tube	Each	8½
018216		RUBBER seat, for cover tube	Each	15 6
018217		ARM footrest, bare	Each	3- 7½
018220		CLIP cable, rubber, 4½ in. long	Doz.	3- 7½
018244		RIM front, 19 in. by 2½ in. (silver enamel)	alternative for all black or chrome rims same size	Each 1 3 9 Each 1 3 9 Each 1 3 9 Each 1 3 9 Each 1 1 Each 3 0
018245		RIM rear, 19 in. by 2½ in. (silver enamel)	Each	1 3 9
018246		RIM front, 21 in. by 2½ in. (silver enamel)	Each	1 3 9
018247		RIM rear, 19 in. by 3 in. (silver enamel)	replaces 011693	Each 1 3 9
018266		SLEEVE for engine push rod, tapped	Each	1 1
018267		SPRING buffer for rear suspension unit	Each	3 0
018269		PISTON bare, plus .020 oversize	compression ratio without plate 8 to 1	Each 1 1 0 Doz. 7 3
018275		SEAT for valve springs	Doz.	4 2
018276		COMPRESSOR for valve spring removal	Each	2 5
018277		CLIP half only for handlebar lug	Each	10
018278		STAY for exhaust pipe (enamelled)	Each	4 2
018278		STAY for exhaust pipe (chrome)	Each	4 6
018279		RING compression, normal size (chrome)	2½ in. by ½ in.	Each 4 6
018280		RING compression, plus .020 oversize (chrome)	2½ in. plus .020 by ½ in.	Each 4 6
018281		RING compression, plus .040 oversize (chrome)	2½ in. plus .040 by ½ in.	Each 4 6
018282		SPRING for crankcase release valve diaphragm	Doz.	2 5
018288		ARM footrest, bare	Each	1 0 6
018292		CRANKCASE timing side only, with bushes and studs	replaces 013334	Each 10 0 10
018297		RING compression, normal size (chrome)	66 m/m. by ½ in.	Each 4 6
018298		RING compression, plus .020 oversize (chrome)	66 m/m. plus .020 in. by ½ in.	Each 4 6
018299		RING compression, plus .040 oversize (chrome)	66 m/m. plus .040 in. by ½ in.	Each 4 6

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
018301		PISTON complete, normal size	compression ratio without plate 6-5 to 1, replaces 011848A and 013625	Each 1 17
018302		PISTON complete, plus .020 oversize	compression ratio without plate 6-5 to 1, replaces 0101848A and 013623	Each 1 17
018303		PISTON complete, plus .040 oversize	compression ratio without plate 6-5 to 1, replaces 014724	Each 1 17
018304		PISTON complete, normal size, high compression	compression ratio without plate 9-4 to 1, replaces 013705	Each 2 15
018305		PISTON complete, plus .020 oversize, high compression	compression ratio without plate 9-4 to 1, replaces 013712	Each 2 15 Each 1 12
018306		COVER timing gear, with bushes	and stem assembly (comprises crown, stem and circlip)	Each 2 8
018307		CROWN and stem assembly (comprises crown, stem and circlip)	Each	2 8
018308		CROWN and stem assembly (comprises crown, stem and circlip)	Each	2 8
018309		LUG for handlebar and steering head	Each	2 3
018310		SLIDER fork, with cap, studs and nuts, left and right	use 021399	Each 2 4
018311		CHAINCASE complete (comprises both halves, band, rubber and caps)	Each	2 6
018312		ROD long, push, bare, 8½ in. long with end	Each	4
018313		ROD long, push, bare, 8½ in. long with end	Each	4
018314		ROD long, push, complete	Each	7
018315		ROD long, push, complete	Each	7
018317		CRANKCASE timing side only, with bushes and studs	Each	4 18
018318		CRANKCASE front, complete, with all fittings (silver rim)	Each	7 1
018319		WHEEL front, complete, with all fittings (silver rim)	Each	12 2
018320		WHEEL front, complete, with all fittings (silver rim)	Each	12 10
018321		TOOL KIT complete, less tyre inflator	Each	2 3
018322		TOOL KIT complete, less tyre inflator	Each	2 9
018323		TOOL KIT complete, with tyre inflator	Each	2 19
018324		TOOL KIT complete, with tyre inflator	Each	2 18
018325		INNER TUBE assembly, SOLO	Each	3 9
018326		INNER TUBE assembly, SOLO	Each	3 9
018327		INNER TUBE assembly, SIDECAR	Each	3 10
018328		TUBE damper, assembly	Each	12
018329		TUBE damper, assembly	Each	12
018330		FORK complete assembly	Each	20 10
018331		FORK complete assembly	Each	19 19
018332		FORK complete assembly	Each	20 0
018333		FORK complete assembly	Each	20 13
018337		CAM assembly, gear operating	Each	1 10
018338		CASE and chainwheel, assembled	Each	2 11
018339		CASE and chainwheel, assembled	Each	2 11
018340		KICKSTARTER quadrant and spindle, assembled	Each	1 7
018355		GASKETS set of decarbonizing	Each	6
018356		GASKETS set of decarbonizing	Each	6
018357		GASKETS set of decarbonizing	Each	4
018358		GASKETS complete set of	Each	10
018359		GASKETS complete set of	Each	10
018360		GASKETS complete set of	Each	8
018492		SCREW retaining rocker covers	Each	1
018493		GASKET for rocker covers	Doz.	4



PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
018494		DEFLECTOR	water, fits over gear box sprocket ...	Each 1 6
018499		TRANSFERS	complete set of (Matchless) ...	Each 3 2 1/2
018500		TRANSFERS	complete set of (Matchless) ...	Each 3 8 1/2
018501		TRANSFERS	complete set of (Matchless) ...	Each 2 10
018502		TRANSFERS	complete set of (Matchless) ...	Each 3 5
018503		RING	between carburettor and manifold ...	Each 1 2 1/2
018508		ROD	push, bare ...	Each 2 0
018510		CRANKCASE	complete, with bushes, studs and centre web ...	replaces 015401 ... Each 21 16 1
018512		TOOL KIT	complete, less inflator ...	Each 2 11 6
018513		TOOL KIT	complete, with inflator ...	Each 3 0 6
018514		FILLION SEAT	springer machines ...	Each 2 5 0
018517		ROD	push, assembled ...	Each 7 2
018518		END	upper, for push rod ...	Each 3 0
018519		END	lower, for push rod ...	Each 2 5
018527		GEAR BOX	complete, with clutch, kickstart and footchange lever ...	price on application
018537		TUBE	fork cover, top, left, with lamp lug ...	Each 10 2
018538		TUBE	fork cover, top, right, with lamp lug ...	Each 10 2
018539		TUBE	fork cover, bottom ...	Each 5 10
018540		CROWN	and stem assembled, comprises crown, stem and circlip ...	Each 2 4 5
018547		PIPE	exhaust, bare ...	Each 1 7 0
018548		PIPE	exhaust, bare ...	Each 1 9 1
018563		FERRULE	for petrol pipe flexible connection ...	replaced by 021005 Doz. 4 10
018564		BEARING	plain, for connecting rod, bottom half -010 in. undersize ...	replaces 015402 1/2 10 4
018570		CROWN	and stem assembled, comprises crown, stem and circlip ...	Each 2 4 5
018572		CRANKCASE	driving side only, with bushes and studs ...	Each 6 4 2
018573		CRANKCASE	siding side only, with bushes and studs ...	Each 10 8 10
018576		FOLLOWER	for camshaft ...	Each 15 4
018579		CRANKSHAFT	plugged, but bare ...	Each 11 6 2
018582		TUBE	fork inner, assembly ...	Each 3 3 0
018583		TUBE	fork inner, assembly ...	Each 3 16 6
018587		PIPE	petrol feed, assembled ...	interchangeable with 018757 ... Each 15 0
018588		PIPE	petrol feed, assembled ...	interchangeable with 014783 ... Each 15 0
018589		PIPE	petrol feed, assembled ...	interchangeable with 014780 ... Each 15 0
018590		PIPE	petrol feed, top portion only ...	Each 10 0
018591		PIPE	petrol feed, top portion only ...	Each 10 0
018592		PIPE	petrol feed, top portion only ...	Each 10 0
018593		PIPE	petrol feed, bottom portion only ...	Each 2 10
018594		PIPE	petrol feed, bottom portion only ...	Each 2 10
018601		ARM	footrest, bare ...	Each 10 0
018602		ARM	footrest, bare ...	Each 12 6
018604		ROD	footrest, bare 10 1/2 in. long ...	Each 2 9
018605		SHIELD	magneto ...	Each 3 0
018616		TUBE	supporting rear of mudguard, left side ...	Each 7 6
018617		TUBE	supporting rear of mudguard, right side ...	Each 7 6
018623		COVER	for rockers ...	Each 11 10
018641		STUD	1 1/2 in. by 7/8 in. by 26 by 26 T.P.I. for battery carrier fixing ...	Doz. 7 3
018643		BEARING	plain, for connecting rod, top half, normal size ...	1/2 half for 2 9
018644		BEARING	plain, for connecting rod, bottom half, normal size ...	replaces 015071 ... 1/2 half for 6 11
018648		BOLT	fixing, top pivot, rear leg, 3 1/2 in. by 3/8 in. by 26 T.P.I. ...	Each 1 7 1/2
018649		SCREW	pinch, for fork crown ...	Each 1 7 1/2
018650		BAND	metal, for chaincase ...	Each 7 10
018652		BAND	rubber, for chaincase ...	Each 6 4
018654		MANIFOLD	inlet, bare (no studs) ...	can be used in place of 011633 Each 16 4

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price
018655		STAY	front brake cover plate anchor (enamelled) ...	Each 1 6
018655		STAY	front brake cover plate anchor (chrome) ...	Each 2
018662		PLATE	cover, front brake ...	Each 2
018667		KEY	for fork tube pinch screw ...	Each 2
018671		BEARING	plain, for connecting rod, top half -010 undersize ...	1/2 half for 2 9
018678		FILLION SEAT	RIGID machines ...	Each 2
018680		SPACER	washer, for cam follower ...	Doz.
018688		GEAR BOX	complete, assembled with clutch, kickstart and footchange lever ...	Twin conversion for racing, optional to conversion kit price on app
018691		BAR	locking, for steering head ...	Each
018693		STAY	engine steady ...	Each
018697		TUBING	petrol flex, for petrol feed pipe, 1 1/2 in. long ...	replaced by 021004 Doz.
018702		RING	scraper, DT0485, normal size ...	conversion for racing 66 m/m by 1/2 in.
018703		FRAME	front portion only ...	Each 7
018718		CHAINCASE	front, back portion only ...	Each
018720		SWITCH	for stop light ...	Each
018727		SPRING	pull off, for stop light switch ...	Each
018735		PLATE	number, rear ...	Each
018737		PLATE	number, rear ...	Each
018738		HEAD	for cylinder, bare, left ...	Each 5
018740		HEAD	for cylinder, bare, right ...	Each 5
018742		EXTENSION	for release pipe ...	Each
018743		RUBBER	for release pipe extension ...	Doz.
018744		CLIP	for release pipe extension ...	Doz.
018747		MAGNETO	complete, type K2F (LUCAS number 42230A) ...	Each 10
018748		MAGNETO	complete, type NI-4 (LUCAS number 42272A) ...	Each 7
018749		CABLE	complete, assembled (ignition) ...	Each
018755		HEAD	for cylinder, with guides, circlips and manifold studs, left ...	Each 5
018756		HEAD	for cylinder, with guides, circlips and manifold studs, right ...	Each 5
018760		LAMP	rear, with bulb, type 525 (LUCAS 53269A) ...	Each 1
018762		BRACKET	for stop light switch (rigid machines) ...	Each
018763		BRACKET	for stop light switch (springer machines) ...	Each
018764		CLIP	for pull off spring ...	Each
018766		FORK	assembly, complete ...	Each 19
018767		FORK	assembly, complete ...	Each 19
018768		FORK	assembly, complete ...	Each 20
018769		FORK	assembly, complete ...	Each 19
018770		INNER TUBE	assembly, front forks ...	Each 3
018771		CHAINCASE	front complete, comprises halves, band, rubber and caps ...	Each 2
018773		CHAINCASE	front complete, comprises halves, band, rubber and caps ...	Each 2
018774		WHEEL	front, complete, with all fittings, silver rim ...	Each 11
018774		WHEEL	front, complete, with all fittings, silver rim ...	Each 11
018775		TOOL KIT	complete, with tyre inflator ...	Each 3
018776		TOOL KIT	complete, less tyre inflator ...	Each 2
018777		TOOL KIT	complete, with tyre inflator ...	Each 3
018778		TOOL KIT	complete, less tyre inflator ...	Each 2
018780		TOOL KIT	complete, with tyre inflator ...	Each 3
018781		TOOL KIT	complete, less tyre inflator ...	Each 2
018783		GASKETS	complete set of ...	Each
018784		GASKETS	set of decarbonizing ...	Each

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
018786		FRAME	front portion only	Each 6 13 0
018788		WHEEL	front, complete, with all fittings, chrome, red centre (Matchless)	Each 12 2 1
018790		BOLT	uniting mudguard halves	Doz. 6 0
018795		MUDGUARD	rear (both portions with joint bolts) (Matchless)	Each 4 1 0
018797		MUDGUARD	rear, fixed portion (Matchless)	Each 2 16 2
018799		MUDGUARD	rear, detachable portion (A.J.S. and Matchless)	Each 1 5 7
018810		PISTON	bare, normal size	Each 1 14 0
018811		CHAINCASE	complete, with band, rubber and caps	Each 2 6 11
018812		BARREL	cylinder	Each 3 0 0
018833		CAMSHAFT	inlet (racing only)	Each 1 10 0
018834		CAMSHAFT	exhaust (racing only)	Each 1 13 0
018843		CRANKCASE	complete, with bushes, studs and centre web	Each 21 16 1
018846		WHEEL	rear, complete all fittings (chrome rim, black centre)	Each 7 9 4
018847		WHEEL	rear, bare, less fittings (chrome rim, black centre)	Each 5 6 8
021154		NIPPLE	front wheel spoke, left or right	Each 2
018854		COMPLETE	kit of parts for stop light conversion (rigid)	Each 12 0
018855		COMPLETE	kit of parts for stop light conversion (springers)	Each 12 0
018856		PISTON	complete plus .020 oversize, high compression	with compression plate 8-3, without plate 9-8 ... Each 3 15 0
018857		PISTON	bare, plus .020 oversize, high compression	with compression plate 8-3, without plate 9-8 ... Each 2 17 0
018858		GASKETS	complete set of	Each 8 5
018859		GASKETS	complete set of	Each 7 1
018860		CRANKCASE	driving side only with studs	replaces 018937 ... Each 2 3 9
018861		CRANKCASE	driving side only with studs	replaces 015969 ... Each 2 14 0
018862		BRACKET	for footrests, with cap	conversion for racing ... Each 16 0
018863		CAP	for footrest bracket only	Each 2 10
018865		PIPE	petrol feed	Each 7 8
018866		CABLE	for stop light, with snap connector (6 foot)	Each 1 6
018867		PEDAL	foot brake	conversion for racing ... Each 16 10
018869		ADAPTOR	for carburettor	Each 8 7
018871		SPACER	for carburettor adaptor	Each 3 0
018872		RING	for carburettor adaptor	Each 7 0
018873		SCREW	for carburettor adaptor, 1 in. by 1/4 in. Whit.	Each 10
018874		CAMSHAFT	exhaust	Each 1 17 2
018875		CAMSHAFT	inlet	Each 1 17 2
018876		CARBURETTER	complete, but less controls, left hand	Each 4 4 8
018877		CHAMBER	float, complete, left hand	Each 2 14 2
018880		PLUG	sparking, type FE250	Each 15 0
018882		KIT of PARTS	complete (racing conversion)	excluding gears 018947 which are optional equipment when available ... Each 34 10 0
018891		MOTIF	for petrol tank (Matchless), plastic	Each 6 9
018896		SEATING	rubber, for plastic motif	when available ... Each 1 0
018897		BOLT	fixing pannier frames to loop, top	Each 9
018924		PISTON	bare, normal size, 350 cc.	compression ratio without plate 7-5 to 1 ... Each 1 3 5
018925		PISTON	complete, normal size, 350 cc.	Each 1 19 6
018926		PISTON	bare, normal size, 500 cc.	compression ratio without plate 7-3 to 1 ... Each 1 10 6
018927		PISTON	complete, normal size, 500 cc.	Each 2 8 6

PART NUMBERS 000001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
018929		PISTON	bare, plus .020 oversize, 350 cc.	compression ratio without plate 7-5 to 1 ... Each 1 3
018930		PISTON	bare, plus .040 oversize, 350 cc.	Each 1 3
018932		PISTON	bare, plus .020 oversize 500 cc.	compression ratio without plate 7-3 to 1 ... Each 1 10
018937		LEVER	kickstarter assembled with pedal pin	conversion for racing ... Each 1 5
018938		SPRING	for brake pedal	Each 3
018939		PISTON	complete, normal size 8 to 1	compression ratio without plate 8 to 1 ... Each 1 14
018940		BRACKET	for revolution counter	conversion for racing ... Each 14
018941		LEVER	for gear change, foot control	Each 11
018942		CLIP	for exhaust pipe	Each 3
018943		BRACKET	for exhaust pipe clip	Each
018947		GEARS	complete set for conversion to close ratio	conversion for racing, set of 6 gears, optional equipment to conversion kit ... Each 9 2
018948		PISTON	complete, plus .020 oversize, 350 cc.	compression ratio without plate 7-5 to 1 ... Each 1 19
018949		PISTON	complete, plus .040 oversize, 350 cc.	Each 1 19
018950		PISTON	complete, plus .020 oversize	compression ratio without plate 7-3 to 1 ... Each 2 8
018952		CABLE	assembled, for throttle, long	conversion for racing ... Each 5
018953		CABLE	assembled, for throttle, short	Each 3
018954		CABLE	assembled, for air, long	Each 3
018955		CABLE	assembled, for air, short	Each 2
018956		STOP	for throttle cable adjuster	Each 1
018957		DISTRIBUTOR	oil	Each 3
018958		SEAL	for oil distributor	Each 4
018959		CAP	for revolution counter housing	Each 5
018963		CHAINCASE	front, front portion only	Each 17
018964		DOME	clutch inspection front chaincase	Each 6
018966		GASKET	cork clutch inspection dome	Each 1
018979		PISTON	complete, plus .020 in. oversize	compression ratio without plate 8 to 1 ... Each 1 14
018980		FLANGE	revolution counter	conversion for racing ... Each 6
018981		GEARBOX	complete with clutch, kickstarter and footchange lever	Price on application
018988		OIL TANK	only, bare	Each 2 3
018989		OIL TANK	only, bare	Each 2 3
018995		INTERFERENCE	suppressor	Each 3
018998		SADDLE	less rear springs	Each 1 11
018999		CABLE	revolution counter, 26 1/2 in. long	conversion for racing ... Each 12
019531		BODY	damper valve	Each 12
019532		PLUNGER	damper valve relief	Each
019534		PLUG	damper valve	Each
019535		PIN	damper valve	Each
019537		ROD	damper	Each
019538		VALVE	for damper	Each
019539		SLEEVE	plunger for damper rod	Each
019540		TUBE	for damper	Each 1
019555		SPACER	for buffer spring	Each

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
019626		VALVE	damper complete, assembled	Each 14 6
019824		BOX	junction, throttle cable (Amal. 244/104)	conversion for racing ... Each 5 3
019882		NUT	lock for brake drum screw	Doz. 4 10
019954		WASHER	for rev. counter flange	Each 7
019974		SPRING	valve, inner	conversion for racing ... Each 3 9
019975		SPRING	valve, outer	Each 5 9
021004		RUBBER	for petrol pipe connection	Doz. 4 10
021005		FERRULE	for petrol pipe rubber	replaces 018697 ... Doz. 4 10
021008		TANK	petrol, bare, enamelled and lined	replaces 018563 ... Each 9 4 9
021013		FRAME	front portion only, bare	Each 9 0 2
021018		CHAINGUARD	rear, bare	Each 1 4 4
021023		FORK	rear, only	Each 4 11 3
021029		MUDGUARD	front, rear	Each 1 8 0
021032		MUDGUARD	rear, rear detachable portion	Each 17 8
021036		CHAINCASE	front, back portion only	Each 15 0
021038		SEAL	chaincase, sliding	Each 7
021047		FRAME	front portion only, bare	Each 5 18 0
021048		FRAME	front portion only, bare	Each 6 15 0
021049		FRAME	front portion only, bare	Each 7 12 4
021050		FRAME	rear portion only, bare	Each 8 0 0
021051		FRAME	rear portion only, bare	Each 8 0 0
021052		TANK	oil, bare	Each 2 1 4
021060		TANK	oil, bare	Each 1 19 6
021060		CARRIER	battery, complete, enamelled front	Each 15 3
021061		CARRIER	battery, complete, chrome front	Each 1 1 10
021061		CARRIER	battery, complete, enamelled front	Each 17 11
021062		CARRIER	battery, complete, chrome front	Each 1 4 6
021062		CARRIER	battery, complete, enamelled front	Each 14 9
021063		CARRIER	battery, complete, chrome front	Each 1 1 4
021064		CARRIER	battery, back portion only	Each 11 3
021065		CARRIER	battery, back portion only	Each 13 11
021065		CARRIER	battery, back portion only	Each 10 6
021071		CARRIER	battery, back portion only	Each 2 0
021084		STOP	front fork. Also acts as pinch bolt	Each 10
021084		STUD	uniting front and rear frames, 6 in. by 3/4 in. by 26 T.P.I.	Each 10
021086		STUD	uniting front and rear frames, 6 in. by 3/4 in. by 26 T.P.I.	Each 10
021087		PIPE	oil, return	Each 6 11
021089		PIPE	oil, return	Each 12 7
021092		RAIL	frame, left side	Each 2 11 2
021094		RAIL	frame, right side	Each 2 10 10
021096		LOOP	rear frame, bare	Each 4 6 3
021097		LOOP	rear frame, bare	Each 5 17 1
021098		ROLT	for mudguard joint	Doz. 6 0
021099		WASHER	for mudguard joint bolt	Doz. 1 2 1/2
021104		CHAINGUARD	rear, bare	Each 1 5 7
021106		CHAINGUARD	rear, bare	Each 1 5 7
021116		WASHER	fork spring, seating, top	Doz. 3 7 1/2
021117		CAGE	for engine shaft sealing washer	Each 4 1/2
021136		WASHER	steel for horn mounting	Doz. 7 3
021137		BUSH	for horn mounting	Doz. 3 7 1/2
021138		SLEEVE	for horn mounting	Doz. 2 5
021140		PLATE	cover, front brake	Each 1 8 4
021144		EXPANDER	for brake shoes	Each 4 11
021146		PIN	fulcrum, for brake shoes	Each 1 15 6
021151		RIM	front, 21 in. by 2 1/2 in. chrome	Each 2
021152		SPOKE	front wheel, left or right	Each 2
021153		SPOKE	front wheel, left or right	Each 2
021154		NIPPLE	front wheel spokes, left or right	Each 2
021155		HUB	front wheel, shell only, with brake drum	Each 5 12 4
021158		DRUM	only, front brake. Must be fitted at Works	Each 7 7
021160		DISC	for front hub, right side	Each 1 3
021161		RING	adjusting, front wheel bearing	Each 1 8 1/2
021162		SCREW	fixing, brake drum in hub shell	Each 12 4 10
021163		TANK	petrol, bare, chrome and panelled	

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
021173		SPACER	tank fixing, rear	Each 4
021174		RUBBER	tank fixing, front	Each 1
021175		BOLT	tank fixing, front	Each 1
021180		CARBURETTER	complete, less controls. Type 76 AV-IED	Each 3 5
021181		CARBURETTER	complete, less controls. Type 89 N-IED	Each 3 16
021182		CARBURETTER	complete, less controls. Type 76 AT-IEF	Each 3 5
021184		CAP	end, for fork slider	Each 4
021185		GUIDE	for exhaust valve	Each 4
021192		PIPE	petrol connection, straight	Each 3
021193		PIPE	petrol connection, curved	Each 3
021194		PIPE	vent, metal for magneto	Each 3
021195		FERRULE	connection, for flexible pipes	Doz. 4
021198		SEAT	twin, bare, no fittings	Each 8 2
021208		BOLT	fixing, twin seat, at rear	Each 1
021214		CHANNEL	saddle support	Each 8
021217		SPACER	saddle support	Doz. 1
021219		GRUHMET	for twin seat base	Doz. 3
021220		SEAT	twin, bare, no fittings	Each 0 2
021224		STAY	mudguard, front	545 cc. spurs ... Each 13
021230		NUT	wide, for chaincase centre stud, inside case	Doz. 4
021231		RING	compression, plus .020 in. oversize, 66 m/m. plus .020 in. by 1/4 in.	Each 2
021232		RING	scraper, plus .020 in. oversize, 66 m/m. plus .020 in. by 1/4 in.	Each 3
021236		TANK	petrol, bare, enamelled and lined	Each 9 12
021241		PISTON	bare, plus .040 in. oversize, compression ratio 8 to 1	Each 1 1
021242		PISTON	complete, plus .040 in. oversize, compression ratio 8 to 1	Each 1 14
021245		FLYWHEEL	bare; timing side	Each 1 9
021246		FLYWHEEL	bare; timing side	Each 1 9
021247		AXLE	timing side flywheel	Each 1 0
021249		NUT	timing side flywheel axle	Each 1
021250		HEAD	cylinder, less valve guides	Each 7 7
021251		HEAD	cylinder, less valve guides	Each 7 19
021252		SPACER	for carburetter, 3/4 in. wide 1 1/2 in. bore	Each 2
021253		BOLT	fixing twin seat at rear	Each 1
021255		TUBE	outer, covering bottom end of main spring	Each 12
021256		EXTENSION	for fork slider, chrome	Each 10
021257		HANDLEBAR	only, bare	Each 1 4
021261		SPRING	for prop stand	Each 6
021262		ARM	rocker, valve end, inlet	Each 6
021263		ARM	rocker, valve end exhaust	Each 6
021265		SEAT	twin, bare, no fittings	Each 8 2
021279		NUT	lock for front hub bearing adjusting ring	Doz. 1
021280		SPRING	for damper valve	Doz. 2
021282		CAP	filter, for oil tank	Each 3
021283		PIPE	oil, feed	Each 8
021285		PIPE	oil, feed	Each 13
021287		PIPE	oil, feed	Each 8
021289		PIPE	oil, return	Each 4
021293		TUBE	fork cover, top, left, with lamp lug	Each 10
021294		TUBE	fork cover, top, right, with lamp lug	Each 10
021298		LEG	Teledraulic, rear, complete assembly	Each 7 5
021299		SCREW	fixing dipping switch to handlebar, 3/4 in. by 4 B.A.	Doz. 3
021301		SWITCH	dipping, for handlebar, as 31405 LUCAS	Each 6
021304		LAMP	head, type SSU 700 with bulbs, ammeter and switch	Each 1 12
021307		TANK	petrol, bare enamelled and lined	Each 9 4
021310		COVER	for dynamo terminals	Each 11
021325		PLATE	number, rear, 3/4 in. wide	Each 13
021326		PLATE	number, rear, 3/4 in. wide	Doz. 1
021329		WASHER	for oil tank filler cap	Each 7
021333		PLATE	number, rear, 3/4 in. wide	Each 7

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
021337		FLYWHEEL	bare, driving side	Each 1 9 8
021338		FLYWHEEL	bare, driving side	Each 1 9 8
021340		COVER	magneto chaincase	Each 1 9 8
021344		HEAD	cylinder, less valve guides	Each 7 0 11
021345		HEAD	cylinder, less valve guides	Each 7 10 0
021346		SPACER	for carburetter, 3/8 in. wide 1/2 in. bore	Each 2 11
021349		STUD	for lower end of saddle spring, 3 in. long	Doz. 3 7 1/2
021350		SHIELD	for magneto	Each 4 2
021351		MAGNETO	type SR.1	Each 4 2
021354		SPROCKET	and automatic advance unit with fixing bolt	error in 1954 list as 021352 Price on application
021355		HEAD	cylinder, with valve guides	Each 7 10 8
021356		HEAD	cylinder, with valve guides	Each 7 19 10
021357		HEAD	cylinder, with valve guides	Each 7 19 2
021358		HEAD	cylinder, with valve guides	Each 8 9 4
021359		CRANKCASE	complete, with bushes and studs	Each 7 1 0
021360		CRANKCASE	complete, with bushes and studs	Each 8 1 1
021361		CRANKCASE	driving side only, with studs	Each 2 3 9
021362		CRANKCASE	driving side only, with studs	Each 2 14 0
021363		CRANKCASE	driving side only, with studs	Each 4 18 0
021364		CRANKCASE	timing side only, with bushes and studs	Each 5 7 1
021365		CLIP	for rocker box stay	Each 9
021367		FORK	front, complete assembly	Each 19 11 2
021368		FORK	front, complete assembly	Each 19 14 2
021369		FORK	front, complete assembly	Each 20 16 6
021370		FORK	front, complete assembly	Each 22 13 10
021371		CROWN	assembly, comprises crown, stem and circlip	Each 2 4 5
021372		MUDGUARD	rear, bare, includes both halves and binding bolts	Each 2 5 2
021374		CHAINCASE	complete, front, with band, rubber and caps	Each 3 0 0
021375		CHAINCASE	complete, front, with band, rubber and caps	Each 3 2 3
021376		SADDLE	complete with rear springs	Each 2 3 9
021377		WHEEL	front complete with all fittings, chrome rim, black centre	Each 15 12 6
021378		WHEEL	front, complete with all fittings, chrome rim, red centre	Each 15 12 6
021379		WHEEL	front, complete with all fittings, chrome rim	Each 15 14 8
021380		WHEEL	front, bare, less all fittings, chrome rim, black centre	Each 7 17 4
021381		WHEEL	front, bare, less all fittings, chrome rim, red centre	Each 7 17 4
021382		WHEEL	front, bare, less all fittings, chrome rim	Each 7 17 4
021383		SCREW	fixing magneto chaincase cover, 2 in. by 2 B.A.	Each 7 19 6
021384		GASKETS	set of complete	Doz. 5 0
021385		GASKETS	set of complete	Each 9 3
021386		ADAPTOR	for petrol tap, long	Each 8 2
021387		ADAPTOR	for petrol tap, short	Each 1 4
021389		FLYWHEEL	bare, timing side	Each 1 0
021390		FLYWHEEL	bare, timing side	Each 1 9 8
021391		PISTON	bare, plus .040 in. oversize	Each 1 9 8
021392		PISTON	complete, plus .040 in. oversize	Each 1 10 6
021395		CRANKCASE	complete, with bushes and studs	Each 2 0 6
021397		CRANKCASE	driving side only with studs	Each 19 16 1
021398		CRANKCASE	timing side only, with bushes and studs	Each 6 4 2
021399		SLIDER	fork, with cap, studs and nuts	Each 10 8 10
021400		TUBE	inner, front fork assembly	Each 2 6 6
021401		TUBE	inner, front fork assembly	Each 3 5 10
021402		TUBE	inner, front fork assembly	Each 3 7 4
			inner, front fork assembly	Each 3 19 4

PART NUMBERS 00001 ONWARD IN NUMERICAL ORDER

New No.	Old No.	Description.	Remarks.	Price.
				£ s. d.
021404		CHAINCASE	complete front, with band, rubber and caps	Each 3 0 0
021405		CABLE	complete assembled with oil nipple, clutch	Each 6 7
021406		CASING	outer only, with adaptor for oil nipple, clutch	Each 2 7
021407		CABLE	complete assembled, throttle	Each 5 3
021408		CABLE	complete, assembled, throttle	Each 5 3
021409		CABLE	complete, assembled, throttle	Each 5 3
021444		BOLT	with extension, fixing rocker box to head	Each 1 10
021445		LEG	Teledraulic, rear, complete assembly	Each 6 14 8
021447		SPEEDOMETER	complete, trip, 120 m.p.h.	Each 5 0 0
021448		SPEEDOMETER	complete, trip, 120 m.p.h.	Each 5 0 0
021449		SPEEDOMETER	complete, trip, 180 k.p.h.	Each 5 0 0
021450		SPEEDOMETER	complete, trip, 180 k.p.h.	Each 5 0 0
021452		STAY	for exhaust pipe	Each 10
021456		HANDLEBAR	bare, (Western type)	Each 1 4 2
021481		BUSH	timing side flywheel axle	Each 10 10
021489		STAY	rear mudguard, front support	545 cc. sports Each 1 0 0
021492		BRACKET	for tool box, left	545 cc. sports Each 6 0
021501		MUDGUARD	front assembled	545 cc. sports Each 2 11 11
021510		NIPPLE	spoke front, .25 in. by 10 G.	Each 2
021525		CRANKSHAFT	plugged, but bare	Each 11 6 2
021526		RING	piston, scraper normal size	Each 2 9
021527		RING	piston, scraper, plus .020 in. oversize	Each 2 9
021528		CRANKCASE	complete, both halves with bushes, studs and centre web	545 cc. Each 6 4 2
021529		CRANKCASE	driving side only with studs	545 cc. Each 19 16 1
021530		PISTON	bare, plus .020 in. oversize	545 cc. Each 1 14 0
021531		PISTON	complete, normal size	545 cc. Each 2 8 11
021532		PISTON	complete, plus .020 in. oversize	545 cc. Each 2 8 11
021533		RING	piston, second, plus .020 in. oversize	545 cc. Each 2 0
021623		MUDGUARD	rear, bare	545 cc. Each 3 14 7
021625		SCREWDRIVER	for tool kit	replaces 017256-LTK 13 Each 1 0

PART NUMBER CONVERSION  
SECTION  
Old Part Numbers to New  
in  
NUMERICAL AND ALPHABETICAL  
ORDER

48

49

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price. £ s. d.
35 G3 CA	017506	CHAINCASE	front complete with band, rubber and cap ... ..	Each 3 8 8
35 G3 C1	017013	CHAINCASE	front, back half, bare ... ..	Each 1 4 8
35 2 C29	017142	SPACER	centre bolt inside chaincase ... ..	Doz. 4 10
35 G3 E29	017141	COVER	magneto chaincase (Matchless) ... ..	Each 12 10
35 G3 E32	017493	COVER	timing gear, with bushes (Matchless) ... ..	Each 1 14 4
35 G3 E56	017143	NUT	for magneto platform fixing bolt, right side ... ..	Each 1 5
35 G3 E124	010629	SPACER	collar, for engine sprocket ... ..	Each 1 5
35 G3 E275	017167	STRIP	dynamo locating ... ..	Each 1 5
35 G3 E277	017145	SLEEVE	threaded, eye for dynamo strap ... ..	Each 8 3
35 G3 E279	017168	CROSS BAR	square, dynamo clamping strap ... ..	Each 1 9
35 G3 F341	017147	BOLT	hinge, prop stand ... ..	Doz. 7 3
35 G3 F342	011130	STAND	prop. bare ... ..	replaced by 014398
35 G3 F345	010843	SPRING	prop stand return use 021261	replaces 014991
35 G3 T130	011003	CAP	for petrol tank or oil tank ... ..	Each 7 9
36 G3 B18	017075	SPRING	for rear brake rod ... ..	Doz. 4 10
36 8 B51	012891	EXPANDER	for brake shoes ... ..	Each 4 11
36 12 B51	017487	EXPANDER	for brake shoes ... ..	Each 4 11
36 8 C28	017094	BOLT	fixing chainguard to chaincase ... ..	Doz. 7 3
36 G8 E111	010637	RING	scraper, normal size ... ..	3 1/2 in. by 1/2 in. Each 3 4
036 G8 E111	013662	RING	scraper, plus .020 oversize ... ..	3 1/2 in. plus .020 in. by 1/2 in. Each 3 4
036 G8 E111	016448	RING	scraper, plus .040 oversize ... ..	3 1/2 in. plus .040 in. by 1/2 in. Each 3 4
36 G8C E167	011217	SPACER	for carburetter 3/8 in. thick ... ..	Each 2 11
36 G3 E181	017099	CARRIER	battery, rear portion only ... ..	Each 7 11
36 G3 E185	017102	CARRIER	battery complete, enamelled front ... ..	Each 12 4
36 G3 E185	017102	CARRIER	battery complete, chrome front ... ..	Each 18 11
36 G8 E384	011381	CONNECTION	rubber, for rocker feed pipe ... ..	Each 1 0
36 1 H51	017097	SPOKE	rear wheel, left or right, 8 1/2 in. by 6 G ... ..	20 for 12 0
37 G3 B1	017174	PEDAL	foot, rear brake ... ..	Each 14 10
37 G3 B2	017175	SPINDLE	rear brake pedal ... ..	Each 1 5
37 G3 B3	017176	BUSH	rear brake pedal ... ..	Each 1 0
37 G3C B5	017187	ROD	bare, rear brake ... ..	Each 2 3
37 8 B7	017178	BOLT	anchor, rear brake cover plate ... ..	Each 1 6
37 G3 B8	017177	SPRING	return, rear brake pedal ... ..	Each 1 0
37 8 E3	011045	WASHER	paper, cylinder base ... ..	Doz. 1 2 3/4
37 G8 E16	017400	LINER	for big end bearing ... ..	Each 8 11
37 G8 E18	010395	CAGE	for crankpin rollers ... ..	Each 14 10
37 G8 E20	017169	AXLE	driving side flywheel ... ..	Each 1 13 0
37 8 E30	017104	CRANKCASE	driving side only with studs ... ..	Each 4 6 6
37 G8 E44	017339	ROD	connecting, with liner and bush ... ..	7 1/2 in. centres Each 2 6 6
37 G3 E76	017190	PLATFORM	magneto, bare ... ..	Each 8 11
37 8 E78	017182	WASHER	paper, for timing gear cover ... ..	Doz. 3 7 1/2
37 G3C E167	010677	SPACER	for carburetter, 3/8 in. wide, 1 1/2 in. bore ... ..	Each 2 11
37 8 E291	010814	CLIP	for magneto shield ... ..	Each 1 0
37 12 E380B	017521	PIPE	rocker feed, bottom portion with nut ... ..	Each 6 0
37 12 E380T	017520	PIPE	rocker feed, top portion with nut ... ..	Each 4 1
37 12 E385	017180	NUT	union, bottom end rocker feed pipe ... ..	Each 1 11
37 8 F53	010690	SCREW	knurled, for tool box lid ... ..	Each 1 11
37 12 H17	010734	BOLT	retaining sprocket to rear hub ... ..	Doz. 4 10
37 X H51	011018	SPOKE	front, left, 5 1/2 in. by 8 G by 10 G ... ..	20 for 6 0
38 12 B30	017113	LEVER	for rear brake shoe expander ... ..	Each 3 0
38 G9 E3P	011191	PLATE	compression, cylinder barrel base ... ..	Each 3 5
38 G9 E4	010946	GASKET	cylinder head ... ..	Each 1 7 1/2
38 G9 E12	010955	PISTON	bare, normal size ... ..	compression ratio without plate 7 to 1 Each 1 9 9
038 G9 E12	017651	PISTON	bare, plus .020 oversize ... ..	Each 1 9 9
038 G9 E12	015266	PISTON	bare, plus .040 oversize ... ..	7 to 1 Each 1 9 9
38 G9 E12A	017657	PISTON	complete, normal size ... ..	7 to 1 Each 2 4 9
038 G9 E12A	017658	PISTON	complete, plus .020 oversize ... ..	7 to 1 Each 2 4 9
038 G9 E12A	015268	PISTON	complete, plus .040 oversize ... ..	7 to 1 Each 2 4 9

50

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price. £ s. d.
38 G4 E65	017128	FILLET	rubber, for rocker box side cover	3 7½
38 I2 E73	017304	WASHER	metal, for base of push rod cover tubes	Doz.
38 I2 E96	017341	SCREW	guide, oil pump plunger	3 7½
38 G3 E111	010635	RING	scraper, normal size	Each 1 0
038 G3 E111	016445	RING	scraper, plus .020 oversize	Each 2 8½
038 G3 E111	016446	RING	scraper, plus .040 oversize	Each 2 8½
38 G3 E140	017342	PIPE	oil feed, with union nuts	Each 2 8½
38 G3 E142	017132	PIPE	oil return, with union nuts	Each 6 11
38 G3 E204	017103	BUSH	for rocker box	Each 6 11
38 G3 E358	010643	SCREW	needle adjusting, inlet valve oil feed	Each 2 11
38 G4 E368	010672	GASKET	rubber, top of push rod cover tube	Each 8½
38 G4 E379	011087	WASHER	metal, for push rod cover tube rubber	Doz. 7 3
38 G3 E02	017114	INFLATOR	tyre	Doz. 4 10
38 G3 F44	017107	STAND	rear, bare	Each 9 0
38 G3 F60T	017523	COVER	for saddle	Each 1 18 7
38 I2 F71	010788	BOLT	fixing stand to fork end 1¼ in. by ¼ in. by 26 T.P.I.	Each 1 12 4
38 G3 F245	017131	SPRING	return, rear stand	Each 1 0
38 G3 F383	009189	TRANSFER	for rear mudguard (Matchless)	Each 2 0
38 G3 F385	009188	TRANSFER	for tool box (monogram) (Matchless)	Doz. 7 3
38 G3 F391	009184	TRANSFER	for top of oil tank (service instruction)	Doz. 4 10
38 G3 F392	009183	TRANSFER	for side of oil tank (oil level indicator)	Doz. 3 7½
38 G3 F393	009187	TRANSFER	for front chaincase (patent)	Doz. 3 7½
38 I2 H18	017112	WASHER	lock, rear wheel sprocket fixing bolt	Doz. 1 2½
38 I8T H51	017111	SPOKE	front wheel 9½ in. by 9 G by 11 G	Doz. 1 2½
38 G3 T4L	010906	GRIP	knee, left hand side (Matchless)	for 20 8 0
38 G3 T4R	010907	GRIP	knee, right hand side (Matchless)	Each 4 11
38 G3 T34L	010908	PLATE	knee grip, left hand side (Matchless)	Each 4 11
38 G3 T34R	010909	PLATE	knee grip, right hand side (Matchless)	Each 1 0
38 G3 T15A	011095	BOLT	fixing tank	Each 1 0
39 8 B71A	013620	SHOES	pair of, for front or rear brake with linings and pads	Each 1 0
39 12 B71A	017605	SHOES	pair of, for front or rear brake with linings and pads	per pair 1 4 7
39 8 B73	013291	PIN	thrust, for brake shoe adjusting	replaces 017328 per pair 18 5
39 12 B73	017606	PIN	thrust, for brake shoe adjusting	Each 11
39 I2 B74	017670	WASHER	for brake shoe adjusting pin 017606	Each 11
39 G9 C27	010953	SPACER	centre bolt, front chaincase, 1¼ in. long	Doz. 1 2½
39 18 E2	010939	HEAD	for cylinder, bare	Doz. 4 10
39 18 E2ASS	013645	HEAD	for cylinder, with valve guides	Each 6 8 9
39 8 E3	010927	WASHER	paper, for cylinder base	Each 6 18 7
39 G8 E17	017020	CRANKPIN	only	Doz. 1 2½
39 G9 E19	010935	FLYWHEEL	bare, driving side	Each 1 0 10
39 G9 E25	010936	FLYWHEEL	bare, timing side	Each 1 9 9
39 8 E30	010937	CRANKCASE	driving side only, with studs	Each 1 9 9
39 8 E61	010923	BOX	rocker, bare	replaced by 018860 Each 2 3 10
39 8 E61ASS	017498	BOX	rocker, assembled	Each 1 19 7
39 8 E61B	017499	BOX	rocker, with bushes only	Each 5 16 1
39 G9 E76	010966	PLATFORM	for magneto	Each 2 12 1
39 G9 E83E	010943	GUIDE	tappet, exhaust	Each 8 11
39 G9 E83I	010944	GUIDE	tappet, inlet	Each 7 11
39 G9 E84E	010949	TAPPET	exhaust, bare	Each 4 11
39 G9 E84I	010950	TAPPET	inlet, bare	Each 8 2
39 8 E89	010932	BOLT	fixing head to barrel	Each 6 5
39 G9 E113	010941	ROD	long, push bare, 8½ in. long	Each 1 7½

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price. £ s. d.
39 G9 E114	010942	ROD	long push, complete	Each 8
39 G8 E118	010653	WASHER	thrust, for crankpin	Each 1 1
39 I2 E148	017019	GUIDE	for valve, inlet or exhaust	Each 4 1
39 I6 E163	017029	TUBE	cover, for long push rod	Each 4 1
39 G9 E163	010952	TUBE	cover, for long push rod	Each 4 1
39 G3 E182	010852	CARRIER	battery, front portion only	use 012581 Each 2
39 8 E190	010646	CUP	for valve springs	Doz. 7
39 8 E191	010647	SLEEVE	spacing, exhaust valve spring cup	Doz. 4 1
39 G9 E275	010962	STRIP	dynamo, locating	Each 1
39 8 E279	010926	CROSS BAR	square, dynamo clamping strap	Each 2
39 G9 E279	010964	CROSS BAR	square, dynamo clamping strap	Each 3
39 G9 E282	010963	PIN	hinge, dynamo clamping strap	Doz. 7
39 8 E379	010967	WASHER	plain, top of cover tube gasket	Doz. 4 1
39 8 E440	017023	GASKET	for rocker box	Each 7
39 8 E451	017028	BOLT	fixing rocker box, long head	use 013602 Each 1
39 8 E452	017405	BOLT	fixing rocker box, short head	Each 1
39 8 E510	010934	BODY	for cylinder oil feed valve	Each 1
39 G3 E567	011232	STAY	for silencer	Each 2
39 G3 EQ13	011094	BUSH	rubber, for lamp wire	Doz. 4 1
39 G9 G59	010957	BOLT	gear box, top fixing, 5½ in. by ½ in. by 26 T.P.I.	Each 2
39 G9 G61	011086	SPACER	gear box, fixing bolts	Doz. 4 1
39 8 H54	011012	SPOKE	rear wheel, left and right, 8½ in. by 6 G by 9 G	for 20 8
39 I I	017270	CABLE	complete assembled, ignition	Each 7 1
39 G3 T15	011002	BOLT	fixing tank (hexagon head)	Each 1
40 G12M B7F	017522	BOLT	anchor, front brake cover plate	Each 2
40 G12M B60	017326	PLATE	cover, front brake, bare	Each 3
40 G12M B65	017327	LEVER	for front brake shoe expander	Each 6
40 G12M B100	017334	WASHER	locating, front brake cover plate	Doz. 7
40 G12M B115	017335	DRUM	front brake, bare	Each 1 1
40 G2M C1	017000	CHAINCASE	front half, bare	replaced by 016038 Each 1 1
40 G2M C6	017013	CHAINCASE	back half, bare	Each 1 4
40 G2M C10	017336	CHAINGUARD	rear, bare	Each 1 4
40 G2M C27	011053	SPACER	chaincase centre stud, 1¼ in. long	Doz. 4 1
40 G3 F66	017497	SPACER	for frame uniting bolt	Doz. 7
40 G3 F158	017017	STAY	for tool box	Each 1
40 G12M FF41	010700	BUSH	bakelite, guide, fork inner tube	Each 3
40 G12M FF56	010707	SLEEVE	plunger, fork damper tube	Doz. 7
40 18 FF57	010719	SEAT	for fork damper valve	Doz. 3
40 18 FF58	010720	VALVE	for fork damper	Doz. 7
40 18 FF59	010721	PIN	stop, for fork damper valve	Doz. 1
40 G12M FF60A	017359	TUBE	damper, front forks	Each 6
40 G2M FF65	012146	STUD	for handlebar clip	Doz. 4 1
40 G2M FF66	017016	HANDLEBAR	bare, chrome	Each 1 11
40 G12M FF78	010696	BRACKET	for speedometer head	Each 1
40 G12M FF80	010706	WASHER	fibre, damper tube bolt	Doz. 1
40 G12M FF91	010718	OIL SEAL	for fork inner tube	Each 6
40 G12M FF92	010715	CIRCLIP	for fork crown stem	Doz. 1
40 G12M FF93	010714	CIRCLIP	retaining damper rod sleeve	Doz. 1
40 G12M FF94	010697	BOLT	fixing damper tube to slider	Each 1
40 G12M FF95	010699	WASHER	paper, for inner tube oil seal	Doz. 1
40 G12M FF97A	017008	PLATE	anchor top, for steering damper	Each 1
40 G12M FF126	010698	SLEEVE	for steering damper draw bolt	Each 6 1
40 G12M FF127	010702	PLATE	leather, fork spring seating	Doz. 3
40 G12M FF128	010701	PLATE	plain, locating bottom cover tube	Doz. 3
40 G12M FF129	010716	SCREW	threaded, locating top cover tube	Doz. 7
40 G12M FF183C	013589	CAP	retaining both locating plates	Doz. 3
40 G12M FF183L	017361	SLIDER	for fork slider, left or right	Each 4 1
40 G12M FF183R	017362	SLIDER	for fork slider, with cap and studs	Each 2 9
40 G12M FF185A	010711	EXTENSION	for fork slider, with cap and studs	Each 2 3
40 G12M FF186	010703	CAP	for fork top cover tube	use 018161 or Each 8
40 G12M FF189	010717	BOLT	top, fork inner tube	Each 1
40 G12M FF190	010709	WASHER	pin, fork inner tube top bolt	use 016718 Each 2
40 G12M FF191	010692	BUSH	steel, bottom, fork inner tube	Doz. 4 1



PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price.
				£ s. d.
40 G12M FF192	010710	CIRCLIP	for inner tube bottom bush	Doz. 1 3 2
40 G12M FF195	010713	STUD	securing fork slider end cap	Doz. 1 10
40 G2M FR8	017015	ROD	footrest, bare	Each 2 4
40 G12M H10	012825	SPINDLE	with roller	Each 2 2 7
40 G2M H19	017365	HUB	front wheel bearings, front wheel	Each 2 19 5
40 G12M H46	017486	NUT	securing front cover plate	Each 1 5
40 G12M H47	017003	NUT	locating, front cover plate	Doz. 7 3
40 G2M T45	017552	TANK	oil, bare	Each 2 5 0
40 G3 TK29	017009	LEVER	tyre	Each 1 3
41 A 1	017263	CABLE	complete assembled, air	Each 3 3
41 B 2	017517	CABLE	complete assembled, front brake	Each 6 4
41 G3 B15	017321	SPROCKET	and brake drum, rear wheel, 42 teeth	Each 2 1 6
41 G3L B20	017323	PLATE	cover, rear brake, bare	Each 1 5 8
41 G3L B54	017324	SPACER	rear solid spindle (fits in fork end)	Each 8 1/2
41 12 B71A	017328	SHOES	pair of, front or rear brake, with linings and collars	use 017605
41 B 873	017329	COLLAR	thrust, brake expander adjusting	Each 2 0
41 C 2	017261	CABLE	complete, assembled, clutch	Each 9 2
41 G3L E1	011052	BARREL	cylinder	Each 3 19 2
41 G3L E2	011053	HEAD	cylinder, bare	Each 5 18 10
41 G3L E2ASS	017603	HEAD	cylinder, with valve guides	Each 6 8 8
41 G3L E19	017076	PLATE	compression, for cylinder base	Each 3 5
41 G3L E25	017085	FLYWHEEL	bare, driving side	Each 1 7 8
41 G3L E27	017084	FLYWHEEL	bare, timing side	Each 1 4 8
41 G3L E29	017377	BUSH	timing side flywheel axle	Each 4 11
41 G3L E31	017141	COVER	magneto chain case	Each 12 10
41 G3L E85	017074	CRANKCASE	timing side, with bushes and studs	Each 4 15 1
41 G3L E89	017075	BOLT	side, for rocker box	Each 6 11
41 G3L E108	017343	CRANKCASE	securing head to barrel, short	Each 1 7 1/2
41 G3L E167	010676	SPACER	complete, with bushes and studs for carburettor, 2 in. wide, 1 in. bore	Each 9 3 3
41 G3L E250L	017091	PLATE	engine, rear, left side	Each 2 11
41 G3L E250R	017090	PLATE	engine, rear, right side	Each 11 10
41 G3L E280	017030	BOLT	tightening dynamo strap	Each 11 10
41 G3L E404	017345	PIPE	exhaust, bare	Each 1 5
41 G3L E406	017041	STAY	for exhaust pipe	Each 2 0 7
41 G3L E461	011099	SILENCER	bare	Each 1 11
41 G3L E541	017346	SLEEVE	for timing side roller bearing	Each 1 10 7
41 G3L E550	010895	PLATE	engine, front	Each 5 11
41 G3L E567	017042	STAY	for silencer	Each 5 11
41 G3L EQ7ASS		PANNIERS	complete assembly	Each 1 11
41 G3L EQ7L		BAG	pannier, only with plain strap	now obsolete
41 G3L EQ7R		BAG	pannier only with slide strap	" "
41 G3L EQ7SL		STRAP	for pannier bag long plain	" "
41 G3L EQ7SS		STRAP	for pannier bag, short with buckle	" "
41 G3L EQ26		FRAME	for pannier bags	" "
41 G3L EQ40	017456	CARRIER	rear, bare	Each 1 6 8
41 G3L F23	017348	FRAME	front portion only, bare	Each 6 8 9
41 G3L F24	017349	FRAME	rear portion only, bare	Each 6 4 8
41 G3L F32	017031	BOLT	rear chain adjusting	Each 1 5
41 G3L F62		BRACKET	for saddle spring	Each 1 0
41 G3L F250L	017352	BRACKET	for pannier frames, left side	now obsolete
41 G3L F250R	017353	BRACKET	for pannier frames, right side	" "
41 G3L F300LP	017390	STAY	for rear mudguard, left side	Each 19 1
41 G3L F300RP	017391	STAY	for rear mudguard, right side	Each 19 1
41 G3L F311	011392	CLIP	for speedometer drive cable	Doz. 3 7 1/2
41 G3L F423	017403	STAY	for pannier frames	now obsolete
41 G3L FF3	017355	TUBE	front fork inner	Each 1 12 7
41 18 FF20	010771	STEM	only for crown	not sold separately as spares
41 G3L FF21C	017424	CLIP	half only, for handlebar	Each 2 5
41 G3L FF32	017127	SPRING	main, front fork	Each 7 10
41 G3L FF55	017357	ROD	fork damper	Each 1 11
41 G3L FF73L	017045	STAY	headlamp, top, left	Each 1 0
41 G3L FF73R	017046	STAY	headlamp, top, right	Each 1 0

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price.
				£ s. d.
41 G3L FF74L	017043	STAY	headlamp, bottom, left	Each 1 0
41 G3L FF74R	017044	STAY	headlamp, bottom, right	Each 1 0
41 G3L FF184B	017036	TUBE	fork cover, bottom	Each 3 11
41 G3L FF184T	017075	TUBE	fork, cover, top	Each 3 5
41 G3L FF201	017519	INNER TUBE	assembly, front fork	Each 3 12 8
41 G3L FF202	017551	TUBE	damper assembly, front fork	Each 10 1
41 G3L FF421	010693	BOLT	fixing front stand to slider, 1 1/2 in. by 1/2 in. by 22 T.P.I.	Each 1 0
41 G3L FF422	010694	BOLT	fixing front stand to slider, 1 1/2 in. by 1/2 in. by 22 T.P.I.	Each 1 0
41 G3L FR22	017425	ARM	footrest, bare	Each 14 10
41 G3L FR25	017037	CAP	for footrest arm	Each 10
41 G3L H2	017039	HUB	bare, rear wheel shell only	Each 2 14 8
41 G3L H4A	017062	SPINDLE	centre solid, rear wheel	Each 4 11
41 G3L H20	017382	RIM	front, 19 in. by 2 1/2 in. (black)	use 018244 as alternative
41 G3L H21	017383	RIM	rear, 19 in. by 2 1/2 in. (black)	use 018245 as alternative
41 G3L H26S	017038	SPACER	rear solid spindle (for speedometer gear box)	Doz. 4 10
41 G3L H31	011021	WHEEL	rear, bare, black rim	Each 4 4 10
41 G3L H31A	017586	WHEEL	rear, complete, black rim	Each 7 13 3
41 G3L H45	011020	WHEEL	front, bare, less all fittings	Each 5 7 4
41 G3L H45A	017549	WHEEL	front, complete with all fittings	Each 9 11 6
41 G3L H51	011015	SPOKE	front wheel short, brake side, 5 1/2 in. by 8 G by 10 G	for 20 6 0
41 G3L H106	017516	SPACER	rear solid spindle (next to cover plate)	Doz. 4 10
41 G3L H132	017060	BOLT	Security, tyre 19 in. by 2 1/2 in. rim	Each 4 10
41 G3L H138	010795	BOLT	fixing mudguard bridge to slider, 1/2 in. by 1/2 in. by 22 T.P.I.	Doz. 4 10
41 G3L T54	017081	PIPE	petrol feed, with union nuts	Each 10 11
41 G3L T93	017050	TAP	petrol feed	Each 5 11
41 G3L T97	017051	WIRE	copper, 5 ft. by 30 S.W.G.	Doz. 3 7 1/2
41 G3L TK1	017052	SPANNER	double end, 1/2 in. by 1/2 in.	Each 2 11
41 G3L TK2	017053	SPANNER	double end, 1/2 in. by 3/4 in.	Each 4 5
41 T 2	017262	CABLE	complete, assembled, throttle	Each 6 4
41 V 2	017078	CABLE	complete, assembled, valve lifter	Each 6 11
42 G3L E132	010837	CAMSHAFT	assembly, with shaft	Each 1 6 5
42 G3L F60B		SPRING	for saddle, rear	Each 2 11
42 G3L FF1	017532	FORK	front, complete assembly	Each 18 9 7
42 G3L FF17	017136	CROWN	front fork	not sold separate as spares
42 G3L FF17A	017460	CROWN	and stem assembled (comprising crown, stem and circlip)	Each 2 8 10
42 G3L FF21	017356	LUG	for handlebar and steering head	Each 1 10 7
42 G3L M30	011221	STAY	for front mudguard	Each 1 4
42 G3L TS7T	011051	TRANSFERS	petrol tank (monogram)	Each 1 0
45 A 1	017218	CABLE	complete assembled, air	Each 3 3
45 EQ 1	017659	GASKETS	complete set of	Each 8 2
45 EQ 2	017660	GASKETS	complete set of	Each 9 2
45 EQ 3	017661	GASKETS	decarbonizing set of	Each 4 0
45 EQ 4	017662	GASKETS	decarbonizing set of	Each 5 0
45 G3L FF20D	017421	PLATE	anchor for steering damper	Each 6 5
45 T 1	017274	CABLE	complete assembled, ignition	Each 5 3
45 T 2	017276	CABLE	complete, assembled throttle	Each 6 4
48 EQ 1	017663	GASKETS	complete set of	Each 8 2
48 EQ 3	017664	GASKETS	decarbonizing set of	Each 4 0
49 EQ 1	017665	GASKETS	complete set of	Each 9 10
49 EQ 2	017666	GASKETS	complete set of	Each 9 11
49 EQ 3	017667	GASKETS	decarbonizing set of	Each 5 5
49 EQ 4	017668	GASKETS	decarbonizing set of	Each 5 6
3263	017257	SPANNER	double end, 1/2 in. by .375 in.	Each 1 7 1/2
3836-2	010440	LININGS	brake, per pair of, less rivets	Each 4 10
3836-3	010441	LININGS	brake, per pair of, less rivets	Each 4 5

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price.
				£ s. d.
4178	017553	SPACER	thick, oil tank bracket bolt	Doz. 7 3
4178-S	017554	SPACER	thin, oil tank bracket bolt	Doz. 7 3
4260	017148	TUBE	baffle, for exhaust pipe	Each 5 2
4513	010925	ARM	footrest, bare	Each 9 0
11024	011188	PLIERS	for gudgeon pin circlips	Each 1 11
11520A	017482	TOOL	valve grinding	Each 1 11
11751	017123	ADJUSTER	exhaust lifter cable	Each 2 11
11772	017227	CLIP	adjusting, rear end of brake rod	Each 1 14 7
11905	012837	SPINDLE	hollow, with bearings, rear wheel	replaced in late models by 010579
11909	017279	WASHER	felt, for hub bearing	Doz. 3 7 1/2
11910	017219	RING	spring, locating bearing in shell	Doz. 3 7 1/2
11911	017220	CUP	for hub bearing, felt washer	Doz. 4 10
11912	017221	RING	spacing, for hub bearing felt, washer	Doz. 7 3
11913	017222	RING	retaining felt washer	Doz. 3 7 1/2
11914	017223	NUT	lock, hub bearing, adjusting ring...	Each 2 5 1/2
11914-S	017250	SPANNER	hook, for hub bearing lock nut	Each 1 4
11915	017224	RING	adjusting, for hub bearing	Each 2 11
12221	017231	NUT	for rear wheel spindle, right side	Each 1 0
12268	017105	GASKET	metal for chaincase	Each 9 11
12302-7	017199	BAND	rubber, for chaincase	Each 1 7 1/2
12302-9	017200	BAND	rear wheel spoke, left or right,	replaced by 016294
12344	011013	NIPPLE	-250 in. by 9 G	for 20
12399	011014	SPOKE	front, right side, 8 1/2 in. by 9 G	by 11 G ... for 20
12403	017278	STAND	front, bare	Each 6 0
16315	010847	PAD	rubber, for footrest arm	Each 1 10
16363	017217	NUT	lock, front brake cable adjuster	Doz. 7 3
16365	017555	ADJUSTER	for front brake cable	Each 1 11
16413	011000	PAD	rubber, thick, for tank fixing bolt	Doz. 3 7 1/2
16414	011001	ADJUSTER	rubber, thin, for tank fixing bolt	Doz. 3 7 1/2
16482	017049	END	yoke, front brake cable	Each 4 10
16485	012892	SPRING	for brake shoes	Doz. 4 10
16866	010628	WASHER	spacing, between bearings (SKEFKO)	Doz. 3 7 1/2
16889A	017194	SPACER	washer between bearings	Each 4 11
17350-1	014457	CAP	chaincase inspection	Each 2 7 1/2
17520	017253	BAG	for tools	Each 4 11
17520-1-ASS	017580	TOOL KIT	complete, with tyre inflator	Each 2 15 7
17520-ASS	017581	TOOL KIT	complete, less tyre inflator	Each 2 6 7
17634	017552	SPANNER	box with tommy for sparking plug	Each 1 11
17634-T		BAR	tommy, for sparking plug spanner	Doz. 4 10
20408	017488	SPRING	for brake shoes	Doz. 3 7 1/2
20508		SPRING	for brake shoes	error in spares list, should be 20408
20470	017152	CLIP	fixing silencer to exhaust pipe	Doz. 3 7 1/2
20493-1	017148	TUBE	baffle, for exhaust pipe	Each 1 11
20678	011016	NIPPLE	front, right, .225 in. by 11 G	Each 5 2
20680	011017	NIPPLE	front, left, .225 in. by 11 G	for 20
20815-15	017303	SPROCKET	engine, bare, 15 teeth	Doz. 2 0
20815-16	017079	SPROCKET	engine, bare, 16 teeth	OBS. use 014015 Each 1 9 2
20815-17	017304	SPROCKET	engine, bare, 17 teeth	OBS. use 014016 Each 1 9 2
20815-18	011042	SPROCKET	engine, bare, 18 teeth	OBS. use 014017 Each 1 9 2
20815-19	017305	SPROCKET	engine, bare, 19 teeth	OBS. use 014018 Each 1 9 2
20815-20	017306	SPROCKET	engine, bare, 20 teeth	OBS. use 014019 Each 1 9 10
20815-21	010956	SPROCKET	engine, bare, 21 teeth	OBS. use 014020 Each 1 9 10
20817-1	017000	CHAINCASE	front half, bare	OBS. use 014021 Each 1 9 10
20818	017027	ROD	long, push, bare, 8 1/2 in. long	Each 1 11 7
20818-1	017058	ROD	long, push, complete	Each 2 4
20841	017022	SPACER	chaincase centre fixing bolt	Each 8 4
20841-L	010940	SPACER	chaincase centre fixing bolt	Doz. 4 10
20874	017291	ADJUSTER	for clutch cable	error in spares list (never used) use 014225

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price.
				£ s. d.
AT 30C	013685	WASHER	only, for petrol and oil tank filler caps	Doz. 4 10
AE 177	010851	NUT	battery carrier clamping bolt	Each 8 1/2
AE 178	012291	SEAT	battery carrier clamping bolt	Doz. 4 10
AE 180	012798	BOLT	clamping battery carrier halves	Doz. 7 3
CE 211	010644	SPRING	valve, inner	free length 1 1/2 in. Each 1 0
CE 212	010645	SPRING	valve, outer	free length 2 1/2 in. Each 1 11
CFR 6	010924	SPACER	for footrest rod, 3 1/2 in. long	Each 1 4
CF 147	017198	SPACER	magneto platform fixing bolt	Each 10
DE 181-8	017026	STAY	fixing battery carrier to chalguard	Each 1 0
D3 E311	010634	RING	compression, normal size	2 3/4 in. by 1/2 in. Each 1 10
0/D3 E311	016443	RING	compression, plus -020 oversize	2 3/4 in. plus .020 in. by 1/2 in. Each 1 10
0/D3 E311	016444	RING	compression, plus -040 oversize	2 3/4 in. plus .040 in. by 1/2 in. Each 1 10
D3 E312	017642	PISTON	bare, normal size	compression ratio without plate 6-5 to 1 Each 1 3 8
0/D3 E312	017653	PISTON	bare, plus -020 oversize	" " 6-5 to 1 Each 1 3 8
0/D3 E312A	017652	PISTON	complete, normal size	" " 6-5 to 1 Each 1 15 1
0/D3 E312A	017654	PISTON	complete, plus -020 oversize	" " 6-5 to 1 Each 1 15 1
0/D3 E312A	017656	PISTON	complete, plus -040 oversize	" " 6-5 to 1 Each 1 15 1
D8 E611	010650	PIN	gudgeon	Each 5 11
D5 E611	010636	RING	compression, normal size	3 1/2 in. by 1/2 in. Each 2 1 1/2
0/D5 E611	013661	RING	compression, plus -020 oversize	3 1/2 in. plus .020 in. by 1/2 in. Each 2 1 1/2
0/D5 E611	016447	RING	compression, plus -040 oversize	3 1/2 in. plus .040 in. by 1/2 in. Each 2 1 1/2
D8 E614	010650	PIN	gudgeon	Each 6 4
D5 E1865	012722	RING	felt for rocker axle	Doz. 3 7 1/2
D8 E2861	017288	LEVER	with spindle, exhaust lifter	Each 10 2
D8 E2862	017289	CROSSHEAD	for valve lifter cable	Each 1 5
D8 E2931	010836	CAMSHAFT	with shaft, assembled	Each 1 3 1
FE 57	017192	AXLE	for rockers	Each 6 11
FE 58	017292	SLEEVE	for rocker axle	Each 5 11
FE 59	017115	ARM	rocker, valve end, inlet or exhaust	Each 4 11
FE 60	017216	ARM	rocker, tappet end, inlet or exhaust	Each 4 5
FE 76	017197	STRAP	clamping, dynamo	Each 2 11
HBD 52	010724	WASHER	double spring, 1/2 in.	Doz. 3 7 1/2
L3 E89	017317	BUSH	for gudgeon pin	Each 5 2
L4 FF46	010712	NUT	lock (domed), for crown and stem	Each 3 5
L4 M133	017505	SPACER	for engine plate extension	Each 8 1/2
LTK 5	017251	SPANNER	double end, for contact points	Each 8 1/2
LTK 12	017249	WRENCH	adjustable	Each 10 10
LTK 13	017256	SCREWDRIVER	replaced by 021625 at 1/-	Each 3 4
LTK 15	017248	PLIERS	sidecutting	Each 4 7
LTK 20	017246	GUN	grease	Each 7 4
RC 28	017318	SPACER	for tool box seat stay bolt	Doz. 4 10
R4 E1028	017195	PINION	timing, on flywheel axle	Each 9 1
R 137	017023	BEARING	for timing side axle	now obsolete, use new type bush 017489
RLS 8	017191	BEARING	ball, for driving side axle	Each 17 2
RTK 1	017254	SPANNER	single end, dynamo chain adjustment	Each 1 0
RTK 3	017255	SPANNER	triple end, .80 in. by 1-011 in. by 1-2 in.	Each 1 11
STD 1	000001	NUT	1/2 in. by 26 T.P.I.	Doz. 4 10
STD 2	000002	NUT	3/8 in. " " "	Doz. 3 7 1/2
STD 3	000003	NUT	1/2 in. " " "	Doz. 3 7 1/2
STD 4	000004	NUT	3/8 in. " " "	Doz. 3 7 1/2
STD 5	000005	NUT	1/2 in. " " "	Doz. 3 7 1/2

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price.
STD 6	000006	PIN	split 1/2 in. by 3/8 in.	Doz. 1 2/3
STD 8	000008	WASHER	1/2 in. hole	Doz. 1 2/3
STD 9	000009	WASHER	7/8 in. "	Doz. 1 2/3
STD 10	000010	WASHER	1 in. "	Doz. 1 2/3
STD 11	000011	WASHER	1 1/8 in. "	Doz. 1 2/3
STD 12	000012	WASHER	1 1/4 in. "	Doz. 1 2/3
STD 14	000014	PIN	split 3/4 in. by 1/2 in.	Doz. 1 2/3
STD 15	000015	SCREW	3/8 in. by 3 B.A.	Doz. 1 2/3
STD 21	000021	BALL	1/2 in. diameter	Doz. 1 2/3
STD 24	000024	NUT	1 B.A.	Doz. 1 2/3
STD 39	000025	WASHER	1 B.A., plain	Doz. 1 2/3
STD 40	000039	WASHER	1/2 in. hole	Doz. 1 2/3
STD 40	000040	SCREW	1/2 in. by 1 B.A.	Doz. 1 2/3
STD 44	000044	SCREW	1/2 in. by 1 B.A.	Doz. 1 2/3
STD 51	000051	NIPPLE	1/2 in. by 1 B.A.	Doz. 3 7/8
STD 54	000054	NIPPLE	grease 1/2 in. by 26 T.P.I. (straight)	Doz. 6 0
STD 70	000070	BOLT	grease 1/2 in. by 26 T.P.I. (elbow)	Each 1 5
STD 71	000071	NUT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 72	000072	BALL	1/2 in. diameter (steering head), per set of 56	Doz. 4 10
STD 73	000073	NUT	plain, thin 3/4 in. by 26 T.P.I.	Doz. 1 11
STD 74	000074	NUT	plain, thin 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 75	000075	ROLLER	1/2 in. by 1/2 in.	Doz. 3 7/8
STD 075	017494	ROLLER	1/2 in. by 251 in. oversize	Doz. 3 7/8
STD 79	000079	NUT	3 B.A., plain	Doz. 3 7/8
STD 80	000080	NUT	plain 2 B.A.	Doz. 1 2/3
STD 105	000105	RIVET	1/2 in. by 1/2 in.	per set of 16 Doz. 5 3
STD 113	000113	RIVET	1/2 in. by 1/2 in.	per set of 12 Doz. 5 3
STD 140	000140	SCREW	1/2 in. by 1 B.A.	Doz. 3 7/8
STD 149	000149	SCREW	3 B.A. by 3/8 in.	Doz. 1 2/3
STD 150	000150	SCREW	1/2 in. by 3 B.A. bright head	Doz. 2 5
STD 151	000151	SCREW	1/2 in. by 3 B.A. black head	Doz. 2 5
STD 152	000152	SCREW	1/2 in. by 3 B.A. bronze head	Doz. 2 5
STD 153	000153	SCREW	1/2 in. by 3 B.A. chrome head	Doz. 2 5
STD 162	000162	WASHER	1/2 in. pip	Doz. 3 7/8
STD 164	000164	WASHER	lock, dynamo sprocket nut	Doz. 3 7/8
STD 165	000165	WASHER	lock, chaincase bolt	Doz. 1 2/3
STD 172	000172	WASHER	1/2 in. hole	Doz. 2 5
STD 173	000173	WASHER	1/2 in. "	Doz. 3 7/8
STD 174	000174	WASHER	1/2 in. "	Doz. 3 7/8
STD 178	000178	WASHER	1/2 in. hole, for brake rod adjustment	Doz. 1 2/3
STD 183	000183	WASHER	fibre, 1/2 gas	Doz. 1 2/3
STD 185	000185	WASHER	3 B.A.	Doz. 3 7/8
STD 189	000189	WASHER	1/2 in. double spring	Doz. 1 2/3
STD 190	000190	WASHER	1/2 in. single spring	Doz. 1 2/3
STD 191	000191	WASHER	1/2 in. single spring	Doz. 1 2/3
STD 192	000192	WASHER	1/2 in. single spring	Doz. 1 2/3
STD 193	000193	WASHER	1/2 in. single spring	Doz. 2 5
STD 194	000194	WASHER	1/2 in. single spring	Doz. 2 5
STD 195	000195	WASHER	1/2 in. double spring	Doz. 4 10
STD 200	000200	WASHER	1/2 in. (fibre)	Doz. 3 7/8
STD 201	000201	WASHER	1/2 in. (fibre)	Doz. 3 7/8
STD 202	000202	WASHER	1/2 in. (oakenstrang)	Doz. 2 5
STD 203	000203	WASHER	1/2 in. (fibre)	Doz. 1 2/3
STD 205	000205	WASHER	2 B.A. (fibre)	Doz. 1 2/3
STD 211	000211	NUT	spigot, 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 213	000213	NUT	spigot, 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 214	000214	NUT	1/2 in. by 22 B.S.F.	Doz. 4 10
STD 215	000215	NUT	spherical 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 216	000216	NUT	hardened 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 217	000217	NUT	double hexagon 1/2 in. by 26 T.P.I.	Each 8 1/2
STD 220	000220	NUT	plain thin 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 221	000221	NUT	plain 1/2 in. by 26 T.P.I., left hand retaining timing thread	Doz. 4 10
STD 230	000230	NUT	plain, 1/2 in. by 20 T.P.I.	Each 8 1/2
STD 233	000233	NUT	plain 1/2 in. by 20 T.P.I.	Each 1 7/8

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price.
STD 234	000234	NUT	plain, 1/2 in. by 20 T.P.I.	Each 1 6
STD 236	000236	NUT	1 in. by 26 T.P.I.	Each 1 10
STD 250	000250	STUD	1 1/2 in. by 2 B.A.	Doz. 3 7/8
STD 251	000251	STUD	1 1/2 in. by 2 B.A.	Doz. 7 3
STD 261	000261	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 270	000270	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 271	000271	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 272	000272	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 273	000273	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 274	000274	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 275	000275	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 277	000277	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 278	000278	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 280	000280	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 290	000290	NUT	plain small hexagon, 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 291	000291	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 300	000300	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 302	000302	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 303	000303	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 304	000304	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 312	000312	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Each 1 0
STD 313	000313	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Each 1 0
STD 315	000315	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Each 1 5
STD 316	000316	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Each 1 5
STD 318	000318	STUD	1 1/2 in. by 1/2 in. by 26 T.P.I.	Each 1 0
STD 340	000340	BOLT	1/2 in. by 1/2 in. by VWHIT.	Doz. 3 7/8
STD 341	000341	BOLT	1/2 in. by 1/2 in. by VWHIT.	Doz. 3 7/8
STD 342	000342	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 343	000343	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 344	000344	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 345	000345	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 346	000346	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 347	000347	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 348	000348	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 350	000350	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 361	000361	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 362	000362	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 363	000363	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 364	000364	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 365	000365	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 366	000366	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 368	000368	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 369	000369	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 370	000370	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 4 10
STD 372	000372	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 376	000376	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Each 11
STD 402	000402	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 403	000403	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 407	000407	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 410	000410	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Each 11
STD 413	000413	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 414	000414	BOLT	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 7 3
STD 440	000440	BOLT	1/2 in. by 0 B.A.	Doz. 2 5
STD 450	000450	SCREW	1/2 in. by 2 B.A. round head	Doz. 3 7/8
STD 451	000451	SCREW	1/2 in. by 2 B.A.	Doz. 3 7/8
STD 452	000452	SCREW	1/2 in. by 2 B.A.	Doz. 3 7/8
STD 453	000453	SCREW	1/2 in. by 2 B.A.	Doz. 3 7/8
STD 455	000455	SCREW	1/2 in. by 2 B.A.	Doz. 3 7/8
STD 482	000482	SCREW	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 484	000484	SCREW	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 3 7/8
STD 485	000485	SCREW	1/2 in. by 1/2 in. by 26 T.P.I.	Doz. 1 2/3
STD 508	000508	UNION	1 in. by B.S.P.	Doz. 7 3
STD 510	000510	UNION	1 in. by B.S.P. with gauze fitted	Each 2 7/8
STD 513	000513	NUT	union for petrol pipe	Doz. 6 0
STD 524	000524	CLIP	cable, rubber 4 1/2 in. long	Doz. 2 5
STD 525	000525	CLIP	cable, metal	Doz. 2 5

This scan is explicit for non-commercial use and is not intended for financial or material gain by anyone

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price. £ s.
STD 526	000526	CASING	outer No. 11 ... .. sold in cut lengths see Cable Section	—
STD 527	000527	WIRE	inner No. 11 ... ..	—
STD 528	000528	FERRULES	for No. 11 casing ... .. Doz.	1 2½
STD 529	000529	CASING	outer No. 12 ... .. sold in cut lengths see Cable Section	—
STD 530	000530	WIRE	inner No. 12 ... ..	—
STD 531	000531	FERRULES	for No. 12 casing ... .. Doz.	1 2½
STD 535	000535	WIRE	inner for throttle cables ... .. sold in cut lengths see cable Section	—
STD 540	000540	TERMINAL	for 5 m/m. cable ... .. Doz.	2 5
STD 541	000541	TERMINAL	for 7 m/m. cable ... .. Doz.	3 7½
STD 542	000542	CABLE	5 m/m. low tension ... .. 6 ft. for	1 6
STD 543	000543	CABLE	7 m/m. high tension ... .. per ft.	1 0
STD 570	000570	KEY	for crankshaft ... .. Doz.	4 10
STD 572	000572	KEY	No. 3 woodruff ... .. Doz.	3 7½
STD 573	000573	KEY	No. 6 woodruff ... .. use 015330	4 10
STD 575	000575	PLUG	drain, crankcase ... .. Doz.	7 3
STD 576	000576	PLUG	for cylinder oil feed valve ... .. Doz.	4 10
STD 577	000577	PIN	dowel ... .. Doz.	1 2½
STD 580	000580	WASHER	cork, inspection cap ... .. Doz.	3 7½
STD 581	000581	WASHER	paper, carburettor ... .. Doz.	3 7½
STD 582	000582	WASHER	paper, pump end cap ... .. Doz.	1 2½
STD 583	000583	WASHER	cork, oil filter cap ... .. Doz.	3 7½
STD 581	000591	BOLT	pump end cap ... .. Doz.	3 7½
STD 592	000592	SCREW	tappet, adjusting ... .. Each	1 11
STD 593	000593	SCREW	inspection cap ... .. Each	1 11
STD 594	000594	BOLT	front chain and gear box adjustment ... .. Each	1 6
STD 597	000597	STUD	for seat lug ... .. Each	1 0
STD 599	000599	PLUG	drain, oil tank ... .. replaced by 012019	Doz. 4 10
STD 610	000610	NUT	engine shock absorber ... .. Each	1 0
STD 611	000611	NUT	for dynamo sprocket ... .. Each	1 0
STD 615	000615	NUT	knurled, rear brake rod ... .. Each	3 5
STD 622	000622	NUT	lock, cable adjuster ... .. Doz.	3 7½
STD 623	000623	NUT	knurled, rocker box side cover stud ... .. Each	8½
STD 632	000632	COLLAR	gear box fixing stud ... .. Doz.	4 10
STD 633	000633	COLLAR	chain, adjuster bolt ... .. Doz.	3 7½
STD 638	000638	COLLAR	for exhaust tappet ... .. Each	1 11
STD 639	000639	COLLAR	for steering damper anchor bolt ... .. Doz.	3 7½
STD 650	000650	BUSH	timing side flywheel axle ... .. interchangeable with 015780	Each 7 10
STD 651	000651	BUSH	for camshaft in crankcase, short ... .. Each	3 5
STD 652	000652	BUSH	for camshaft in cover, long ... .. Each	3 5
STD 661	000661	GUIDE	for tappet, inlet ... .. Each	4 11
STD 662	000662	GUIDE	for tappet, exhaust ... .. Each	7 11
STD 670	000670	TAPPET	inlet ... .. same as 017316	Each 6 5
STD 671	000671	TAPPET	exhaust ... .. same as 017024	Each 8 2
STD 676	000676	VALVE	Inlet 350 cc. ... .. marked "INL" on stem	Each 11 0
STD 677	000677	VALVE	exhaust 350 cc. ... .. marked "EXH" on stem	Each 11 0
STD 678	000678	VALVE	Inlet 5000 c.c. ... .. marked "INL" on stem	Each 11 0
STD 679	000679	VALVE	exhaust 500 cc. ... .. marked "EXH" on stem	Each 17 6
STD 685	000685	CAP	end, for valve stem, ¾ in. ... .. Each	1 1½
STD 686	000686	COLLET	for valve (2 pieces) ... .. Each	1 5
STD 691	000691	GLAND	rubber, for cover tube, bottom ... .. Doz.	4 10
STD 700	000700	SPRING	for valve lifter lever ... .. Doz.	4 10
STD 701	000701	SPRING	for crankcase oil feed valve ... .. Doz.	3 7½
STD 702	000702	SPRING	engine shock absorber ... .. Each	2 7½
STD 703	000703	SPRING	engine shock absorber ... .. Each	3 8½
STD 704	000704	SPRING	for oil tank filter ... .. Doz.	7 3
STD 708	000708	CIRCLIP	for dynamo sprocket nut ... .. Doz.	1 2½

PART NUMBER CONVERSION SECTION

Old No.	New No.	Description.	Remarks.	Price. £ s.
STD 709	000709	ARMOURING	for valve lifter cable ... .. Doz.	4 1
STD 720	000720	END	sleeve, for engine push rod ... .. Each	1
STD 721	000721	END	ball, for engine push rod ... .. Each	1 1
STD 725	000725	SPROCKET	dynamo armature shaft, 17 teeth ... .. Each	6
STD 726	000726	SPROCKET	magneto armature shaft, 17 teeth ... .. Each	6
STD 727	000727	SPROCKET	magneto engine end, 17 teeth ... .. Each	1
STD 735	000735	YOKE	end, for brake rod ... .. Doz.	4 1
STD 736	000736	PIN	clevis, for yoke end ... .. Doz.	3
STD 738	000738	SCREW	rear lamp fixing ... .. Doz.	3
STD 739	000739	NUT	for rear lamp fixing screw ... .. Each	3
STD 741	000741	PLATE	number, front ... .. Doz.	7
STD 742	000742	CLIP	for front number plate ... .. Doz.	3
STD 744	000744	PLATE	number rear ... .. replaced by 011845	Each 9
STD 745	000745	CLIP	exhaust pipe ... .. Each	1 1
STD 750	000750	CIRCLIP	gudgeon pin ... .. Doz.	7
STD 755	000755	PIPE	crankcase release ... .. Each	2
STD 760	000760	AXLE	timing side flywheel ... .. stamped SS on end	Each 15
STD 765	000765	CAP	in timing cover, for cam bush ... .. Doz.	4
STD 770	000770	PLUNGER	oil pump ... .. stamped SS on end	Each 13
STD 772	000772	CAP	pump end, rear ... .. Each	1
STD 773	000773	CAP	pump end, front ... .. Each	2
STD 780	000780	CAP	chaincase, inspection ... .. use 014457	Each 1
STD 785	000785	CROSSHEAD	for gear box adjusting bolt ... .. Each	1
STD 791	000791	PIN	hinge for dynamo strap ... .. Doz.	7
STD 795	000795	CAP	for oil filter compartment ... .. Each	2
STD 796	000796	FILTER	oil tank, felt ... .. Each	4
STD 797	000797	WASHER	cap, for oil tank filter ... .. Each	4
STD 805	000805	RACE	fork crown ... .. Each	4
STD 806	000806	RACE	frame ... .. Each	1
STD 812	000812	DISC	friction, steering damper ... .. Each	9
STD 830	000830	CAM	engine shock absorber ... .. Each	1
STD 831	000831	CAP	engine shock absorber spring ... .. Doz.	3
STD 835	000835	DIAPHRAGM	crankcase release, valve ... .. Each	1
STD 836	000836	BODY	crankcase release valve ... .. Doz.	1
STD 861	000861	SCREW	front number plate fixings ... .. Each	1
STD 908	000908	PIPE	Petrol flex (sold in cut lengths) ... .. see 000908	—
TFF101-S	017259	KNOB	adjusting, steering damper (Matchless) ... .. Each	4
V2E209	017267	COLLAR	top, for valve springs ... .. Each	2
V2FR6	017500	SPACER	footrest rod ... .. Each	4
XE184	010854	PIN	hinge, battery carrier front ... .. Doz.	3

GEAR BOX SECTION  
in  
NUMERICAL AND ALPHABETICAL  
ORDER

62

63

GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
1-BAP-31	SHELL	gear box, bare	Each 2 5 0
1-CP-16	SHELL	gear box, bare	Each 2 2 0
1-X-7	CASE	for clutch	Each 18 0
1-X-8	CASE	for clutch	Each 18 0
1-X-9	CASE	for clutch	Each 18 0
1-X-10	CASE	for clutch	Each 18 0
2-1BA-2	WASHER	paper	Doz. 1 0
2-1C-2	WASHER	paper	Doz. 1 0
2-X-15	CENTRE	clutch	Each 1 10 0
2-X-16	CENTRE	clutch	Each 1 10 0
2-X-17	CENTRE	clutch	Each 1 10 0
3-BA-16	CASE	kick starter	Each 1 2 6
3-C-7	CASE	kick starter	Each 1 2 6
3-C-8	CASE	kick starter	Each 1 2 6
3-X-2	PLATE	clutch, friction, with inserts	Doz. 1 0
4-1BA-3	WASHER	paper	Doz. 1 0
4-BA-21	COVER	kick starter case	Each 1 2 6
4-C-8	COVER	kick starter case	Each 1 2 6
4-C-13	COVER	kick starter case	Each 1 2 6
4-C-15	COVER	kick starter case	Each 1 2 6
4-1C-2	WASHER	paper	Doz. 1 0
4-X-2	INSERTS	fabric, for friction plates	Doz. 2 6
5-X	PLATE	clutch, plain, steel	Each 3 0
5-X-1	PLATE	clutch, plain, steel	Each 3 0
6-X	PLATE	clutch, plain, steel	Each 3 0
6-X-1	PLATE	clutch, plain, steel	Each 3 0
6-X-2	PLATE	clutch, plain, steel	Each 4 6
6-X-3	PLATE	clutch, plain, steel	Each 3 0
6-X-5	PLATE	clutch, plain, steel	Each 3 0
7-XA-4	CHAINWHEEL	and clutch case, assembled	Each 2 9 4
7-XA-5	CHAINWHEEL	and clutch case, assembled	Each 2 9 4
7-X-28	CHAINWHEEL	bare	Each 1 10 0
9-X-3	RIVET	for chainwheel and clutch case	Doz. 2 0
10-X	NUT	for gear change fixing bolt	Doz. 3 0
10-X-1	NUT	for gear change fixing bolt	Doz. 3 0
10-BA-24	MAINSHAFT	gear box	Each 1 18 3
10-C-15	MAINSHAFT	gear box	Each 1 18 3
10-C-20	MAINSHAFT	gear box	Each 1 18 3
10-2-2	BOLT	clamping gear change lever to sleeve	Each 1 10
10-4-1	BOLT	clamping kickstarter crank to spindle	Each 1 1
11-1-1	NUT	for camshaft pawl bearing pin	Doz. 4 0
11-2-1	NUT	for gear change fixing bolt	Doz. 3 0
11-2-2	NUT	adjusting, for clutch spring	Doz. 6 0
11-2-3	NUT	retaining indicator	Doz. 3 0
11-2-4	NUT	for 1/2 in. gear box stud	Doz. 3 0
11-3-1	NUT	for gear box shell stud, 1/4 in.	Doz. 4 0
11-3-2	NUT	sleeve, for clutch lever fork	Each 9
11-4-1	NUT	for kickstarter crank fixing bolt	Doz. 6 0
11-4-5	NUT	retaining pedal pin to crank	Each 9
11-7-8	NUT	lock, for pressure plate thrust cap	Doz. 6 0
11-7-9	NUT	retaining clutch centre to mainshaft	Each 9
11-7-10	NUT	retaining ratchet driver to mainshaft	Doz. 6 0
11-7-11	NUT	retaining clutch centre to mainshaft	Each 2 7
11-11-1	NUT	fixing gear box sprocket to main gear	Each 2 7
11-12-1	NUT	fixing gear box sprocket to main gear	Each 2 7
12-2-1	WASHER	foot lever clamping bolt	Doz. 1 0
12-2-4	WASHER	plain, for cam plate dowel	Doz. 1 0
12-2-5	WASHER	fibre for kickstarter case coverscrew	Doz. 1 0
12-4-1	WASHER	spring, kickstart lever bolt	Each 1 0
12-4-3	WASHER	plain, for pin retaining nut	Doz. 4 0
12-5-2	CAP	in kickstarter case covering quadrant spindle	Doz. 1 0
12-5-4	WASHER	fibre, oil level plug	Doz. 1 0
12-6-4	WASHER	spring, for pin retaining nut	Doz. 3 0
12-7-4	CAP	in shell, covering camshaft	Doz. 3 0
12-7-5	WASHER	lock, for centre retaining nut	Each .9
12-7-6	WASHER	drain plug	Doz. 1 0

64

GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
12-7-7	WASHER	plain, for centre retaining nut	
12-8-8	CAP	covering layshaft bush in shell	71-X Doz. 4 0
12-10-2	CAP	covering layshaft bush in shell	88-X Doz. 4 0
12-10-3	RACE	roller, clutch sprocket bearing	182-X Doz. 3 0
12-10-4	WASHER	thin, clutch sprocket bearing	34-X-2 Each 3 0
12-10-5	WASHER	thick, clutch sprocket bearing	36-X-2 Each 1 1
12-11-1	WASHER	for gear box inspection plug	36-X-3 Each 1 1
12-11-3	WASHER	lock, gear box sprocket nut	Doz. 2 0
12-11-4	COLLAR	spacing, under sprocket, 1/4 in. thick	210-X-1 Doz. 6 0
12-12-3	COLLAR	spacing, under sprocket, 1/4 in. thick	206-X-2 Doz. 6 0
14-BA-3	WASHER	lock, gear box sprocket nut	206-X-1 Doz. 6 0
14-C-4	GEAR	sliding, mainshaft, 20/26	17-1BA Each 9
14-C-6	GEAR	sliding, mainshaft, 18/23	Each 2 14 0
14-2-1	STUD	sliding, mainshaft, 18/23	Each 2 5 0
14-2-2	BOLT	for clutch spring	24-X-11 Doz. 6 0
14-2-3	SCREW	retaining, moving indicator	CO105-1 Doz. 3 0
14-2-4	SCREW	1/2 in., under head	Doz. 6 0
14-2-5	SCREW	1/2 in., under head	Each 9
14-2-6	SCREW	1/2 in., under head	Each 1 0
14-2-7	SCREW	3/4 in., under head	Each 1 0
14-2-8	STUD	for clutch spring	use 14-2-10 Each 1 0
14-2-10	SCREW	3/4 in., under head	24-X-12 Doz. 6 0
15-1BA-1	COLLAR	under sprocket nut, 3/4 in. thick	replaces 14-2-7 Each 1 0
15-1BA-2	COLLAR	under sprocket nut, 3/4 in. thick	use 2 in place of 15-1BA-2 Each 6
15-BA-9	GEAR	driving, mainshaft with bushes, 33T	use 2-15-1BA1 in lieu Each 9
15-C-6	GEAR	driving, mainshaft with bushes, 30T	Each 2 12 6
15-C-12	GEAR	driving, mainshaft with bushes, 32T	Each 2 8 0
16-1-4	PIN	split, for cam plate bushes	Each 2 8 0
16-1-5	PIN	cotter, for cam plate bushes	127-X Doz. 1 0
17-2-1	BALL	1/2 in., for clutch thrust rod	Doz. 1 0
17-3-2	BALL	3/4 in., for clutch thrust rod	67-X-1 Doz. 1 0
18-2-1	ROLLERS	clutch, sprocket bearings	Doz. 1 0
18-X-8	PLATE	spring, pressure for clutch	35-X set of 24 5 3
19-7-3	PLATE	spring, pressure for clutch	Each 13 6
19-8-5	BUSH	for kickstarter ratchet pinion	Each 13 6
19-8-13	BUSH	only for mainshaft driving gear	Each 3 9
19-8-14	BUSH	only for mainshaft driving gear	187-X-3 Each 3 0
19-8-15	BUSH	for layshaft first gear	Each 3 0
		for mainshaft third and layshaft second gears	Each 5 0
19-8-16	BUSH	only for mainshaft driving gear	Each 5 0
20-3-1	BUSH	in kickstarter case for control spindle	223-X-1 Each 3 0
20-4-1	BUSH	in kickstarter case for cam spindle	CO-91 Each 1 6
20-4-2	BUSH	in kickstarter case cover	Each 2 6
20-7-1	BUSH	in kickstarter case for spindle	Each 2 0
20-7-2	BUSH	for layshaft (clutch end), .843 in. long	Each 6 0
20-7-3	BUSH	in kickstarter case for spindle	Each 3 0
20-7-4	BUSH	for layshaft (kickstarter end), .779 in. long	Each 6 0
20-8-9	BUSH	in cover, for control quadrant spindle	.960 in. long Each 6 0
20-8-14	BUSH	in cover, for kickstarter spindle	Each 2 6
21-X-3	PLUG	for clutch	Each 3 0
21-5-1	PLUG	oil level, in kickstarter case cover	36-6-1 Each 9
21-6-1	PLUG	screwed, retaining camshaft pawl spring	Each 9
21-7-5	PLUG	drain, for gear box shell	98-X-1 Each 1 6
21-10-1	CAP	filler, for kickstarter case cover	348-X-1 Each 9
21-10-3	PLUG	inspection, gear box	Each 3 0
21-10-5	CAP	filler, for kickstarter case cover	Each 3 0
22-BA-14	SPROCKET	gear box, 16 T., .380 in. by 1/2 in.	326-X-1 Each 3 0
22-X	CUP	for clutch spring } same	G42-2 Each 2 6
22-X-2	CUP	for clutch spring	G42-2 Each 9
23-X	NUT	adjusting, for clutch spring	Each 9
23-X-3	NUT	adjusting, for clutch spring	11-2-2 Doz. 6 0
23-BA-13	NUT	adjusting, for clutch spring	11-2-2 Doz. 6 0
23-7-1	COLLAR	spacing gear box sprocket	29-12-32 Each 2 3
	CAP	covering clutch operating sleeve	328-X Each 2 3

GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
24-BA-3	GEAR	third, on mainshaft, 30 T.	Each 1 2 6
24-C-3	GEAR	third, on mainshaft, 27 T.	Each 18 9
24-C-4	GEAR	third, on mainshaft, 29 T.	Each 18 9
24-C-5	GEAR	third on mainshaft, 29 T. with bush	error in list, should be 24-C-4
24-C-6	GEAR	third, on mainshaft, 27 T., with bush	Each 1 1 0
24-X-11	STUD	for clutch spring, 1 1/2 in. long	14-2-1 Doz. 6 0
24-X-12	STUD	for clutch spring, 2 in. long	14-2-8 Doz. 6 0
25-BA-3	GEAR	third on layshaft	24 teeth Each 18 0
25-C-3	GEAR	third, on layshaft, 23 T.	Each 15 0
25-C-5	GEAR	third, on layshaft, 21 T.	Each 15 0
25-7-3	CUP	thrust, for spring pressure plate	Each 1 0
26-BA-4	GEAR	second, on layshaft, 28 T.	Each 1 2 6
26-C-5	GEAR	second, on layshaft, 27 T.	Each 18 9
27-BA-6	GEAR	first, on layshaft, 34 T.	Each 1 2 6
27-C-5	GEAR	first, on layshaft, 32 T.	Each 18 9
27-4-2	SEAL	oil, in cover bush for cam spindle	Doz. 3 0
27-7-2	WASHER	felt, in control spindle bush (inner)	Doz. 4 0
27-7-4	SEAL	oil, in cover bush, for quadrant spindle	Doz. 4 0
27-7-5	SEAL	oil, in cover bush, for kickstarter spindle	Each 3 6
27-8-3	WASHER	felt, footchange lever (outer)	Doz. 4 0
27-8-2	SEAL	oil, for driving gear bearing	Each 4 6
28-BA-1	GEAR	small, on layshaft, 21 T.	Each 18 0
28-C-3	GEAR	small, on layshaft, 20 T.	Each 15 0
28-C-6	GEAR	small, on layshaft, 18 T.	Each 15 0
28-X-4	ROD	thrust, for clutch, 9 1/2 in. long	28-X-56 Each 1 6
28-X-5	ROD	thrust, for clutch, 10 1/4 in. long	28-X-57 Each 1 6
28-X-45	ROD	thrust, for clutch, 10 1/4 in. long	Each 1 6
28-X-56	ROD	thrust, for clutch, 9 1/2 in. long	28-X-4 Each 1 6
28-X-57	ROD	thrust, for clutch, 10 1/4 in. long	28-X-5 Each 1 6
28-X-58	ROD	thrust, for clutch, 11 1/4 in. long	Each 1 6
28-12-16	COLLAR	spacing, for gear box sprocket, 1/2 in. wide	180-X-8 Each 1 6
28-12-19	PIECE	locating, between kickstarter case and cover	Each 1 6
28-12-45	PIECE	locating between kickstarter case and cover	Each 1 6
29-12-32	COLLAR	spacing, gear box sprocket, .545 in. wide	23-BA-13 Each 2 3
29-BA-2	CLUTCH	sliding, on layshaft	Each 15 0
29-C-3	CLUTCH	sliding, on layshaft	Each 15 0
29-2-4	RIVET	for clutch case and chain wheel	OF-33-3 and 9-X3 Doz. 2 0
30-BA-15	LAYSHAFT	gear box, with bushes	Each 17 6
30-C-9	LAYSHAFT	gear box	Each 10 0
30-C-11	LAYSHAFT	gear box, with bushes	Each 13 0
31-11-1	RING	split, retaining, mainshaft bearing	37-2-C1 Doz. 6 0
31-12-2	RING	split, retaining, bearing in shell	80-X-1 Doz. 6 0
31-7-1	CAP	covering, clutch operating sleeve	328-X-1 Each 2 3
34-X-2	RACE	roller, clutch sprocket bearing	12-10-2 Each 3 0
35-X	ROLLERS	clutch sprocket bearing	18-2-1 set of 24 5 3
35-1-1	PIN	dowel, locating fixed cam plate	Doz. 3 0
35-1-2	PIN	dowel, for layshaft bush	87-X-1 Doz. 2 0
35-1-6	PIN	fixing gear foot lever, rubber pad	CO38-2 Doz. 1 0
35-1-7	PIN	for clutch operating lever	66-X-7 Each 1 1
35-2-1	PIN	anchor, in cover for kickstarter spring	Doz. 6 0
35-2-6	PEG	quadrant drive	Doz. 3 0
35-3-1	PEG	for selector spindles	Doz. 4 0
35-3-2	PIN	dowel, locating kickstarter case on shell	CO-62 Doz. 4 0
35-3-4	WASHER	thrust (passes through both cam plates)	Each 1 6
36-X-2	WASHER	thin, clutch sprocket bearing	12-10-3 Each 1 1
36-X-3	WASHER	thick, clutch sprocket bearing	12-10-4 Each 1 1
36-2-1	SPRING	for cam assembly locating plunger	Doz. 6 0
36-2-3	SPRING	for cam plate dowel	Doz. 3 0
36-4-1	SPRING	under indicator	Doz. 3 0
36-6-1	SPRING	for clutch	21-X-3 Each 9
36-8-1	SPRING	return, kickstarter foot lever	130-X-2 Each 4 0
36-8-2	SPRING	kickstarter ratchet pinion	185-X-1 Each 1 1
36-8-3	SPRING	secondary, for control quadrant	Doz. 6 0
36-11-1	SPRING	primary, for control quadrant	Each 2 0



GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
37-BA-1	BEARING	ball, mainshaft kickstarter end	Each 18 9
37-1BA-2	WASHER	mainshaft ball bearing, kickstarter end	Each 9
37-2BA-1	RING	split, retaining bearing in shell	Doz. 6 0
37-1C-2	WASHER	mainshaft ball bearing kickstarter end	Each 9
37-3-1	RING	split, retaining bearing in shell	31-11-1 Doz. 6 0
37-3-4	ROD	thrust, clutch, 10 1/2 in. long	Each 1 6
38-BA-1	ROD	thrust, clutch, 9 3/4 in. long	Each 1 6
38-7-1	PINION	ratchet, kickstarter	Each 12 0
38-11-1	BEARING	ball, mainshaft kickstarter end	48-X-1 Each 18 9
39-BA-1	BEARING	ball, driving gear	177-X-1 Each 2 6
39-12-1	BUSH	kickstarter ratchet pinion	Each 4 1
40-BA-1	HOUSING	for driving gear bearing oil seal	Each 2 6
40-7-1	SPRING	kickstarter ratchet pinion	Each 1 1
41-BA-1	RATCHET	thrust, for spring pressure plate	303-X Doz. 6 0
42-BA-1	FORK	driving, kickstarter	Each 8 7
42-C	FORK	operating, mainshaft sliding gear	Each 12 0
42-C-1	FORK	operating, mainshaft sliding gear	Each 12 0
43-BA-1	FORK	operating, mainshaft sliding gear	Each 12 0
43-C	FORK	operating, layshaft sliding clutch	Each 12 0
43-C-1	FORK	operating, layshaft sliding clutch	Each 12 0
45-BA-2	CAMSHAFT	operating, layshaft sliding clutch	Each 12 0
45-C-2	CAMSHAFT	bars, for gear box	Each 17 6
45-C-3	CAMSHAFT	bars, for gear box	Each 17 6
60-X-1	STUD	gear box shell, 1 in. by 1/2 in.	Each 9
60-X-6	STUD	gear box shell, 1 1/2 in. by 1/2 in.	Each 9
60-X-8	STUD	gear box shell, 3/4 in. by 1/2 in.	13-3-2 Each 9
60-X-9	STUD	gear box shell, 3/4 in. by 1/2 in.	Each 9
61-BA-2	WASHER	outer, driving gear bearing	Each 9
63-BA-2	RING	split, retaining bearing washer	Doz. 6 0
63-X-1	NUT	for 1/2 in. gear box stud	11-2-4 Doz. 6 0
64-X-1	NUT	for 1/2 in. gear box stud	11-2-4 Doz. 3 0
66-X-7	SCREW	fixing sleeve cap to cover	333-X-ALP Doz. 4 0
67-X	PIN	for clutch operating lever	35-1-7 Each 1 1
67-X-1	BALL	steel, for clutch plunger	17-2-1 Doz. 1 0
68-X	BEARING	ball, mainshaft kickstarter end	38-7-1 Doz. 18 9
68-X-1	BEARING	ball, mainshaft kickstarter end	38-7-1 Each 18 9
69-X	NUT	retaining clutch centre to mainshaft	11-7-9 Each 9
69-X-1	NUT	retaining clutch centre to mainshaft	11-7-9 Each 9
69-X-2	NUT	retaining driving ratchet to mainshaft	Each 9
70-X	NUT	retaining driving ratchet to mainshaft	Doz. 6 0
70-X-1	NUT	retaining driving ratchet to mainshaft	Doz. 6 0
71-X	WASHER	plain, for centre retaining nut	12-7-7 Doz. 4 0
79-X-1	RING	split, retaining bearing in shell	31-12-2 Doz. 6 0
80-X	RING	split, retaining bearing in shell	31-12-2 Doz. 6 0
80-X-1	RING	split, retaining bearing in shell	31-12-2 Doz. 6 0
87-X	PEG	dowel, for layshaft bush	35-1-2 Doz. 2 0
87-X-1	PEG	dowel, for layshaft bush	35-1-2 Doz. 2 0
95-X	NUT	for camshaft pawl bearing pin	11-1-1 Doz. 4 0
95-X-1	NUT	for camshaft pawl bearing pin	11-1-1 Doz. 4 0
98-X	PLUG	screwed, retaining camshaft pawl	21-6-1 Each 1 6
98-X-1	PLUG	screwed, retaining camshaft pawl	21-6-1 Each 1 6
103-X	NUT	securing pedal pin to crank	11-4-5 Each 9
103-X-1	NUT	securing pedal pin to crank	11-4-5 Each 9
109-X	WASHER	spring, on kickstarter lever bolt	12-4-1 Each 9
110-BA-1	STUD	gear box shell 1 1/4 in. by 1/2 in.	Each 9
110-BA-2	STUD	gear box shell 1 1/4 in. by 1/2 in.	Each 9
112-BA-1	SEAL	oil, main driving gear bearing	Each 3 0
112-C	WASHER	felt, main driving gear bearing	Each 9
112-C-2	SEAL	oil, main driving gear bearing	Each 3 0
113-C	RING	split, retaining bearing washer	Each 9
113-C-2	RING	split, retaining bearing washer	31-12-1 Each 9
114-C	WASHER	outer, driving gear bearing	Doz. 4 0
114-C-2	WASHER	outer, driving gear bearing	12-12-2 Doz. 4 0

GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
115-C	WASHER	dished, driving gear bearing	Doz. 6 0
115-X	PIN	pedal, for kickstarter crank	Each 4 6
115-X-1	PIN	pedal, for kickstarter crank	Each 4 6
115-X-2	PIN	pedal, for kickstarter crank	Each 6 9
130-X	SPRING	return, for kickstarter crank	Each 3 0
132-X-2	SPRING	return, for kickstarter crank	Each 4 0
144-X	NUT	anchor, for return spring	Doz. 4 0
144-X-1	NUT	for kickstarter crank bolt	11-4-1 Doz. 6 0
147-X	WASHER	for kickstarter crank bolt	11-4-1 Doz. 6 0
147-X-1	WASHER	plain, for pedal pin nut	12-4-3 Doz. 4 0
152-X	NUT	for 1/2 in. gear box shell stud	12-4-3 Doz. 4 0
152-X-1	NUT	for 1/2 in. gear box shell stud	11-3-1 Doz. 4 0
157-X	PEG	for operating forks	11-3-1 Doz. 4 0
157-X-1	PEG	for operating forks	Each 9
158-X	PIN	split, for fork pegs	Each 9
158-X-1	PIN	split, for fork pegs	Doz. 2 0
159-X	BUSH	for camshaft in shell	Doz. 2 0
159-X-1	BUSH	for camshaft in shell	Each 3 0
160-X-2	BUSH	in kickstarter case for camshaft	Each 3 0
160-X-3	BUSH	in kickstarter case for camshaft	Each 3 0
161-X-2	SECTOR	gear selection, engages camshaft	Each 6 0
162-X-3	QUADRANT	gear selection	Each 5 3
163-X-2	PAWL	engages in camshaft	Each 3 0
164-X	PIN	bearing, for camshaft pawl	Each 1 10
164-X-1	PIN	bearing, for camshaft pawl	Each 1 10
175-X-4	LEVER	clutch operating	Each 3 0
176-X	NUT	fixing, sprocket to maingear	11-11-1 Each 2 7
176-X-1	NUT	fixing, sprocket to maingear	11-11-1 Each 2 7
177-X	BEARING	ball, main driving gear	38-11-1 Each 1 2 6
177-X-1	BEARING	ball, main driving gear	38-1-1 Each 1 2 6
179-X-7	SPROCKET	gear box, 16 T., 1/2 in. by 3/80 in.	G-31-1 Each 1 2 6
180-X-8	COLLAR	spacing, gear box sprocket	28-12-16 Each 1 6
181-X	BUSH	for layshaft	Each 6 0
181-X-1	BUSH	for layshaft	Each 6 0
182-X	CAP	covering layshaft bush in shell	12-8-11 Doz. 3 0
182-X-1	CAP	covering layshaft bush in shell	12-8-11 Doz. 3 0
183-X	PINION	ratchet, kickstarter	G-20-1 Each 12 0
183-X-1	PINION	ratchet, kickstarter	G-20-1 Each 12 0
184-X	BUSH	kickstarter ratchet pinion	Each 3 9
184-X-1	BUSH	kickstarter ratchet pinion	Each 3 9
185-X	SPRING	kickstarter ratchet pinion	36-8-2 Each 1 1
185-X-1	SPRING	kickstarter ratchet pinion	36-8-2 Each 1 1
186-X	RATCHET	driving, kickstarter	Each 8 7
186-X-1	RATCHET	driving, kickstarter	Each 8 7
187-X-3	BUSH	only, for mainshaft driving gear	19-8-5 Each 3 0
191-X-1	BUSH	for layshaft	Each 4 6
192-X-1	ROLLEE	for camshaft (per set of 12)	per set of 12 3 0
193-X-1	SPRING	for camshaft pawl	Each 1 1
194-X-13	LEVER	foot, kickstarter, bare, cranked folding	replaced by 194-X-31 and now by G-43-3 Each 15 9
194-X-26	LEVER	foot, kickstarter, bare, cranked folding	G-43-3 Each 15 9
194-X-31	LEVER	foot, kickstarter, bare, cranked folding	G-43-3 replaces 194-X-13 Each 15 9
194-X-39	LEVER	foot, kickstarter, bare, folding 1/2 in. set	G-43-8 Each 15 9
198-X-4	SPINDLE	for kickstarter quadrant and foot lever	Each 11 3
198-X-5	SPINDLE	for kickstarter quadrant and foot lever	Each 11 3
199-X-3	QUADRANT	for kickstarter spindle	G-22-1 Each 15 9
199-X-3A	QUADRANT	and spindle for kickstarter	Each 1 7 0
199-X-3A-49	QUADRANT	and spindle, for kickstarter	016904 Each 1 7 0
200-X-3	BUSH	in kickstarter case cover for spindle	Each 3 0
200-X-4	BUSH	in kickstarter case cover for spindle	Each 3 0
200-X-7	BUSH	in kickstarter case cover for spindle	Each 3 0
201-X-2	BUSH	in kickstarter case for spindle	Each 3 0
202-X	PEG	for kickstarter stop rubber and sleeve	Each 9
202-X-1	PEG	for kickstarter stop rubber and sleeve	Each 9

GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
206-X-1	WASHER	spacing, under gear box sprocket, $\frac{1}{8}$ in. thick	12-11-4 Doz. 6 0
206-X-2	WASHER	spacing, under gear box sprocket, $\frac{1}{8}$ in. thick	12-11-3 Doz. 6 0
210-X	WASHER	lock, gear box sprocket nut	12-11-1 Doz. 4 0
210-X-1	WASHER	lock, gear box sprocket nut } same	12-11-1 Doz. 4 0
212-X	WASHER	spring, for clutch centre nut	12-6-4 Doz. 4 0
214-X	WASHER	spring, for pedal pin nut	11-2-1 Doz. 3 0
218-X	NUT	fixing gear box sprocket	11-2-1 Doz. 2 7
219-X	BEARING	ball, driving gear	Each 4 9
245-X-2	NIPPLE	grease, for kickstarter case	Doz. 4 0
286-X	STUD	kickstarter case $2\frac{1}{2}$ in. by $\frac{1}{2}$ in. }	Each 9
286-X-1	STUD	kickstarter case $2\frac{1}{2}$ in. by $\frac{1}{2}$ in. }	Each 9
287-X	NUT	gear selection quadrant spindle } same	Doz. 3 0
287-X-1	NUT	gear selection quadrant spindle }	Doz. 3 0
291-X	CAP	in shell covering camshaft	12-7-4 Doz. 3 0
303-X	CAP	thrust, for spring pressure plate } same	40-7-1 Doz. 6 0
303-X-1	CAP	thrust, for spring pressure plate }	40-7-1 Doz. 6 0
315-X	BOLT	clamping kickstarter crank to spindle } same	10-4-1 Each 1 1
315-X-1	BOLT	clamping kickstarter crank to spindle }	10-4-1 Each 1 1
315-X-2	BOLT	clamping kickstarter crank to spindle }	10-4-1 Each 1 1
320-X	STOP RUBBER	and sleeve, for kickstarter crank	Each 9
320-X-1	STOP RUBBER	and sleeve, for kickstarter crank	Each 9
326-X	CAP	filler, for kickstarter case } same	21-10-5 Each 3 0
326-X-1	CAP	filler, for kickstarter case }	21-10-5 Each 3 0
328-X	CAP	covering clutch operating sleeve } same	23-7-1 Each 2 3
328-X-1	CAP	covering clutch operating sleeve }	23-7-1 Each 2 3
329-X	FORK	for clutch operating lever } same	G-54-1 Each 2 3
329-X-1	FORK	for clutch operating lever }	G-54-1 Each 2 3
330-X	PLUNGER	clutch operating }	Each 9
330-X-1	PLUNGER	clutch operating }	Each 9
331-X	SLEEVE	for clutch operating lever fork } same	11-3-2 Each 9
331-X-1	SLEEVE	for clutch operating lever fork }	11-3-2 Each 9
333-X	SCREW	fixing sleeve cap to cover	11-3-2 Each 9
335-X	NUT	retaining pin to crank } same	11-4-5 Each 9
335-X-1	NUT	retaining pin to crank }	11-4-5 Each 9
348-X	PLUG	drain, for gear box shell } same	21-7-5 Each 9
348-X-1	PLUG	drain, for gear box shell }	21-7-5 Each 9
349-X-3	WASHER	lock, clutch centre nut	12-7-5 Each 9
350-X-1	NUT	for kickstarter crank fixing bolt	11-4-1 Doz. 6 0
356-X-1	WASHER	drain plug	12-7-6 Doz. 2 0
357-X-1	BUSH	for 24-C & gear	Each 1 0
CO-38-1	PIN	for foot lever rubber	Each 2 0
CO-49-5	BOX	spring, for foot gear control	35-1-6 Doz. 1 0
CO-51-6	RATCHET	gear selection	Each 7 6
CO-51-6A	QUADRANT	sector and ratchet assembled	Each 5 3
CO-52-5	PAWL	indexing, for foot gear control	Each 16 9
CO-53-4	QUADRANT	for foot gear control	Each 2 3
CO-53-4A	QUADRANT	assembled with sleeve and peg	Each 4 6
CO-53-4A-49	QUADRANT	assembled with sleeve and peg	Each 16 1
CO-54-7	BUSH	for foot control quadrant sleeve	Each 7 6
CO-54-14	BUSH	for foot control quadrant sleeve	Each 6 0
CO-58-1	PLATE	cover, for spring box	Each 1 6
CO-59-1	PLATE	for control box pawl spring	Doz. 3 0
CO-60-1	SPINDLE	for control box main spring	Doz. 3 0
CO-62-1	PEG	for gear control indexing pawl	Doz. 4 0
CO-63-3	BOLT	for gear indexing pawl	35-3-2 Doz. 4 0
CO-66-1	SPRING	clamping foot lever to sleeve	Each 1 10
CO-67-1	SPRING	main, for control box	Each 9
CO-82-2	PAD	pawl, for control box	Each 9
CO-82-3	PAD	rubber, for foot lever	G-48-1 Each 1 1
CO-90-2	SPINDLE	rubber, for foot lever	G-48-1 Each 1 1
CO-90-3	SPINDLE	for gear selection quadrant	Each 5 3
CO-91	BUSH	for gear selection quadrant	Each 5 3
CO-91-1	BUSH	in kickstarter case for control spindle } same	20-3-1 Each 1 6
		in kickstarter case for control spindle }	20-3-1 Each 1 6

GEAR BOX SECTION

Number.	Description.	Remarks	Price.
		Same as	£ s. d.
CO-92-1	LEVER	foot, gear control	Each 11 3
CO-92-2	LEVER	foot, gear control } all interchangeable	Each 11 3
CO-92-4	LEVER	foot, gear control }	Each 11 3
CO-94	SLEEVE	for foot gear control quadrant	Each 11 3
CO-94-2	SLEEVE	for foot gear control quadrant	Each 11 3
CO-95	BOLT	fixing quadrant sleeve bush in K/s. cover	Each 1 10
CO-95-1	BOLT	fixing quadrant sleeve bush in K/s. cover	Each 1 10
CO-96-1	RIVET	fixing camshaft sector to quadrant	Doz. 1 0
CO-96-2	RIVET	fixing camshaft ratchet to quadrant	Doz. 1 0
CO-97	INDICATOR	gear, fixed }	Doz. 4 0
CO-97-1	INDICATOR	gear, fixed }	Doz. 4 0
CO-97-2	INDICATOR	gear, moving	Each 9
CO-105-1	INDICATOR	retaining moving gear indicator	14-2-2 Doz. 3 0
G-1-2	SHELL	gear box, bare	Each 2 5 0
G-1-9	SHELL	gear box (with inspection hole)	Each 2 5 0
G-2-2	CASE	kickstarter	Each 1 5 0
G-2-6	CASE	kickstarter	Each 1 5 0
G-3-2	COVER	for kickstarter case	Each 1 5 0
G-5-3	WASHER	paper, between shell and kickstarter case	Doz. 1 0
G-5-4	WASHER	paper, between kickstarter case and cover	Doz. 1 0
G-6-2	GEAR	driving, mainshaft, with bushes, 28 T.	Each 2 8 0
G-6-5	GEAR	driving, mainshaft, with bushes, 30 T.	Each 2 8 0
G-6-9	GEAR	mainshaft driving 25 T. conversion gear for racing	Each 2 8 0
G-7-2	PINION	on layshaft, 18 T.	Each 15 0
G-7-4	PINION	on layshaft, 17 T.	Each 15 0
G-7-5	PINION	on layshaft, 16 T.	Each 15 0
G-7-6	GEAR	small, on layshaft, 22 T. conversion gear for racing	Each 15 0
G-8-1	GEAR	third, mainshaft, 25 T.	Each 1 0
G-8-3	GEAR	third, on mainshaft, 23 T. conversion gear for racing	Each 1 1 0
G-9-1	GEAR	third, layshaft, 21 T.	Each 1 18 6
G-9-3	GEAR	third, on layshaft, 23 T. conversion gear for racing	Each 1 18 6
G-10-2	GEAR	second, mainshaft, 22 T.	Each 1 18 6
G-10-4	GEAR	second, mainshaft, 21 T.	Each 1 18 6
G-10-5	GEAR	second mainshaft, 20 T.	Each 1 18 6
G-10-6	GEAR	second, on mainshaft, 21 T. conversion gear for racing	Each 1 18 6
G-11-2	GEAR	second, layshaft with bush, 24 T.	Each 1 1 0
G-11-4	GEAR	second layshaft, 26 T.	Each 1 1 0
G-12-2	GEAR	first, mainshaft, 17 T.	Each 15 0
G-13-2	GEAR	first, layshaft with bush, 29 T.	Each 1 1 0
G-13-4	GEAR	first, layshaft with bush, 30 T.	Each 1 1 0
G-13-5	GEAR	first, on layshaft, 28 T. conversion gear for racing	Each 1 1 0
G-18-2	MAINSHAFT	for gear box	Each 1 7 6
G-19-2	LAYSHAFT	for gear box, $5\frac{1}{2}$ in. long	Each 1 10 0
G-19-6	LAYSHAFT	for gear box, $5\frac{1}{2}$ in. long	Each 1 10 0
G-20-1	PINION	ratchet, kickstarter	183-X-1 Each 12 0
G-21-2	RATCHET	driving, kickstarter	199-X-3 Each 8 8
G-22-1	QUADRANT	for kickstarter	Each 11 3
G-23-1	SPINDLE	for kickstarter quadrant	Each 12 6
G-24-2	QUADRANT	for gear control quadrant	Each 7 6
G-25-2	SPINDLE	for control spindle	Each 8 8
G-30-2	FORK	gear selection	Each 10 0
G-31-1	SPINDLE	for selector forks	Each 7 6
G-32-2	SPROCKET	gear box, 16 T. by $\frac{1}{2}$ in. by .380 in.	179-X-7 Each 1 2 6
G-33-2	CAM-PLATE	fixed, actuating clutch	Each 2 0
G-33-3	LEVER	clutch operating	175-X-4 Each 3 0
G-33-3	CAM-PLATE	moving, actuating clutch	Each 2 6
G-34-2	CHAINWHEEL	40 T. by $\frac{1}{2}$ in. by .308 in.	Each 1 10 0
G-35-2	SLEEVE	for mainshaft	Each 17 0
G-36-3	CASE	for five plate clutch	Each 18 0

GEAR BOX SECTION

Number.	Description.	Remarks	Price.	
			£	s. d.
G-36-5	CASE	for four plate clutch	...	...
G-37-2	CENTRE	for four plate clutch	...	...
G-37-3	CENTRE	for five plate clutch	2-X-15	Each 1 10 0
G-37-5	CENTRE	for four plate clutch	2-X-17	Each 1 10 0
G-38-2	PLATE	clutch, pressure	...	Each 1 10 0
G-39-1	PLATE	clutch, plain, steel, thin	...	Each 13 6
G-39-2	PLATE	clutch, plain, steel, thick	5-X-1	Each 3 0
G-39-4	PLATE	clutch, plain steel, thin	6-X-2	Each 4 6
G-40-1	PLATE	clutch, friction with inserts	6-X-5	Each 3 0
G-40-6	PLATE	clutch, friction with inserts	3-X-2	Each 12 6
G-40-12	PLATE	clutch, friction with inserts	...	Each 12 6
G-41-1	INSERTS	fabric, for friction plate (per doz.)	...	Each 12 6
G-41-5	INSERTS	fabric, for clutch plates	4-X-2	Doz. 2 6
G-42-1	PLUNGER	locating cam assembly	...	Doz. 2 6
G-42-2	CUP	for clutch spring	...	Each 2 0
G-42-3	PLUNGER	locating cam assembly	22-X-2	Each 9
G-43-2	LEVER	foot, kickstarter, bare, cranked, 2 1/2 in. set	...	Each 2 0
G-43-3	LEVER	foot, kickstarter, bare, straight folding, 1 1/2 in. set	...	Each 15 9
G-43-4	LEVER	foot, kickstarter, bare, 1 1/2 in. set	194-X-31	Each 15 9
G-43-5	LEVER	foot, kickstarter, bare, cranked folding, 2 1/2 in. set	...	Each 15 9
G-43-7	LEVER	foot, kickstarter, bare, cranked, 1 1/2 in. set	...	Each 15 9
G-43-8	LEVER	foot, kickstarter, bare, folding, 3/4 in. set	194-X-26	Each 15 9
G-44-7	LEVER	foot, for gear control	194-X-39	Each 15 9
G-44-8	LEVER	foot, for gear control	...	Each 11 3
G-45-1	PIN	pedal, rigid, for kickstarter lever	...	Each 11 3
G-45-2	PIN	pedal, folding, for kickstarter lever	115-X-1	Each 4 6
G-47-1	INDICATOR	gear control	115-X-2	Each 6 9
G-48-1	PAD	rubber, for foot gear lever	...	Each 9
G-54-1	FORK	for clutch operating lever	CO-82-2	Each 1 1
OF-33-3	RIVET	for clutch case and chain wheel	329-X	Each 2 3
OF-42-1	WASHER	felt, on kickstarter spindle	9-X-3 and 29-2-4	Doz. 2 0
OF-73	WASHER	plain, retains felt washer for kickstarter spindle	...	Doz. 4 0
OS-52-1	WASHER	spring, for gear foot lever bolt	12-2-1	Doz. 6 0
				1 0

CARBURETTOR SECTION

in

NUMERICAL ORDER

CARBURETTER SECTION

Number.	Description.	Remarks.	Price.		
			£	s. d.	
1482	NIPPLE	inner wire, carburetter end ... ..	same as 017242	Doz.	2 5
4-035	ADJUSTER	for control cables ... ..		Doz.	7 0
4-037	SPRING	for throttle valve ... ..		Doz.	4 0
4-042-130	JET	main size 130 ... ..		Each	9
4-042-140	JET	main size 140 ... ..		Each	9
4-042-150	JET	main size 150 ... ..		Each	9
4-042-160	JET	main size 160 ... ..		Each	9
4-042-170	JET	main size 170 ... ..		Each	9
4-042-180	JET	main size 180 ... ..		Each	9
4-043	BOLT	holding float chamber ... ..		Each	3 4
4-046	SPRING	for air valve ... ..		Doz.	4 0
4-053	WASHER	fibre, chamber holding bolt ... ..		Doz.	2 0
4-060	PIN	split, taper needle clip ... ..		Doz.	1 0
4-061	JET	needle ... ..		Each	2 9
4-063	SCREW	stop, for throttle valve ... ..		Each	10
4-206	NUT	lock, for throttle stop screw ... ..		Doz.	2 0
4-230	CLIP	for jet taper needle ... ..		Doz.	6 0
4-235	CLIP	locking top fixing ring ... ..		Each	10
4-241	SCREW	securing top fixing ring clip ... ..		Doz.	2 0
4-263	SPRING	throttle valve ... ..		Doz.	4 0
6-031	RING	fixing top to mixing body ... ..		Each	2 9
6-032	TOP	for mixing chamber ... ..		Each	2 9
6-033	NUT	union, for base of mixing body ... ..		Each	2 6
6-038	INTAKE	air ... ..		Each	3 4
6-040	WASHER	fibre, for mixing body union nut ... ..		Doz.	2 0
6-045	SLIDE	air ... ..		Each	4 2
6-047	GUIDE	tubular, for air slide spring ... ..		Each	1 2
6-052	SLIDE	throttle, size 6 by 4 ... ..		Each	6 7
6-058	CHOKE	or jet barrel ... ..		Each	8 3
6-059	CHOKE	or jet barrel ... ..		Each	8 3
6-062	NUT	union, mixing body base ... ..		Each	2 6
6-065	NEEDLE	taper, for needle jet ... ..		Each	2 3
11-013	SCREW	long, clamping twist grip body ... ..		Doz.	3 0
11-014	SCREW	short, clamping twist grip body ... ..		Doz.	3 0
12-007	BRACKET	for air lever ... ..		Each	3 0
12-008	BRACKET	for ignition lever ... ..		Each	3 0
12-016B	LEVER	only, air. For lever Assembly 12-161 only ... ..		Each	4 2
12-017B	LEVER	only, ignition " " " 12-171 " ... ..		Each	4 2
12-029	BOLT	central, for air or ignition levers ... ..		Doz.	3 0
12-031	CAP	for air or ignition lever ... ..		Each	9
12-033	WASHER	spring, for air or ignition lever ... ..		Doz.	2 0
12-034	NIPPLE	handlebar end, air and throttle cable ... ..	same as 017266	Doz.	2 5
12-040	CLAMP	for lever brackets ... ..		Each	10
12-161	LEVER	assembly, air ... ..	same as 017271	Each	9 0
12-171	LEVER	assembly, ignition ... ..	same as 017269	Each	9 0
12-356	LEVER	only, air. For lever assembly 18-640 only ... ..		Each	4 2
12-557	LEVER	only, ignition. " " " 18-641 " ... ..		Each	4 2
13-129	SCREW	for pilot air adjustment ... ..		Each	10
13-153	PLUG	screwed, passage in flood chamber ... ..		Doz.	3 0
14-014	BOW	for float ... ..		Each	4 0
14-015	FLOAT	bare ... ..		Each	4 2
14-021	SCREW	locking float chamber top ... ..		Doz.	4 0
14-024	NEEDLE	for float ... ..		Each	1 8
14-032	SPRING	for tickler ... ..		Doz.	2 0
14-035	CONNECTION	banjo, for petrol pipe ... ..		Each	3 4
14-036	NUT	retaining banjo connection ... ..		Each	10
14-037	WASHER	fibre, lower, for banjo connection ... ..		Doz.	2 0
14-039	WASHER	fibre, for chamber passage screw ... ..		Doz.	1 0
14-175	WASHER	fibre, upper, for banjo connection ... ..		Doz.	2 0
14-178	NUT	lock, float needle seat ... ..		Doz.	4 0
14-208	CAP	or cover, for float chamber ... ..		Each	4 2
14-209	TICKLER	only, bare ... ..		Each	11
14-210	STOP	for tickler ... ..		Doz.	3 0
14-289	COTTER	for tickler ... ..		Doz.	1 0
14-352	CONNECTION	banjo for petrol pipes ... ..		Each	7 5
16-008	SPRING	friction, twist grip ... ..		Each	10
16-009	SCREW	twist grip friction spring ... ..		Doz.	6 0

74

CARBURETTER SECTION

Number.	Description.	Remarks.	Price.
			£ s. d.
16-010	NUT	twist grip friction spring screw	Doz. 2 0
16-011	STOP	twist grip cable	Doz. 2 0
16-060	BODY	twist grip top	Each 3 4
16-061	BODY	twist grip bottom	Each 3 4
16-069	RUBBER	dummy	Each 1 6
16-070	RUBBER	twist grip	Each 1 0
16-091	ROTOR	and sleeve, twist grip	Each 3 10
16-117	GRIP	twist, assembly	Each 11 0
18-053	NUT	clutch lever fulcrum pin	Doz. 3 0
18-059	LEVER	only, exhaust lifter	Each 2 6
18-060	NUT	exhaust lever fulcrum pin	Doz. 3 0
18-067	SCREW	fulcrum, clutch lever	Doz. 3 0
18-088	NIPPLE	handlebar end, clutch and brake, inner wire	Doz. 3 0
18-161	BRACKET	exhaust lifter lever	017328 Doz. 3 7 1/2
18-234	BRACKET	for clutch lever	Each 1 11
18-240	BRACKET	for brake lever	Each 5 10
18-241	BRACKET	for clutch lever	Each 5 10
18-454	LEVER	assembly, exhaust lifter	Each 5 10
18-455	LEVER	assembly, clutch or front brake	Each 7 0
18-519	LEVER	only, clutch or front brake	Each 9 11
18-528	LEVER	only, clutch	same as 18-528 Each 5 10
18-535	LEVER	only, brake	same as 18-519 Each 5 10
18-536	LEVER	assembly, clutch	Each 5 10
18-537	LEVER	assembly, front brake	Each 10 6
18-620	LEVER	assembly, clutch and ignition (mistake in spares list)	Each 10 6
18-621	LEVER	assembly, brake and air (mistake in spares list)	use 18-641 Each 18 9
18-640	LEVER	assembly, brake and air	use 18-640 Each 18 9
18-641	LEVER	assembly, clutch and ignition	Each 18 9
18-689	NIPPLE	for inner wire, clutch and brake cables	Each 18 9
18-690	ADAPTOR	roller for inner wire, clutch and brake cables	Doz. 4 0
29-041	RING	fixing top to mixing body	Each 9
29-042	TOP	for mixing chamber	Each 3 4
29-047	SPRING	for throttle valve	Each 3 7
29-048	INTAKE	air	Doz. 4 0
29-050	WASHER	fibre, body union nut	Each 3 10
29-055	VALVE	air	Doz. 2 0
29-057	GUIDE	tubular, for air valve spring	Each 4 5
29-062	VALVE	throttle, size 29/4	Each 1 5
29-068	CHOKE	or jet barrel	Each 7 2
29-070	CHOKE	or jet barrel	Each 11 0
29-072	NUT	union, mixing body base	Each 11 0
29-075	NEEDLE	taper, for needle jet	Each 3 4
29-076	JET	needle	Each 2 3
29-077	BOLT	holding, float chamber	Each 2 3
29-201	NUT	union, mixing chamber base	Each 3 4
29-206	CLIP	locking, top fixing ring	Each 3 4
40-058	SPRING	for throttle valve	Each 10
64-186	NIPPLE	exhaust lifter inner wire	Doz. 4 0
64-192	CHAMBER	float, bare	same as 017240 Doz. 3 7 1/2
64-192B	CHAMBER	float, bare	Each 15 6
64-302	CHAMBER	for float, bare	Each 15 6
64-303	CHAMBER	float, bare	Each 15 6
64-303B	CHAMBER	float, bare	Each 15 6
70-014	CHAMBER	for float, bare	Each 15 6
76-016	BODY	mixing, bare	Each 15 6
76-024	WASHER	lock, clutch lever fulcrum pin	Each 15 6
76-112	BODY	mixing, bare	Doz. 2 0
76-AQIDB	BODY	mixing, bare	Each 15 6
89-150	CARBURETTER	complete, less controls	018876 Each 15 6
89-403	BODY	mixing, bare	Each 4 4 8
204-038	BODY	mixing, bare	Each 17 7
229-038	INTAKE	air	Each 17 7
	INTAKE	air	Each 3 4
			Each 3 10

LIGHTING, IGNITION AND  
SPEEDOMETER SECTION  
in  
NUMERICAL AND ALPHABETICAL  
ORDER

Y...  
... FROM ...  
...  
...

LIGHTING, IGNITION AND SPEEDOMETER SECTION

Part Number.	Old Number.	Designation.	Remarks.	Price. £ s. d.
70	BULB	head, main 6-volt. 24 by 24 watts	... same as 168 ...	Each 3 6 plus 7d. P. tax
168	BULB	head, main 6-volt 24 by 24 watts	... same as 70 ...	Each 3 6 plus 7d. P. tax
200	BULB	pilot and rear, 6-volt 3 watts	... ..	Each 1 4 plus 3d. P. tax
312	BULB	head main 6-volt 30 by 24 watts	... ..	Each 5 3 plus 1s. P. tax
352	BULB	rear lamp 6-volt 10 by 3 watts	... ..	Each 3 9 plus 8d. P. tax
988	BULB	pilot and rear 6-volt 3 watts	... ..	Each 1 6 plus 3d. P. tax
31405	SWITCH	dipping, for handlebar with max	... As 021301 ...	Each 6 6
33020	REGULATOR	complete unit	... ..	Each 2 4 0
35108	REGULATOR	complete unit	... ..	Each 2 4 0
36084	AMMETER	for headlamp panel	... ..	Each 8 9
37097	REGULATOR	complete unit	... same as 015087 ...	Each 2 4 0
37144	REGULATOR	complete unit	... same as 015070 ...	Each 2 4 0
42020	MAGNETO	type Ni-3-AO	... same as 011082 ...	Each 7 0 0
50128	LAMP	head, with switch, bulbs and ammeter less harness	... ..	Each 4 7 6
50788	LAMP	head, with switch, bulbs and ammeter less harness	... use 50945 ...	Each 5 2 6
50791	LAMP	head, with switch, bulbs and ammeter less harness	... ..	Each 4 7 6
50945	LAMP	head, with switch, bulbs and ammeter less harness	... ..	Each 5 2 6
52224	LAMP	side, complete. Type 516	... ..	Each 12 6
53037	LAMP	rear complete	... use 018023 as alter- native ...	Each 13 9
53056	LAMP	rear complete	... ..	Each 12 6
53139	LAMP	rear complete	... same as 014674 ...	Each 1 2 0
052383	LAMP	rear complete	... use 018023 as alter- native ...	Each 12 6
055499	LAMP	head complete with switch, ammeter and harness	... ..	Each 5 2 6
069225	HORN	with bracket	... ..	Each 1 19 0
106779	SCREW	fixing panel to head lamp shell	... ..	Doz. 3 0
106798	SCREW	fixing panel to head lamp shell	... ..	Doz. 3 0
111700	BOLT	retaining gear on armature shaft	... ..	Doz. 5 9
112201	BOLT	head lamp, fixing	... ..	Each 1 3
130251	SCREW	fixing panel to head lamp shell	... ..	Doz. 3 0
137141	WASHER	plain, head lamp fixing bolt	... ..	Doz. 1 0
140074	WASHER	plain on magneto shaft	... ..	Doz. 1 0
161385	WASHER	rubber, for rear lamp fixing screw	... ..	Doz. 1 8
163343	WASHER	fibre for cable entry metal cap	... ..	Doz. 1 0
165310	NUT	retaining, lamp body to plate	... ..	Doz. 1 0
166014	NUT	retaining, lamp body to plate	... ..	Doz. 1 0
170104	NUT	retaining, sprocket to dynamo shaft	... use 171284 ...	Doz. 3 0
171284	NUT	retaining, sprocket to dynamo shaft	... alternative 170104 ...	Doz. 3 0
185026	WASHER	spring, panel fixing screw	... ..	Doz. 1 0
185036	WASHER	spring, rear lamp fixing screw	... ..	Doz. 1 0
186131	SCREW	fixing panel to head lamp	... ..	Doz. 2 0
188230	WASHER	spring, rear lamp fixing screw	... ..	Doz. 6
188378	WASHER	lock, for gear retaining bolt	... ..	Doz. 2 0
188818	SLEEVE	terminal, rear lamp cable	... ..	Doz. 1 0
200290	BRUSHES	complete set of	... ..	Set 3 3
200430	DYNAMO	type E3-AR. A05-1	... ..	Each 7 10 0
200737	BRUSHES	complete set of	... ..	Set 3 6
351351	SWITCH	main lighting for head lamp panel	... ..	Each 11 6
351567	HANDLE	with screw for main lighting switch	... ..	Each 3 0
359218	CABLE	for horn	... ..	Each 1 0
364455	AMMETER	for head lamp panel	... use 36084 ...	Each 8 9
364461	AMMETER	for head lamp panel	... use 36084 ...	Each 8 9
380057	SWITCH	dipping	... use 380521 ...	Each 6 6
380459	PACKING	rubber for dipping switch	... ..	Each 9
380501	SWITCH	dipping	... use 380521 ...	Each 6 6

LIGHTING, IGNITION AND SPEEDOMETER SECTION

Part Number.	Old Number.	Designation.	Remarks.	Price.
				£ s. d.
380515		SWITCH dipping	use 380521	Each 6 6
380521		SWITCH dipping		Each 6 6
454969		PLUNGER for ignition cable		Doz. 6 0
458053		CONTACT SET for magneto, Type SRI		Each 5 6
458367		PICK-UP with brush and spring		Each 5 3
458368		PICK-UP with brush and spring		Each 5 3
458619		COVER contact breaker		Each 6 9
458727		CAP metal screws in magneto		Each 3 2
458731		CAP rubber for cable entry		Each 3 7
458732		SPRING return ignition cable		Doz. 3 0
459037		COVER contact breaker, with switch		Each 6 0
460051	MLC-B1	CONTACT BREAKER—complete		Each 13 9
460061		COVER for contact breaker		Each 1 6
463066		PICK-UP with brush and spring		Each 4 6
464092	M2687-1	TAPPET for contact breaker		Each 1 9
470534		CONTACT BREAKER—complete		Each 1 0 0
470609		POINTS contact set of		Each 8 9
484098		POINTS contact set of		Each 2 6
515191		SHELL back with bulb holders		Each 10 6
516144		GLASS for head lamp		Each 2 9
516145		REFLECTOR for head lamp		Each 18 0
516183		FILLET rubber for panel		Each 9
516278		SHELL back, with bulb holders		Each 17 0
516364		REFLECTOR and glass, light unit		Each 15 0
516368		HOLDER for bulbs		Each 9 3
516386		GLASS for pilot light		Each 1 9
516718		SHELL only, headlamp, Type SSU 700		Each 1 15 0
516719		GRUNMET rubber, for side lamp		Each 1 0
526232		BODY rear lamp, with red glass		Each 5 6
526239		BASE with bulb holder, rear lamp		Each 8 6
550875		GLASS head lamp (convex)		Each 3 6
550899		RIM head lamp		Each 13 0
553147		REFLECTOR head lamp		Each 18 6
553248		RIM head lamp		Each 12 6
553268		REFLECTOR and glass, light unit		Each 15 0
553428		RIM head lamp	mistake in spares list, use 553248	Each 15 0
553925		REFLECTOR and glass, light unit		Each 14 6
555005		ADAPTOR (bulb holder)		Each 3 9
571395		CONNECTOR screwed for battery cable	same as SA-147	Each 9
571417		BODY rear lamp, with red glass		Each 4 0
572039		GROMMET for rear lamp wire		Doz. 6 0
572040		PLUG rubber for lamp base		Doz. 3 0
572055		SCREW securing rear lamp frame		Doz. 4 0
572072		SCREW retaining window cover		Doz. 6 0
572595		GASKET for lamp base		Each 1 6
572609		FRAME over red glass		Each 12 6
572611		GLASS rear lamp (red)		Each 3 6
572614		NUT securing rear lamp frame		Doz. 5 0
572825		CAP rubber covering cable entry		Doz. 6 0
573814		GASKET rubber for window cover		Doz. 6 0
573819		WINDOW COVER—red, for rear lamp		Each 7 0
573825		CAP rubber, covering cable entry		Each 6 6
700160		BRACKET horn		Each 3 9
701404		HORN with bracket		Each 19 0
701686		BRACKET horn		Each 3 9
762164		SWITCH horn	use 762664	Each 5 9
762178		SWITCH horn	use 762664	Each 5 9
762664		SWITCH horn		Each 5 9
809793		PLUG for head lamp cable harness		Each 2 9
809795		SOCKET for head lamp cable harness		Each 3 9
851884		CABLE harness for regulator		Each 4 0
858795		CABLE harness triple for dipping switch		Each 4 0
860420		CABLE rear lamp with contact disc		Each 3 0
860595		CABLE harness for regulator		Each 4 0
900269		CONNECTOR snap, for rear lamp cable		Doz. 2 0
989981		CABLE harness, for regulator		Each 4 0

LIGHTING, IGNITION AND SPEEDOMETER SECTION

Part Number.	Old Number.	Designation.	Remarks.	Price.
				£ s. d.
994001		CABLE harness, main lighting		Each 13 6
995051		CABLE harness, main lighting		Each 13 6
997831		CABLE harness, main lighting		Each 15 0
4080157		BATTERY with lid, dry and uncharged	PU-7-E9	Each 2 2 6
4082157		BATTERY with lid, PUZ-7-E9	replaces PU-7-E9	Each 2 2 6
4159062		LID only with rubber pads for battery		Each 2 3
LR-432		RIM headlamp		Each 9 9
MC-4		NIPPLE magneto end ignition wire	017379	Doz. 6 0
MC-5		SPRING return ignition cable		Doz. 2 0
MC-6		SLEEVE ignition cable screws in magneto		Doz. 6 0
MC-7		ADJUSTER ignition cable		Doz. 3 0
MC-8		LOCK NUT ignition, cable adjuster		Doz. 2 0
MC-9		CAP rubber, for cable entry into magneto		Doz. 3 0
M-3550-2		WASHER lock ignition cable sleeve		Doz. 2 0
PUWV-7-E		BATTERY uncharged		Each 2 2 6
PUZ-7-E-9		BATTERY with lid (dry charged)	replaces PUWV-7-E	Each 2 2 6
S-2171		LID for battery		Each 2 0
SA-147		CONNECTOR screwed for battery	same as S71395	Each 9

SPEEDOMETERS

491-3	HEAD ONLY	speedometer trip, 120 m.p.h.		Each 3 10 0
491-7	HEAD ONLY	speedometer, trip, 180 k.p.h.		Each 3 10 0
52100-1-54	CABLE	speedometer, drive, inner only		Each 11 3
52100-1-65	CABLE	speedometer, drive, inner only		Each 11 3
52283-2	GEAR BOX	speedometer, complete		Each 2 2 6
52283-5	GEAR BOX	speedometer, complete		Each 2 2 6
53205	BULB	6 volts, 1.8 watts, P.I.B.C. for head		Each 1 6
			plus 3d. P. tax	
53279-1	SET	of bulb holding parts		Each 5 0
53395-1-54	CABLE	speedometer, drive, complete		Each 1 2 6
53395-1-65	CABLE	speedometer, drive, complete		Each 1 2 6
53398-1-54	CABLE	speedometer, drive, outer only		Each 11 3
53398-1-65	CABLE	speedometer, drive, outer only		Each 11 3
Ni-253	NUT	fixing, speedometer head to bracket		Doz. 2 0
S-433-1-L	HEAD	only speedometer, trip 80 m.p.h.		Each 3 10 0
S-433-5-L	HEAD	only speedometer trip 140 k.p.h.		Each 3 10 0
S-480-3-L	HEAD	only speedometer trip 120 m.p.h.		Each 3 10 0
S-480-7-L	HEAD	only speedometer trip 180 k.p.h.		Each 3 10 0
W-7216	WASHER	spring speedometer, bracket nut		Doz. 1 0

MAKERS PRICE INCREASE

AS FROM JAN 1st 1964, Components, Gaskets, Washers, parts thereof are increased by 10%

CHAINS AND WORKSHOP TOOLS  
SECTION  
in  
NUMERICAL AND ALPHABETICAL  
ORDER

82

83



CHAINS AND WORKSHOP TOOLS SECTION

CHAINS

Old No.	New No.	Description.	Remarks.	Price. £ s. d.
110038-46	017294	CHAIN	magneto, 46 links, $\frac{3}{8}$ in. by .225 in. ... error in some lists as 110036-46 ...	Each 7 7
110038-47	017295	CHAIN	dynamo, 47 links, $\frac{3}{8}$ in. by .225 in. ... error in some lists as 110036-47 ...	Each 7 9
110038-49	017296	CHAIN	dynamo, 49 links, $\frac{3}{8}$ in. by .225 in. ... error in some lists as 110036-49 ...	Each 8 0
110038-58	017297	CHAIN	magneto, 58 links, $\frac{3}{8}$ in. by .225 in. ... error in some lists as 110036-58 ...	Each 9 6
110046-26		LINK	connecting, $\frac{1}{2}$ in. by .305 in. ...	Each 8
110046-27		CLIP	spring, for connecting links, $\frac{1}{2}$ in. by .305 in. ...	Each 1 6
110046-30		LINK	cranked, $\frac{1}{2}$ in. by .305 in. ...	Doz. 1 2
110046-65	017381	CHAIN	front, 65 links, $\frac{1}{2}$ in. by .305 in. ...	Each 1 0 9
110046-66	017298	CHAIN	front, 66 links, $\frac{1}{2}$ in. by .305 in. ...	Each 1 1 1
110046-67	017299	CHAIN	front, 67 links, $\frac{1}{2}$ in. by .305 in. ...	Each 1 1 5
110056-26		LINK	connecting, $\frac{3}{8}$ in. by $\frac{3}{8}$ in. ...	Each 1 1
110056-27		CLIP	spring, for connecting link, $\frac{3}{8}$ in. by $\frac{3}{8}$ in. ...	Doz. 2 0
110056-30		LINK	cranked, $\frac{3}{8}$ in. by $\frac{3}{8}$ in. ...	Each 1 7
110056-90	017380	CHAIN	rear, 90 links, $\frac{3}{8}$ in. by .380 in. ...	Each 2 2 2
110056-91	017300	CHAIN	rear, 91 links, $\frac{3}{8}$ in. by .380 in. ...	Each 2 2 8
110056-94	017301	CHAIN	rear, 94 links, $\frac{3}{8}$ in. by .380 in. ...	Each 2 4 1
110056-96	017375	CHAIN	rear, 96 links, $\frac{3}{8}$ in. by .380 in. ...	Each 2 5 0
110056-98	017376	CHAIN	rear, 98 links, $\frac{3}{8}$ in. by .380 in. ...	Each 2 5 11

WORKSHOP TOOLS

Old No.	Description.	Remarks	Price. £ s. d.
A-8078	LAP	for big end liner	Each 5 4 5
A-9640 $\frac{1}{2}$	TOOL	for locating timing side axle	Each 1 11 2
B-152	EXTRACTOR	for tappet guides	Each 4 18 5
B-247	TOOL	for removing and replacing valve guides	Each 1 6 5
B-2139	CHAIN	grip	Each 7 2
B-2140	TOOL	for separating flywheels	Each 1 12 10
B-2141	TOOL	for replacing fork inner tubes	Each 1 10 0
B-2150	SPANNER	for crankpin nuts, with bar	Each 2 9 2
B-2151	EXTRACTOR	for timing pinion	Each 1 13 0
B-2237	SPANNER	peg, for rear leg screwed cap (1950)	Each 3 7
B-3334	SPANNER	for front hub adjusting ring	Each 1 11 2
B-3335	SPANNER	for rear hub adjusting ring	Each 1 1 2
B-3570	GUIDE BUSH	for rear leg oil seal (1950)	Each 1 2
B-3571	SPANNER	serrated ring, rear legs (1950)	Each 10 10
B-3572	CLAMP	for rear leg piston (1950)	Each 1 6 5
B-4018	BLOCK	for rear leg top tube (1950)	Each 5 1
B-4108	LEVER	magneto and dynamo sprocket removal	Each 4 6
B-4212	GAUGE	for oil pressure	Each 1 10 0
B-4274	SPANNER	peg, for ring nuts rear leg (1951)	Each 19 2
B-4334	SPANNER	peg, for rear leg damper rod (1951)	Each 3 7
B-4401	GUIDE BUSH	for rear leg oil seal (1951)	Each 2 8
B-4402	BLOCK	for rear leg inner tube (1951)	Each 10 10
B-4432-ABCD	BLOCK	for rear leg outer tube (1951)	Each 9 0
B-4494	TOOL	for replacing frame stay rubbers	Each 1 16 0
B-5761	SPANNER	articulated for slider extension	Each 1 10 0
	TOOL	for locating timing side axle	Each 1 11 2

ALL WORKSHOP TOOLS LISTED ABOVE ARE NETT.

CONTROL CABLES  
(inner and outer)  
AND SUNDRIES

CONTROL CABLES AND SUNDRIES

Number.	Description.	Remarks.	Price.
			£ s. d.
BMB	BADGE	monogram (Matchless) for brooch fixing	Each 1 6
BMH	BADGE	monogram (Matchless) for button hole	Each 1 6
BMT	BADGE	monogram (Matchless) for Tie...	Each 1 6
H-14	PLUG	sparkling, LODGE	Each 5 0
H-14-S	PLUG	sparkling, LODGE	Each 5 0
HF-128-AM	HORN	with bracket	Each 15 0
HF-128-AMB	BRACKET	for horn	Each 3 0
L-10	PLUG	sparkling, CHAMPION	Each 5 4
11-25 $\frac{1}{2}$	WIRE	inner, ignition, 25 $\frac{1}{2}$ in. long	same as 000527-25 $\frac{1}{2}$ Each 5
11-29	WIRE	inner, ignition 29 in. long	" " 000527-29 Each 5
11-32 $\frac{1}{2}$	WIRE	inner, air, 32 $\frac{1}{2}$ in. long	" " 000527-32 $\frac{1}{2}$ Each 5
11-32 $\frac{3}{4}$	WIRE	inner, air, 32 $\frac{3}{4}$ in. long	" " 000527-32 $\frac{3}{4}$ Each 5
11-34	WIRE	inner, ignition, 34 in. long	" " 000527-34 Each 6
11-36	WIRE	inner, air, 36 in. long	" " 000527-36 Each 6
11-37 $\frac{1}{2}$	WIRE	inner, ignition, 37 $\frac{1}{2}$ in. long	" " 000527-37 $\frac{1}{2}$ Each 6
11-38	WIRE	inner, air, 38 in. long	" " 000527-38 Each 7
11-38 $\frac{1}{2}$	WIRE	inner, air, 38 $\frac{1}{2}$ in. long	" " 000527-38 $\frac{1}{2}$ Each 7
11-45	WIRE	inner, ignition, 45 in. long	" " 000527-45 Each 7
11C-6	CASING	outer, ignition, 6 in. long	" " 000526-6 Each 4
11C-22	CASING	outer, ignition, 22 in. long	" " 000526-22 Each 8
11C-25 $\frac{1}{2}$	CASING	outer, ignition, 25 $\frac{1}{2}$ in. long	" " 000526-25 $\frac{1}{2}$ Each 8
11C-25 $\frac{3}{4}$	CASING	outer, ignition, 25 $\frac{3}{4}$ in. long	" " 000526-25 $\frac{3}{4}$ Each 8
11C-28 $\frac{1}{2}$	CASING	outer, air, 28 $\frac{1}{2}$ in. long	" " 000526-28 $\frac{1}{2}$ Each 10
11C-29	CASING	outer, ignition, 29 in. long	" " 000526-29 Each 10
11C-32	CASING	outer, air, 32 in. long	" " 000526-32 Each 11
11C-34 $\frac{1}{2}$	CASING	outer, ignition, 34 $\frac{1}{2}$ in. long	" " 000526-34 $\frac{1}{2}$ Each 1 2
11C-36 $\frac{1}{2}$	CASING	outer, throttle, 36 $\frac{1}{2}$ in. long	" " 000526-36 $\frac{1}{2}$ Each 1 2
11C-36 $\frac{3}{4}$	CASING	outer, air, 36 $\frac{3}{4}$ in. long	" " 000526-36 $\frac{3}{4}$ Each 1 3
11C-39	CASING	outer, throttle, 39 in. long	" " 000526-39 Each 1 3
11C-39 $\frac{1}{2}$	CASING	outer, ignition, 39 $\frac{1}{2}$ in. long	" " 000526-39 $\frac{1}{2}$ Each 1 5
12-25	WIRE	inner, exhaust lifter, 26 in. long	" " 000530-25 Each 5
12-26	WIRE	inner, exhaust lifter, 26 in. long	" " 000530-26 Each 5
12-35	WIRE	inner, exhaust lifter, 35 in. long	" " 000530-35 Each 6
12-40 $\frac{1}{2}$	WIRE	inner, front brake, 40 $\frac{1}{2}$ in. long	" " 000530-40 $\frac{1}{2}$ Each 6
12-43 $\frac{1}{2}$	WIRE	inner, clutch, 43 $\frac{1}{2}$ in. long	" " 000530-43 $\frac{1}{2}$ Each 6
12-44	WIRE	inner, front brake, 44 in. long	" " 000530-44 Each 6
12-52	WIRE	inner, clutch, 52 in. long	" " 000530-52 Each 7
12C-21	CASING	outer, valve lifter, 21 in. long	" " 000529-21 Each 9
12C-22 $\frac{1}{2}$	CASING	outer, exhaust lifter, 22 $\frac{1}{2}$ in. long	" " 000529-22 $\frac{1}{2}$ Each 9
12C-26	CASING	outer, exhaust lifter, 26 in. long	" " 000529-26 Each 10
12C-30 $\frac{1}{2}$	CASING	outer, exhaust lifter, 30 $\frac{1}{2}$ in. long	" " 000529-30 $\frac{1}{2}$ Each 1 4
12C-38 $\frac{1}{2}$	CASING	outer, front brake, 38 $\frac{1}{2}$ in. long	" " 000529-38 $\frac{1}{2}$ Each 1 5
12C-39 $\frac{1}{2}$	CASING	outer, clutch, 39 $\frac{1}{2}$ in. long	" " 000529-39 $\frac{1}{2}$ Each 1 5
12C-47	CASING	outer, clutch, 47 in. long	" " 000529-47 Each 1 8
SW2-39 $\frac{1}{2}$	WIRE	inner, throttle, 39 $\frac{1}{2}$ in. long	" " 000535-39 $\frac{1}{2}$ Each 5
SW2-40 $\frac{1}{2}$	WIRE	inner, throttle, 40 $\frac{1}{2}$ in. long	" " 000535-40 $\frac{1}{2}$ Each 5
SW-2-41	WIRE	inner, throttle, 41 in. long	" " 000535-41 Each 5
SW-2-41 $\frac{1}{2}$	WIRE	inner, throttle, 41 $\frac{1}{2}$ in. long	" " 000535-41 $\frac{1}{2}$ Each 5