

# SPARES LIST

for

1951

500 c.c. O · H · V

# "SUPER CLUBMAN"

VERTICAL TWIN



# MATCHLESS MOTOR CYCLES

PROPRIETORI I ALIOCIATID HOTON CICLIS LIMITED PLUMSTEAD - LONDON - S.E.IR

\*

Price:
TWO SHILLINGS and SIXPENCE

EDITION CLIF

# ILLUSTRATIONS

							Page
CARBURETTER	•••						13
CLUTCH AND KICK-STARTER		•••					23
CONTROL LEVERS							34
CRANKCASE, CRANKSHAFT AND	CONI	NECTI	NG RO	DDS	•••		4
CYLINDERS, HEADS, PISTONS, VA	LVES A	AND T	IMING	GEA	3		8
EXHAUST PIPES, SHOCK ABSORB	ER AN	D CH	AINS	•••			16
FRAME AND TELEDRAULIC REAR	LEG						25
FRONT TELEDRAULIC FORKS ANI	STEE	RING	DAME	ER			28
GEAR OPERATING PARTS							21
GEAR BOX SHELLS, GEARS AND	SHAFT	S	•••	•••		•••	18
OIL PUMPS, DYNAMO AND MAG	NETO			•••			11
STANDS, GUARDS, CHAINCASES	AND T	TOOL	BOXES	5			30
TANKS AND PIPES		•••					36
WHEELS AND BRAKES	•••			/			38


# ALWAYS QUOTE THE COMPLETE ENGINE NUMBER

(Including all the Letters in it)

THIS ENABLES US TO IDENTIFY THE MACHINE

EACH SERIES OF FRAMES IS NUMBERED FROM ZERO UPWARDS. THEREFORE THE QUOTATION OF A FRAME NUMBER ONLY DOES NOT PERMIT A MACHINE TO BE IDENTIFIED.

# SPARES LIST

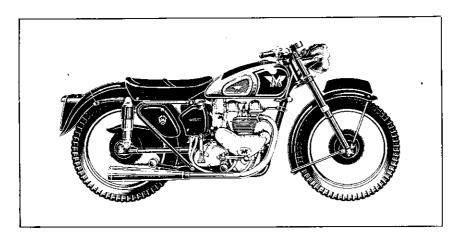

# MATCHLESS "SUPER CLUBMAN"

VERTICAL TWIN

Bore 66 m.m.

Stroke 72.8 m.m.

Capacity 498 c.c.



Compiled and Issued by the Manufacturers:

# MATCHLESS MOTOR CYCLES

(Proprietors: ASSOCIATED MOTOR CYCLES LIMITED)

Registered Offices:

PLUMSTEAD ROAD, PLUMSTEAD LONDON, S.E.18 . ENGLAND

Nearest Station: WOOLWICH ARSENAL (Southern Region Railway) Factories:
BURRAGE GROVE and MAXEY ROAD
PLUMSTEAD, S.E.18

Telegrams and Cables: "MATCHLESS, WOL-LONDON"
Telephone: WOOLWICH 1223 (5 Lines)
Codes: A.B.C. 5th and 6th Edition; Bentley's; and Private Codes

All correspondence to :—
MATCHLESS MOTOR CYCLES, PLUMSTEAD ROAD, LONDON, S.E.18

Price: TWO SHILLINGS and SIXPENCE

**EDITION CL-19** 

#### (I) TERMS OF BUSINESS.

Our terms are :- CASH WITH ORDER,

CASH AGAINST PRO-FORMA INVOICE, OR

APPROVED LEDGER ACCOUNT.

Customers who wish to avoid delay can open deposit accounts and the usual deposit is £5.

Orders from abroad should be accompanied by a remittance to cover the costs of goods and postal charges.

We do not send goods by "CASH ON DELIVERY" (C.O.D.).

#### (2) PRICES AND SPECIFICATIONS.

All prices, specifications and conditions are subject to alteration without notice. The prices of spares do not include the costs of packing and carriage.

#### (3) CARRIAGE AND PACKING.

All invoices for spare parts will be SURCHARGED by FIVE PER CENT. to cover the cost of packing and postage, or carriage, and the minimum surcharge is sixpence. (Home orders only.)

A special packing case, or crate, is required for some spares to ensure freedom from damage in transit. In such circumstances a special charge for the value of the case, or crate, will be made in addition to the five per cent. surcharge but the special charge will be credited in full if the container is promptly returned to our factory carriage paid and in good condition.

#### (4) HOW TO ORDER SPARES.

STATE: (a) The Model of the machine.

- (b) The complete engine number. (See paragraph 5.)
- (c) The frame number. (See paragraph 5.)
- (d) The part numbers of the spares required.
- (e) A description of each spare.
- (f) The quantity required of each item.
- (g) How the spares are to be sent. (Post, Parcels Post, Passenger train or Goods train.)
- (h) Your full name and address. These particulars are best written in BLOCK LETTERS.
- (i) Mention if, or not, you have an account with us.
- ALSO :— Unless you have a deposit or ordinary account, enclose a remittance to cover the cost of the spares plus the five per cent. surcharge. (See paragraph 3.)

When cash is sent any excess will be refunded without prior application.

NOTE :-- When sending orders by telegram or cable do not omit your name and address from the message.

#### (5) IDENTITY.

To ensure the supply of correct spares it is essential we can identify the machine for which they are required. The ONLY WAY to do that is for us to know the COMPLETE ENGINE and frame numbers.

The engine number is stamped on the crankcase, IN FRONT OF LEFT CYLINDER, and may have one or more letters incorporated in it. THE COMPLETE NUMBER MUST BE QUOTED.

The frame number is stamped on the right-hand side of the frame lug that is below the saddle.

#### (6) SERVICE.

The SERVICE AND REPAIR DEPARTMENT is situated in BURRAGE GROVE, PLUMSTEAD, LONDON, S.E.18, and is open on Mondays to Fridays from 8.30 a.m. to 12.55 p.m.—2 p.m. to 5.30 p.m. It is closed on Saturdays, Sundays and National Holidays.

It exists for the purpose of :-

- (a) Giving technical assistance verbally or through the Post.
- (b) Supplying spare parts over the counter or through the Post.
- (c) Repairing and re-conditioning machines, or parts of machines, of our make.

If it is considered necessary to bring a machine, or parts, to the factory for an urgent repair IT IS ESSENTIAL you make an appointment beforehand to avoid disappointment. This can be done by letter or telephone.

#### (7) REPAIRS.

The instructions regarding repairs should be clear and definite, otherwise the cost may be greater than that expected. We shall be pleased to give estimates for repairs if parts are sent to us for that purpose. If the estimate is accepted, no charge is made for the preliminary examination, but, should it be decided not to have the work carried out, it may be necessary to make a charge to cover the cost of whatever dismantling and re-assembly may have been done to prepare the estimate.

#### (8) REPAIRS TO PROPRIETARY FITTINGS.

We do not repair carburetters, chains, electrical equipment, saddles, sparking plugs, speedometers and tyres. On page 82 of the "MAINTENANCE MANUAL AND INSTRUCTION BOOK" will be found the names and addresses of the manufacturers of the proprietary equipment we fit, all of whom service and repair equipment they make.

#### (9) PATTERNS.

Parts sent to us as patterns, or for repair, should have attached to them a label bearing the sender's full name and address. The instructions regarding such parts should be sent under separate cover.

#### (10) GUARANTEE.

All parts made by us, and sold as spares, are subject to the same Limited Guarantee as that issued with each new motor cycle and that guarantee is printed in full on Page 85 of the "MAINTENANCE MANUAL AND INSTRUCTION BOOK."

#### (II) INSTRUCTION BOOK.

A "MAINTENANCE MANUAL AND INSTRUCTION BOOK" (Edition CM-16) has been compiled and published by us.

It is an eighty-eight page book with thirty-five illustrations and one copy is supplied free, upon application with each new motor cycle. Replacement copies are two shillings and sixpence each.

#### (12) CORRESPONDENCE.

Our routine is organised into different departments. Therefore delay cannot be avoided if matters relating to more than one department are contained in one letter.

Consequently when communicating with more than one department it is desirable to do so on SEPARATE SHEETS. Each sheet should bear the sender's name and address. IN PARTICULAR, requests for TECHNICAL ADVICE should not be on the same sheets as ORDERS FOR SPARE PARTS.

MATCHLESS MOTOR CYCLES, PLUMSTEAD, LONDON, S.E.18.


#### NOTE

The numbers, in brackets, that appear in the "Description" columns relate to the numbered foot notes regarding items so specially indicated.

The quantities per machine of each item are entered in the "Qty." columns. "R" indicates as may be required.

The illustrations are not to scale and are not necessarily accurate in detail. Some items are not illustrated.

WHEN IN DOUBT REGARDING THE NAMES AND PART NUMBERS OF THE PARTS YOU REQUIRE, PLEASE SEND THE OLD PARTS TO SERVE AS PATTERNS.

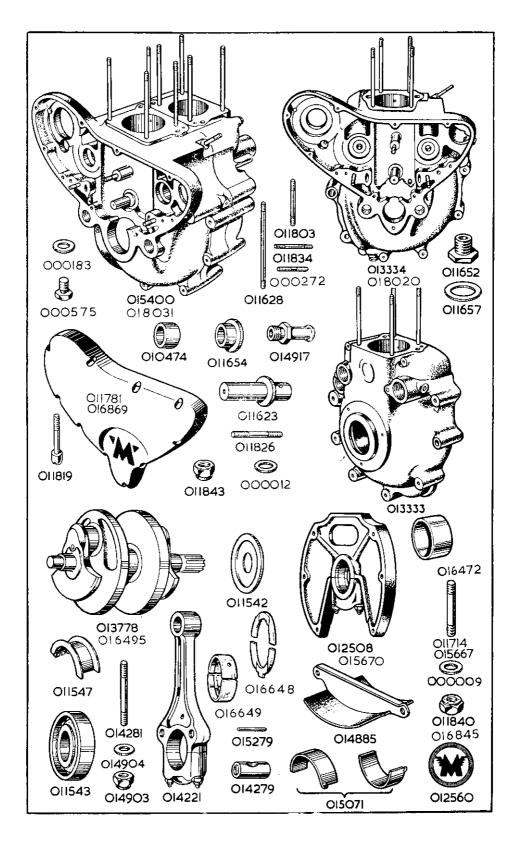

			PRICE
PART	DESCRIPTION	QTY.	EACH
NUMBER		OFF	£s.d.

#### **CRANKCASE**

015400		Crankcase, complete (1). Used on engines up to 5966	1	
018031		Crankcase, complete (1). Used on engines after 5966	i	
013333		Crankcase, driving side only (2)	i	
013334		Crankcase, timing side only (3). Used on engines up to 5966	i	
018020		Crankcase, timing side only (3). Used on engines after 5966	i	• • •
012508		Web, centre, with cap, studs, washers and nuts (no bearing).	- 1	
012300	•••	Used on engines up as EQU.		
015670		Used on engines up to 5966	ı	• • •
013670	• • •	Web, centre, with cap, studs, washers and nuts (no bearing and		
01.4005		thrust washers). Used on engines after 5966	- 1	
014885	• • •	Deflector, oil, for crankcase. Used on engines up to 5966	1	
011781		Cover, for timing gear. Used on engines up to 5966	1	
016869		Cover, for timing gear. Used on engines after 5966	ŧ	
012560		Badge, monogram, for driving side crankcase	- 1	
011826		Stud, fixing centre web, $1\frac{15}{32}$ in. by $\frac{1}{4}$ in. by 26 and 20	6	
000012		Washer, plain, for centre web top fixing studs (same as STD.12)	2	,
000012		Washer, plain, for centre web centre fixing studs (same as STD.12)	2	
000012		Washer, plain, for centre web bottom fixing studs (same as 315.12)		
		(same as STD.12). Used on engines after 5966	า	
011843		Nut for centre web fixing stude	2	
011714		Nut, for centre web fixing studs	6	•••
011717	• • •	Study for centre web bearing cap, $2\frac{1}{16}$ ins. by $\frac{1}{16}$ in. by 18 and 18.	_	
015447		Used on engines up to 5966	2	
015667	• • • •	Stud, for centre web bearing cap, $2\frac{11}{16}$ ins. by $\frac{3}{8}$ in. by 20 and 20.		
		Stud, for centre web bearing cap, $2\frac{11}{16}$ ins. by $\frac{3}{8}$ in. by 20 and 20. Used on engines after 5966	2	
000009		vvasner, plain, for centre web bearing cap stud		~
		(same as STD.9). Used on engines up to 5966	2	
010000		Washer, plain, for centre web bearing cap stud		
		(same as STD.10). Used on engines after 5966	2	,,,
011840		Nut, for centre web bearing cap stud. Used on engines up to 5966	2	
016845		Nut, for centre web bearing cap stud. Used on engines after 5966	2	
011628		Stud, in driving side crankcase, for cylinder and head, 5 76 ins. by 5 in.	2	• • • •
		by 26 and 22.	4	
011628		Stud, in timing side crankcase, for cylinder and head, $5\frac{7}{16}$ ins. by $\frac{5}{16}$ in.	7	• • •
017020		by 24 and 22		
011834		by 26 and 22	4	• • •
011034	•••	or pump carrying plate, la in, by	_	
000373		5 in. by 26 and 22	3	
000272		Stud, in timing side crankcase, for fixing magneto, $1\frac{1}{4}$ in. by $\frac{5}{16}$ in.		
		by 26 and 22 (same as STD.272)	2	
011803		Stud, in timing side crankcase, for dynamo strap, $1\frac{13}{16}$ in. by $\frac{1}{4}$ in.		
		by 26 and 20	- 1	
011623		Shaft, in timing side crankcase, for intermediate gear	1	
000575		Plug, drain, for timing side crankcase (same as STD.575)	1	
000183		Washer, fibre, for crankcase drain plug (same as STD.183)	F	
918110		Screw, retaining timing gear cover	10	
011652		Adaptor, to accommodate oil feed and return pipe retaining banjo		
		pins. (Screws into timing side crankcase)	2	
011657		Washer, fibre, for banjo pin adaptors	_	• • •
014917		Union, to accommodate crankcase release valve pipe. (Screws	2	
		into driving side crankcase)		
000183		Washer fibre for emploses release value size uni	1	• • •
000103	•••	Washer, fibre, for crankcase release valve pipe union		
010474		(same as STD.183)		- • •
010474	• • • •	Bush, plain, for camshafts. (In driving side crankcase)	2	
011654	•••	Bush, flanged, for camshafts. (In timing side crankcase)	4	
016472		Tunnel, for camshaft chamber (fits between crankcase halves)	2	
		•		

I.—Includes:—Driving crankcase. Timing crankcase, centre web with studs (no bearing, washers and oil deflector). Bushes for camshafts. Cylinder studs. Shaft for intermediate gear. Studs for pump plate. Two magneto studs. Dynamo strap stud. Timing gear cover and screws. Monogram badge. Three bolts. One stud. Two nuts. Five washers.

<sup>2.—</sup>Includes:—Two camshaft bushes. Four cylinder studs. Six studs for centre web. (No badge.)

<sup>3.—</sup>Includes:—Four camshaft bushes. Four cylinder studs. Shaft for intermediate gear. Three studs for pump plate. Two studs for magneto. One stud for dynamo strap. (No timing gear cover and screws.)

PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.

		ATT CONNECTING BODS AND BEADINGS			
CKANK		AFT, CONNECTING RODS AND BEARINGS			
013778 016495		Crankshaft, plugged, but bare. Used on engines up to 5966 Crankshaft, plugged, but bare. Used on engines after 5966		•••	
011542		Washer, for crankshaft	2		
011547	•••	Bearing, plain, for centre bearing (in halves). Used on engines up to 5966per pair	ı		
016649		Rearing plain for centre hearing (in halves). Used on engines	I		
<b></b>		after 5966per pair	2	•••	
016648 011543	•	Washer, thrust, for centre bearing. Used on engines after 5966 Bearing, roller, for crankshaft. (Parts of this bearing not sold separately), 1\(^3_4\) in. internal, 3 ins. external, \(^1_6\) in. wide. Manu-	_	•••	
		facturers part number RLS-12½	2		
014221		Rod, connecting, assembly. (No big end bearing)	2	• • •	
01 <b>4</b> 281	• • • •	Stud, for connecting rod, $2\frac{23}{32}$ ins. by $\frac{5}{16}$ in. by $\frac{26}{16}$	4	•••	
014279	• • •	Trunnion, for connecting rod	4	•••	
015279		Rivet, locating connecting rod stud	4	• • • •	
014904	• • •	Washer, plain, for connecting rod stud	4		
014903		Nut, for connecting rod stud	2		
015071	• • • •	Bearing, plain, for connecting rod. (Big-end) in halvesper pair			
		The following undersize bearings (in pairs) can be supplied. It is need journals ground to suit.			o have the
015072		Bearing, plain, for centre bearing, 010 in. Undersize			
016670	•••	Bearing, plain, for centre bearing, '010 in. Undersize			
015402		Bearing, plain, for connecting rod, '010 in. Undersize	2	• • •	
011713 011716 015518 015803 018024 015804		Cylinder Washer, paper, for cylinder base Piston, bare, 020 in. oversize Piston, bare, 040 in. oversize Piston, complete, normal size	2 2 2 2		
015805 018025		Piston, complete, ·020 in. oversize	2		
		The above complete pistons include:—			
		Piston, two compression rings, one scraper ring. Gudgeon pin, two circlips for gudgeon pin.			
010631		Ring, compression, normal size	4		
015522		Ring, compression, 020 in. oversize	4	• • •	
016441		Ring, compression, .040 in. oversize	2		
010632	• • •	Ring, scraper, normal size Ring, scraper, ·020 in. oversize.	5		
015523	• • • •	Ring, scraper, .040 in. oversize	ź		
016442	• • • •		2		
011731		Pin, gudgeon	4		
014283 015121		Head, for cylinder, bare, left	Ē		
015122	•••	Head for cylinder, bare, right	- 1		
015526		Head, for cylinder, with valve guides, guide circlips and manifold studs, left			
015527		Head, for cylinder, with valve guides, guide circlips and manifold studs, right			
		The above heads are only used on engines up to 5966.			
016592		Head, for cylinder, bare, left	1		
016593		Head, for cylinder, bare, right	i i	• • •	
018035	•••	- II4 fulindam wish valva muidae muida circlins and manifold			
018036	•••	- II I fam auticular with valve muides quide sirclins and manifold			
		The above heads are only used on engines after 5966.	•	•••	

		•		PRICE
PART NUMBER	DESCRIPTION		QTY. OFF	EACH £ s. d.

# CYLINDERS, PISTONS, HEADS AND VALVES—continued.

011715		Gasket, for cylinder head	2	
014163		Valve, inlet	2	
014165		Valve, exhaust	2	
011770		Spring, inner, for valve	4	
011769				
014169		Seat, for valve springs	4	
014168		Collar, for valve springs		
014167		Collet, for valve stems (in pairs)		
014170		Guide, for inlet valves	2	
014171		Guide, for exhaust valves		
011111		Circlip, locating valve guides		
011635		Nut, retaining cylinders and heads		
011634		Spacer, 35 in. long for head retaining nuts		
110000		Washer, plain, for head retaining nuts (same as STD.11)		
010625	•••	Stud. retaining inlet manifold, 1 in, by in, by 26 and 20		

#### **RE-BORING**

Cylinders may be re-bored to .020 in. or .040 in. oversize and pistons (with rings) supplied to suit. The charge is for the pair, with an additional if new gudgeon pins and circlips are also supplied. Cylinders sent for re-boring should be packed in stout cases which will be used by us for their return. Carriage is additional.

If a complete machine, or engine, is sent to us for cylinder re-boring, there will be an additional charge, according to the time taken, for dismantling and assembly.


#### **TIMING GEAR**

011784	 Camshaft, inlet	- 1	
011785	 Camshaft, exhaust	- 1	
011620	 Gear, on camshaft, 60 teeth	2	
000573	 Key, locating camshaft gears (same as STD.573)	2	
011653	 Nut, retaining camshaft gears	2	
016209	 Pinion, on crankshaft, 30 teeth	ı	
016210	 Spacer, $\frac{7}{32}$ in. long, for crankshaft pinion	1	
000573	 Key, locating crankshaft pinion (same as STD.573)	1	٠
011776	 Bolt, retaining crankshaft pinion, threaded 1/2 in. by 20	1	
010589	 Washer, plain, for crankshaft pinion bolt	1	
011621	 Gear, intermediate, with bush, 60 teeth		
015278	 Bush, for intermediate gear	1	
014154	 Follower, for camshaft	4	
011626	 Spindle, for camshaft followers	2	
011627	 Spacer, 1 in. long between camshaft followers	2	

#### **ROCKERS AND PUSH RODS**

014284 014285		Rocker, with bushes (left inlet and right exhaust)		•••
014222		Spindle for rockers	4	
014226		Washer, spring, double coil, for rocker spindle	4	
014275		Washer, plain, for either side of rocker spindle spring washer	8	
014275		Washer, plain, for clamping end of rocker spindle	4	
011760		Bolt, clamping rocker spindle. (Thread No. 2 B.A.)	4	
015021		Washer, plain, for rocker spindle clamping bolt	4	
011846		Nut, for rocker spindle clamping bolt	4	
014245		Bush, for rockers. (Two in each rocker)	Ŕ	
014381		Cover, for rockers	-	
014411	•••	Gasket, for rocker covers		
014412		Bolt, short head, retaining rocker covers, 2 B.A. by $1\frac{13}{12}$ in. under	7	•••
VITTIZ	•••	head	8	
014413		Bolt, long head, retaining rocker covers, 2 B.A. by In in. under head	Ř	
014120		Rod, push, assembled with ends	4	
014116		Rod, push, bare	7	
014115	• • •		- 1	• • •
		End, upper, for push rod	4	•••
014114		End, lower, for push rod	4	• • •


Ţ

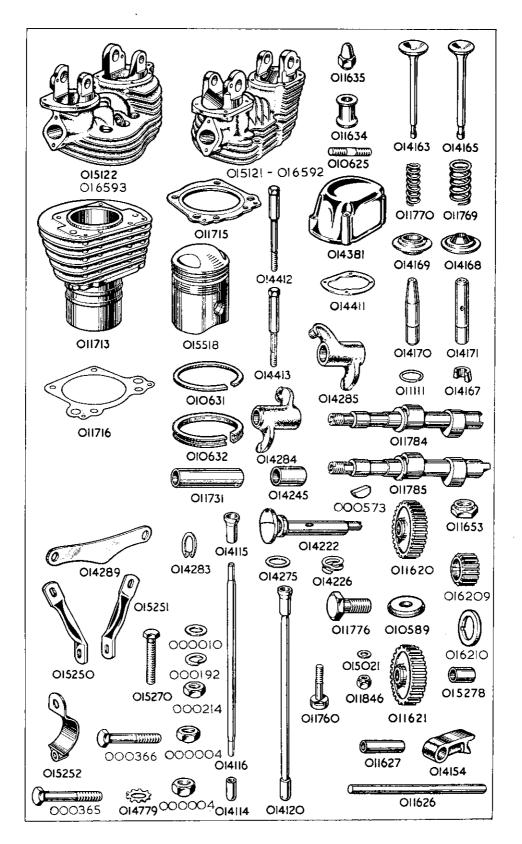

PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.
ENGINI	E STEADY STAY		
015250	Stay, engine steady, right side	. 1	
015251	Stay, engine steady, left side	. i	
015252	Clip, half, only, on frame tube, for steady stay	. 2	
000365	Bolt, securing fronts of steady stay frame clips $l_{\frac{1}{16}}$ in. by $\frac{5}{16}$ in. by $\frac{26}{16}$	5	
	(same as STD.365)	.	
014779	Washer, lock, for steady stay frame clip front bolt		
000004 000366	Nut, for steady stay frame clip front bolt (same as STD.4)	_	
000004	Nut, for steady stays and frame clip securing bolt (same as STD.4)	. i	
014289	Plate, tie, for cylinder heads and steady stays		
015270	Bolt, retaining steady stays and tie plate to head, $l_{\frac{1}{8}}$ in. by $\frac{5}{16}$ in. by 27	2 2	
000010	Washer, plain, under heads of tie plate bolts (same as STD.10)	. 2	
000192	Washer, spring, for tie plate bolts (same as STD.192)		
000214	Nut, for tie plate bolts (same as STD.214)	. 2	
OIL PU	MPS		
	The following parts are only used on engines up to 5966		
013345	Oil pumps complete, assembled on carrying plate (4)	. 1	
015017	Plate, carrying oil pumps, bare (5)	. 1	
011842	Nut, securing pump carrying plate, to timing side crankcase	. 3	
000011	Washer, plain, for pump carrying plate fixing nuts (same as STD.11)	) 3	
000021	Ball, 3 in. steel, for return pump bleed valve (same as STD.21)		
000701	Spring, for return pump bleed valve ball (same as STD.701)		
015001	Screw, securing return pump bleed valve spring. (Grub screw	, ,	
012333	$\frac{1}{4}$ in, long by $\frac{5}{16}$ in, by 22)	: i :::	
012336	Gear, driving, for oil feed pump, $\frac{1}{4}$ in. wide	. i	
012337	Gear, driven, for oil feed pump, ‡ in. wide	. 1	
011554	Plate, end, for oil feed pump	. 1	
011556	Pin, dowel, locating oil feed pump end plate		
011617	Washer, paper, between oil feed pump and carrying plate		
000453	Screw, retaining oil feed pump to carrying plate, I in. by 2 B.A		
011553	(same as STD.453)		
011559	C . 1.1.1. (a. 1.1.1. a. 1.1.1	.	
011560	Gear, driving, for oil return pump, $\frac{1}{8}$ in. wide	:	
011554	Plate, end, for oil return pump		
011556	Pin, dowel, locating oil return pump end plate		
011617	Washer, paper, between oil return pump and carrying plate		
000453	Screw, retaining oil return pump to carrying plate, I in. by 2 B.A	• _	
MOT	(same as STD.453)		
	E 4.—Includes all the items listed above except the three 011842 and 000 washers.	_	
NOTI	E 5.—Includes the 000021, 000701 and 015001 bleed valve ball, spring and	retaining	grub screw.
OIL PU	MPS		
010037	The following parts are only used on engines after 5966.		
018037 015017	Oil pumps, complete, assembled on carrying plate (6)		
013017	Plate, carrying, oil pumps, bare (7)	. 1 . 3	
000011	Washer, plain, for pump carrying plate fixing nuts (same as STD.11		
120000	Ball, 3 in. steel, for return pump bleed valve (same as STD.21)		
000701	Spring, for return pump bleed valve ball (same as STD.701)	. 1	
015001	Screw, securing return pump bleed valve spring. (Grub screv	<b>v</b>	
01/127	큐 in. long by 옷 in, by 22)	.	
016137	Gasket, oval, behind pump carrying plate	. 2	
016138	Gasket, round, behind pump carrying plate	.	
015568 015599	Body, oil feed pump, for $\frac{1}{4}$ in, gears with $\frac{7}{16}$ in, shaft	. 1	
V134//	Pin, dowel, for oil feed pump	. 2	


PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.					
OIL PUMPS—continued.								
015576	Plate, front end, for oil pump feed body	ļ						
015573 011617	Plate, back end, for oil pump feed body	!						
000453	Washer, paper, between oil feed pump and carrying plate	l						
	(same as STD.453)	3						
015579	(same as STD.453)	ĭ						
015580	Gear, driven, for oil feed pump, $\frac{1}{4}$ in, wide. $\frac{1}{16}$ in, shaft	١,,,						
015567	body, oil return pump, for $\frac{1}{6}$ in. gears with $\frac{1}{16}$ in. shaft	_ l						
015599	Pin, dowel, for oil return pump	2						
015576	Plate, front end, for oil pump return body	1						
015573	Plate, back end, for oil pump return body	1						
011617	Washer, paper, between oil return pump and carrying plate	١						
000453	Screw, retaining oil return pump to carrying plate. 1 in. by 2 B.A.	_						
015577	(same as STD.453) Gear, driving, for oil return pump, $\frac{3}{8}$ in. wide. $\frac{7}{16}$ in. shaft	ځ						
015578	Gear, driving, for oil return pump, $\frac{3}{8}$ in. wide. $\frac{7}{16}$ in. shaft							
		l						
NOTE	6.—Includes all the items listed above except the three 011842 and 0000 washers.	OII fixing	nuts and					
NOTE	7.—Includes the 000021, 000701 and 015001 bleed valve ball, spring and r	etaining g	rub screw.					
OIL FEI	T FILTER (IN ENGINE)							
014235	Filter, felt, for engine crankcase	I						
014239	Seat, for oil felt filter	1						
014240	Valve, relief, for oil felt filter	1						
014241	Spring, for oil felt filter relief valve	1						
016179	Cap, for felt filter housing (also accommodates oil non-return valve)	1						
012116	Washer, fibre, for filter housing cap	ļ						
011645	Ball, 3 in. steel, for non-return valve	ļ						
013564 013332	Spring, for non-return valve ball	ļ .,,						
000183	Plug, screwed, retaining non-return valve spring	!						
015034	Washer, fibre, for non-return valve spring plug (same as STD.183) Gasket, paper, for oil filter chamber (fits between the two crank-	l						
0,303,	case halves)	1						
O		1						
OIL DIS 014246	TRIBUTOR. (Driven by the left hand end of exhaust Distributor, oil		ift)					
014247	Cap, housing, for oil distributor							
011642	Washer, fibre, for oil distributor housing cap	i :::						
OIL REI	IEF VALVE. (Located in Timing side crankcase, clo	se to c	il feed					
016056 000183	Body, for oil relief valve							
016057	Washer, fibre, for relief valve body (same as STD.183)	ļ						
016058	Piston, for oil relief valve body Spring, for oil relief valve piston	1						
012019	Plug, retaining relief valve spring	· · · ·						
000200	Washer, fibre, for relief valve plug (same as STD.200)	¦						
016176	Seal, rubber, for oil relief valve	1						
016177	Tube, metal centre, for relief valve rubber seal	· · · · ·						
CDANIU								
CVAIAK	CASE RELEASE VALVE							
014248	Valve, crankcase release	I						
011648	Cap, housing, for crankcase release valve	i						
011642	Washer, fibre, for crankcase release valve housing cap	1						

MAINTENANCE MANUAL EDITION CM-16 PRICE 2/6 IS THE APPROPRIATE MANUAL FOR THIS SPARES LIST

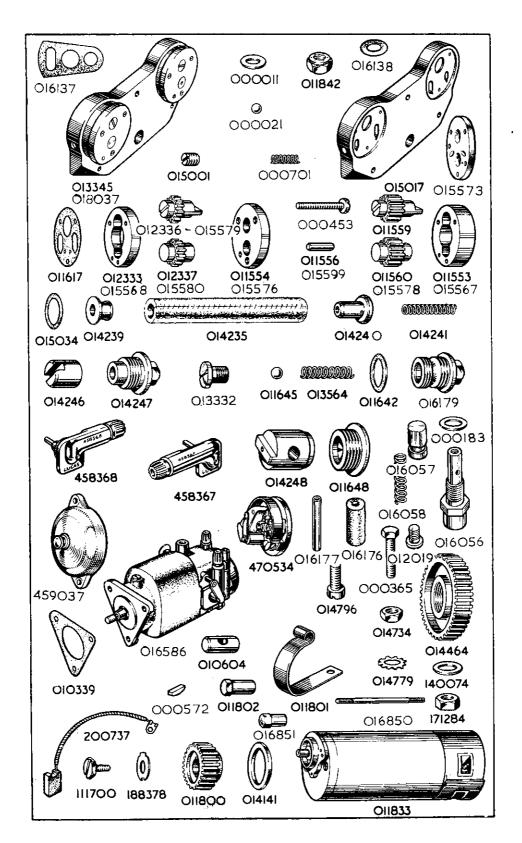

PART NUMBER	DESCRIPTION		QTY. OFF		CE . d.
CARBU	RETTER				
014288 011633	Carburetter, complete (less wires and levers) Type 76AG/IAU Manifold, inlet, bare (no studs). (The studs are listed with cylinder	_	•••		
000012	heads)	. l	•••		
000005 011771 016724 000011 000581	(same as STD.12)	. 4 . 2 2 2 . 2			
FLOAT	CHAMBER				
64-192-B 13-153 14-039 14-208 14-021 14-021 14-024 14-209 14-210 14-032 14-035 14-175 14-036  MIXING 76-014 6-033 6-040 4-043 4-053 6-038 6-032 6-031 4-235 4-241 4-035	Chamber, float, bare  Screw, plug, blocking passage in float chamber.  Washer, fibre, for float chamber passage plug screw  Top, or cover, for float chamber (same as 14-208-B)  Screw, locking float chamber top.  Float, bare.  Needle, for float  Tickler, bare.  Stop, for tickler  Spring, for tickler  Cotter (split pin), for tickler  Banjo, connection, for petrol pipe  Washer, fibre, upper, for petrol banjo connection  Washer, fibre, lower, for petrol banjo connection  Nut, retaining banjo connection to float chamber  BODY  BODY  Body, mixing, bare  Nut, union, for base of mixing body  Washer, fibre, for mixing body union nut  Bolt holding float chamber to mixing body  Washer, fibre, for float chamber holding bolt  Intake, air (same as 206-038-R)  Top, for mixing chamber (same as 6-032-B)  Ring, fixing top to mixing chamber.  Clip, locking mixing chamber to mixing body top  Adjuster, for control cable, throttle or air	.			
CHOKE	AND JETS		•••		
6-058 4-061 4-042-180 6-065 4-230 4-060 13-129 4-206	Choke, or jet barrel Needle jet. Jet, main, size 180 Needle, taper, for needle jet. Clip, for jet taper needle Pin, split, locating taper needle clip. Screw, for pilot jet air adjustment Nut, lock, for pilot jet air screw (same as 16-010) The following alternative main jets can be supplied.				
4-042-160 4-042-170 4-042-190	Jet, main, size 160 Jet, main, size 170 Jet, main, size 190	. I			

BY USING GENUINE SPARES YOU ARE ASSURED THEY WILL FIT ACCURATELY AND GIVE SATISFACTORY SERVICE

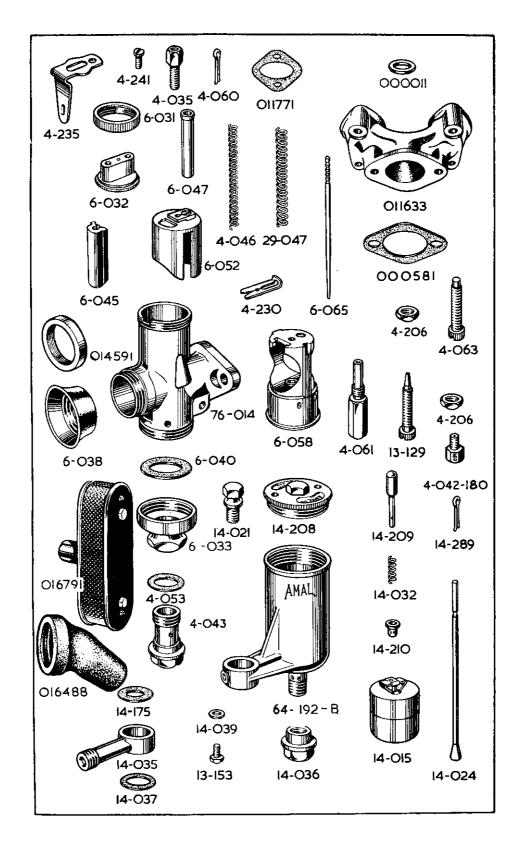

PART NUMBER		DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.
VALVE	S (0	CARBURETTER)		
6-052		Valve, throttle, size 6/3	I	
29-047	•••	Spring, for throttle valve		
4-063 4- <b>20</b> 6		Screw, stop, for throttle valve	1	
5-045		Valve, air	١	
5-047	• • •	Guide, tubular, for air valve spring	1	
4-046	•••	Spring, for air valve	l	
AIR CL	.EA	NER. (This is optional extra equipment)		
016791		Cleaner, air	1	
014591		Adaptor, for air cleaner (screws on carburetter)		
016488 016983	• • • •	Sleeve, rubber, connecting air cleaner to carburetter adaptor Set of air cleaner elements comprising filter element and two fabric		
110703	•••	end gaskets		
		When an air cleaner is fitted it is essential to:—		
		(a) Use an adaptor and connector in order to fit the cleaner to carburet	tor intaka	. (01679)
		does not include these.)	iei nituke	. (010/7
		(b) Fit a smaller jet, viz., use jet 4-042-160 (size 160), price		
MAGNI	cT/			
016586 458367	•••	Magneto, complete, Type K2F (Lucas number 42230-A)		
158368		Pick-up, with brush and spring, left		
470534		Contact breaker, complete	1	
70609	•••	Contact set		
459037 010339	•••	Cover, for contact breaker with switch		
000365		Bolt, retaining magneto, $l_{16}^{-1}$ in. by $\frac{5}{6}$ in. by 26 (same as STD.365) For the two magneto retaining studs, see "Crankcase Group."	i	
014779		Washer, lock, for magneto retaining bolt and studs		
14734	•••	Nut, for magneto retaining bolt and studs		
)14464  40074	•••	Gear, on magneto shaft		
171284		Nut, on magneto shaft, retaining magneto driving gear		
DYNAN	10			
011833	•••	Dynamo, Type E3-L-LI-0 (Lucas Number 20009)	1	
	• • •	Brush, for dynamo, set of two, per set	ļ	
			1	
14141			۱	
014141 011801		Strap, retaining dynamo to crankcase		
014141 011801 014796		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, 7/16 in. by 1/4 in. by 20.	ļ	
014141 011801 014796	•••	Strap, retaining dynamo to crankcase	ļ	
014141 011801 014796 000012 010604		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws,	l l l	
014141 011801 014796 000012 010604 011802		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{6}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)	   	
014141 011801 014796 000012 010604 011802		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)  Washer, plain, for dynamo strap tensioning nut (same as STD.12)	   	
014141 011801 014796 000012 010604 011802		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{6}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)	     	
014141 011801 014796 000012 010604 011802 000012 011800 000572 111700		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)  Washer, plain, for dynamo strap tensioning nut (same as STD.12)  Gear on Dynamo shaft  Key, locating dynamo shaft gear (same as STD.572)  Bolt, retaining gear on dynamo shaft	       	
200737 011414 011801 014796 000012 010604 011802 000012 0011800 000572 111700 188378 000251		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{6}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)  Washer, plain, for dynamo strap tensioning nut (same as STD.12)  Gear on Dynamo shaft  Key, locating dynamo shaft gear (same as STD.572)  Bolt, retaining gear on dynamo shaft  Washer, lock, for dynamo gear retaining bolt  Stud, drawing dynamo to crankcase, $1\frac{1}{16}$ in. long by 2 B.A.	       	
014141 011801 014796 000012 010604 011802 000012 011800 000572 111700 188378 000251		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)  Washer, plain, for dynamo strap tensioning nut (same as STD.12)  Gear on Dynamo shaft  Key, locating dynamo shaft gear (same as STD.572)  Bolt, retaining gear on dynamo shaft  Washer, lock, for dynamo gear retaining bolt  Stud, drawing dynamo to crankcase, $\frac{1}{16}$ in. long by 2 B.A. (same as STD.251). Only used on engines up to 5966		
014141 011801 014796 000012 010604 011802 000012 011800 000572 111700 188378		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 20.  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)  Washer, plain, for dynamo strap tensioning nut (same as STD.12)  Gear on Dynamo shaft  Key, locating dynamo shaft gear (same as STD.572)  Bolt, retaining gear on dynamo shaft  Washer, lock, for dynamo gear retaining bolt  Stud, drawing dynamo to crankcase, $\frac{1}{16}$ in. long by 2 B.A. (same as STD.251). Only used on engines up to 5966.  Nut, for dynamo draw stud, Only used on engines up to 5966.  Stud, drawing dynamo to crankcase, and passing through timing		
014141 011801 014796 000012 010604 011802 000012 011800 000572 11700 88378 000251		Strap, retaining dynamo to crankcase  Screw, retaining lower end of dynamo strap to crankcase, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 20  Washer, plain, for dynamo strap retaining screw (same as STD.12)  Crosshead, in eye of dynamo retaining strap  Nut, tensioning dynamo strap. (The stud on which this nut screws, is listed with the crankcase parts)  Washer, plain, for dynamo strap tensioning nut (same as STD.12)  Gear on Dynamo shaft  Key, locating dynamo shaft gear (same as STD.572)  Bolt, retaining gear on dynamo shaft  Washer, lock, for dynamo gear retaining bolt  Stud, drawing dynamo to crankcase, $1\frac{1}{16}$ in. long by 2 B.A. (same as STD.251). Only used on engines up to 5966.  Nut, for dynamo draw stud. Only used on engines up to 5966.		


# CRANKCASE BOLTS, with engine plates and all bolts passing through same.

014292		Bolt, clamping crankcase throat, $3\frac{11}{16}$ ins. by $\frac{5}{16}$ in. by 22. (These bolts pass through the driving side crankcase and thread into the timing side crankcase)	3	***
000011		Washer, plain, for 014292 crankcase bolts (same as STD.11)	3	
013944		Plate, engine front, right side	-	
013943		Plate, engine front, left side	į	• • • •
014736		Stud, passing through crankcase and upper holes in engine, front	-	• • • •
014/30	•••	aletee Fine by 5 in by 24. (This studies supports the stays		
		plates, 5 ins. by 5 in. by 26. (This stud also supports the stays for the exhaust pipes)	1	
000174		tor the exhaust pipes)	- 2	
000174	•••	Washer, plain, for 014736 engine plate stud (same as STD.174)	2	•••
000192		Washer, spring, for 014736 engine plate stud (same as STD.192)	2	
000004		Nut, for 014736 engine plate stud (same as STD.4)	2	
000278		Stud, passing through crankcase and lower holes in engine front		
		plates, $\frac{4.9}{1.6}$ ins. by $\frac{5}{1.6}$ in. by 26 (same as STD.278)	Ĭ	•••
000011		Washer, plain, for 000278 engine plate stud (same as STD.11)	2	
000004		Nut, for 000278 engine plate stud (same as STD.278)	2	
000277		Stud, passing through crankcase at bottom, $4\frac{3}{8}$ ins. by $\frac{5}{16}$ in. by 26		
		(same as STD.277)	ı	
000011		Washer, plain, for 000277 crankcase stud (same as STD.11)	2	***
000004		Nut for 000277 crankcase stud (same as STD.4)	2	
000303		Stud, passing through front of main frame and top of engine front		
		plate, $4\frac{1}{2}$ ins. by $\frac{3}{8}$ in. by 26 (same as STD.303)	- 1	
000010		Washer, plain, for 000303 frame stud (same as STD.10)	2	
000003		Nut, for 000303 frame stud (same as STD.3)	2	
014911		Stud, passing through main frame front tube bottom lug, the crank-	_	
014711		case, and the front ends of the rear frame rails, $5\frac{15}{16}$ ins. by $\frac{5}{16}$ in. by 26		
000011		Dy 20	ļ	•••
000011	• • • •	Washer, plain, for 014911 frame stud (same as STD.11)	2	•••
000004		Nut, for 014911 frame stud (same as STD.4)	2	***
013942		Plate, engine, rear	2	
000278		Stud, passing through top of engine rear plates and the crankcase,	_	
		$4\frac{9}{16}$ ins. by $\frac{5}{16}$ in. by 26 (same as STD.278)	- 1	•••
000278		Stud, passing through bottom of engine rear plates and the crank-case, 4% ins. by 5 in. by 26 (same as STD.278)		
		case, $\frac{4.9}{16}$ ins. by $\frac{5}{16}$ in, by 26 (same as STD.278)	ı	
110000		Washer, plain, for 000278 studs (two per stud) (same as STD.11)	4	
000004		Nut, for 000278 studs (two per stud) (same as STD.4)	4	•••
000316		Stud, passing through engine rear plates, rear of crankcase, and		
*****		centre of front chaincase, $7\frac{7}{16}$ ins. by $\frac{7}{16}$ in. by 26. (Stud should		
		be fitted so that the longer thread is on left-hand side of machine)		
		(same as STD.316)	- 1	
014084		Spacer, $l_{\frac{17}{32}}$ in. long, on 000316 stud, between back of front chaincase	•	
UITUUT	•••	and crankcase	- 1	
017140		Space 7 in lang on 000214 and incide front chaincase	٠.	•••
017142	•••	Spacer, $\frac{7}{8}$ in. long, on 000316 stud, inside front chaincase		
000000		(same as 35-2-C29)	- 1	•••
000220	•••	Nut, thin, on 000316 stud, inside front chaincase (same as STD.220)	ו	•••
000009	• • •	Washer, plain, for 000316 stud (same as STD.9)	2	
000166		Washer, plain, thin, on 000316 stud	Ĭ	***
000002	***	Nut, for 000316 stud (same as STD.2)	2	• • •
000303	•••	Stud, passing through top of engine, rear plates, lower end of main		
		frame seat tube and rear fork bridge, $4\frac{1}{2}$ ins. by $\frac{3}{8}$ in. by 26		
		(same as STD.303)	Ĭ	•••
000003	•••	Nut, for 000303 stud (same as STD.3)	2	•••
000278		Stud, passing through rear fork bridge and back ends of engine	_	
		rear plates, $4\frac{9}{16}$ ins. by $\frac{5}{16}$ in. by 26 (same as STD.278)	_1,	
		(The front chain adjusting eye bolt block screws on the right-hand end of	of th	is stud.)
000011		Washer, plain, for 000278 stud (same as STD.11)	1	
000004		Nut, for 000278 stud (same as STD.4)	l	
		•		

For the bolt stud passing through the top and bottom of the gear box and the engine rear plates, see "Gear Box Fixing Bolts".

For the footrest rod, which passes through the bottoms of the engine rear plates and the frame rails, see  $\lq\lq$  Footrests  $\lq\lq$ .

M

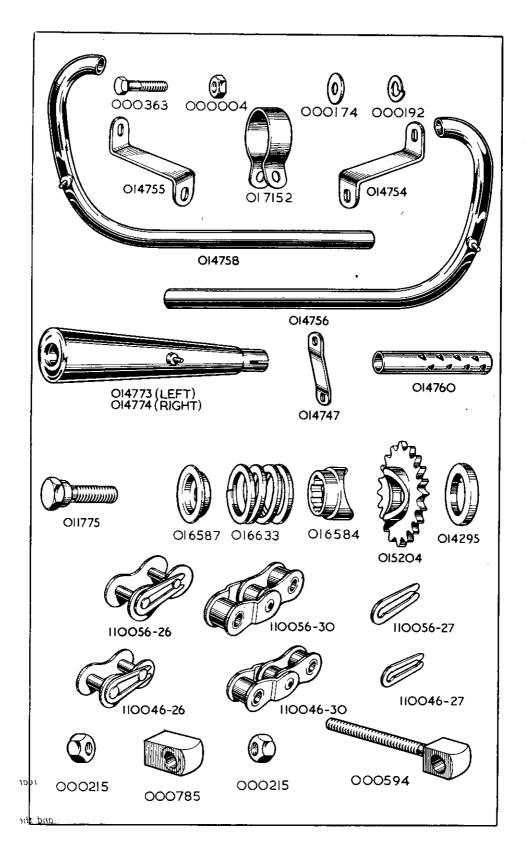

16

## **GASKETS**

We supply engine gaskets, either as separate spares, or in complete sets. Single gaskets, are listed in the groups to which they belong. Gaskets in complete sets are listed below ... Complete gasket set for vertical twin engine ...... I ...
... Decarbonising gasket set for vertical twin engine ...... I ... 015870 015869 Each complete gasket set contains:— Each complete gasket set contains:—

I—000183 Washer, fibre, for crankcase, drain plug (same as STD.183)

I—000183 Washer, fibre, for crankcase, release valve pipe union (same as STD.183)

I—001842 Washer, fibre, for oil relief, valve plug (same as STD.183)

I—011642 Washer, fibre, for engine filter housing cap.

I—011642 Washer, fibre, for oil distributor housing cap.

I—011642 Washer, fibre, for crankcase release valve housing cap.

2—011657 Washer, fibre, for banjo pin adaptors in crankcase

I—000581 Gasket, between carburetter and inlet manifold (same as STD.581).


2—011617 Washer, paper, for oil pump bodies.

2—011716 Washer, baber, for cylinder bases. -011716 Washer, paper, for cylinder bases.
-015034 Washer, paper, for oil filter chamber. 1—010339 Gasket, between magneto and crankcase.
2—011715 Gasket, for cylinder head. –011771 Gasket, between inlet manifold and cylinder head. –014141 Gasket, between dynamo and crankcase. -014411 Gasket, for rocker covers. Each decarbonising gasket set includes:-2—011715 Gasket, for cylinder heads.
4—014411 Gasket, for rocker covers.
2—011771 Gasket, between inlet manifold and cylinder heads. -000581 Gasket, between carburetter and inlet manifold (same as STD.581). 2—011716 Washer, paper, for cylinder bases.

#### **EXHAUST PIPES AND SILENCERS**

014756	Pipe, exhaust, bare, left side	1	
014758	 Pipe, exhaust, bare, right side	i	
014760	 Baffle, for exhaust pipe	2	
014754	 Stay, for exhaust pipe, left side	ī	
014755	 Stay, for exhaust pipe, right side	i	
000004	 Nut, fixing exhaust pipe to stay (same as STD.4)	ż	
000174	 Washer, plain, for exhaust pipe fixing nut (same as STD.174)	2	
014773	 Silencer, bare, left side	ī	
014774	 Silencer, bare, right side	i	
017152	 Clip, clamping silencer to pipe (same as 20470)	2	
000363	 Bolt, for silencer clip, $\frac{3}{4}$ in. by $\frac{5}{16}$ in. by 26 (same as STD.363)	2	
000174	 Washer, plain, for silencer clip bolt (same as STD, 174)	2	
000004	 Nut, for silencer, clip bolt (same as STD. 4)	2	
014747	 Stay, for silencer	2	
000004	 Nut, fixing silencer to stay (same as STD. 4)	2	
000174	 Washer, plain, for silencer to stay fixing nut (same as STD, 174)	2	
000192	 Washer, spring, for silencer to stay fixing nut (same as STD, 192)	2	
000004	 Nut, fixing silencer stay to frame rail (same as STD. 4)	2	
000174	 Washer, plain, for silencer stay to frame rail nut (same as STD.174)	2	


ALWAYS INCLUDE ALL THE LETTERS WHEN QUOTING THE ENGINE NUMBER

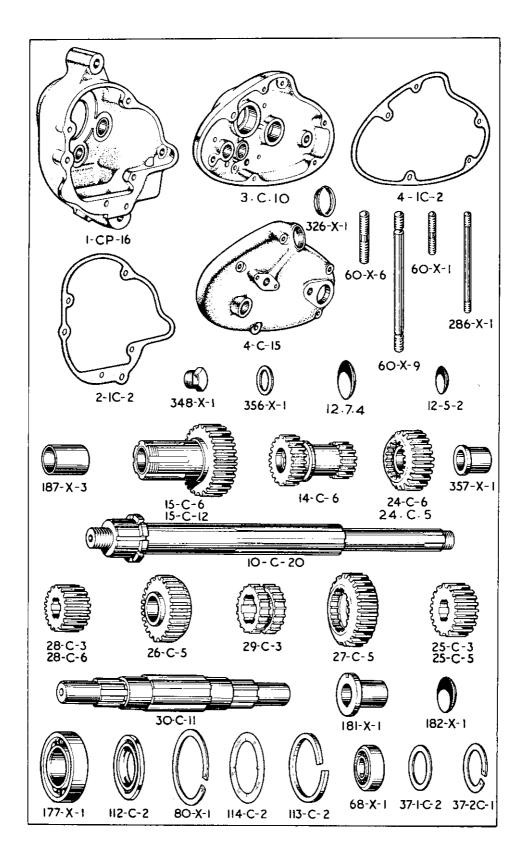


PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.
ENGINI	E SPROCKETS		
015203 015204 014294 014295 016584 016633 016587 011775	Sprocket engine, bare, 19 teeth Sprocket, engine, bare, 20 teeth. (This is the standard sprocket) Sprocket, engine, bare, 21 teeth Spacer (collar), $\frac{9}{32}$ in. wide, for engine sprocket Cam, engine shock absorber Spring, engine shock absorber Cap, for engine shock absorber spring Bolt, locking engine shock absorber assembly, threaded $\frac{1}{2}$ in. by 2		
CHAIN	5		
017299 017375 110046-26 110056-26 110046-30 110056-30 110046-27	Chain, front, 67 links, $\frac{1}{8}$ in. by ·305 in. (same as 110046-67) Chain, rear, 96 links, $\frac{5}{8}$ in. by ·380 in. (same as 110056-96) Link, connecting, for $\frac{1}{2}$ in. chains Link, cranked, double, for $\frac{1}{2}$ in. chains Link, cranked, double, for $\frac{1}{8}$ in. chains Link, cranked, double, for $\frac{5}{8}$ in. chains Clip, spring, for 110046-26 connecting links ( $\frac{1}{2}$ in.) Clip, spring, for 110056-26 connecting links ( $\frac{5}{8}$ in.)	I R R R	
	The prices of front and rear chains include spring connecting links cluded in the number of links per chain.	and these	are also ii
	We do not sell odd lengths of chains.		,
016582	Gear, box complete, with clutch and with kick-starter and ge- control levers		
SHAFT	S AND GEARS		
10-C-20 15-C-6 187-X-3 14-C-6 24-C-6 357-X-1 30-C-11 28-C-3 27-C-5 26-C-5 26-C-5 29-C-3	Mainshaft gearbox Gear, driving, mainshaft, with bushes, 30 teeth Bush, only, for mainshaft driving gear Gear, sliding, mainshaft, 18/23 teeth Gear, third on mainshaft, 27 teeth, with bush Bush, for 24-C-6 and 24-C-5 gears, on mainshaft Layshaft, gearbox, with bushes Gear, small, on layshaft, 20 teeth Gear, first, on layshaft, 32 teeth Gear, second, on layshaft, 27 teeth Gear, third, on layshaft, 23 teeth Clutch, sliding, on layshaft	 2 1 1 1 1 1 1	
	BOX BEARINGS		
GEAR I		1	

PART NUMBER	l	DESCRIPTION	QT\ OFI	
GEAR	вох	C FIXING BOLTS		
010957		Bolt, fixing gear box at top, $5\frac{3}{16}$ ins. by $\frac{7}{16}$ in. by 26		
000313		(same as 39-G9-G59)		•••
012999		(same as STD.313)	.	
011086		Spacer, 16 in. long, on 010957 top stud, inside left and right positions (same as 39-G9-G61).	•	
011086	•••	Spacer, $\frac{1}{2}$ in. long on STD.313 bottom stud, inside left and right positions (same as 39-G9-G61)	t .	
000002		Nut, on 010957 top fixing stud (same as STD.2)	. 1	
000002		Nut, on 000313 bottom fixing stud (same as STD.2)	. 2	•••
000009 000594	•••	Washer, plain, on left side of 010957 top fixing stud (same as STD.9) Eye-bolt, for front chain adjustment (same as STD.594)	(  -	
000374	•••	Nut, front chain adjustment eye-bolt (same as STD.215)	. 2	
000785	•••	Block, crosshead, for front chain adjustment eye-bolt. (This threads on the right hand end of 000278 stud that passes through the rear of the engine rear plates and the top of the rear fork bridge), (same as STD.785)	5 1 C	
GEAR	вох	SHELL		
I-CP-16		Shell, gearbox, bare	. 1	
60-X-I		Stud. gearbox shell, I in. by ½ in	. 2	
60-X-6		Stud, gearbox shell, $I_{16}^{-1}$ in, by $\frac{5}{16}$ in.	. 2	
60-X-9	•••	Stud, gearbox shell, $3\frac{1}{16}$ ins. by $\frac{1}{16}$ in	. 2	•••
63-X-1 152-X-1		Nut, for $\frac{1}{4}$ in. gearbox stud  Nut, for $\frac{5}{16}$ in. gearbox stud	. 2	
348-X-I	•••	Plug, drain, for gearbox shell	i	
356-X-I	•••	Washer, drain plug	. 1	
3-C-10	•••	Case, kick-starter	. !	
2-1C-2	•••	Washer, paper, for kick-starter case		•••
286-X-I 63-X-I	•••	Stud, kick-starter case, $2\frac{1}{4}$ ins. by $\frac{1}{4}$ in. Nut, for $\frac{1}{4}$ in. kick-starter case stud		
4-C-15		Cover, for kick-starter case	ĺ	
4-1C-2		Washer, paper, for kick-starter case cover	. 1	
326-X-I		Cap, filler, for kick-starter case cover	. !	
2-7-4  2-5 <b>-</b> 2		Cap, in shell, covering bore of camshaft (same as 291-X-1) Cap, in K-S case, for sector spindle bore		
GEAR	OPE	RATING PARTS	•	
42-C-I		Fork, operating mainshaft sliding gear	. Т	
43-C-I		Fork, operating layshaft sliding clutch	. i	
157-X-I		Peg, for operating forks	. 2	
158-X-I		Pin, split, for fork operating pegs	. 2	• • • •
45-C-2 192-X-1		Camshaft, bare, for gearbox		• • •
159-X-1		Bush, for camshaft, in gearbox shell	. 'ī	
163-X-2		Pawl, engages in gearbox camshaft	. 1	
164-X-I		Pin, bearing, for camshaft pawl	. І	•••
11-1-1	• • •	Nut, for camshaft pawl bearing pin (same as 95-X-1)	. !	•••
193-X-1 21-6-1	•••	Spring, for camshaft pawl	. !	
162-X-3		Quadrant, gear selection	Ċi	
161-X-2		Sector, gear selection, engages camshaft	. Ì	
CO-51-6		Ratchet, gear selection	.	
CO-51-6-	Α	Quadrant sector and ratchet (gear selection), assembled	. [	•••
CO-96-1 CO-96-2		Rivet, $\frac{3}{16}$ in. fixing camshaft sector to quadrant		
CO-90-3		Spindle, for gear selection, quadrant		
287-X-I		Nut (inside), 3 in. by 26, gear selection quadrant spindle	. 1	
CO-91-1		Bush in kick-starter case, for control spindle	. [	•••
160-X-2	•••	Bush, in kick-starter case for camshaft		• • • •
CO-53-4 CO-94-2		Quadrant, for foot control spindle		• • • •
35-3-2		Peg, for gear indexing pawl (same as CO-62-1)	. 2	
CO-53-4-	A-49	Quadrant, assembled with sleeve and peg	. Т	

PRICE EACH £ s. d.

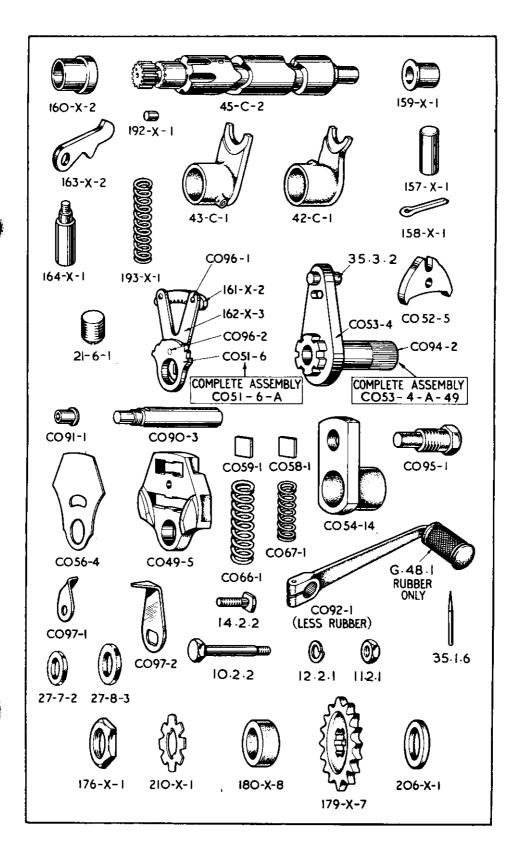

PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.
CEAD	OPERATING PARTS—continued.		
CO-54-14	Bush, for foot control quadrant sleeve	.	
CO-95-1 CO-52-5	Bolt, fixing quadrant sleeve bush in kick-starter cover	. i	
CO-49-5	Box, spring, for foot gear control		
CO-56-4	Plate, cover, for foot gear control spring box	. l	
CO-66-1	Spring, main, for control box (large spring)	. 2	
CO-67-1	Spring, pawl, for control box (small spring)	. 2	
CO-59-1	Plate, for control box main spring	. 2	
CO-58-1	Plate, for control box pawl spring	. 2	
GEAR (	CONTROL PARTS		
CO-97-1	Indicator, gear, fixed		
CO-97-2	Indicator, gear, moving		
14-2-2	Bolt, retaining moving gear indicator (same as CO-105-1)	.	
CO-92-1	Lever, foot, gear control	.	
10-2-2	Bolt, clamping gear foot lever to sleeve (same as CO-63-3)  Nut, for gear foot lever clamping bolt (same as 10-X-1)	.   .	
11-2-1	18/2-bar face lover elemping holt (compact OF 52-1)	. i	
2-2-  G-48-	Pad, rubber, foot control lever (same as CO-82-2)	. 1	
35-1-6	Pin, fixing control lever rubber pad (same as CO-38-2)		
27-7-2	Washer, felt (inner), inserted in control spindle bush, 17/32 in. insid	e	
	diameter, 통 in, outside diameter, 请 in, thick		
27-8-3	Washer, felt (outer), fits in recess in foot change lever, $\frac{13}{6}$ in. insid diameter, I in. outside diameter, $\frac{1}{8}$ in. thick	e I	
	Ciamove, i i i i i i i i i i i i i i i i i i i		
GEAR I	BOX SMALL SPROCKET		
179-X-7	Sprocket, gearbox, 16 teeth by $\frac{5}{8}$ in. by 380 in	. ļ	
180-X-8	Collar, spacing, gearbox sprocket, 7/16 in. thick	ļ	
176-X-1	Nut, fixing gearbox sprocket to main gear	ļ	
206-X-I	Collar, spacing, under gearbox sprocket, 3/16 in. thick	.	
210-X-1	Washer, lock, gearbox sprocket nut	. t	
CLUTC	Н		
G-36-3	Case for clutch	<u> </u>	
29-2-4	Rivet, for clutch case and chainwheel (same as OF-33-3)	8	
016903	Chainwheel and clutch case, assembled		
G-34-2	Bern wellow alwesh sampelest bearing (same as 34-X-2)		
12-10-2 18 <b>-</b> 2-1	Dallans aluech approclate boarings, per set (same as 35-X)	. 24	
12-10-3	Washer, thin, clutch sprocket bearing (same as 36X2)	l	
12-10-4	Washer, thick, clutch sprocket bearing (same as 36X3)	. <b>.</b> l	
G-37-3	Centre, for five plate clutch (same as 2-X-17)	ļ	ı
11-7-11	Nut, retaining clutch centre to mainshaft	!	
71-X	Washer, plain, for centre retaining nut		1
12-7-5	Washer, lock, for centre retaining nut (same as 349-X-3)	6	•
G-39-4	Blace elected friction with inserts	6 5	
G-40-6 18-X-11	Plate, spring, pressure, for clutch	i	
G-41-1	Inserts, fabric, for friction plate (same as 4-X-2) price per dozen.	120	•
303-X-I	Can thrust for spring pressure plate	1	•
36-6 <b>-</b> 1	Spring, for clutch (same as 21-X-3)	5	
G-42-2	Cup, for clutch spring (same as 22-X-2)	5 5	
14-2-8	Stud, for clutch spring, five plate clutch (same as 24-X-12)  Nut, adjusting, for clutch spring (same as 23-X-3)	5 5	
11-2-2			-
CLUTC	H OPERATING PARTS		
28-X-57	Rod, thrust, for five plate clutch, $10\frac{1}{8}$ in, long		
330-X-I	Plunger, clutch operating	¦	
67-X-I	Ball, steel, for clutch operating plunger		
175-X-4	Die fee dutch approxing lover		
66-X-7 329-X-1	Fork, for clutch operating lever		
331-X-1	Sleeve, for clutch operating lever fork		
328-X-I	Cap, covering clutch operating lever fork sleeve		•
64-X-1	Screw, fixing sleeve cap to kick-starter case cover	2	•

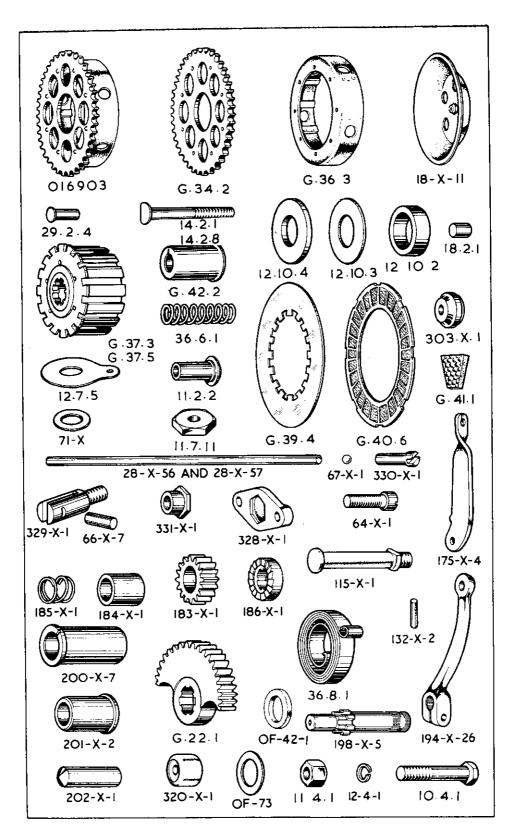

PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s, d,
	· · · · · · · · · · · · · · · · · · ·	<del></del>	

## KICK-STARTER


186-X-I		Ratchet, driving, kick-starter	1
183-X-I		Pinion, ratchet, kick-starter	i
1-X- <del>1</del> 81		Bush, kick-starter ratchet pinion	i ::
185-X-1		Spring, kick-starter ratchet pinion	i
70-X-I		Nut, retaining, driving ratchet to mainshaft	i ::
198-X-5		Spindle, for kick-starter quadrant and foot lever	i "
201-X-2		Bush, in kick-starter case, for kick-starter quadrant spindle	i "
200-X-7		Bush, in kick-starter case cover, for kick-starter quadrant spindle	i ::
G-22-L		Quadrant, for kick-starter spindle (same as 199-X-3)	i
016904		Kick-starter quadrant and spindle assembled (same as 199-X-A-49)	i ::
36-8-1		Spring, return, for kick-starter foot lever (same as 130-X-2)	i ''
132-X-2		Pin, anchor, for kick-starter return spring	i ::
1-X-028		Stop, rubber and sleeve, for kick-starter quadrant	i
202-X-I		Peg, for kick-starter stop rubber and sleeve	i
194-X-26		Lever, foot, kick-starter, bare	i
115-X-1	•••	Pin, pedal, for kick-starter foot lever	i
10-4-1		Bolt, clamping kick-starter foot lever to spindle (same as 315-X-1)	i
11-4-1		Nut, for kick-starter foot lever clamping bolt (same as 144-X-1)	i
12-4-1		Washer, spring, on kick-starter lever bolt (same as 109-X-1)	i
OF-42-1		Washer, felt, on kick-starter spindle	i
OF-73		Washer, plain, retains felt washer on kick-starter spindle	i
		The state of the s	

## FRONT FRAME

016489		Frame, front portion only, bare	1	
000806		Race, ball, for frame head lug (same as STD. 806)	ż	•••
000072	•••	Balls, 💰 in. diameter, for steering head, per set of		
		(same as STD.72)	56	
000051		Nipple, grease, for frame head lug (same as STD.51)	ī	
01 <del>44</del> 78	• • •	Stud, for seat lug (below saddle), 4.7. ins. by \(\frac{1}{2}\) in. by 26	- 1	
000008	***	Washer, plain, for seat lug stud (same as STD.8)	2	
100000	• • •	Nut, for seat lug stud (same as STD.1)	5	
000015		Screw, securing earth wires (screws into end of stud 014478)		
		3 in. by 3 B.A. (same as STD.15)	1	
000185		Washer, plain, for STD.15 earth wire screw (same as STD.185)	1	

## REAR FRAME


014359		Rail, frame, right side		
014360		Rail, frame, left side	i	•••
014420		Loop, rear frame	- ;	•••
014512		Stud, for rear loop at bottom, 12 ins. by $\frac{7}{16}$ in. by 26. (Also passes	- 1	•••
	•••	through rear fork bridge and both frame rails)		
000002		Nut, for rear loop bottom stud (same as STD.2)	2	
000009		Washer, plain, for rear loop bottom stud (same as STD.9)	5	• • • •
016190		Tube, supporting rear of rear mudguard, right side	ī	
016191		Tube, supporting rear of rear mudguard, left side	i	•••
000343		Bolt, fixing mudguard support tube to frame loop, $\frac{13}{16}$ in. by $\frac{1}{4}$ in.	1	•••
		by 26 (same as STD.343)	4	
000012		Washer, plain, for mudguard support tube bolt (same as STD.12)	7	
000191		Washer, spring, for mudguard support tube bolt (same as STD, 191)	4	
000005		Nut, for mudguard support tube bolt (same as STD. 5)	4	
015329		Bridge, for rear fork (includes bushes and studs for centre stand	7	• • • •
		spring clip)		
014672		Bush, for rear fork bridge	'n	•••
000250		Stud, for rear fork bridge $\frac{23}{32}$ in. by 2 B.A. (same as STD. 250)	2	• • •
016768		Stud, $l_{\frac{1}{8}}$ in. by $\frac{5}{16}$ in. by 26 by 26, for oil tank, battery carrier and	2	
		air cleaner retention	2	
000174			2	•••
000004		Nut, for 016768 stud	3	•••
		11409 101 0107 00 3444 1111111111111111111111111111111	3	

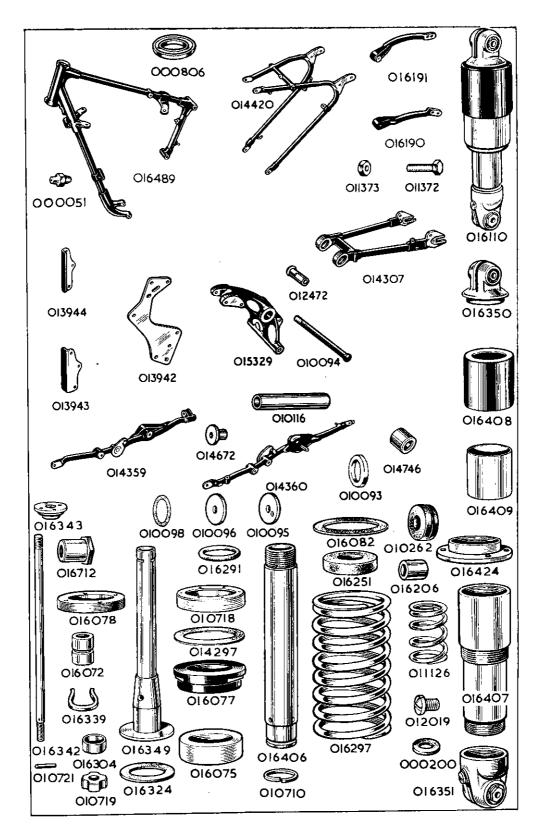

PART NUMBER		DESCRIPTION	QT` OF	
REAR I	FOi	₹ĸ		
114207		Fact		
014307 011372		Fork, rear	į	٠
011373	•••	Pin, chain, adjusting, for right fork end	!	•
)14746		Nut, lock, for chain adjusting pin	I	٠
010116	• • •	Sleeve, assembly (bushed)	2	
010116		Tube	ļ	٠
10075	•••	Cap, for rear fork bearing, right side	į	•
10070		Cap, for rear fork bearing, left side.  Washer, felt, for rear fork bearing	j	•
10098		Gasket, for rear fork bearing caps	2	-
10094		Spoke, for rear fork bearing (central tie bolt)	ĺ	•
12472		Nipple, for rear fork bearing spoke	- !	•
000485		Screw, plug, for oil, in end cap, $\frac{1}{4}$ in. by 26	I	٠
	•••	(same as STD.485)	1	
000203	•••	Washer, fibre, for oil plug screw (same as STD.203)	i	
TELED!	RAI	ULIC REAR LEG		
16110		Leg, TELEDRAULIC, rear complete assembly (no fixing boits,		
16350		washers and nuts)	2	
16059		Pivot, top, assembled (this assembly includes the next three items)	2	•
10262		Pivot, top, bare	2	-
16206		Bush, rubber, for top pivot Spacer, for top pivot rubber bush		٠
16351		Pivot, bottom, assembled (this assembly includes the next five items)	4	-
16060		Pivot, bottom, bare	2	•
10262		Bush, rubber, for bottom pivot	2 4	•
16206		Spacer, for bottom pivot rubber bush	2	•
16712		Nut, with sleeve, for bottom pivot bolt.	2	•
16873		Washer, plain, for 016712 sleeve nut	2	•
12019	,	Plug, drain, for bottom pivot (only on early machines)	2	
00200		Washer, fibre, for bottom pivot drain plug (same as STD.200) (only on early machines)	2	
16406		Tube, inner (fits in top pivot recess)	2	•
16291		Ring, sealing inner tube at top	2	
16075		Ring, sealing inner tube at top Bush, lower end of inner tube	2	•
10710		Circlip, retaining inner tube bush (same as 40-G12M-FF192)	2	
16407		Tube, outer (screws into bottom pivot)	2	:
16324		Washer, sealing lower end of outer tube	4	•
16077		Bush, for outer tube	2	•
10718		Oil-seal, between inner and outer tubes (same as 40-G12M-FF91)	2	
14297		Washer, under oil-seal	2	
16078		Collar, retaining oil-seal	2	
16349		lube, for damper	2	
16072		Sleeve, plunger, for damper rod	2	
16339	• • •	Clip, locating plunger sleeve	2	
16342	•••	Rod, for damper	2	
16343	•••	Collar, for top end of damper rod	2	
00074	• • •	INUL, locking collar top-end of damper rod (same as STD 74)	2	
16304	• • •	Valve, for damper	2	٠.
10721	•••	rin, stop, for damper valve (same as 40-18-FF59)	2	
10719		Seat, for damper valve (same as 40-18-FF57)	2	٠.
00005	•••	Nut, retaining damper seat to damper rod (same as STD.5)	2	٠.
11126 16297	• • •	Spring buffer	2	٠.
16082	• • •	Spring, main	2	٠.
16408	•••	Washer, leather, at both ends of main spring	4	٠.
16409	•••	Tube, outer, covering top end of main spring	2	٠.
	•••	Tube, outer, covering bottom end of main spring	2	٠.
		Nut, retaining bottom outer cover tube	2	• •
	• • •	Buffer, for TELEDRAULIC Leg	2	٠.
16424 16251 16205				
16251 16205	•••	Bolt, fixing top pivot, $3\frac{7}{16}$ ins. by $\frac{3}{8}$ in. by $26$	2	• •
16251 16205 00010		vvasher, plain, for top pivot bolt (same as STD.10)	4	٠.
16251	• • •	Washer, plain, for top pivot bolt (same as STD.10)  Nut for top pivot bolt (same as STD.3)  Bolt, fixing bottom pivot, $2\frac{1}{32}$ ins. by $\frac{3}{8}$ in. by 26		


PRICE EACH £ s. d.

PART NUMBER	₹	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d
FORK	ASS	SEMBLIES		
		The following fork assemblies are complete and include ball races fo	r the for	k crown ai
1001		top head lug (but not the two frame ball races).		
016891 016892	• • • •	Fork, assembly (TELEDRAULIC Front Fork, Solo)		•
710072	•••			
		For ease of servicing, the inner tube unit is listed as supplied as a septenables a complete assembly to be exchanged in minimum time. The		
016895		Front Fork inner tube assembly, Solo		
016896		Front Fork inner tube assembly, Sidecar		
		The above assemblies comprise:—		•
		Inner tubes with rubber buffers. Bushes and circlips. Top bolts with rings. Slider extensions with oil seals. Fork springs and washers.	washers	s and seali
FRON <sup>-</sup>	T E			
013861			-	
013001	•••	Crown, assembly, comprising crown, stem and circlip (these part not sold separately), and two 016320 studs	s . l	
000805		Race, ball, for fork crown (same as STD.805)		
016320		Stud, pinch, for fork crown, 2 ins. by $\frac{5}{16}$ in. by 26	. 2	
110000		Washer, plain, for fork crown pinch stud (same as STD.11)	. 2	
)11635	• - •	Nut, for fork crown pinch stud	. 2	
)13631 )13630	•••	Lug, for handlebar and steering head		
12620 00051	• • • •	Race, ball, for handlebar lug		
000236		Nut, adjusting, for fork crown stem (same as STD.236)	.	
10712	•••	Nut, lock (domed), for fork crown stem (same as L4-FF46)	. i	
16322		Tube, fork, inner		
16148		Buffer, rubber, for fork inner tube		
10692	•••	Bush, bottom, for fork inner tube (same as 40-G12M-FF191)		
10710		Circlip, for fork inner tube bush (same as 40-G12M-FF192)		
16718		Bolt, top, for fork inner tube	_	
114355 110709		Ring, sealing, for fork inner tube top bolt		
13632		Slider, fork, with cap, studs and nuts, left and right		
13509		Cap. for fork stider	. 2	
010713		Stud, securing fork slider cap, $\left \frac{13}{16}\right $ in. by $\frac{5}{16}$ in. by 26 and 22 (same as 40-G12M-FF195)		
		(same as 40-G12M-FF195)	. 4	
110000	•••	Washer, plain, for fork slider cap stud (same as STD. 11)	. 4	
00004	•••	Nut, for fork slider cap stud (same as STD.4)		
11 <b>8</b> 161 15286		Extension, for fork slider		
10718		Bush, plastic, for fork inner tube	. 2	
14297		Washer, under oil-seal		
16526		Spring, main, for front fork, solo		
16782		Spring, main, for front fork, sidecar	. 2	
10360	•••	Spring, buffer, for front fork	. 2,	
10698	• • •	Washer, leather, fork spring seating (same as 40-G12M-FF126)		
13694 13695	•••	Tube, fork cover, top, right, with lamp lug		
10703	•••	Tube, fork cover, top, left, with lamp lug	. 1 . 2	
12569		Cap, for bottom of fork top cover tube	2	•
10701		Plate, threaded, locating top cover tube (same as 40-G12M-FF128)	2	
17036		Tube fork cover, bottom (same as 41-G3L-FF184-B)	. 2	
10702		Plate, plain, locating bottom cover tube (same as 40-G12M-FF127)	2	
10716	•••	Screw, retaining both locating plates, 19 in. by 3 B.A.		
00485		(same as 40-G12M-FF129)	. 6	•
00403	•••	Screw, plug, oil drain, for fork slider, \(\frac{1}{4}\) in. by \(\frac{1}{4}\) in. by 26	2	
00203		(same as STD.485)	. 2 . 2	
15932		Tube, fork damper	2	
10697		Tube, fork damper  Bolt, fixing fork damper to slider $\frac{y}{16}$ in. by $\frac{5}{16}$ in. by 26	-	
		(same as 40-G12M-FF94)	. 2	
10706	• • •	Washer, fibre, for damper tube bolt (same as 40-G12M-FF80)	. 2	•
17357 10004	• • • •	Rod, for fork damper (same as 41-G3L-FF55)		
00004 16072	•••	Nut, lock, top end of damper rod (same as STD.4)		
16339		Sleeve, plunger, for fork damper rod		
16304		Valve, for fork damper		
		Pin, stop, for fork damper valve (same as 40-18-FF59)	2	
0721				
10721 1071 <del>9</del> 00005		Seat, for fork damper valve (same as 40-18-FF57)	. 2	

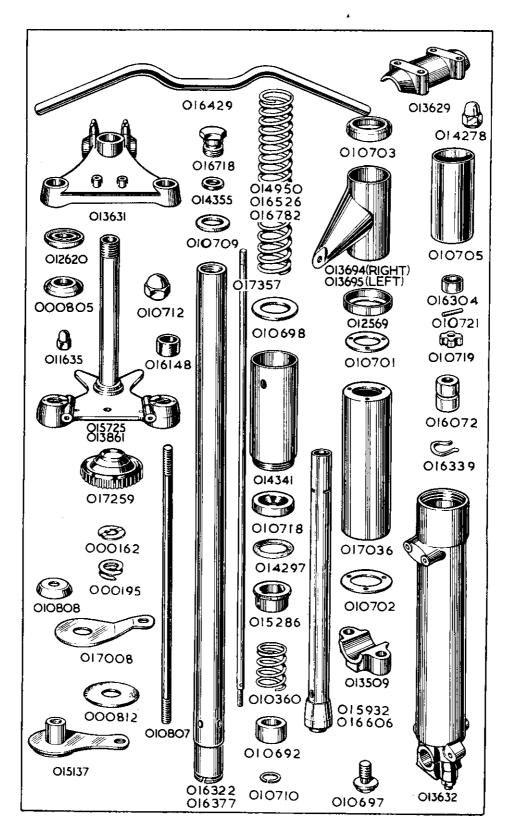

STEERING DAMPER. (This is an optional extra)	PART NUMBER		QT' OF	
16464   Damper, steering, complete set of parts.	STEER	NG DAMPER. (This is an optional extra)		
017259	016404	<u> </u>	,	
000162   Washer, ratchet, for steering damper knob (same as STD.162)   010808   Washer, spring, for steering damper   010807		Knob, control, for steering damper (same as TFF-101-S)	i	
000195	000162	Washer, ratchet, for steering damper knob (same as STD.162)	i	
Diagnorm   Diagnorm		Washer, spring, for steering damper knob (same as STD.195)	- 1	
015137   Sleeve, assembly, lower end of drawbolt		Cap, for top of steering stem	-	••
000073		Drawbolt, for steering damper	-!	
000342		Sleeve, assembly, lower end of drawbolt	ļ	••
000191 Washer, spring, for bolt 000342 (same as STD.191) 000012 Washer, plain, for bolt 000342 (same as STD.12) 1000005 Nut, for bolt 000342 (same as STD.12) 1017008 Plate, anchor, top position (same as 40-G12M-FF97) 1017008 Plate, anchor, top position (same as 40-G12M-FF97) 1000191 Washer, spring, for bolt 000070 (same as STD.191) 1000191 Washer, spring, for bolt 000070 (same as STD.191) 1000191 Washer, spring, for bolt 000070 (same as STD.191) 1000191 Washer, spring, for bolt 000070 (same as STD.191) 1000191 Washer, spring, for bolt 000070 (same as STD.191) 1000191 Washer, spring, for bolt 000070 (same as STD.191) 1000191 Washer, spring, for bolt 000070 (same as STD.1812) 2 000036 Nut, lock, for fork crown stem (this replaces the domed lock-nut 010712 when a steering damper is fitted) (same as STD.236)		Rolt fixing sleeve assembly 11 in by 1 in by 26 /same as STD 242)	l I	• •
000012		Washer, spring, for bolt 000347 (same as STD 191)	i	
Nut, for bolt 000342 (same as STD. 19 ± in. by 2 ± i	000012	Washer, plain, for bolt 000342 (same as STD, 12)	i	
10,008	000005	Nut, for bolt 000342 (same as STD.5)	Ī	
000191		Plate, anchor, top position (same as 40-G12M-FF97)		
000812		Bolt, fixing top anchor plate, $\frac{9}{16}$ in. by $\frac{1}{4}$ in. by 26 (same as STD.70)	1	
Nut, lock, for fork crown stem (this replaces the domed lock-nut 010712 when a steering damper is fitted) (same as STD.236)			_	
### HANDLEBAR    16429			2	
016429	000236	010712 when a steering damper is fitted) (same as STD.236)	ı	•••
016429	HANDI	EBAR		
013629 Clip (half only) for handlebar lug. 012870 Stud, for handlebar clip, 1½ in. by ½ in. by 26 and 20. 4 000012 Washer, plain, for handlebar clip stud (same as STD.12). 4 014278 Nut, for handlebar clip stud (same as STD.12). 4 014278 Nut, for handlebar clip stud 4 014278 Stand 011286 Stand, front, bare				
012870   Stud, for handlebar clip, 1½ in. by ½ in. by 26 and 20   4		Clin (half antis) for the distantis	1	• • •
Washer, plain, for handlebar clip stud (same as STD.12)		Stud for handlahar clin 117 in by 1 in by 24 and 20	Ţ	• •
FRONT STAND  011286 Stand, front, bare				
FRONT STAND  011286 Stand, front, bare		Nut. for handlebar clip stud	4	•••
011286 Stand, front, bare 010694 Bolt, fixing front stand to slider, 1½ in. by ½ in. by 22 (same as 41-G31-FF422) 2 010724 Washer, spring, for stand to slider bolt (same as HBD-52). 2 000014 Pin, split, for stand to slider bolt (same as STD.14). 2 000342 Bolt, fixing front stand to front mudguard, ¼ in. by ¼ in. by 26 (same as STD.342)			7	•••
Bolt, fixing front stand to slider, 1-\frac{1}{36} in. by \frac{5}{16} in. by \frac{2}{16} \]   (same as 41-G3L-FF422)				
010724 Washer, spring, for stand to slider bolt (same as HBD-52) 2 000014 Pin, split, for stand to slider bolt (same as STD.14) 2 0000342 Bolt, fixing front stand to front mudguard, ⅓ in. by ⅓ in. by 26		Bolt, fixing front stand to slider, $1\frac{\pi}{4}$ in. by $\frac{\pi}{4}$ in. by 22		
000014 — Pin, split, for stand to slider bolt (same as STD.14)	010724	Washer, spring, for stand to slider bolt (same as HBD-52)		
000012 Washer, plain, for stand to mudguard bolt (same as STD.12) 2 000005 Nut, front stand to mudguard bolt (same as STD.5) 1 014278 Nut (domed), front stand to mudguard bolt		Pin, split, for stand to slider bolt (same as STD.14)  Bolt, fixing front stand to front mudguard, $\frac{11}{16}$ in. by $\frac{1}{26}$ in. by 26	2	
Nut, front stand to mudguard bolt (same as STD.5)    Ol4278	000012	Washer plain (on stand to mudalend helt (some as STD 12)	_	•••
PROP STAND  014719 Stand, prop, bare		Nut front stand to mudguard holt (same as \$10.12)		•••
014719 Stand, prop, bare				
014713 Bolt, hinge, for prop stand, $2\frac{1}{16}$ ins. by $\frac{7}{16}$ in. by 26   014139 Nut, for prop stand hinge bolt   000049 Pin, split, for prop stand hinge bolt (same as STD.49)   010843 Spring, return, for prop stand    CENTRE STAND  016438 Stand, centre, bare   014626 Bush, for centre stand, $\frac{7}{16}$ in. long   014629 Stud, hinge, for centre stand, $\frac{8}{16}$ ins. by $\frac{7}{16}$ in. by 26   014630 Spacer, central, for centre stand hinge stud, 4·2 ins. long   014630 Vasher, spigot, for centre stand hinge stud, 4·2 ins. long   014627 Spring, return, for centre stand hinge stud (same as STD.2)   016399 Spring, stop, for centre stand   016390 Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE") (same as STD.80)   0200039 Washer, plain, for centre stand stop spring fixing nuts	PROP S	TAND		
Did   139	014719	Stand, prop. bare	1	
Nut, for prop stand hinge bolt (same as STD.49)		Bolt, hinge, for prop stand, 24 ins. by 7 in. by 26	í	•••
CENTRE STAND  016438	01413 <del>9</del>	Nut, for prop stand hinge bolt	i.	
CENTRE STAND  016438		Pin, split, for prop stand hinge bolt (same as STD.49)	1	
016438	010843	Spring, return, for prop stand	I	•••
014626 Bush, for centre stand, ·7 in. long 2 014629 Stud, hinge, for centre stand, 8½ ins. by ½ in. by 26 1 014630 Spacer, central, for centre stand hinge stud, 4·2 ins. long 1 010912 Washer, spigot, for centre stand hinge stud (same as STD.2) 2 014627 Spring, return, for centre stand 1 016399 Spring, stop, for centre stand 1 000080 Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE") (same as STD.80) 2 000039 Washer, plain, for centre stand stop spring fixing nuts	CENTR	STAND		
014626 Bush, for centre stand, ·7 in. long 2 014629 Stud, hinge, for centre stand, 8½ ins. by ½ in. by 26 1 014630 Spacer, central, for centre stand hinge stud, 4·2 ins. long 1 010912 Washer, spigot, for centre stand hinge stud (same as STD.2) 2 014627 Spring, return, for centre stand 1 016399 Spring, stop, for centre stand 1 000080 Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE") (same as STD.80) 2 000039 Washer, plain, for centre stand stop spring fixing nuts	016438	Stand, centre, bare	1	
014629 Stud, hinge, for centre stand, 81½ ins. by 7½ in. by 26   1   014630 Spacer, central, for centre stand hinge stud, 4-2 ins. long   2   010912 Washer, spigot, for centre stand hinge stud (same as STD.2)   2   014627 Spring, return, for centre stand   3   016399 Spring, stop, for centre stand   4   016399 Spring, stop, for centre stand   1   016399 Washer, spigot, for centre stand   1   016399 Washer, spigot, for centre stand   1   016399 Washer, spigot, for centre stand   1   016399   1   016399   2   016390   2   016390   2   016390   2   016390   2   016390   3   016390 .		Bush, for centre stand, 7 in, long	_	
014630 Spacer, central, for centre stand hinge stud, 4-2 ins. long   010912 Washer, spigot, for centre stand hinge stud 2   2   2   2   2   2   2   2   2		Stud, hinge, for centre stand, $8\frac{1}{2}$ ins, by $\frac{7}{4}$ in. by $\frac{2}{3}$ in.		
Washer, spigot, for centre stand hinge stud 2 000002 Nut, for centre stand hinge stud (same as STD.2) 2 014627 Spring, return, for centre stand   016399 Spring, stop, for centre stand   000080 Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE") (same as STD.80) 2 000039 Washer, plain, for centre stand stop spring fixing nuts		Spacer, central, for centre stand hinge stud. 4.2 ins. long		
000002 Nut, for centre stand hinge stud (same as STD.2) 2 014627 Spring, return, for centre stand   016399 Spring, stop, for centre stand   000080 Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE") (same as STD.80) 2 000039 Washer, plain, for centre stand stop spring fixing nuts		Washer, spigot, for centre stand hinge stud	2	
016399 Spring, stop, for centre stand  Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE")  (same as STD.80) 2  Washer, plain, for centre stand stop spring fixing nuts		Nut, for centre stand hinge stud (same as STD,2)		
000080 Nut, for centre stand stop spring (the studs, on which these nuts fit, are listed with the "REAR FORK BRIDGE") (same as STD.80)	- · · · ·	Spring, return, for centre stand	-	• • •
(same as STD.80)		Nut, for centre stand stop spring (the studs, on which these nuts	1	
JU0039 Washer, plain, for centre stand stop spring fixing nuts		(same as STD.80)	2	
(same as STD 39)	000039	Washer, plain, for centre stand stop spring fixing nuts	_	•••
			2	


PRICE EACH £ s. d.

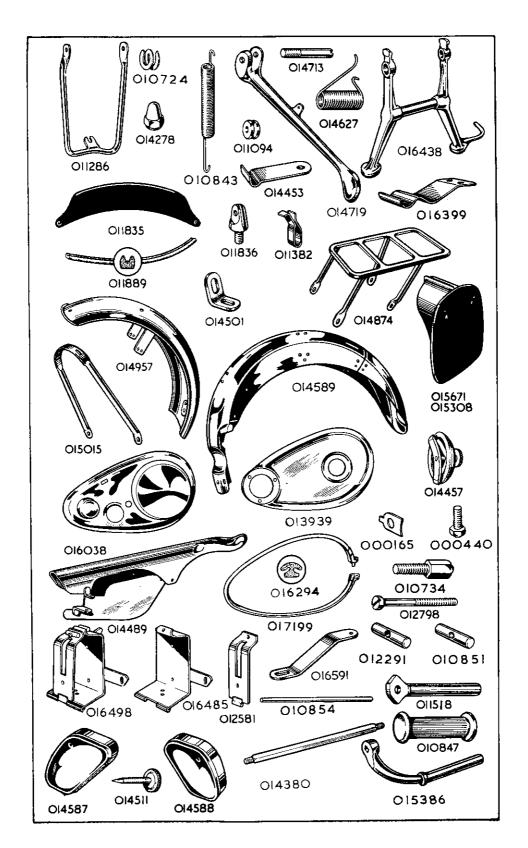

PART NUMBER	DESCRIPTION	QTY. OFF		PRICE EACH £ s. d.
ERONT	· MUDGUARD			
014957 010795	Mudguard, front, bare	ı	• • •	
010773	(same as 41-G3L-M38)	2		
000192	Washer, spring, for bridge right fixing bolt (same as STD.192)	2		
010624	Stud, fixing mudguard bridge to left fork slider, also retains brake			
	anchor stay and bracket for brake cable adjuster, $1\frac{1}{32}$ in. by $\frac{5}{16}$ in.	_		
014117	by 26 and 22		• • •	
014117 000004	Washer, lock, for bridge left fixing stud		• • •	
015015	Stay, for front mudguard	ĩ		
010795	Bolt, fixing front mudguard stay to fork slider, ½ in. by 5 in. by 22			
	(same as 41-G3L-M38)	2		
000192	Washer, spring, for stay to fork slider bolt (same as STD.192)	2	•••	
000070	Bolt, fixing stay to front mudguard, $\frac{9}{16}$ in. by $\frac{1}{4}$ in. by 26	า		
000191	(same as STD.70)	2		
000171	Washer, plain, for stay to front mudguard bolt (same as STD.17) Washer, plain, for stay to front mudguard bolt (same as STD.12)	2		
000005	Nut, for stay to front mudguard bolt (same as STD.5)			
	,			
REAR	MUDGUARD			
014589	Mudguard, rear, bare (altogether this is in two parts, the parts are			
/	not sold as separate spares)	- 1		
014501	Bracket, for bottom of rear mudguard	2	•••	
000342	Bolt, fixing bracket to rear mudguard, 11/6 in. by 1/4 in. by 26	2		
000013	(same as STD.342)	2	•••	
000012 000005	Nive for burning Coston bala (name on CTD E)	2		
000003	Stud, fixing rear mudguard brackets to frame, $3\frac{9}{16}$ ins. by $\frac{5}{16}$ in.	-	•••	
	by 26 (same as STD.275)	Ţ		
000011	Washer, plain, for bracket fixing stud (same as STD.11)	2		
000004	Nut, for bracket fixing stud (same as STD.4)	2	• • •	
000346	Bolt, fixing rear mudguard to frame loop bridge, $1\frac{7}{16}$ in. by $\frac{1}{4}$ in.			
000191	by 26 (same as STD.346)	i		
000005	Nut, for bridge fixing bolt (same as STD. 5)	i	• • • •	
000362	Bolt, fixing rear mudguard to oil tank, $\frac{5}{8}$ in. by $\frac{5}{16}$ in. by 26			
	(same as STD.362)	- 1		
000192	Washer, spring, for mudguard to oil tank bolt (same as STD.192)			
000174	Washer, plain, for mudguard to oil tank bolt (same as STD.174)	!	•••	
000004	Nut, for mudguard to oil tank bolt (same as STD.4)	1 -	•••	
RFAR (	CARRIER			
014874	Carrier, rear, bare	1		
	Existing bolts are used to attach the above carrier, plain and/or s	bring	was	hers beir
	discarded, as may be necessary, to allow for the thickness of the carr	rier le	gs.	.,,,,,,
	NUMBER PLATE			
011835	Plate, number, front		•••	
011836 000012	Stud, fixing front number plate	2	•••	
000005	Nut, front number plate stud (same as STD.5)	2		
000861	Screw, fixing front number plate to stud, $\frac{5}{16}$ in. by 2 B.A.	_		
	(same as STD.861)	. 2		
011889	Fillet, rubber, front number plate	. 1	•••	
DE 4 D	ANIMADED DI ATE			
KEAR	NUMBER PLATE			
015671	Plate, number, rear	. [		
000363	Bolt, fixing rear number plate, $\frac{3}{4}$ in. by $\frac{5}{16}$ in. by 26 (same as STD.363)	) 2	•••	
000192	Washer, spring, rear number plate bolt (same as STD.192)	. 2	•••	


PART NUMBER	DESCRIPTION		OFF	PRICE EACH £ s. c
FRONT	CHAINCASE			
018034				
010034	Chaincase, complete (comprises both halves, metal and bands, clamping screw and inspection cap—NO FIXING			
	SPACERS, WASHERS AND NUTS ARE INCLUDED)		J	
013939 016038	Chaincase, back half, bare		ļ	
017199	Band, metal, for chaincase (same as 12302-7)			
000453	Screw, clamping, chaincase metal band, I in. by 2 B.A.			
016294	(same as STD.453)		1	
014457	Cap, assembly, chaincase inspection (components not	sold as	1	
000500	separate spares)		ļ	
000580 000440	<ul> <li>Washer, cork, chaincase inspection cap (same as STD.580)</li> <li>Bolt, fixing chaincase to engine, ½ in. by 0 B.A. (same as STD.580)</li> </ul>		3	
000165	Washer, lock, chaincase engine bolt (same as STD.165)		3	
REAR (	CHAINGUARD			
014489	Chainguard, rear, bare		1	
000350	Bolt, fixing chainguard in front, $2\frac{1}{16}$ ins. by $\frac{1}{4}$ in. by 26			
000012	(same as STD.350)		1	
0000012	Washer, plain, chainguard, front fixing bolt (same as STD.1) Nut, for chainguard front fixing bolt (same as STD.5)		2 1	
014559	Bolt, fixing rear of chainguard, $2\frac{7}{8}$ ins. by $\frac{5}{16}$ in. by $26$		ì	
110000	Washer, plain, for chainguard rear fixing bolt (same as STD		ļ	
000192 014560	<ul> <li>Washer, spring, for chainguard rear fixing bolt (same as \$1</li> <li>Spacer, 1 in long (located inside chainguard), on bolt 01-</li> </ul>		ļ	
014561	Spacer, $\frac{1}{16}$ in, long (located inside chainguard), on boit $0.00$ Spacer, $\frac{3}{4}$ in, long (located between chainguard and frame	on bolt	٠	
	014559)		ļ	
000004	Nut, for chainguard bolt 014559 (same as \$TD.4)		I	
BATTE	RY CARRIER			
016498	Carrier, battery, complete with bolt, seat and nut		1	
016485	Carrier, battery, back portion only			
012581	Carrier, battery, front portion only		1	
010854	Pin, hinge, battery carrier front (same as X-E184)		!	
012798 012291	Bolt, clamping battery carrier, 13/4 in. by 1/4 in. by 26  Seat, battery carrier clamping bolt (same as A-E178)		 	
010851	Nut, battery carrier clamping bolt (same as A-E177)		 	
000004	Nut, fixing battery carrier and oil tank to front frame			
000174	(same as STD.4)		3	
000174	Washer, plain, for battery carrier and oil tank fixing nut (same as STD.174)		3	
016591	Stay, battery carrier to chaincase		ĭ	
000040	Screw, fixing stay to battery carrier, ½ in. by I B.A. (same as S	TD.40)	1	
000012 010734	Washer, plain, for 000040 bracket screw (same as STD.12)		J	
010737	Bolt, fixing battery carrier bracket to chaincase, $\frac{25}{32}$ in. by by 26 (same as 37-12-H17)	16 III,	1	
110000	Washer, plain, for 010734 carrier bracket bolt (same as STD		i	
000004	Nut, for 010734 carrier bracket bolt (same as STD.4)		1	
	2011			
TOOL	BOXES			
014587 014588	Box, tool, bare (with lid but no other fittings), left side		[	
014500	Box, tool, bare (with lid but no other fittings), right side  Screw, knurled, for tool box lid		2	
000189	Washer, spring, for tool box lid screw (same as STD.189)		2	
000005	Nut, for tool box lid screw (same as STD.5)		4	
000342 014577	Bolt, long, fixing tool box, $\frac{11}{16}$ in. by $\frac{1}{4}$ in. by 26 (same as ST	D.342)	4	
000639	Bolt, short, fixing tool box, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by 26	D.6391	4	
000012	Washer, plain, for tool box fixing bolt (same as STD.12)		12	
000005	Nut, for tool box fixing bolts (same as STD.5)		6	

PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.
FOOTR	ESTS		
015386	Arm, for footrest	. 2	
010847	Pad, rubber, for footrest arm (same as 16315)		
014380	Rod, for footrests, overall length 9 ins.		
010924	Spacer, $3\frac{1}{2}$ ins. long, for footrest rod, between engine rear plates	i	
014484	(same as CFR-6)	. I . I	
000009	Spacer, $\frac{3}{16}$ in. long, for footrest rod, outside right plate		
000002	Nut, for footrest rod (same as STD.2)	2	
PILLION	N FOOTRESTS		
011267	Pair of pillion footrests, complete (includes all the following items)	ı I	
011518	Spindle, bare for pillion footrest	2	
011599	Bolt, hinge, for pillion footrest spindle, $1\frac{3}{16}$ in. by $\frac{3}{8}$ in. by 26	2	
000073	Nut, for pillion footrest hinge bolt (same as STD.73)		
010847	Pad, rubber, for pillion footrest spindle (same as 16315)	2	
TWIN S	SEAT		
014293	Seat, Twin	I	
014919	Screw, fixing seat at rear to loop, \(\frac{3}{4}\) in. by 2 B.A		
000039	Washer, plain, for seat fixing screw (same as STD.39)	2	
000080	Nut, for seat fixing screw (same as STD.80)		
000011 000004	Washer, plain, for nut fixing seat in centre (same as STD.11)  Nut, fixing seat in centre (same as STD.4)		
TRANSF			
009183	Transfer, for side of oil tank (oil level indicator) (same as 38-G3-F392 and STD.9183)	l	
009184	Transfer, for top of oil tank (service instruction)		
000101	(same as 38-G3-F391 and STD.9184)	1	
009186	Transfer, for front chaincase (oil level indicator) (same as 38-G3-F393 and STD. 9186)	1	
009187	Transfer, for front chaincase (patent) (same as STD.9187)	:	
009188	Transfer, for tool box (monogram)		
	(same as 38-G3-F385 and STD.9188)	2	
009189	Transfer, for rear mudguard ("MATCHLESS")	,	
009192	(same as 38-G3-F383 and STD.9189)	l	
	Transfer, for petrol tank (reserve) (same as 012973)	i	
009198	Transfer, for side of oil tank (oil top level indicator)	Ι	
	Transfer, for forks ("Made in England")		
0.10000	Transfer, for rear fork hinge (patent)		
016070	Complete set of transfers	1	
TWIST	GRIP		
16-117	Twist grip, complete assembly	1	
	Grip, rubber, for twist grip	ļ	
	Rotor, and sleeve, for twist grip (does not include rubber grip)	1	
	Body, twist grip, top (plain clip)	1	
	Screw, long, clamping twist grip body		
11-014	Screw, short, clamping twist grip body	1	
	Spring, friction, for twist grip		
	Screw, for twist grip friction spring		
14.011	Nut, for twist grip friction spring screw Stop, for twist grip (throttle) cable		
3.011	scops for emise Brib femotion capie	1	

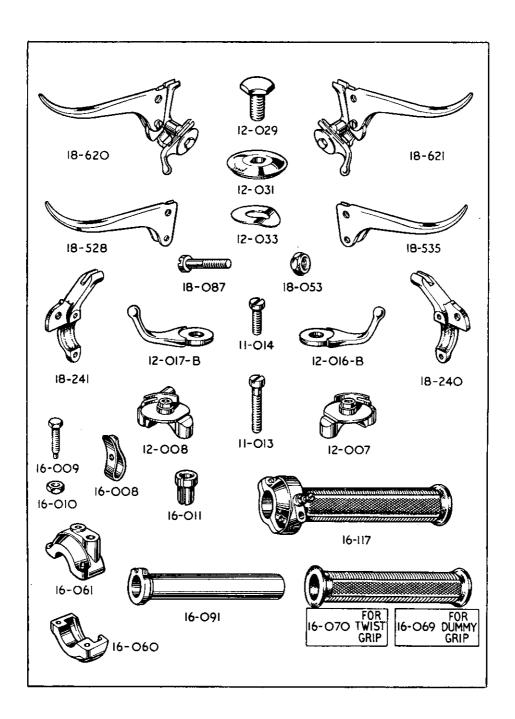


PART NUMBER	DESCRIPTION	QTY. OFF	PRI EA £
DUMMY	GRIP		
16-069 .	Grip, rubber, dummy	١	
CLUTCH	AND IGNITION CONTROL LEVERS		
18-528 . 12-017-B . 18-241 . 12-008 . 11-013 . 11-014 . 18-087 .	Lever, assembly, clutch and ignition Lever only, clutch Lever only, ignition Bracket, for clutch lever Screw, long, clamping clutch and ignition brackets Screw, short, clamping clutch and ignition brackets Pin, fulcrum, for clutch lever	         	
12-029 . 12-031 .	Nut, clutch lever fulcrum pin Bolt, central, for ignition lever	 	
BRAKE	AND AIR CONTROL LEVERS		
18-535 12-016-B 18-240 12-007 11-013 11-014 18-087 18-053 12-029 12-031	Lever, assembly, brake and air Lever, only, brake Lever, only, air Bracket, for brake lever Screw, long, clamping brake and air brackets Screw, short, clamping brake and air brackets Pin, fulcrum, for brake lever Nut, brake lever fulcrum pin Bolt, central, for air lever Cap, for air lever Washer, spring, for air lever	         	
FRONT	BRAKE CABLE		
000530-44 . 017240 . 017238 . 000529-26 . 000531 . 011348 . 017217 . 017049 . 000736 . 000014	Cable, complete, assembled, front brake  Wire, inner, front brake, 40½ ins. finished length (same as 12-44)  Nipple, brake end, for brake inner wire (same as 40-058)  Nipple, handlebar end, for brake inner wire (same as 18-088)  Casing, outer, front brake, 26 ins. long (same as 12C-26)  Ferrule, front brake outer casing (same as STD.531)  Adjuster, front brake cable  Nut, lock, front brake cable adjuster (same as 16363)  End, yoke, front brake cable (same as 16482)  Pin, for yoke end, front brake cable (same as STD.736)  Pin, split, for front brake cable yoke and pin (same as STD.14)  Sleeve, rubber, for front brake cable inner wire	         	
CLUTCH	CABLE		
017238 . 000529-50 <sup>3</sup> / <sub>4</sub> . 014225 .	Nipple, gearbox end, clutch inner wire (same as 4)	     	

WHEN IN DOUBT REGARDING THE NAMES AND PART NUMBERS OF THE PARTS YOU REQUIRE, PLEASE SEND THE OLD PARTS TO SERVE AS PATTERNS.

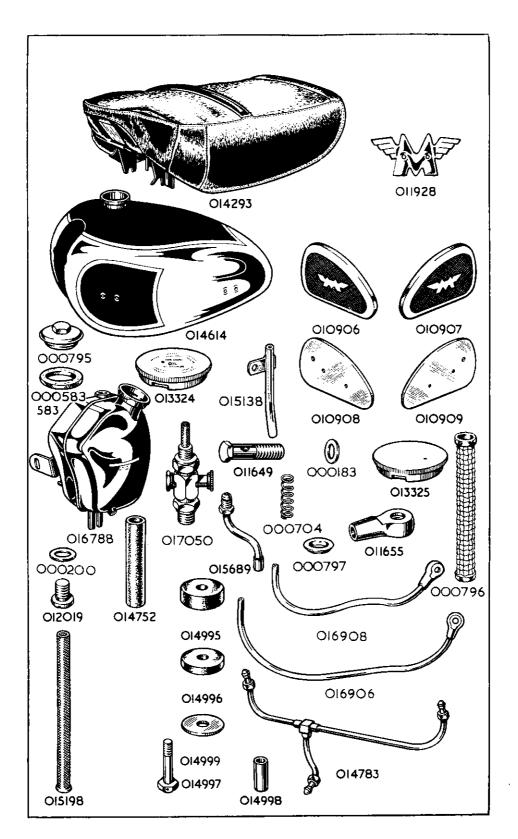

PART NUMBER		QTY OFF	
THROT 017262 000535-41 017242 017266 000526-37 000528	TLE CONTROL CABLE  Cable, complete, assembled, throttle (same as 41-T-2)	]             	
AIR CO 017263 000527-36 017242 017266 000526-32 000528	NTROL CABLE  Cable, complete, assembled, air (same as 41-A-1)	1	
IGNITIC 015190 000527-38 017379 017266 000526-25½ 000526-6 014828 000928 458731 458727 163343 454969 458732	Cable, complete, assembled ignition  Wire, inner, ignition, finished length 37½ ins. (same as II-37½)  Nipple, magneto end, ignition inner wire (same as MC-4)  Nipple, handlebar end, ignition inner wire (same as I2-034)  Casing, outer, ignition, 25¼ ins. long (same as IIC-25¼)  Casing, outer, ignition, 6 ins. long (same as IIC-6)  Stop, adjustable, for ignition cable  Ferrule, ignition outer casing (same as STD.528)  Cap, rubber, cable entry to magneto  Cap, metal, cable entry to magneto  Washer, fibre, for cable entry metal cap  Plunger, for ignition cable  Spring, return, for ignition cable	! ! ! ! ! ! !	
PETROL 014614 011928 000150	. TANK Tank, petrol, bare	2	
PETROL 013325 017050 000200 010906 010907 010908 010909 000070 000639	TANK FITTINGS  Cap, filler, for petrol tank	2	
014997 014998 014995 014996 014999	Bolt, fixing tank, all positions, $1\frac{1}{4}$ in. by $\frac{5}{16}$ in. by 26  Bolt, fixing tank, all positions, $1\frac{1}{4}$ in. by $\frac{5}{16}$ in. by 26  Sleeve, $\frac{13}{16}$ in. long, for tank fixing bolts  Pad, rubber, thick $(\frac{5}{8}$ in.) for tank fixing bolts in front right and both rear positions  Pad, rubber, thin $(\frac{3}{16}$ in.), for all tank fixing bolts (three used on front left bolt)  Washer, metal, $1\frac{1}{4}$ in. diameter, plain, for tank fixing bolts  Wire, copper, 5 feet by 20 S.W.G. (same as 41-G3L-T97)	4 4 3 6 4 1	

PRICE EACH £ s. d.

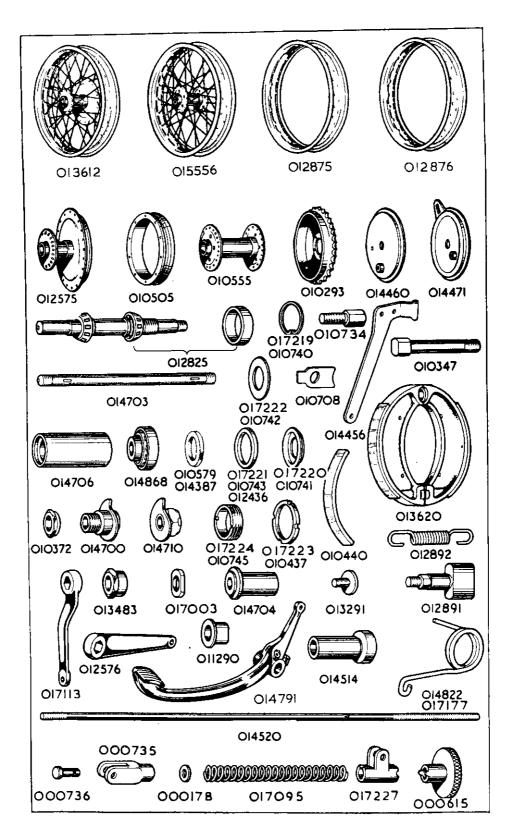

	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d
NK			
11417	Tank oil hare	. 1	
	Cas filler oil tank		
	menting the state of the market of the state		
	Washer fibre oil tank drain plus (same as \$10.200)		
	Filter tell for oil tank isallie as 3 LD.//Ol		
•••	Spring, for oil tank felt filter (same as STD.797)	. i	
	Can scrowed oil tank filter compartment (same as \$10.773)		
	For the nuts and washers that retain the oil tank (and the Battery	Carrier)	
	For the bolt, washer, and nut fixing the oil tank bracket to the rear n Mudguard " Group.	nudguara	, see '' Re
ı Di	DE		
_ r	Pina assembled for petrol feed	. 1	
•••	The "nipples" on these bibes are formed integrally with the pipi	ing. The	refore un
PES			
	Pipe, oil feed assembly		
	Pine oil return engine end (100g)		
• • •	Pipe, oil, return	. 2	
	Union, banjo, feed and return oil pipes to engine	. 2	
	Washer fibre for oil nine banio pins (same as STD.183)	4	
	Connection, rubber, for feed and return oil pipes	∠	
	Filter metal gauge, for oil feed bide	,.   .,	
	Hose from crankcase release valve to oil tank	!	
•••	Pipe, vent, metal	i	
 Т W	'HEEL		
	Rim, spokes, nipples, hub, grease nipple, all bearings, and all brake	parts in	cluding co
	Wheel front complete with all fittings, chrome and red centre	1.	
•••	The bare wheel listed below comprises:—		
	Nim, spokes, impries and note.	1	
•••	Pim front 19 ins by 2½ ins	1 .	
•••	Spoke, front left, $5\frac{3}{16}$ ins. by 8 G by 10 G (same as 37-X-H51)	20 .	••
	-CL- feart wight 81 inc by 9 to by 11 to (same as 14377)	20 .	••
	- Nimple front left 1/15 in DV III is ISAINE as 200001	20 -	••
	Hub, front wheel, shell only with brake drum	I	
• • • •	Ninela grossa for front wheel hilb (same as \$10.31)	.	
	Tape, for 19 ins. by $2\frac{1}{2}$ ins. rim	1 .	••
	Tape, for 17 ms. by 22 ms. 7m		
	HEEL BEARINGS		
	/HEEL BEARINGS  Spindle with roller bearings, for front wheel (same as 40-G12M-H)	10) I	•••
T W	/HEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-H)	10) I 2	
T W	/HEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-H) Oil-seal, for front hub bearings  Bing spring locating front hub bearings (same as 11910)	10) l 2 l	
T W	/HEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-H) Oil-seal, for front hub bearings Ring, spring, locating front hub bearings (same as 11910)  Cus for front hub bearing oil-seal (same as 11911)	10)   2	
T W	THEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-HI Oil-seal, for front hub bearings	10) I 2 I I	···
T W	HEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-H1 Oil-seal, for front hub bearings	10) I 2 I I 3 I	
T W	WHEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-HI Oil-seal, for front hub bearings	10) I 2 I I 3 I 1	
T W	/HEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-HI Oil-seal, for front hub bearings Ring, spring, locating front hub bearings (same as 11910)  Cup, for front hub bearing oil-seal (same as 11911)  Ring, spacing, for front hub bearing oil-seal (same as 11912)  Ring, retaining front hub bearing oil-seals (same as 11913)  Nut, lock, for front hub bearing adjusting ring (same as 11914)  Ring, adjusting, for front hub bearing (same as 11915)  Nut, locating front brake cover plate (same as 40-G12M-H47)	10) I 2 I 3 I I I	
T W	HEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-HI Oil-seal, for front hub bearings  Ring, spring. locating front hub bearings (same as 11910)  Cup, for front hub bearing oil-seal (same as 11911)  Ring, spacing, for front hub bearing oil-seal (same as 11912)  Nut, lock, for front hub bearing adjusting ring (same as 11914)  Ring, adjusting, for front hub bearing (same as 11915)  Nut, locating front brake cover plate (same as 40-G12M-H47)  Market locating front brake cover plate (same as 11913)	10) I 2 I I 3 I I	
T W	YHEEL BEARINGS  Spindle, with roller bearings, for front wheel (same as 40-G12M-H1 Oil-seal, for front hub bearings	10) I 2 I I I I I I	
	PES	Tank, oil, bare  Cap, filler, oil tank  Plug, drain, for oil tank washer, fibre, oil tank (same as STD.200)  Filter, felt, for oil tank (same as STD.796)  Spring, for oil tank (liter (same as STD.794)  Cap, metal, dished, for oil tank felt filter (same as STD.797)  Cap, screwed, oil tank filter compartment (same as STD.795)  Washer, cork, filter compartment cap (same as STD.795)  Washer, cork, filter compartment cap (same as STD.795)  For the nuts and washers that retain the oil tank (and the Battery frame, see "Battery Carrier" Group.  For the bolt, washer, and nut fixing the oil tank bracket to the rear r. Mudguard" Group.  LPIPE  Pipe, assembled, for petrol feed  The "nipples" on these pipes are formed integrally with the pip nuts cannot be re-moved or re-fitted, and they are not sold as separa  PES  Pipe, oil feed assembly  Pipe, oil return, engine end (long)  Pipe, oil, return  Union, banjo, feed and return oil pipes  Pin, banjo, retaining feed and return oil pipes to engine  Washer, fibre, for oil pipe banjo pins (same as STD.183)  Connection, rubber, for feed and return oil pipes  Filter, metal gauze, for oil feed pipe  Hose, from crankcase release valve to oil tank  Pipe, vent, metal  Hose, from oil tank to metal vent pipe  TWHEEL  The complete wheel listed below comprises:—  Rim, spokes, nipples, hub, grease nipple, all bearings, and all brake plate and expander lever, but does not include the tyre.  Wheel, front, complete with all fittings, chrome and red centre The bare wheel listed below comprises:—  Rim, spokes, nipples and hub.  Wheel, front, complete with all fittings  Rim, front, 19 ins. by 2½ ins.  Spoke, front left, 5½ ins. by 8 G by 10 G (same as 37-X-H51)  Spoke, front, right, 8½ ins. by 9 G by 11 G (same as 20680)  Nieple, front, eith, r. 725 in by 11 G (same as 20680)	Tank, oil, bare

PART NUMBER	DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.

### **REAR WHEEL** The complete wheel listed below comprises:-Rim, spokes, nipples, hub, grease nipple and all bearings assembled, but does NOT include the centre solid spindle, washers, spacers, nuts, brake parts, sprocket and brake drum, speedometer drive and tyre. Wheel, rear, complete, with all fittings, chrome and red centre $\dots$ 1 $\dots$ The bare wheel listed below comprises:--Rim, spokes, nipples and hub. Wheel, rear, bare, less all fittings, chrome and red centre..... Rim, rear, 19 ins. by $2\frac{1}{2}$ ins. Spoke, rear, left or right, $8\frac{1}{8}$ ins. by 7 G by 9 G Hub, rear wheel, shell only Nipple, grease, for rear wheel hub (same as STD.51) ... Tape, for 19 ins. rear rim REAR WHEEL BEARINGS Bearings, roller, for rear hub (only sold as a complete bearing) ... 2 Bearings, roller, for rear flub (only sold as a complete bearing) 2 Oil-seal, for rear hub bearings Ring, spring, locating rear hub bearings Cup, for rear hub bearing oil-seal Ring, spacing, for rear hub bearing oil-seal Ring, retaining rear hub bearing oil-seal Coller charges between bearing and rear hub bearing oil-seal Collar, spacing, between bearing and rear hub bearing oil-seal 2 Spacer, 2 hos. long between the two bearings of rear hub if Ring, adjusting, for rear hub bearing ... Nut, lock, for rear hub bearing adjusting ring Spindle, centre, solid, for rear wheel Spacer, lik in long, on rear wheel solid spindle, for speedometer Spacer, 1 in long, on rear wheel solid spindle, for speedometer gearbox Nut, locking, speedometer gearbox Sleeve, on rear wheel solid spindle, locating brake cover plate... Cam, on rear wheel solid spindle, right side Cam, on rear wheel solid spindle, left side Key, on rear wheel solid spindle, locating cams (same as STD.573) Collar, on rear wheel solid spindle (abuts against fork end) Nut for rear wheel solid spindle... 2 Nut, for rear wheel solid spindle.... FRONT BRAKE Drum, front brake ..... Plate, cover, front brake ...... Stay, front brake cover plate anchor Bolt, fixing anchor stay to front cover plate, $\frac{5}{8}$ in. by $\frac{3}{8}$ in. by $\frac{26}{8}$ ...... Stay, front brake cover plate anchor ...... Lever, for front brake shoe expander Nipple, grease, for brake shoe expander (same as STD.51) Washer, plain, for brake shoe expander (same as STD.174) Nut, for brake shoe expander (same as STD.4)

PART	DESCRIPTION	QTY.	EACH
NUMBER		OFF	£ s. d.
B=15			

DRICE

#### REAR BRAKE Sprocket and brake drum, for rear wheel, 42 teeth, five hole Nut, for rear sprocket retaining bolt 5 Plate, cover, rear brake 1 Bolt, anchor, rear brake cover plate, $2\frac{17}{64}$ ins. by $\frac{3}{8}$ in. by 26, with square head .... Linings, brake, per pair of, less rivets (same as 3836-2) Rivets, for brake linings (same as STD.113) .....per set of 12 Silvets, for brake linings (same as 510.113)......per set of Spring, for brake shoes (same as 16485) Expander, for brake shoes (same as 36-8-8-51) Lever, for rear brake shoe expander (same as 38-12-830) Nipple, grease, for brake shoe expander (same as STD.51) Washer, plain, for brake shoe expander (same as STD.174) . . . Nut, for brake shoe expander (same as STD.4) **REAR BRAKE OPERATING PARTS** Pedal, foot, for rear brake Spring, return, rear brake foot pedal ..... Bolt, adjusting, rear brake foot pedal, $\frac{31}{32}$ in. by $\frac{1}{4}$ in. by 26 (same as STD.344) Nut, for rear brake, foot pedal adjusting bolt (same as STD.5) Rod, bare, rear brake ..... End, yoke, for front end of brake rod (same as STD.735) ..... Pin, for brake rod yoke end (same as STD, 736) Pin, for brake rod yoke end (same as STD. 736) Pin, split, for brake rod yoke end pin (same as STD.14) Spring, for brake rod (same as 36-G3-B18) Collar, for brake rod, spring (same as STD.178) Clip, adjusting, for rear end of brake rod (same as 1772) Pin, for brake rod adjusting clip (same as STD.736). Pin, split, for brake rod adjusting clip pin (same as STD.14) Nut, adjusting, for rear brake rod (same as STD. 615. . . . ... **VOLTAGE REGULATOR** Regulator, complete unit, type MCR2 (Lucas No. 37144-A) Bolt, fixing regulator unit $\frac{1}{16}$ in. by $\frac{1}{4}$ in. by 26 (same as STD.70)... Washer, plain, for regulator fixing bolt (same as STD.12) Nut, for regulator fixing bolt (same as STD.5) Strap, fixing regulator to battery carrier Bolt, securing fixing strap to battery carrier, $I_{\frac{5}{8}}$ in. by $\frac{1}{4}$ in. by 26 (same as STD.347) Washer plain for strap fixing bolt (same as STD.12)

THE PRICES OF SPARES DO NOT INCLUDE THE COST OF CARRIAGE

Nut, for strap fixing bolt (same as STD.5).....

PART NUMBER	l.	DESCRIPTION	QT\ OFI	
BATTE	RY			
011255		Battery, with lid, dry and uncharged. This is a battery that has NOT been filled with electrolyte (acid) and is, of course, not charged. It requires no special packing, and can safely be packed with other goods. (Lucas No. PUW-7E-4). (We do not supply charged batteries—for such apply to nearest Lucas Service Station)		
\$-2171		Lid, only, with rubber pads, for battery	İ	•••
HEAD	LAI	MP		
50945-A		Lamp, head, type SSU-700-P, with bulbs, ammeter and switch (no		
553248 553268 858542 130251 185026 516183 112201 137141		cable harness) Rim, bare, for head lamp Light unit (glass and reflector) Adaptor (bulb holder) Screw, fixing panel to head lamp Washer, spring, for panel fixing screw Fillet, rubber, for head lamp panel Bolt, fixing head lamp to bracket. Washer, plain, for head lamp fixing bolts	1 1 3 3 1	
		See ELECTRICAL SUNDRIES for Ammeter, Switch, Cable Harness and B	ulbs	
REAR	LAM	1P		
014674 572595 572039 572040 572611 572604 572614 161385 188818 165310 185036		Lamp, rear, complete with bulb (Lucas No. 53139-A) Gasket, rubber, for base of rear lamp Grummet, rubber, for rear lamp wire Plug, rubber, for base of rear lamp Glass, red, for rear lamp Frame, over rear lamp, red glass Nut, sleeve, fixing glass frame Washer, rubber, for sleeve nut fixing glass frame on rear lamp Terminal sleeve, for rear lamp wire Nut, rear lamp fixing screw Washer, spring, for rear lamp, fixing screw	1 1 1 1 2 2 2	
HORN		Harry time HE 1924 with bracket - Lucas replacement number is		
015257		Horn, type HF 1234, with bracket. Lucas replacement number is 069225, but hole in bracket must be opened out to 紅 in. diameter Bracket, only, for horn (see note above re opening out hole)	- 1	
ELECT	RIC	AL SUNDRIES		
36084		Ammeter, for head lamp panel	Į	
351551 351567	•••	Switch, main lighting, for head lamp panel Handle, with screw, for main lighting switch	1	
380521		Switch, dipping, for handlebar	i	
016427		Switch, horn, for handlebar (Lucas No. 76209)	i	
994001		Cable harness, main lighting (no dip switch wire, no horn wire, no		
858795		regulator wires)	i	
989981		Cable harness, for regulator	i	
359218		Cable, for horn	j	
016681		Sheath, for horn cable	- 1	
016682		Sheath, for dynamo cable	ı	
000543		Cable, high tension, for sparking plug, price per foot	D	
000541		(same as STD.543) Terminal, for high tension cable (same as STD.541)	R 2	
000540		Terminal, for earth cables (same as STD.540)	2	
900260		Connector, snap, for rear lamp cable	ı	
900260		Connector, snap, for regulator to ammeter cable	- 1	
571395	• • •	Connector, screwed, for battery positive cable	- 1	•••

PRICE EACH £ s. d.

PART NUMBER		DESCRIPTION	QT` OF	
ELECT	RIC	AL SUNDRIES—continued.		
011094		Bush, rubber, fits in rear mudguard, for rear lamp cable		
312		(same as 39-G3-E13)	. 1	
		Plus Purchase Tax		
88		Bulb, head lamp, pilot, 6 volt, 3 watts. Plus Purchase Tax	. —	
88		Bulb, rear lamp, 6 volt, 3 watts., M.B.C., single contact		
015538		Plug, sparking, KLG, type FE-80	. 2	
CABLE	CL	.ips		
11907		Clip, rubber, I½ in	6	
11908 11909		Clip, rubber, $3^{\circ}$ ins. Clip, rubber, $4^{\circ}_{\pi}$ ins.	4	
18012		Clip, rubber, 5 ins,	Ī	
)14453 )11382		Clip, metal, holding rear lamp wire inside mudguard		
11094		Bush, rubber, fits in rear mudguard for rear lamp cable		
		(same as 39-G3-EQ13)	ı	••
SPEEDO	) MC	ETER		
3-480-3-L		Head only approximately thin 120 M.P.M.		
		Head, only, speedometer, trip, I20 M.P.H.	1	
-480-7-L		Head, only, speedometer, trip, 180 K.P.H. Set of bulb holding parts for head	 	
-480-7-L. 4279-1		Head, only, speedometer, trip, 180 K.P.H. Set of bulb holding parts for head Bulb, 6 volts, 1-8 watts, M.B.C. for head	   	
-480-7-L 4279-1 3205		Head, only, speedometer, trip, 180 K.P.H. Set of bulb holding parts for head Bulb, 6 volts, 1.8 watts, M.B.C. for head Plus Purchase Tax Nut, fixing speedometer head to bracket	    - 	
-480-7-L. 4279-1 3205 J-1253 00012		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)	  -    -    -	
-480-7-L. 4279-1 3205 1-1253 00012 V-7216		Head, only, speedometer, trip, 180 K.P.H. Set of bulb holding parts for head Bulb, 6 volts, 1.8 watts, M.B.C. for head Plus Purchase Tax Nut, fixing speedometer head to bracket	1 1 2 2 2 2	
-480-7-L 4279-1 3205 N-1253 00012 V-7216 3395-1-65 2108-1-65		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1.8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only	2 2 2 1	
-480-7-L 4279-1 3205 4-1253 00012 V-7216 3395-1-65 2108-1-65 11392		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.	2 2 1 1	
-480-7-L 4279-I 3205 N-1253 00012 V-7216 3395-1-65 2108-1-65 3398-1-65 11392 00450		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)	2 2 2 1 1 1	
-480-7-L 4279-1 3205 N-1253 00012 V-7216 3395-1-65 2108-1-65 3398-1-65 11392 00450		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only  Cable, speedometer drive, outer only  Cable, speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)	2 2 2 1 1 1	
-480-7-L 4279-I 3205 I-1253 00012 V-7216 3395-I-65 3398-I-65 3398-I-65 11392 00450 00190 2283-5 10696		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)	2 2 2 1 1 1 1 1 1	
-480-7-L -4279-1 -3205 N-1253 -00012 V-7216 -3395-1-65 -3398-1-65 -11392 -00450 -00190 -2283-5 -10696		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, $\frac{3}{8}$ in. by $\frac{1}{4}$ in. by 20  (same as STD.341)	2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
3-480-7-L 54279-1 53205 N-1253 000012 W-7216 33395-1-65 12108-1-65 111392 000450 100190 12283-5 110696 100012		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, $\frac{5}{8}$ in. by $\frac{1}{4}$ in. by 20	2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
3-480-7-L 3-4279-1 3-205 N-1253 3-300012 W-7216 3-3395-1-65 3-3398-1-65 3-398-1-65		Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, $\frac{3}{8}$ in. by $\frac{1}{4}$ in. by 20  (same as STD.341)	2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
-480-7-L 4279-I 3205 V-1253 00012 V-7216 3395-I-65 3398-I-65 3398-I-65 11392 00450 00190 2283-5 10696 0034I 00012		Head, only, speedometer, trip, 180 K.P.H. Set of bulb holding parts for head Bulb, 6 volts, 1-8 watts, M.B.C. for head Plus Purchase Tax Nut, fixing speedometer head to bracket Washer, plain, spacing, for head (same as STD.12) Washer, spring, speedometer bracket nut Cable, speedometer drive, complete Cable, speedometer drive, inner only Cable, speedometer drive, outer only. Clip, for speedometer drive, cable (same as 41-G3L-F311) Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A. (same as STD.450) Washer, spring, for cable clip screw (same as STD.190) Gearbox, speedometer, complete Bracket, for speedometer head (same as 40-G12M-FF78) Bolt, fixing speedometer head to forks, $\frac{3}{8}$ in. by $\frac{1}{4}$ in. by 20 (same as STD.341) Washer, plain, speedometer bracket bolt (same as STD.12)  EQUIPMENT Set of Pannier bags, with frames and fixing bolts, washers and nuts	2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
-480-7-L 4279-1 3205 J-1253 00012 V-7216 3395-1-65 2108-1-65 3398-1-65 11392 00450 00190 2283-5 10696 00341 00012	   	Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut.  Cable, speedometer drive, complete  Cable, speedometer drive, outer only.  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311).  Screw, fixing speedometer cable clip, 3/8 in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, 3/8 in. by 1/4 in. by 20  (same as STD.341)  Washer, plain, speedometer bracket bolt (same as STD.12)*  EQUIPMENT  Set of Pannier bags, with frames and fixing bolts, washers and nuts Plus Purchase Tax	22211111122	
-480-7-L 4279-1 3205 N-1253 00012 V-7216 3395-1-65 2108-1-65 11392 00450 00190 2283-5 10696 00341 00012 VARIOU	 	Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, \(\frac{3}{6}\) in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, \(\frac{3}{6}\) in. by \(\frac{1}{4}\) in. by 20  (same as STD.341)  Washer, plain, speedometer bracket bolt (same as STD.12).	2 2 2 1 1 1 1 2 2 2 I R	
-480-7-L 4279-I 3205 N-1253 00012 V-7216 3395-I-65 3395-I-65 3398-I-65 11392 00450 00190 2283-5 10696 00341 00012 VARIOU	 	Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut  Cable, speedometer drive, complete  Cable, speedometer drive, inner only  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, $\frac{3}{8}$ in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, $\frac{3}{8}$ in. by $\frac{1}{4}$ in. by 20  (same as STD.341)  Washer, plain, speedometer bracket bolt (same as STD.12)  EQUIPMENT  Set of Pannier bags, with frames and fixing bolts, washers and nuts Plus Purchase Tax  "TEKALL" Rust preventative $\frac{1}{2}$ pint "TEKALL" Rust preventative I pint Instruction Manual		
3-480-7-L 3-4279-1 3-205 N-1253 3-300012 W-7216 3-3395-1-65 3-3398-1-65 3-398-1-65	  	Head, only, speedometer, trip, 180 K.P.H.  Set of bulb holding parts for head  Bulb, 6 volts, 1-8 watts, M.B.C. for head  Plus Purchase Tax  Nut, fixing speedometer head to bracket  Washer, plain, spacing, for head (same as STD.12)  Washer, spring, speedometer bracket nut.  Cable, speedometer drive, complete  Cable, speedometer drive, inner only.  Cable, speedometer drive, outer only.  Clip, for speedometer drive, cable (same as 41-G3L-F311)  Screw, fixing speedometer cable clip, 3 in. by 2 B.A.  (same as STD.450)  Washer, spring, for cable clip screw (same as STD.190)  Gearbox, speedometer, complete  Bracket, for speedometer head (same as 40-G12M-FF78)  Bolt, fixing speedometer head to forks, 3 in. by 1/4 in. by 20  (same as STD.341)  Washer, plain, speedometer bracket bolt (same as STD.12)  EQUIPMENT  Set of Pannier bags, with frames and fixing bolts, washers and nuts Plus Purchase Tax  "TEKALL" Rust preventative 1/2 pint "TEKALL" Rust preventative 1/2 pint "TEKALL" Rust preventative 1/2 pint		

PRICE EACH £ s. d.

PART NUMBER		DESCRIPTION	QTY. OFF	PRICE EACH £ s. d.
COMPL	_ET	E TOOL KITS		
015899 015900		Tool kit, complete, with tyre inflator	.	
		The following comprise "TOOL KIT, COMPLETE, WITH TYRE included as part of every motor cycle.	INFLATOR	R,'' and i
<b>TOOLS</b>	;			
017253		Bag for tools (same as 17520)	. 1	
017256		Screwdriver (same as L-TK-13)	.	
017248		Pliers, side cutting (same as L-TK-15)	.	
011188		Pliers, for gudgeon pin circlips (same as 11024)	.	
017246		Gun, grease (same as L-TK-20)	.	
017114		Inflator, tyre (same as 38-G3-ÉQ2)	.	
017007		Lever, tyre (same as 40-G3-TK29)	.	
017052		Spanner, double end, $\frac{3}{16}$ in. by $\frac{1}{4}$ in. (same as 4I-G3L-TKI)	. i	
017053 017255	• • •	Spanner, triple end, 820 in. by 1-011 in. by 1-2 in.		
017233	• • •	(same as R-TK-3)	. 1	
017257		Spanner, double end, $\frac{3}{16}$ in. by 375 in. (same as 3263)	. 1	
017252		Spanner, box, with tommy, for sparking plug (same as 1/634)	.	
017250		Spanner, hook, for front hub bearings (same as 11914-5)	.	
010438		Spanner, hook, for rear hub bearings		
017249		Wrench, adjustable (same as L-TK12)	. !	
015023		Spanner, double end, with gauge, for contacts (Lucas No. 415116)	!	
015264		Spanner, single end, for rocker clamping bolts	.	
015213	• • •	Spanner, box, for cylinder head nuts	.	
014540		Spanner, box, with tommy, for rocker box cover nuts	. 1	
SPECIA	۸L '			
011381		Holder, valve, for valve grinding (same as 36-G8-E384)	1	
015273		Extractor, for timing pinion and magneto gear		
015374		Extractor, for camshaft gears		
015955		Disc, timing (see Instruction Manual)		
		The above tools are NOT INCLUDED in the equipment of a new moto	r cycle.	

## **SERVICE**

The Service and Repair Department is situated in Burrage Grove, Plumstead, London, S.E.18. Burrage Grove is the first turning on the left from Burrage Road when entering Burrage Road from the Plumstead Road. (See final paragraph below.)

The nearest Railway Station is WOOLWICH ARSENAL, SOUTHERN REGION RAILWAY. This Station is five minutes' walk from our Service Depot in Burrage Grove. There is an excellent service of electric trains from Charing Cross, Waterloo, Cannon Street and London Bridge Stations, Southern Region Railway.

Bus routes 53, 53a, 54, 99 and 122. Trolleybus routes, 696 and 698, and Tram routes 36, 38 and 40, pass the end of Burrage Road (one minute from the Service Depot).

Bus routes 21a, 75 and 161 and Tram routes 44, 46 and 72 serve Beresford Square which is three minutes' walk from the Service and Repair Department.

Visitors from the North can pass into Woolwich via the Free Ferry between North Woolwich and Woolwich. North Woolwich is a British Railways terminus and is also served by Bus and Trolleybus routes 101, 569, 669 and 685. There is also a tunnel under the River Thames at this point for foot passengers. The Free Ferry accommodates all types of motor vehicles and there is a very frequent service. The Southern landing stage is less than a mile from the Service Depot.

Visitors arriving by road, if they are strangers to the locality, should enquire for **Beresford Square**, **Woolwich**. Upon arrival there, the road skirting the Royal Arsenal should be followed in an Easterly direction for about four hundred yards, and Burrage Road is the second turning on the right after leaving the square. Burrage Grove is then the first turning on the left.

# DETAILED INDEX

			Page	
BRAKES			0-41	HANDL
CARBURETTER		1	2-14	LEVERS
CABLES (Control)		3	5-37	OFFICE Guaran
CARRIER			31	How to instruct Repairs
ELECTRICAL				Service Terms
Battery			42	1011113
Battery carrier			32	
Cable clips			43	PIPES
Dynamo			14	Exhaust
Horn	***	•••	42	Oil
Lamp, Head			42	Petrol
Lamp, Rear			42	
Magneto			14	SEATS
Sundries		***	42	SEATS
Voltage Regulator			41	SERVICE
				How to
ENGINE		5 t	0 10	11011 0
THE NAME OF A TAKE			15	SILENC
ENGINE PLATES	•••	•••	15	
FOOTRESTS			33	SPEEDO
TOOTRESTO				STAND
FORKS (Front)			27	
				TANKS
FORKS (Rear)			26	
				TELEDI
FRAME		7	24-26	
				TOOLS
GASKETS			17	TOOLS
GASKEIS	***		"	
				TOOL
GRIPS			33-35	
CHARDS				TRANSI
GUARDS			32	
Chaincase, front		•••	32	TRANSI
Chainguard rear Mudguard, front			31	
Mudguard, front	•••		31	VARIOL
Number plate, front	***	•••	31	
Number plate, rear			31	WHEEL
radinact place, real	***	***		

					Page
HANDLE	BAR		•••		29
LEVERS (	(Contro	1)			33-35
OFFICE I					
Guarant	ee				3
How to	order s	pares			2
Instructi	ion Boo	k			3
Repairs Service					3
Service					2
Terms o	of Busine	ess			2
PIPES					
Exhaust					17
Oil Petrol					39
Petrol					39
SEATS					33
JEATS					
SERVICE					
How to	reach F	actory		***	44
SILENCE	RS	\			17
SPEEDO	METER				43
STANDS	;				29
TANKS					37-39
TELEDR	AULIC	LEG	i		26
TOOLS					43-44
TOOL E	BOXES	3			32
TRANSF	ERS				33
TRANSM	115510	N		15	to 24
VARIOU	S				43
WHEELS	S	•••			39-40

# PRINTED IN ENGLAND

CHAS. F. THORN & SON, LTD 58-64, Wellington Street WOOLWICH, S. E. 18

2,000-4-51