SPARES LIST

FOR

1953 MATCHLESS

350 MODEL G31. RIGID FRAME (TOURING)
350 MODEL G3LS SPRING FRAME (TOURING)
350 MODEL G3LC RIGID FRAME (COMPETITION)
350 MODEL G3LCS SPRING FRAME (COMPETITION)

500 MODEL G80 RIGID FRAME (TOURING)

500 MODEL G80S SPRING FRAME (TOURING)

500 MODEL G80C RIGID FRAME (COMPETITION)

500 MODEL G80CS SPRING FRAME (COMPETITION)

350 - Bore 69 mm. 500 - Bore 82.5 mm. Stroke 93 mm.

Capacity 347 c.c.

Struke 93 mm

Capacity 498 c.c.



Compiled and I sound by the Manufacturers

MATCHLESS MOTOR CYCLES

(Proprietors: ASSOCIATED MOTOR CYCLES LIMITED)

Registered Offices:

PLUMSTEAD ROAD, PLUMSTEAD LONDON, S.E.18 . ENGLAND

Nextest Station: WOOLWICH ARSENAL (Southern Region Rullway) Factories;
BURRAGE GROVE and MAXEY ROAD
PLUMSTEAD, S.E.18

Telegrams and Cables. "MATCHLESS, WOL-LONDON"
Telephone: WOOLWICH 1223 (5 Lines)
Codes: A.B.C. 5th and 6th Edition., Bentley's, and Private Codes

All correspondence to :-MATCHLESS MOTOR CYCLES, PRUMSTEAD ROAD, LONDON S.E.IR

Price: TWO SHILLINGS and SIXPENCE

FDITION CL-25

(I) TERMS OF BUSINESS.

Our terms are :- CASH WITH ORDER,

CASH AGAINST PRO-FORMA INVOICE, OR

APPROVED LEDGER ACCOUNT.

Customers who wish to avoid delay can open deposit accounts and the usual deposit is £5.

Orders from abroad should be accompanied by a remittance to cover the costs of goods and postal charges.

We do not send goods by "CASH ON DELIVERY" (C.O.D.).

(2) PRICES AND SPECIFICATIONS.

All prices, specifications and conditions are subject to alteration without notice. The prices of spares do not include the costs of packing and carriage.

(3) CARRIAGE AND PACKING.

All Invoices for spare parts will be SURCHARGED by 2½ PER CENT, to cover the cost of packing and postage, or carriage, and the minimum surcharge is sixpence. (Home orders only.)

A special packing case, or crate, is required for some spares to ensure freedom from damage in transit. In such circumstances a special charge for the value of the case, or crate, will be made in addition to the $2\frac{1}{2}$ per cent, surcharge but the special charge will be credited in full if the container is promptly returned to our factory carriage paid and in good condition.

(4) HOW TO ORDER SPARES.

STATE: (a) The Model of the machine.

- (b) The complete engine number. (See paragraph 5.)
- (c) The frame number. (See paragraph 5.)
- (d) The part numbers of the spares required.
- (e) A description of each spare.
- (f) The quantity required of each item.
- (g) How the spares are to be sent. (Post, Parcels Post, Passenger train or Goods train.
- (h) Your full name and address. These particulars are best written in BLOCK LETTERS
- (i) Mention if, or not, you have an account with us.
- ALSO:— Unless you have a deposit or ordinary account, enclose a remittance to cover the cost of the spares plus the 2½ per cent, surcharge. (See paragraph 3.)

When cash is sent any excess will be refunded without prior application.

NOTE: — When sending orders by telegram or cable do not omit your name and address from the message.

(5) IDENTITY.

To ensure the supply of correct spares it is essential we can identify the machine or which they are required. The ONLY WAY to do that is for us to know the COMPLETE ENGINE and frame numbers.

The engine number is stamped on the LEFT crankcase, UNDER THE CYLINDER, and may have one or more letters incorporated in it. THE COMPLETE NUMBER MUST BE QUOTED.

The frame number is stamped on the right-hand side of the frame lug that is below the saddle.

(6) SERVICE.

The SERVICE AND REPAIR DEPARTMENT is situated in BURRAGE GROVE, PLUMSTEAD, LONDON, S.E.18, and is open on Mondays to Fridays from 8.30 a.m. to 12.55 p.m.—2 p.m. to 5.30 p.m. It is closed on Saturdays, Sundays and National Holidays.

It exists for the purpose of :-

- (a) Giving technical assistance verbally or through the Post.
- (b) Supplying spare parts over the counter or through the Post.
- (c) Repairing and re-conditioning machines, or parts of machines, of our make.

If it is considered necessary to bring a machine, or parts, to the factory for an urgent repair IT IS ESSENTIAL you make an appointment beforehand to avoid disappointment. This can be done by letter or telephone.

(7) REPAIRS.

The instructions regarding repairs should be clear and definite, otherwise the cost may be greater than that expected. We shall be pleased to give estimates for repairs if parts are sent to us for that purpose. If the estimate is accepted, no charge is made for the preliminary examination, but, should it be decided not to have the work carried out, it may be necessary to make a charge to cover the cost of whatever dismantling and re-assembly may have been done to prepare the estimate.

(8) REPAIRS TO PROPRIETARY FITTINGS.

We do not repair carburetters, chains, electrical equipment, saddles, sparking plugs, speedometers and tyres. On page 85 of the "MAINTENANCE MANUAL AND INSTRUCTION BOOK" will be found the names and addresses of the manufacturers of the proprietary equipment we fit, all of whom service and repair equipment they make.

(9) PATTERNS.

Parts sent to us as patterns, or for repair, should have attached to them a label bearing the sender's full name and address. The instructions regarding such parts should be sent under separate cover.

(10) GUARANTEE.

All parts made by us, and sold as spares, are subject to the same Limited Guarantee as that issued with each new motor cycle and that guarantee is printed in full on Page 88 of the "MAINTENANCE MANUAL AND INSTRUCTION BOOK."

(II) INSTRUCTION BOOK.

A "MAINTENANCE MANUAL AND INSTRUCTION BOOK" (Edition CM-22) has been compiled and published by us.

One copy is supplied free, upon application, with each new motor cycle. Replacement copies are two shillings and sixpence each.

(12) CORRESPONDENCE.

Our routine is organised into different departments. Therefore delay cannot be avoided if matters relating to more than one department are contained in one letter.

Consequently when communicating with more than one department it is desirable to do so on SEPARATE SHEETS. Each sheet should bear the sender's name and address. IN PARTICULAR, requests for TECHNICAL ADVICE should not be on the same sheets as ORDERS FOR SPARE PARTS.

MATCHLESS MOTOR CYCLES, PLUMSTEAD, LONDON, S.E.18.


NOTE

The numbers, in brackets, that appear in the "Description" columns relate to the numbered (oot notes regarding items so specially indicated.

The quantities per machine of each item are entered in the "Qty." columns. "R" indicates as may be required.

The illustrations are not to scale and are not necessarily accurate in detail. Some items are not illustrated.

ALL PRICES, EXCEPT THOSE MARKED *, ARE SUBJECT TO 20% INCREASE.

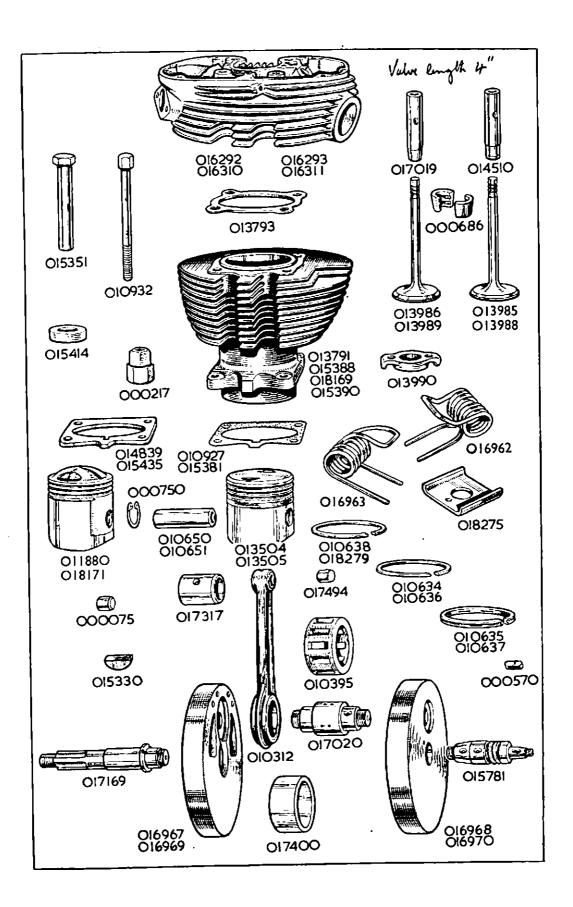

ENGINE SECTION.

PART NUMBER.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH £ s. d.
CYLINDI	ER.			
013791 015388 018169 015390 014839 015435 010927 015381 015381 000217 015351	Barrel, cylinder Plate, compression, t's in, thick, not Std. fitting (15) Washer, paper, cylinder base Washer, paper, cylinder base Washer, paper, compression plate Nut, retaining cylinder to crankcase Nut, sleeve, retaining cylinder head and barrel to crankcase Spacer, tin, long, for cylinder head sleeve nut Washer, plain, for cylinder head sleeve nut	. 1	G3L, G3LS G3LC, G3LCS G80, G80S G80C, G80CS G3LC, G3LCS G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS G80C, G80CS G80C, G80CS G80C, G80CS G80C, G80CS	2 15 0 3 15 0 3 5 0 4 5 0 2 0 2 9 1
000008 Note 15		ion rat	•	
CYLIND	ER HEADS.			
016852 016853 016854 016855 016292 016310 016293 016293 010932 000010 013793 000291 000004	Head, cylinder, with valve guides Head, cylinder, with valve guides Head, cylinder, with valve guides Head, cylinder, less valve guides How cylinder, less valve guides Bolt, securing head to barrel, 332 ins. by 4 in. by 20.		G3L, G3LS G3LC, G3LCS G80, G80S G80C, G80CS G3L, G3LS G3LC, G3LCS G80, G80S G80C, G80CS G3L, G3LS, G80, G80S G3L, G3LS, G80, G80S G3L, G3LS, G80, G80S All	6 12 11 1 4 1 1 1 4 1 4
ENGINE	VALVES.			
013985 013988 013986 013989 016963 016962 013990 018275 000686 017019 014510	Valve, exhaust. Valve, exhaust. Spring, for valve, wide prong. Spring, for valve, narrow prong. Collar, for valve spring. Seat, for valve spring. Collet, for valve (each in two pieces) Guide, for inlet valve	1	All 350 All 500 All 350 All 350 All 350 All 310 All All All All All All All All All	. 14 0 . 12 4 . 14 0 . 6 6 . 6 6 . 4 3 . 6

PART NUMBER.	DESCRIPTION.	QTY.	USED ON.		EΑ	ICE CH s. d
PISTONS	5.					
108810	Piston, complete, normal compression (1)		02E 11A		1.1	1 6
016858	Piston, complete, normal compression (1)		AII 500		1 1	
018304	Piston, complete, high compression (1)		AII 350			6
018171	Piston, complete, high compression (1)		AII 500	• • • •		2 (
013504 013505	Piston, bare, normal compression Piston, bare, normal compression		AII 350 AII 500			8 4 9
013505 011880	Piston, bare, high compression		AII 350	•••	11	
018172	Piston, bare, high compression		A11 500			7 6
018279	Ring, compression, $2\frac{2}{32}$ ins. by $\frac{1}{16}$ in. (chrome plated)		AII 350			3 9
010634	Ring, compression, $2\frac{3}{3}$ ins. by $\frac{1}{16}$ in.		AII 350			1 6
010636	Ring, compression, J_2 ins. by $\frac{1}{16}$ in	1 /	XII 500			1 9
010638	Ring, compression, $3\frac{1}{4}$ ins. by $\frac{1}{16}$ in. (chrome plated)		XII 500			4 3
010635	Ring, scraper, 25% ins. by 1 in	1 4	All 350			2 3
010637	Ring, scraper, $3\frac{1}{4}$ ins. by $\frac{1}{6}$ in	-! :	All 500			2 . 9
010650	Pin, gudgeon		All 350			4 []
015987 010651	Pin, gudgeon (special for H.C. piston)		AII 350 AII 500	• • •		5 3 5 3
000750	Circlip, for gudgeon pin		All	• • •		ϵ
	Normal compression pistons are fitted to all ne					Ì
	The following oversize parts can be supp	lied :				
018302	Piston, complete, normal compression 020 in. oversize	1 4	AII 350		1 1	1 6
018303	Piston, complete, normal compression, -040 in., oversize	• •	111 330			, ,
	(1)	1 /	AII 350		1.1	1 6
016938	Piston, complete, normal compression, -020 in., oversize					
01/057	(1)	1 4	ATT 500		1.49	9 9
016857	Piston, complete, normal compression, -040 in., oversize	1 4	ATT 500		1 19	9
018305	Piston, complete, high compression, 020 in., oversize (1)		AII 350			5 3
018856	Piston, complete, high compression, 020 in., oversize (1)		AII 500		3 2	
013621	Piston, bare, normal compression, -020 in., oversize	1 4	AH 350		- 18	-
014723 .	Piston, bare, normal compression, 040 in., oversize	1 4	AH 350		- 18	3 1
013622	Piston, bare, normal compression, 020 in., oversize		VII 500		1 4	19
015267	Piston, bare, normal compression, 040 in., oversize		MI 500			1 9
013711	Piston, bare, high compression, 020 in., oversize		MI 350		1 13	
018857	Piston, bare, high compression, -020 in., oversize	1 4	AII 500		2 7	6
018280	Ring, compression, 257 ins. plus 020 in. by 1/4 in. (chrome plated)	1 4	AII 350			3 9
016443	Ring, compression, $2\frac{2}{3}$ ins. plus 020 in. by $\frac{1}{16}$ in		XII 350		i	
018281	Ring, compression, 231 ins. plus 040 in. by 16 in.	• •	555	• · · ·		
	(chrome plated)	I A	NI 3 50	,,,	3	3 9
016444	Ring, compression, $2\frac{2}{3}$ ins. plus 040 in. by $\frac{1}{16}$ in		AII 350		Ī	
013661	Ring, compression, $3\frac{1}{4}$ ins. plus 020 in. by $\frac{1}{16}$ in	1 A	M 500		ĺ	
016447	Ring, compression, 31 ins. plus 040 in. by 1/2 in	I A	NI 500			9
116449	Ring, compression, 31 ins. plus 020 in. by 1/2 in.		11.500			
317.450	(chrome plated)	1 4	UI 500	• • •	4	1 3
016450	Ring, compression, $3\frac{1}{4}$ ins. plus 040 in. by $\frac{1}{16}$ in.		500			
016445	(chrome plated) Ring, scraper, 233 ins. plus -020 in. by 1 in.		MI 500 MI 350	• • •		13
)16445)16446	Ring, scraper, 253 ins. plus 040 in. by a in.		(ii 350		- 5	
013662	Ring, scraper, $3\frac{\pi}{4}$ ins. plus -020 in. by $\frac{\pi}{6}$ in		VII 500		- 2	-
016448	Ring, scraper, 3½ ins. plus -040 in. by ½ in		XII 500		:	
					•	

RE-BORING.

Cylinders may be re-bored to -020 in. or to -040 in. oversize and normal compression pistons (with rings) (one chrome plated) supplied to suit.

350 Model £2 11s. 8d.* (New gudgeon pins and circlips 7s. 1d.* extra), 500 Model £3 1s. 2d.* (New gudgeon pins and circlips 7s. 6d.* extra).

Cylinders sent for re-boring should be packed in stout cases which will be used by us for their return. Carriage is additional. If a complete machine, or engine, is sent to us for cylinder re-boring, there will be an additional charge, according to the time taken, for dismantling and assembly.

PART NUMBE		DESCRIPTION.	QTY.		USED ON.		E	RIC ACI	Ĥ,
FLYW 016967 016968 016969 016970 015781 017169 015330 000230 000234 000015	/HE	Flywheel, bare, driving side	 	All 3 All 3 All 5 All All All All All	350 300		1 1	4 4 4 4 15 7	9999064731
CON	NEC	CTING ROD.							
010312 017400 017317 000075 010395 017020 000233		Rod, connecting with liner and bush. Liner, for big-end bearing Bush, for gudgeon pin. Roller, crankpin, ½ in. by ½ in. Cage, for crankpin rollers Crankpin. Nut, for crankpin The following oversize part can be supplied, but we re should fit same, because it is almost general that the require "lapping" to ensure a correct fit.	1 30 1 1 2 comm				nec		
017494 CRAN		Roller, crankpin, ‡ in, plus -001 in, diameter by ‡ in, long	30	All		٠			3
018318		Crankcase, complete (2)	ı	GN	, G3LS,				
016920 018860		Crankcase, complete (3) Crankcase, driving side only (4) (6)	1	G80 G3L G80	. G80S C. G3L0 C. G800 . G3LS			18 14	2
018861		Crankcase, driving side only (4) (6)		G3L	, G80S .C, G3L0 C, G800		2	16	6
018317		Crankcase, timing side only (5) (6)	1	G3L	, G3LS, , G80S		4	1	8
016919 000575 000485 000203 000576 010934 000021 000701 000300 015350		Crankcase, timing side only (5) (6)	1 3 3 1 1 1 1 4	G3L G80 AII AII AII AII AII G3L	 C. G3L0 C. G800		4	, 9	3 6 1 1 4 3 1 3 4
000577 017182 018306 000482 000765		Peg, dowel, locating timing gear cover. Washer, paper, for timing gear cover. Cover, timing gear, with bushes. Screw, fixing timing gear cover, 1 1/2 in, by 1/4 ln, by 26 Cap, in timing gear cover, for cam bush.	4 2 1 5		C, G3L0 C, G800 		I	6	9 - 3 8 3 4

PART NUMBE		DESCRIPTION.	QTY	•	USED ON.		PRIC EAC £ s.	H
		CASE—continued.						
016864 000455	• • •	Cover, magneto chaincase	. I 8	AII AII			15	6 3
Note 2		Comprises items 010937 and 018317.						
Note 3		Comprises items 015969 and 016919.						
Note 4		Comprises crankcase half and two cylinder base studs.						
Note 5		Comprises crankcase half, bush for timing side flywhoushes, cylinder oil feed valve assembled, two cylings for the timing cover.	eel ax nder	ile w base	ith peg, studs a	two nd tv	camsh vo do	iaft wel
Note 6		Halves of crankcases must be "matched" in the Facto send the sound half of a crankcase when ordering	ctory. a nev	The half	erefore '.	it is	necess	ary

CRANKCASE BEARINGS.

017489		Bush, timing side flywheel axle	1	ΑII	 	9	0
012233		Peg, securing timing side bush	1	ΑĦ	 		-
017191	•••	Ball bearing, for driving side axle, 1 in, by 22 ins. by 2 in.	2	All	 	14	4
010628	•••	Washer, spacing, between ball bearings (SKEFKO) (7)	1	-AII	 		4
014830		Washer, spacing, between ball bearings (HOFFMAN) (7)	1	All	 		4
	• • • •	Collar, spacing, between ball bearings	1.	All	 		3
017194		Bush, for exhaust cam, in crankcase	ĺ	11A	 	2	10
000651	• • • •	Bush, for exhaust cam, in timing cover	i.	All	 	2	10
000652		Bush, for inlet cam, in crankcase	i	Αli	 	_	10
000651	•••	Bush, for inject cam, in claimease	i	Ali	•••	_	iŏ
000651		Bush, for inlet cam in timing cover	•	A11	 ••	-	


Note 7 ... The standard make of ball bearing used on the driving side flywheel axle is "SKEFKO." Those bearings are in short supply, and it has been necessary to use ball bearings of American "HOFFMAN" make.

Spacing washer 010628 is used with "SKEFKO" bearings, and spacing washer 014830 is used with "HOFFMAN" bearings.

If one "SKEFKO" and one "HOFFMAN" bearing are fitted, as may occur as the result of fitting an "odd" replacement bearing, then the "HOFFMAN" bearing must have a spacing washer 014830 against it and the spacing collar 017194 should be fitted so that it abuts against the "SKEFKO" bearing.

CRANKCASE BOLTS.


010824		Stud, front, top position, 632 ins. by 36 in. by 26 and 26	l	All		•	8
000278		Stud. front, centre position, 4% ins. by 15 in, by 26 and		All			4
		26	'	A11	•••	•••	v
000277		Stud, front, bottom position, 4% ins. by 3 in. by 26 and					
		26	•	All			6
000261		Stud, bottom, rear position, 4% ins. by 1 ln. by 26 and 26	ı	All			6
000201	•••	For the "Stud, bottom, front position" (which also unsee FRAME.					(rames
000278		Stud, rear, top position, 4% ins. by 76 in, by 26 and 26	1	All			6
	•••	For the "Stud, rear, centre position," see "000316 st in FRONT CHAINCASE.	ud,	fixing	centre	of chai	ncase,"
014147		Bolt, rear, bottom position, $4\frac{5}{32}$ ins. by $\frac{5}{16}$ in. by 26	r	All			6
000011	•••	Washer, plain, for 5 in, studs and bolt	8	All			1
	• • •	Nut, 1 in. by 26, for bottom rear stud	2	All			3
000005	•••	Nut, $\frac{1}{\sqrt{2}}$ in. by 26, for all $\frac{1}{\sqrt{2}}$ in. studs and bolt	ą.	All			3
000004	-	Nut, TE In. by 26, for all Te In. seads and bote	,	Α.	•••	•••	,

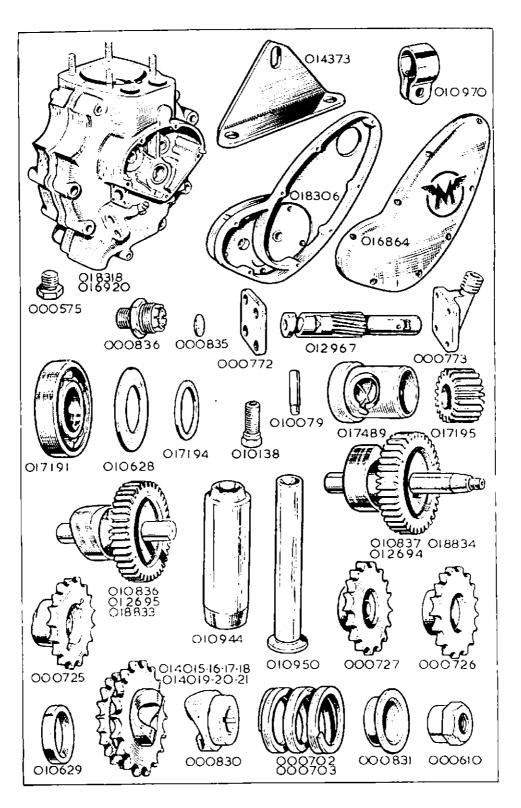

9 M

PART NUMBE		DESCRIPTION.	QTY.		USED ON.		PRI EAG	CH
OIL P	UM	P.						
012967 01013B	1+1	Plunger, oil pump	!	All All All			11	
010079 000773 000772		Pin, guide screw, oil pump plunger	ļ	All		•••	2	10
000582 000015 000591		Washer, paper, pump end cap. Screw, fixing front end cap, oil pump, $\frac{3}{6}$ in. by 3.8A Bolt, fixing rear end cap, oil pump, $\frac{3}{16}$ in. by 3.8A	2 4 4	All All	,,,	•••		3
RELE	ASE	VALVE.						
000836 000835	•••	Body, release valve		All	•••		1	7
TIMIN	١G	GEAR.						
010837		Camshaft, exhaust	1	All			1 2	
012694		Camshaft, exhaust (high lift) (for Competition use only)	!	ΑII		•••	1 5	
018834		Camshaft exhaust (for Racing only)*	I R.	All 11A		•••	1 7	6
016847		Washer, shim, -010 in, thick, for exhaust Camshaft	R.	ΑÏ				2
010836		Camshaft, inlet	ı	ΑII			19	
012695		Camshaft, infet (high lift) (for Competition use only)4	1	ΑII			1 0	
018833		Camshaft inlet (for Racing only)*		All	• • •		1 5	
017195	•	Pinion, timing, on flywheel axle		All	• • •	•••	7	-
000570 000221		Key, for timing pinion Nut, retaining timing pinion to axle (left hand thread)		AII Ail	•••	•••		4
		* Not fitted to new cycles unless specified.						
TAPP	ETS	5.						
010950 0109 44		Tappet, bare	2 2	All All	•••	•••	4	
PUSH	l R	ons						
018314		Rod, long, push, complete (8)	2		Touring		4	
010315		Rod, long, push, complete (8)	2		Comp. np. 500		7	
018315		Rod, long, push, bare (9)	2	All	Touring Comp.		3	·
018313		Rod, long, push, bare (9)	2		np. 500		3	
000721		End, ball, bottom of long push rod	2	Alt			J	7
000592		Screw, adjusting, top of long push rod	2	All			J	
000216 Note 8		Nut, lock, push rod adjusting screw	long	All pus	 h rod w	ith t	op ste	6 eve
		end, one bottom, ball end and one adjusting screw w						
Note 9	•••	In construction the top sleeve end is first pressed of sleeve end and rod are tapped, in one operation, to at it is not possible to supply the bare rod and the to Therefore a "Rod, long, push, bare" includes the	comm p slee	∧e € loga;	te the ac end as se	gustii parat	ng scr :e spa	cw.
PUSH	R	OD COVER TUBES.						
010952		Tube, cover, for long push rod	2	Αli		•••	4	
010672		Gasket, rubber, top of cover tube	2	ΑII		•••		6
016944	•••	Washer, metal, 2 in. thick, located below 010672 rubber gasket	2	ΑII				4
011087		Washer, metal. 34 in. thick, located over 010672 rubber gasket when no compression plate fitted		All		•••		4
011087		Washer, metal, 34 in. thick, located over 010672 rubber gasket when compression plate fitted, (two in each	-•		•••			•
014/03		location) Washer, metal, 1 in, thick, located over 010672 rubber	4	All	350	•••		4
014603	•••	gasket when compression plate fitted	2	AII All	500	•••		4
000691	• • •	Gland, rubber, bottom of cover tube	-	~ !!	•••	• • • •		7

PART NUMBER.	DESCRIPTION.	QTY		USED ON.			ICE CH
ROCKER	BOX.						
014159	Rocker box, assembled (10)	1		G3LS,			
015457	Rocker box, assembled (10)	1	G3LC	G805 , G3L		_	0 !
014364	Rocker box, with bushes (11)	ı	G3L,	, G800 G3LS,	CS	S	1 :
015458	Rocker box, with bushes (11)	1		. G3L0		2	3 2
013958	Rocker box, bare	ı		., G800 G3LS,	ZS .	2	3 2
015422	Rocker box, bare	ı	G80, G3LC	G805 . G3L0	 	1 13	3 (
013984	Gasket, for rocker box	ı		, G800		1 13	3 ((
017103	Bush, for rocker box	4	All	• • • •		:	2
013980	Cover, side, for rocker box	ı	G3L, G80,	G3LS. G80S			5 9
015678	Cover, side, for rocker box	I	G3LC	. G3L0			5 6
014229	Fillet, rubber, rocker box side cover	1	All			•	. 4
122000	Stud, fixing rocker box side cover 1 in. by 2.BA	3	All				3
000623	Nut, for rocker box side cover stud	3	All				7
000205	Washer, fibre, for rocker box side cover stud	3	All		• • • •		
015353	Bolt, fixing rocker box, short, 115 ins. by 3 in. by 22	4	All	•••			3
015354 015355	Bolt, fixing rocker box, long, 2\frac{1}{2} ins. by \frac{1}{2} in. by 22 Bolt, fixing rocker box, long, 2\frac{1}{2} ins. by \frac{1}{2} in. by 22 with	2	All	•••			
015356	extension $\frac{1}{16}$ in, by 26	2	All	•••			-
	by 22		ΑII				7
110000	Washer, plain, rocker box fixing bolts	9	A 11	•••			- 1
000011 Note 10	Washer, plain, rocker box fixing bolts Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKELLIFTER."	ket,	ixing	 bolts :	and v	vashe VA	rs), LVE
	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKE	ket, ! RS ''	ixing and	 bolts : 'EXH/	and v AUST	VA	LVĒ
Note	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKEL LIFTER." This is a "bare" rocker box to which is fitted four	ket, ! RS ''	ixing and	 bolts : 'EXH/	and v AUST	VA 5 012	LVE 2722 5 9 5 11
OVERHE 017192 017292 013948 000010 000003 012722	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKELLIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker	2 2 2 2 2 4	All All All All All All All	bolts : EXHA	and vAUST	VA 5 012	1
OVERHE 017192 017292 013948 000010 012722	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKELLIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker	2 2 2 2 2 4	All All All All All All All	bolts : EXHA	and vAUST	VA 5 012	2722 3 9 1 1 1 1 1 1 8 1 3 3 3
OVERHE 017192 017292 013949 0100010 0102722	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKELLIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker. Sieeve, for rocker axle	2 2 2 2 2 2 2 1	All All All All All All All All All	bolts in EXHA	AUST de two	5 012 5 4 4 4 3	5 9 1 1 1 1 1 8 1 3 3 3
OVERHE 017192 017192 013949 013948 0100010 012722 EXHAUS 014523 014523	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKE! LIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker. Sieeve, for rocker axle. Arm, rocker, valve end, inlet and exhaust. Arm, rocker, tappet end, inlet and exhaust. Washer, plain, for rocker axle. Nut, for rocker axle. Ring, felt, for rocker axle sleeve. T VALVE LIFTER. Lever, exhaust lifter. Spring, sealing, for valve lifter lever. Spring, for valve lifter lever.	2 2 2 2 2 4	All	bolts : EXHA	AUST dd two	5 012 5 4 4 4 3	2722 3 9 1 1 1 1 1 1 8 1 3 3 3
OVERHE 017192 017292 013949 0100010 0102722	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKELLIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker. Sieeve, for rocker axle	2 2 2 2 2 2 2 1	All All All All All All All All All	bolts in EXHA	AUST	5 012 5 4 4 4 3	2722 3 9 1 1 1 1 1 1 8 1 3 3 3
OVERHE 017192 017292 013949 013949 012722 EXHAUS 013969 013970 00039	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKE! LIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker. Sieeve, for rocker axle. Arm, rocker, valve end, inlet and exhaust. Arm, rocker, tappet end, inlet and exhaust. Washer, plain, for rocker axle. Nut, for rocker axle. Ring, felt, for rocker axle sleeve. T VALVE LIFTER. Lever, exhaust lifter. Ring, sealing, for valve lifter lever. Spring, for valve lifter lever. Screw, anchor, valve lifter spring, ½ in. by 2.BA.	2 2 2 2 2 2 4 4 2	All	bolts : EXHI		5 012 5 4 4 4 3	2722 3 9 1 1 1 1 1 1 8 1 3 3 3
OVERHE 017192 017192 017292 013948 000010 0100003 012722 EXHAUS 013969 014523 014523 0103970 000451 000039	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKELLIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker	2222442	All	bolts if EXHIVE	and value of two	54 4 3	2722 3 9 4 11 1 8 1 3 3 3 4 4 4 3 1
OVERHE 017192 017292 013949 013949 012722 EXHAUS 013969 013970 00039	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKE! LIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker. Sleeve, for rocker axle. Arm, rocker, valve end, inlet and exhaust Arm, rocker, tappet end, inlet and exhaust Washer, plain, for rocker axle. Ring, felt, for rocker axle sleeve T VALVE LIFTER. Lever, exhaust lifter Ring, sealing, for valve lifter lever Spring, for valve lifter lever Screw, anchor, valve lifter spring, ! in. by 2.BA. Washer, plain, valve lifter spring screw	2 2 2 2 2 2 4 4 2	All	bolts : EXHI		5 012 5 4 4 4 3	2722 3 9 1 1 1 1 1 1 8 1 3 3 3
OVERHE 017192 017292 017292 013948 000010 000003 012722 EXHAUS 013969 014523 014523 0100451 000039	Includes all parts listed in this paragraph (except gas and all those listed under "OVERHEAD ROCKE! LIFTER." This is a "bare" rocker box to which is fitted four felt rings. AD ROCKERS. Axle, rocker. Sleeve, for rocker axle. Arm, rocker, valve end, inlet and exhaust. Arm, rocker, tappet end, inlet and exhaust. Nut, for rocker axle. Ring, felt, for rocker axle sleeve. T VALVE LIFTER. Lever, exhaust lifter. Ring, sealing, for valve lifter lever. Spring, for valve lifter lever. Screw, anchor, valve lifter spring, ! in. by 2.BA. Washer, plain, valve lifter spring screw BOX STAY. Stay, for rocker box.	2222442	All	bolts in EXHIV	AUST dd two	54 4 3	3 3 4 4 4 3 1

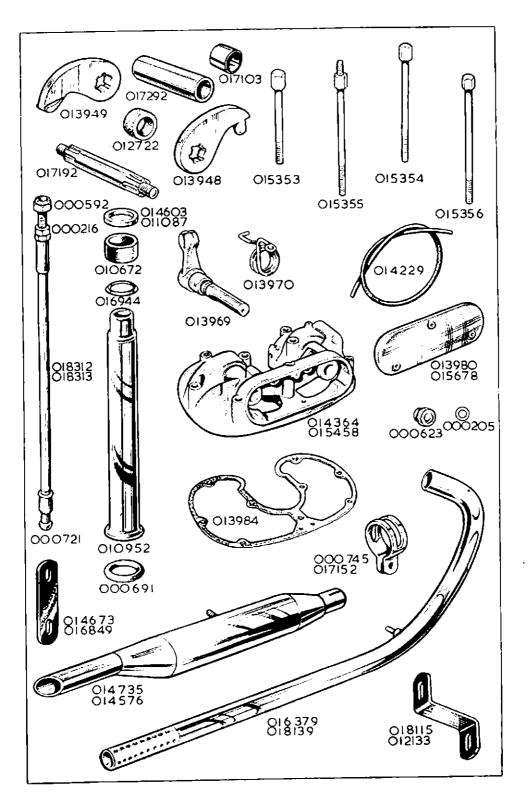


PART NUMBER.	DESCRIPTION.	QTY	ſ.	USED ON.		PRICE EACH & s. d.
ROCKE	R BOX STAY—continued.				•	
000363	Bolt, for rocker box stay clip, 4 in. by 4 in. by 26	1	ΑII			4
000011	Washer, plain, rocker box stay clip bolt					í
	Nut, rocker box stay clip bolt					3

GASKETS.

Engine gaskets are supplied as separate spares and In complete sets. Single gaskets are listed in the groups to which they belong. Gaskets in sets are listed on page 61.

EXHAUST PIPE AND SILENCER SECTION.

NUMBER.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH £ s. (
EXHAU:	ST PIPES.			•
016379	Pipe, exhaust, bare	ı	G3L, G3LS	1 5
018547	Pipe, exhaust, bare	ī	G3LC	i ž
018146	Pipe, exhaust, bare	i	G3LCS	i ŝ
018139	Pine exhaust bare	ì	G80, G805	i 6
018548	Pipe, exhaust, bare	i	G80C	1 4
018148	Pipe, exhaust, bare	i	G80CS	i ii
- : : : : <u></u>	Pipe, extension, for exhaust pipe (12)	i	G3LC, G3LCS	,
016467	ripe, extension, for exhaust pipe (12)	•	G80C, G80CS	1 1
012133	Stay, for exhaust pipe	4	G3L, G3LS	
	Stay, for exhaust pipe	i	G80, G80S	
018115 014747	Stay, for exhaust pipe	i	G3LC, G80C	
	Stay, for exhaust pipe	i	G3LCS, G80CS	
	Nut, fixing exhaust pipe to stay	i	A 17	
	Washer, plain, exhaust pipe fixing nut	i	4.13	
000174	Washer, spring, exhaust pipe fixing nut	i	A 11	
000192				
Note 12	This is an optional extra, and fits In place of the standar	rd sile	encer.	
SII FNC	:85			
SILENCI 014735		1	G3L, G3LS, G3LC, G80C,	
	Silencer, bare		G3LC, G80C, G3LCS, G80C\$	1 10
014735		t t	G3LC, G80C,	l 10 1 11
014735 014576	Silencer, bare		G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS,	i ii
014735 014576 017152	Silencer, bare	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS	i ii I
014735 014576 017152	Silencer, bare	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S,	111
014735 014576 017152 000745	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 2 in, by 1/2 in, by 26	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S, All	111
014735 014576 017152 000745 000363	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 15 in. by 26. Washer, plain, for silencer clip bolt.	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S, All	
014735 014576 017152 000745 000363 000174	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 15 in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S, All All	
014576 017152 000745 000174 000174 000004	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 15 in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer.	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80S	
014735 014576 017152 000745 000363 000174 014673 016849	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in, by 3 in, by 26. Washer, plain, for silencer clip bolt Nut, for silencer clip bolt Stay, for silencer. Stay, for silencer.	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS, G3LC, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80S G3LCS, G80CS	
014735 014576 017152 000745 000174 000174 014673 014673	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 2 in. by 1/2 in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Stay, for silencer. Nut fixing silencer to stay.	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80S G3LS, G80CS All	
014735 014576 017152 000745 000363 000174 000004 014673 016849 000004	Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 15 in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Stay, for silencer. Washer, plain, for silencer fixing nut.	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS G3LC, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80S G3LCS, G80CS All All	
014735 014576 017152 000745 000363 0000174 000004 014673 016849 0000174	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in, by 1/2 in, by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Stay, for silencer. Washer, plain, for silencer fixing nut Washer, spring, for silencer fixing nut	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS, G3LC, G3LCS, G80C, G80CS G80, G80S All All G3LS, G80S G3LCS, G80CS All G3LCS, G80CS	
014735 014576 017152 000745 000363 0000174 016849 000004 01600074	Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 15 in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Stay, for silencer. Washer, plain, for silencer fixing nut.	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS, G3LC, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80S G3LCS, G80CS All G3LS, G3LCS, G3LCS, G3LCS,	
014735 014576 017152 000745 000363 000174 014673 014673 014674 014674 014674 000004 00174 000174 000174 000174	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in, by 3 in, by 26 Washer, plain, for silencer clip bolt Nut, for silencer clip bolt Stay, for silencer Nut fixing silencer Nut fixing silencer to stay. Washer, plain, for silencer fixing nut Washer, spring, for silencer fixing nut Nut, fixing silencer stay to frame	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80CS G3LS, G80CS G3LCS, G80CS All All G3LS, G80CS G3LS, G80CS	
014735 014576 017152 000745 000363 000174 000004 014673 016849 000004 000174	Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in, by 1/2 in, by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Stay, for silencer. Washer, plain, for silencer fixing nut Washer, spring, for silencer fixing nut	1	G3LC, G80C, G3LCS, G80CS G80, G80S G3L, G3LS, G3LC, G3LCS, G80C, G80CS G80, G80S, All All G3LS, G80S G3LCS, G80CS All G3LS, G3LCS, G3LCS, G3LCS,	

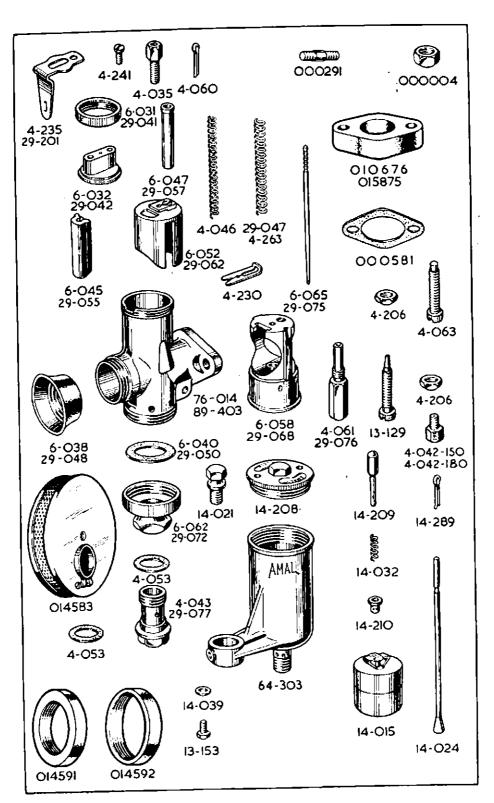

PART NUMBER		DESCRIPTION.	QTY.		USED ON.		E.	RIC ACI	H
FRONT	r V	WHEEL BEARINGS.							
012825 .		Spindle, with roller bearings, for front wheel	2 .	A1I AII			1 1	5	5
		nian spring locating front hub bearings		All					3
		Chair for front but hearing Oll-Scaling commencers		All All					6
017221		Ring, spacing, for front hub bearing oil-seal		ΑΪΙ					Ī
	• • •	Nice tack for front hip hearing adjusting fing		All				2	ō
		nine adjusting for front bub bearing		All	• • •	• • •		2	5 4
		All a leasting from brake cover plate		All All		***			3
017222		sate Lea Toesting front hrake cover Dille		All All	•••			2	2
		Nut, outside, securing front brake cover plate		ΑÜ					4
000001 800000		Washer, plain, front wheel spindle, left side	1	All		•••			1
REAR	w	HEEL. (Home Models)							
		THE COMPLETE WHEELS LISTED BELOW COMPRIS Rim, spokes, nipples, hub, grease nipple and all bear include the centre solid spindle, washers, spacers, brake drum, speedometer drive and tyre.	nuts.	brak	c pare	J, Jp.	oes ock	No ct (TC
015566		Wheel, rear, complete, with all fittings	1	G80,	G3LS, G80S		5	14	5
016958		Wheel, rear, complete, with all fittings	'	G800	C, G3L C, G80	CS	6	4	5
		THE BARE WHEELS LISTED BELOW COMPRISE:—Rim, spokes, nipples and hub.		631	C 21 C				
015558		Wheel, rear, bare, less all fittings		G80,	G3LS G80S		3	18	11
016957		Wheel, rear, bare, less all fittings		G806	C, G3L C, G80	CS	4	18	H
01 8 2 4 5	•••	Rim, rear, 19 ins. by 2% ins		G80,	G3LS G80S			19	9
018247		Rim, rear, 19 ins. by 3 ins		G80	C, G31 C, G80	CS		19	9
011012	••	Spoke, rear, left or right, 8½ ins. by 7 G by 9 G		G80,	G80S				3
017097		Spoke, rear, left or right, 8th ins. by 6 G		G80	C, G3I	CS			6
011013		Nipple, rear, left or right, 250 in. by 9 G		G80	, G3LS , G80S				1
012472	•••	Nipple, rear, left or right, 300 in, by 6 G		G80	C, G31 C, G80	OCS	2	5	4
016964		Hub, rear wheel, shell only	. .	Ali		•••	4	,	5
000051		Nipple, grease, for rear wheel hub	. i	All				1	9+
011090 011707	•••	Bolt, security, for rear wheel	. 2		C, G3 C, G8(4	0
REAR	W	/HEEL. (Export Models)							
015565		Wheel, rear, with all fittings, chrome rim-red centr	e I		G3L), G80		6		5
015556 012876	***	Wheel, rear, bare (less fittings) Rim, rear, chrome—red centre All other parts as Home Models.	1 1	ditt ditt					11

WHEN IN DOUBT REGARDING THE NAMES AND PART NUMBERS OF THE PARTS YOU REQUIRE, PLEASE SEND THE OLD PARTS TO SERVE AS PATTERNS.


PART NUMBER.	DESCRIPTION.	QTY.	USED ON.		PRIC EAC £ s,	H
JETS.						
6-058 29-068 4-061 29-076 4-042-150 6-065 29-075 4-230 13-129	Choke, or jet barrel. Choke, or jet barrel. Needle jet. Needle jet. Jet, main, size 150 (no air cleaner fitted) Jet, main, size 180 (no air cleaner fitted) Needle, taper, for needle jet. Needle, taper, for needle jet. Clip, for jet taper needle. Pin, split, locating taper needle clip. Screw, for pilot jet air adjustment. Nut, lock, for pilot jet air screw	I AI I AI I AI I AI I AI I AI I AI	l !		7 10 2 2 2	6* 6* 6* 8* 0* 0* 6* 1* 9*
4-206	We can also supply the following alternative jets. Jet, main, size 130		1	•••		8•
4-042-130 4-042-140 4-042-160 4-042-170	Jet, main, size 140	. I AI . I AI	l l			8* 8*
VALVES	(CARBURETTER).					
6-052 29-062 29-047 4-263 4-063 4-206 6-045 29-055 6-047 29-057	Valve, throttle, size 6 by 4 Valve, throttle, size 29 by 4 Spring, for throttle valve. Spring, for throttle valve. Screw, stop, for throttle valve. Nut, lock, for throttle stop screw. Valve, air. Valve, alr. Guide, tubular, for air valve spring. Guide, tubular, for air valve spring. Spring, for air valve.	, I AI , I AI , I A , I A , I A	II II 350 II 500 II 350 II 500		6 6 3 4 1	0* 6* 4* 9* 2* 9* 0* 0*
AIR CLE	ANER. (This is optional extra equipmen	nt).				
014583 014591 014592 016982	Cleaner, air	. A . A t	II 350 II 500	•••	1 0	6° 6°
	When an AIR CLEANER is fitted it is essential to :— (a) Use an adaptor in order to fit the cleaner to c not include the adaptor.)	arburet	ter intake	. (01	4583	does

BY USING GENUINE SPARES YOU ARE ASSURED THEY WILL FIT ACCURATELY AND GIVE SATISFACTORY SERVICE

(b) fit a smaller jet, viz :—
for 350 use jet 4-042-130 (size 130),
for 500 use jet 4-042-160 (size 160).


TRANSMISSION SECTION.

PART NUMBER.	DESCRIPTION.	QT	Y.	USEE ON.		E	RIC AC s.	Н
ENGIN	SPROCKET.				••			
014016 014018	Sprocket, engine, bare, 16 teeth	-	G3L	.C, G3L ., G3LS,	,	1	4	4
014021 010629 000702 000703 000830 000831 000610	Spacer, collar, for engine sprocket. Spring, engine shock absorber Spring, engine shock absorber Cam, engine shock absorber. Cap, engine shock absorber spring Nut, lock, engine shock absorber	1 1 1	G80 All All All All All G3L		 LCS,	•	4 1 2 3 8 1	10 2 2 1 3 1 10
	The following alternative engine sprockets can be suppl	ied.						
014015 014017 014019 014020	Sprocket, engine, bare, 17 teeth	1	All All All		•••	1 1 1	4 4 4 4	4 10 10
MAGNE	TO DRIVING SPROCKET.							
000727 000011 000004 000726 140074 171284	Washer, plain, for camshaft sprocket Nut, retaining, for camshaft sprocket Sprocket, magneto, on armature shaft Washer, plain, for armature sprocket	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	AII AII AII AII AII	•••	•••		5	6 1 3 6 1 * 3 *
DYNAM	O SPROCKET.							
000725 000572 000010 000164 000708	Washer, plain, for dynamo sprocket nut		All All All All All		•••		6	11 3 1 3 1
GEARBO	ox.							
016708	Gearbox, complete with four plate clutch, foot gear lever and kick-starter lever							
016709	Gearbox, complete with five plate clutch, foot gear			, G3LS	•••	•	*	
018527				G80S		•	*	
016711	lever and kick-starter lever	1		C, G800 CS, G80			* *	
	★ Price on application.							

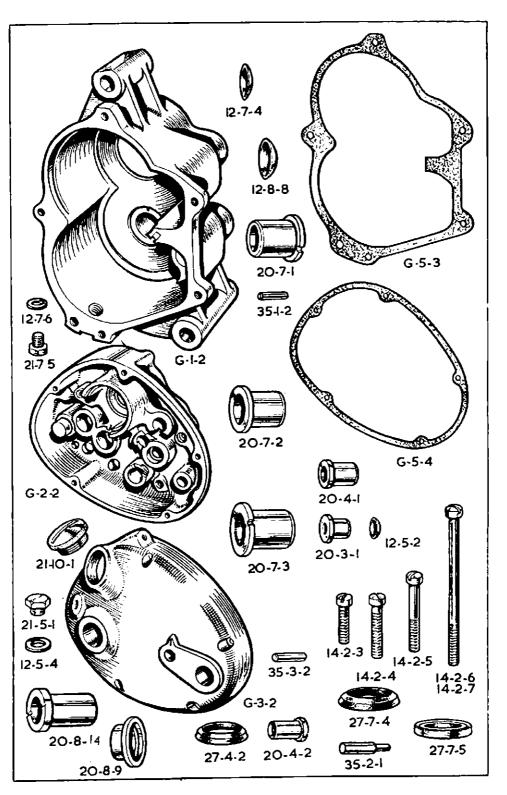


PART NUMBER.	DESCRIPTION.	QΤ	.	USED ON.		1	PRI EAG	
CHAINS.								
017381 017298	Chain, front, 65 links, $\frac{1}{2}$ in. by -305 in. (13)	1	G3L	C, G3LC G3LS, C, G80C		1	0	9* !*
017299 017380 017301 017376	Chain, front, 67 links, $\frac{1}{2}$ in. by -305 in. (13)	1 1 t	G80, G3L G3L G3L	G80S C, G80C G80 S, G3LC 5, G80C	 s,	2 2 2	1 2 4	5* 2* 1*
017296 017294 110046-26 110056-26 110056-30 110056-30 110046-27 110056-27	Chain, dynamo, 49 links, $\frac{2}{8}$ in. by ·225 in. (14) Chain, magneto, 46 links, $\frac{2}{8}$ in. by ·225 in. (14) Link, connecting, for $\frac{1}{8}$ in. chains Link, cranked, for $\frac{1}{8}$ in. chains Link, cranked, for $\frac{1}{8}$ in. chains Clip, spring, for $\frac{1}{2}$ in. connecting links Clip, spring, for $\frac{4}{8}$ in. connecting links	I I R R R R R R	All All All All All All All			•	8 7	0* 7* 8* 11* 2* 7* 12* 2*
Note 13	The prices of front and rear chains include spring con included in the number of links per chain. We do r	necti not se	ng lii Il odd	nks, and Liengths	the:	ie a chai	re in.	also
Note 14	Magneto and Dynamo chains are endless. We do not for same.							inks
GEAR B	OX FIXING PARTS.							
010957 000318 012999 000002 000009 000009 013987 000215 000785	Bolt, gearbox top fixing, $5\frac{1}{16}$ ins. by $\frac{1}{16}$ in. by 26 Stud, gearbox bottom fixing, $4\frac{9}{16}$ ins. by $\frac{1}{16}$ in. by 26 Spacer, $\frac{1}{16}$ in. wide, on top bolt, outside right. Nut, for gearbox top fixing bolt. Nut, for gearbox bottom fixing stud. Washer, plain, for top fixing bolt, left side. Eye-bolt, for front chain adjustment. Nut, for front chain adjustment eye-bolt. Crosshead, for front chain adjustment eye-bolt. Bolt, fixing crosshead to engine plate, $\frac{1}{16}$ in. by $\frac{1}{16}$ in.	1 1 2 1		 			1 I	0 10 4 4 4 1 9 4 0
110000	Washer, plain, for crosshead fixing bolt	t	G3L	G80C G3LC, G80C				1
GEAR B	OX SHELL.							
G-1-2 21-7-5 12-7-6 12-7-4 35-3-2	Shell, gearbox, bare	 	IIA IIA IIA IIA IIA			2	5	0* 9* 1* 3* 4*
G-2-2 G-5-3 G-3-2 G-5-4 28-12-19	Case, kick-starter Washer, paper, between shell and kick-starter case Cover, for kick-starter case Washer, paper, between kick-starter case and cover Piece, locating, between kick-starter case and cover Pin, dowel, locating fixed cam-plate in kick-starter case	1 1 2	All All All All			,	5	0* 1* 6* 3*
35-[-] 21-10-1 21-5-1 12-5-4 35-2-1 14-2-3	Cap, filler, for kick-starter case cover	 	All All All All All		93		3	0° 9* 1* 6° 6*
14-2-4 14-2-5 14-2-6 14-2-7	Screw, ½ in. under head	2 	IIA IIA IIA	111	•••		1	0°

Above screws have cheese heads and are threaded $\frac{1}{4}$ in, whit,

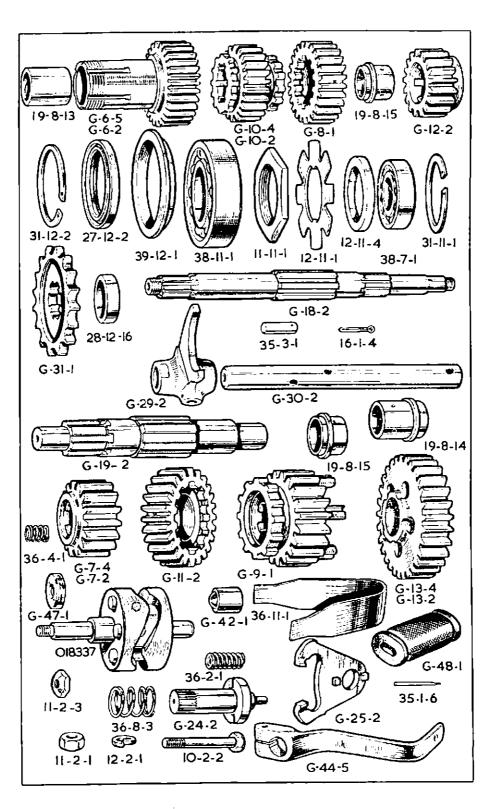

PART NUMBER.	DE URIPTION .	QT	۲.	USEC ON.	·	E	RIC AC 5.	H
SHAFTS	AND GEARS.							
3-18-2 3-19-2 3-6-2	Mainshaft, for gearbox	 	All G3L	 , G3LS,		1	7 10	6* 0*
5-6-5 5-12-2	Gear, driving, mainshaft with bushes, 30 teeth	!	G80 G3L All	CS, G8 S, G80C C, G80	S	2	8 8 15	0* 0*
-10-2	Gear, second, mainshaft, 22 teeth	I	G3L	, G3LS, C\$, G8 S, G80C		1	18	6*
i-10-4 i-8-1 i-7-2	Gear, second, mainshaft, 21 teeth	1	G3L All G3L	C, G800 , G3LS, CS, G80	C		18 	6* 0*
5-7-4 5-13-2	Pinion, on layshaft, 17 teeth] 	G3L G3L	S, G800 C, G800 , G3LS, CS, G8	C		15 15	0*
5-13-4 5-11-2	Gear, first, layshaft, with bush, 30 teeth	!	G3L All	S, G800 C, G800 	C		1	0.
5-9- 9-8-13 9-8-15 9-8-15	Gear, third, layshaft, 21 teeth. Bush, for mainshaft driving gear. Bush, for mainshaft third gear. Bush, for layshaft second gear.	1 2 1	All All All	•••	•••	ŧ 1	18 3 5 5	6.0
9-8-14	Bush, for layshaft first gear	į	Ali	•••			5	ŏ•
SEARBO	X BEARINGS, CAPS AND OIL-SEALS							
8-11-1	Bearing, ball, 1 \$\frac{1}{52}\$ in. by 62 mm. by 16 mm. for driving gear on mainshaft	1	All			1	2	6+
7-12-2 9-12-1 1-12-2	Oil-seal, for driving gear bearing. Housing, for driving gear bearing oil-seal. Ring, split, retaining driving gear bearing	i	AII AII AII		•••	•	4	6* 6*
8-7-1	Bearing, ball, 17 mm. by 40 mm. by 12 mm. for main- shaft (kick-starter end)	ļ	All			į	8	9*
2-11-3 - - 	Spacer, 1/2 in, thick, for mainshaft ball bearing	2	All All All	•••			6	3* 6*
5-1-2 2-8-8	Bush, for layshaft (clutch end) (-843 in. long) Pin, dowel, locating layshaft bush	ì	All	•••	•••		٠	4
0-7-3 5-1-2 0-7-2	Bush, for layshaft (kick-starter end) (-779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle	1	All All	•••	•••		6	0* 2*
0-8-14 7-7-5	Bush, in cover, for kick-starter spindle Oil-seal, in cover bush, for kick-starter spindle	i	All	•••			3	ŏ*
0-4-1 0-4-2 7-4-2	Bush, in kick-starter case, for cam spindle Bush, kick-starter case cover Oil-seal, in cover bush, for cam spindle	 	All All All	•••	 			6 0 3
0-3-1 2-5-2	Bush, in kick-starter case, for control quadrant spindle Cap, in kick-starter case, covering bore for control	i	ΑII		•••		ı	6*
0-8-9 7-7-4	quadrant spindle Bush, in cover, for control quadrant spindle Oil-seal, in cover bush, for control quadrant spindle		All All	•••	•••		2	1 * 6 * 4 *
SEARBO	X SMALL SPROCKET							
3-31-1 8-12-16	Sprocket, gearbox, 16 teeth by § in. by -380 in	1	IIA IIA		•••	1	2	6
2-11-1 1-11-1	Washer, lock, for gearbox sprocket nut	į	All					9* 7*
118494	Deflector, water, fits under nut II-II-I	ı		C, G800 CS, G8			ı	3

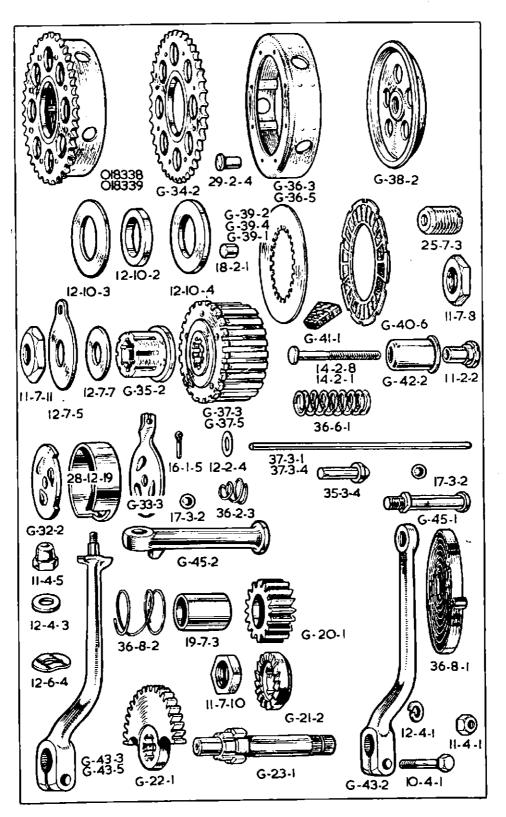


PART NUMBER.	DESCRIPTION.	Q1	ΓΥ.	USEC ON.			EΑ	ICE CH
GEAR C	PERATING PARTS							
G-30-2	Spindle, for selector forks	2	Ali				7	6*
G-29-2	Fork, for gear selection	2	All				10	0+
35-3-1	Peg. for selector spindles	4	All	•••	• • •			6*
16-1-4		4	AII All	•••		1	10	0
018337	The cam assembly comprises: 1—G-27-2 Spindle. 1—G-28-1 Cam. 3—35-2-4 Pegs. 1—35-2-2 Locating pegs. 2—35-1-4 Cam stop pegs.	•	All	•••	•••	•	10	U
	(Above parts not sold as separate spares)						_	_
G-42-1	Plunger, locating cam assembly	!	All	•••	• • •		2	0.
36-2-1		-	All All	•••	• • •		7	6*
G-25-2 35-2-6	of the state of th	i	All	•••	•••		•	3+
G-24-2	Spindle, for gear control quadrant	Ĺ	All	•••	•••		12	6
36-11-1		- !	All				2	0
36-8-3		- !	All	• • •	•••			6+ 9+
G-47-1	Indicator		All	•••	• • • •			3+
36-4-1 11-2-3	Spring under indicator	i	ΑÜ					3+
G-44-5	Lever, foot, for gear control	i	All				H	3*
G-48-1	Pad, rubber, for gear foot lever	- !	All				ı	
35-1-6	Pin, fixing gear foot lever rubber pad	- !	All		•••			1
10-2-2	Bolt, clamping gear foot lever	- !	All All		•••		!	10*
12-2-1	Washer, spring, for gear foot lever bolt	i	Ail	***				3.
CLUTCH		,	C31	Cale			, 0	^=
G-36-3	Case, for four plate clutch	I	G3L0 G80S	G3L\$ C, G80. . G80C CS, G3L			18	0"
29-2-4	Rivet, for clutch case and chainwheel	8	All		•••		••	ž٠
G-34-2	Chainwheel, 40 teeth by 1 in. by -305 in	- [All		• • •	1		٥٠
018338	Case and chainwheel, assembled (four plate)	!		G3LS		2	11	0.
018339	Case and chainwheel, assembled (five plate)	ı	G80C	:, G80. :, G80S, :S, G3L		2	11	٥٠
G-35-2	Sleeve, for mainshaft	-	IIA		• • •		17	0*
12-10-2	Race, roller, for clutch bearing chainwheel	24	Alí Ali	•••			3 5	3"
18-2-1 12-10-3	Washer, thin, chainwheel bearing	1	All				ĺ	í٠
12-10-4	Washer, thick, chainwheel bearing	1	ΑII		•••		İ	11
G-37-5	Centre, for four plate clutch	ļ		G3LS	•••	L	10	0.
G-37-3	Centre, for five plate clutch	1	G80C	., G80. ., G80s, .\$, G3L		1	10	0•
12-7-7	Washer, plain, for centre retaining nut	- 1	All					4
12-7-5	Washer, lock, for centre retaining nut	!	ΑII					9*
11-7-11 G 29.2	Nut, retaining clutch centre		All G3L.	Gäis			4	6°
G-39-2 G-39-1	Plate, clutch, plain, steel, thick	4		G3LS,	•••		3	0+
G-39-4	Plate, clutch, plain, steel	6	G3LC	. G80,			-	-
			G80C	. G80S,			_	
				S. G3L			3	0*
G-40-6	Plate, clutch, friction, with inserts	4 5		G3LS :, G80,	•••		12	6*
G-40-6	Plate, clutch, friction, with inserts	,		. G80C,				
				S, G3L		1	2	6•
				-				

PART NUMBER.	DESCRIPTION.	QT	Υ.	USED ON.		PRIC EAC £ s.	H
CLUTCH	1—continued.						
G-41-1 G-41-1	Inserts, fabric, for friction plateprice per dozen Inserts, fabric, for friction plateprice per dozen		G3L G80	, G3LS C, G80, S, G80C,		2	6.
G-38-2 25-7-3 11-7-8	Plate, clutch, spring pressure	1	All All	CS, G3L0		13 1	6. 6.
14-2-1 14-2-8	Stud, for clutch spring, 13 in, long (four plate clutch) Stud, for clutch spring, 2 ins. long (five plate clutch)	5	G3L G80	, G3LS C, G80, S, G80C, CS, G3L0	cs.		6°
36-6-1 G-42-2 11-2-2	Spring, for clutch	5 5 5	AII AII AII	•••	•••		9• 6•
CLUTCH	OPERATING PARTS						
37-3-4 37-3-1	Rod, thrust, 9% ins. long (four plate clutch)	1	G3L G80	, G3LS C, G80, S, G80C, CS, G3L0	 -c	ı	6* 6*
17-3-2 G-32-2 G-33-3 35-3-4 12-2-4 36-2-3 16-1-5 17-3-2	Ball, $\frac{1}{16}$ in., steel, for clutch thrust rod	1 1 1 1 3	AII AII AII AII AII AII			2 2 1	0. 6. 1. 3.
KICK-ST	ARTER						
G-21-2 G-20-1 19-7-3 36-8-2 11-7-10 G-23-1 G-22-1 018340 36-8-1 G-43-2	Ratchet, driving, kick-starter Pinion, ratchet, kick-starter Bush, kick-starter ratchet pinion Spring, kick-starter ratchet pinion Nut, retaining ratchet driver to mainshaft Spindle, for kick-starter quadrant Quadrant, for kick-starter Kick-starter quadrant and spindle assembled Spring, return, for kick-starter foot lever Lever, foot, kick-starter, bare			 , G3LS,		8 12 3 1 15 1 7 4	8* 0* 9* 6* 3* 9* 0*
G-43-3 G-43-5 G-45-1	Lever, foot, kick-starter, bare Lever, foot, kick-starter, bare Pin, pedal, rigid, for kick-starter lever	 	G3L G3L	, G80S C, G80C CS, G80 , G3LS,		15	9+ 9+
G-45-2	Pin, pedal, folding, for kick-starter lever	ı	G3L	, G80S .C, G80C .CS, G80		6	6* 9*
11-4-5	Nut, retaining folding pedal pin	1	G3L G3L	C. G80C CS. G80	cs	•	9*
12-4-3	Washer, plain, for pin retaining nut	, t	G3L	.C, G80C .CS, G80 .C, G80C	CS		4•
10-4-1 12-4-1 11-4-1	Bolt, clamping, kick-starter foot lever to spindle Washer, spring, for foot lever clamping bolt Nut, for foot lever clamping bolt	 		 		1	3* 1* 9* 2*

FRAME SECTION.

PART NUMBER.	DESCRIPTION.	QTY.	USED ON.	E	RICE ACH s. d.
FRONT	FRAME.				
018786 013772 015674 0000806 000072 0000597 014478 000008 000001 000015 011238 010824 000011 000004	Frame, front portion only, bare Race, ball, for frame head lug Balls, 1½ in diameter, for steering head, per set of 56 Nipple, grease, for frame head lug Stud, for seat lug (below saddle), 4½ ins. by ½ in. by 26 Stud, for seat lug (below saddle), 4½ ins. by ½ in. by 26 Washer, plain, for seat lug stud Nut, for seat lug stud Screw, securing earth wires. (Screws into end of seat lug stud.) 2 in. by 3.BA. Washer, plain, for 000015 earth wire screw Stud, uniting front and rear frame, 6 ins. by ½ in. by 26	1 1 2 2 566 1 1 1 2 2 2 1 1 1 2 2 2	G3LS, G80S G3L, G3LCS, G80, G80CS G3LC, G80C All All G3L, G3LC, G80, G80C G3LS, G3LCS, G80S, G80CS All Touring and Scrambles All All All G3L, G3LCS, G80S, G80CS All Touring and Scrambles All	5 6	7 3 4 2 3 10 1 7 5 10 11 1 1 4 1 1 1 6 6 6 6 1 3 3
REAR F 015583 015788 017031 000005 014359	Frame, rear portion only	 1 2 2 1	G3L, G80 G3LC, G80C G3L, G3LC G80, G80C ditto G3LS, G3LCS, G80S, G80CS		0 2 1 2 3
014360 018051 018064 014512	Loop, rear frame Loop, rear frame Stud, for rear loop at bottom, 12 ins. by $\frac{7}{16}$ in. by 26, (Also passes through rear fork bridge and both frame rails) Nut, for rear loop bottom stud	1 1 2 2	G3LS, G80S G3LCS, G80CS G3LS, G3LCS G80S, G80CS ditto	2 3 I 5 !	4 4
000009 018617 018616 000343 000012 000191 000005	Bolt, fixing mudguard to support tube	2 1 2 2 2 2 2 1	ditto G3LS, G805 ditto ditto ditto ditto ditto ditto		6 3 3 1 1 3 3
014672 000250	Bush, for rear fork bridge	2 2	G80S, G80CS ditto ditto	2	3 B 7 3

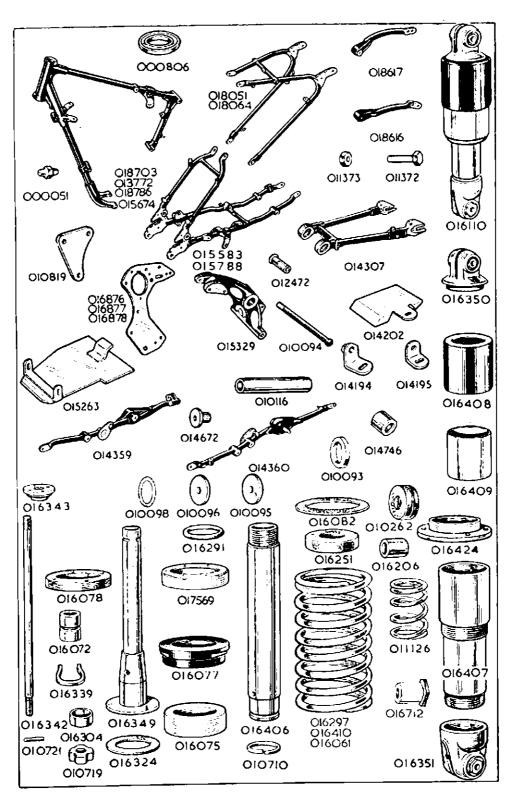

NUMBER.	DESCRIPTION.	QTY.	_	SED ON,		PRIC EAC £ s.	Ĥ,
ENGINE	PLATES AND BOLTS.						
010819 010823	Plate, engine, front	2	All .	•••	•••	3	3
000010 000003 016876	26	1 2 2 2	All G3L, G		•••	7	3
016877 016878 000303	Plate, engine, rear	2 2 1	G80, G G3LC, G3LCS G3L, G G80, G	G80C , G800 3LC,		7 13 11	9 5
013826 013827 000003 000303	Spacer, 1/2 in. long, for seat tube bottom stud, left	1 1 2	ditto ditto ditto	bvc.	•		6
000003 000278	A½ Ins. by \$\frac{1}{6}\$ in. by 26	l 2	G3LS, (G80S, (ditto				6
000011 000004 015263	front chain adjusting eye-bolt block screws on the right-hand end of this stud.). Washer, plain, for 000278 stud. Nut, for 000278 stud. Shield, for crankcase	 	ditto ditto ditto G3LC,				6
000277 017198 000004 000277	Stud, for engine plate extension, $4\frac{3}{16}$ ins. by $\frac{5}{16}$ in. by 26 Spacer, $3\frac{7}{16}$ ins. long, for engine plate extension. Nut, for 000277 studs Stud, engine rear plate crosshead, $4\frac{5}{16}$ ins. by $\frac{5}{16}$ in.	1 2 3	G80S, (ditto ditto ditto	GB0CS	i	6	3 6 3 3
014202 014194 . 014195	by 26 (only used if no dynamo fitted). Cover, rear engine plate	! ! !	ΑII	 		1	6 9 3 5
000010	by 26	1	A 11		•••		6

REAR FORK.

014307	•••	Fork, rear	ŀ	G3LS, G3LCS,			_
011373		Dihala adjusting for sight foot, and		G80S, G80CS	4	,	4
011372		Pin, chaln adjusting, for right fork end					,
011373		Nut, lock, for chain adjusting pin	I	ditto			2
014746		Siceve, assembly (bushed)	2	ditto		5	6
010116		Tube	-1	ditto		5	0
010095		Cap, for rear fork bearing, right side	1	ditto		-1	0
010096		Cap, for rear fork bearing, left side	1	ditto			6
010093		Washer, felt, for rear fork bearing	2	ditto			01
010098		Gasket, for rear fork bearing caps	2	ditto			1
010094			1	ditto			4
012472		Nipple, for rear fork bearing spoke	1	ditto			4
000485		Screw, plug, for oil, in end cap, 4 in, by 4 in, by 26	1	ditto			1
000203		Washer, fibre, for oil plug screw	1	ditto			Ĺ
V							

PART NUMBE		DESCRIPTION.	QTY.	USED ON.	PRIO EAC £ s.	Н
TELE	DR/	AULIC REAR LEG.				
016110		Leg. TELEDRAULIC, rear complete assembly (no fixing				
		bolts, washers and nuts)	2	G3LS, G80S	57	8
016390		Leg. TELEDRAULIC, rear, complete assembly (no fixing	_	C11 C5 C00C6		
		bolts, washers and nuts)	2	G3LCS, G80CS	5 12	4
016350	• • •	Pivot, top, assembled (this assembly includes the next three items)		G3LS, G3LCS,		
		three (tells)	-	G80S, G80CS	15	9
016059		Pivot, top, bare	2	ditto	14	9
010262		Bush, rubber, for top pivot	4	ditto		3
016206		Spacer, for top pivot rubber bush	4	ditto		3
016351		Pivot, bottom, assembled, (this assembly includes the	_	4.		
		next five items)	2	ditto		ιò
016060		Pivot, bottom bare	2	ditto ditto	10	6 3
010262		Bush, rubber, for bottom pivot	2	ditto		3
016206 016712	• • •	Sleeve nut, for bottom pivot balt	2	ditto		6
016873		Washer, plain, for 016712 sleeve nut		ditto		Ĭ
016406		Tube, inner (fits in top pivot recess)	2	ditto	10	2
016291		Ring, sealing inner tube at top	2	ditto	- 1	0
016075		Bush, lower end of inner tube	2	ditto	2	9
010710		Circlip, retaining inner tube bush	2	ditto		1
016407		Tube, outer (screws into bottom pivot)	2	ditto	19	4
016324		Washer, sealing lower end of outer tube	4 2	ditto ditto	1	8
016077		Bush, for outer tube	2	ditto	5	3
017569		Collar, retaining oil-seal	2	ditto	ĩ	9
016349		Tube, for damper	2	ditto	6	6
016072		Sleeve, plunger, for damper rod	2	ditto		6
016339		Clip, locating plunger sleeve	2	ditto		J
016342		Rod, for damper	2	ditto	!	0
016343		Collar, for top end of damper rod	2	ditto	ı	0
000074		Nut, locking collar top-end of damper rod	2	ditto		3
016304		Valve, for damper Pin, stop, for damper valve	2	ditto ditto	ı	0
010721	•••	Seat, for damper valve	2	ditto		6
010719	•••	Nut, retaining damper seat to damper rod	=	ditto		3
011126		Spring, buffer		ditto		10
016297	•••	Spring, main (solo)	2	G3LS, G80S	5	0
016061		Spring, main (sidecar)	2	G3LS, G80S	9	8
016410		Spring, main	2	G3LCS, GB0CS	9	8
016682		Washer, leather, at both ends of main spring	4	G3LS, G80S,		
			2	G3LCS, G80CS	7	3
016408		Tube, outer, covering top end of main spring	_	ditto ditto	Ś	10
016409		Nut, retaining bottom outer cover tube		ditto	6	3
016424	• • •	Buffer, for TELEDRAULIC leg	2	ditto	•	11
018648		Bole, fixing top pivot, 31 ins. by 3 in. by 26	2	G3LS, G80S	1	4
014521		Bolt, fixing top pivot (replaces 018648 when carrier is				
J,		fitted)	. 2	ditto	1	4
011273		Bolt, fixing top pivot, 2; ins. by ; in. by 26	. 2	G3LCS, G80CS		8
010000	• • •	Washer, plain, for top pivot bolt	4	G3LS, G80S,		
			•	G3LCS, G80CS		ļ
016712		Sleeve nut, for top pivot bolt	. 2	G3LS, G80S G3LCS, G80CS		6 3
000003		Nut, for top pivot bolt		ditto		7
016359	• • • •	Washer, plain, for bottom pivot bolt	2	ditto		í
000010		** asiles, plant, to poteon prive votes	~			•

BEFORE ORDERING SPARES

PLEASE NOTE THE INFORMATION GIVEN ON PAGES

TWO AND THREE

PART NUMBER.	DESCRIPTION.	QTY,	USED ON.	PRICE EACH € s. d.

FORK ASSEMBLIES.

The following fork assemblies are complete and include ball races for the fork crown and top head lug (but not the two frame ball races)

018766		fork, assembly (TELEDRAULIC Front Fork, Solo)	-1	G3L, G3LS
				G80, G80\$ 15 17 6
018769	,	Fork, assembly (TELEDRAULIC Front Fork, Sidecar)	1	ditto [6 3 9
018767		Fork assembly (TELEDRAULIC Front Fork, Solo)	1	G3LC, G80C 15 16 10
018768		Fork assembly (TELEDRAULIC Front Fork, Solo)	1	G3LCS, G80CS 17 7 11

For ease of servicing, the inner tube unit and damper unit are listed and supplied as separate assemblies. This enables a complete assembly to be exchanged in minimum time. The Units are listed below.

018582	 Front Fork inner tube assembly, Solo	2	G3L, G3LS, G3LC, G80,		
	Front Fork inner tube assembly, Sidecar			2 13	9


The above assemblies comprise:—Inner tubes with rubber buffers, bushes and circlips, top bolts with washers and sealing rings, slider extensions with oil seals, fork springs and washers.

018328	. • •	Front fork damper assembly	2	G3L, G3LS, G3LC, G80,		
				G80S, G80C	10	1
018329		Front fork damper assembly	2	G3LCS, G80CS	10	Ĺ

The above assemblies comprise:— Rod and two nuts, damper tube with valve, seat and pin, sleeve and clip and bottom fixing bolt with washer.

FRONT FORK.

010540	Commence of the commence of th						•	٠.
018540	Crown, assembly, comprising crown, stem and circlip (these parts not sold separately)	1		G3LS,				•
			G80,	G80S	•••	ı	17	0
018570	Crown, assembly, comprising crown, stem and circlip							
	(these parts not sold separately)	ı		C, G3L				
				C, G80	CS	1	17	Û
000805	Race, ball, for fork crown	ł	All	• • •			3	9
018649	Screw, pinch, for fork crown	2	All				-	4
018309	Lug, for handlebar and steering head	- 1		ing '		ı	16	6
013631	Lug, for handlebar and steering head	Ţ		petitio	n	1	15	4
012620	Race, ball, for handlebar lug	- !	All		• • • •		3	8
000051	Nipple, grease, for handlebar lug	1	All					5
000236	Nut, adjusting, for fork crown stem	1	All		• • •			8
010712	Nut, lock (domed), for fork crown stem	1	All				2	10
016322	Tube, fork, inner	2	G3L,	G3LS,				
				C, G80,				
				i, G800		1	3	8
016377	Tube, fork, inner	2	G3L(CS, G8(ocs	1	13	8
016148	Buffer, rubber, for fork inner tube	6	All					5
010692	Bush, bottom, for fork inner tube	2	All				4	1
010710	Circlip, for fork inner tube bush	2	ΑII					ı
016718	Bolt, top, for fork inner tube	2	All				2	0
014355	Ring, sealing, for fork inner tube top bolt	2	All					3
010709	Washer, plain, for fork inner tube top bolt	2	All					4
018310	Slider, fork, with cap, studs and nuts, left and right	2	All			1	17	4
013589	Cap, for fork slider	2	ΑII				4	1
010713	Stud, securing fork slider cap, 133 in. by & in. by 26							
	and 22	4	ΑII	• • •				4

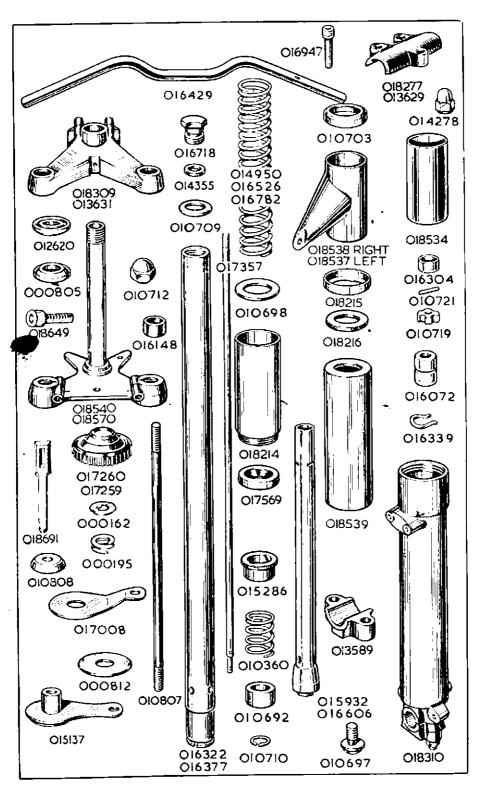

PART NUMBI		DESCRIPTION.	QTY	·	USED ON.		PRI EA¢ £ s.	CH
FRON	IT	FORK—continued.						
000011		Washer, plain, for fork slider cap stud	4	All		•		ì
000004		Nut, for fork slider cap stud	4	Αll	•••			3
018214		Extension, for fork slider		All	• • •		6	
015286	•••	Bush, plastic, for fork Inner tube		All	***	•••	2	
017569 010718		Oil-seal, for fork inner tube (rubber)	2	All	•	•••	5 5	3
014297		Washer, under oil-seal (must only be used under	_	711	•••	•••	,	3
		feather oil-seal 010718)	2	ΑII				2
016526	•••	, Spring, main, for front fork, Solo	2	G3L	, G3LS, .C, G80, S, G800		5	0
014950		Spring, main, for front fork, Solo	2	G3L	CS, G80	CS	6	3
016782		Spring, main, for front fork, Sidecar	2		, G80S		6	3
010360		Spring, buffer, for front fork	2	All	•••		- 1	Ţ
010698	•••	Washer, leather, fork spring seating	4	All	• • •	• • •	_	3
018538		Tube, fork cover, top, right, with lamp lug	1	All			8 8	6
018537	• • • •	Tube, fork cover, top, left, with lamp lug	'	WII	• • • •	•••	۰	•
010703		Cap, for top of fork top cover tubes	2	All			- 1	2
018216		Seat, (rubber), for cover tube	2	All				7
018215	•••	Cap, for bottom of fork top cover tube	2	AIL			Ļ	. 2
018539	•••	Tube, fork cover, bottom	2	All			- 4	10
000485	•••	Screw, plug, oil drain, for fork slider, \(\frac{1}{4}\) in. by \(\frac{1}{4}\) in. by 26	2	All	•••	• • •		• !
000203 015932	•••	Washer, fibre, for fork slider screw oil plug Tube, fork damper	2	All	, G3LS,	• • • •		ı
013732	•	tube, fork damper	2		, G3E3, C. G80,			
					S G80C		5	2
016606		Tube, fork damper	2	G3L	CS, G80	CS	5	2
010697		Bolt, fixing fork damper tube to slider, 🛧 in. by 🛧 in.	_					
		by 26	2	All	•••	•••		10
010706	• • • •	Washer, fibre, for damper tube bolt	2	AII AII	•••	•••	,	7
017357 000004	•••	Rod, for fork damper	2	All	• • • •	•••	i	3
016072		Sleeve, plunger, for fork damper rod	2	Ail	•••	•••		6
016339		Clip, retaining damper rod sleeve	Ž	All	•••			ĭ
016304		Valve, for fork damper	2	All			1	ò
010721		Pin, stop, for fork damper valve	2	All		2.0		ı
010719		Seat, for fork damper valve	2	All	•••			3
000005		Nut, lock, for fork damper valve seat	2	All		•		3
018691	•••	Steering locking bar (own padlock to be used)	ı	All	•••	•••	ŀ	3
HAND)LE	BAR.						
016429		Handlebar, bare	1	AII			1 4	3
018277 018947	•••	Clip (half only), for handlebar lug Screw, for handlebar clip, $\frac{1}{4}$ in. by $\frac{1}{4}$ in. by 26 (socket	i	Tour		•••	2	ŏ
- · • • · ·	•••	head)	3	Tour	ing			9
013629		Clip (half only), for handlebar lug	Ī		petition		6	6
012870		Stud, for handlebar clip, $1\frac{1}{3}$ in. by $\frac{1}{4}$ in. by 26 and 20	4	Com	petition			4
000012		Washer, plain, for handlebar clip stud	4	Com	petition			1
014278		Nut, for handlebar clip stud	4		petition		•	- 6

MAINTENANCE MANUAL EDITION CM-22 PRICE 2/6 IS THE APPROPRIATE MANUAL FOR THIS SPARES LIST

PART NUMBER.	DESCRIPTION.	QTY.		JSED ON.		PRIC EAC £ s.	H
STEERIN 016404 017259 000162 00195 010808 010807 015137 000073 000191 017008 000191 000191 000191 000191 000191	Damper, steering, complete set of parts	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	AII AII AII AII AII AII AII			15 3 3	0 6 3 4 6 2 8 3 3 1 1 9 3 1
FRONT 011286 010694 010724 000014 000342 000012 000005 014278	Stand, front, bare	2 . 2				8	3 10 2 1 3 1 3 6
O14626 014626 014629 014630 014630 010924 010912 000002 014637 016399 000080	Bush, for centre stand, '7 ins. long Bush, for centre stand, '½ in. long Stud, hinge, for centre stand, 8½ ins. by ½ ins. by 26 Spacer, central, for centre stand hinge stud, 4:2 ins. lon Spacer, central, for centre stand hinge stud, 3½ ins. lon Spacer, outside right, for centre stand hinge stud 180 in. thick Washer, spigot, for centre stand hinge stud Nut, for centre stand hinge stud Spring, return, for centre stand	2 2 3 1 8 1 8 1 1 2 2 1 1 hh	G805 G315 G315 G315 G316 G316))	OCS OCS OCS OCS OCS	1	7 3 8 6 2 1 1 1 1 8 8 4 4 4 2 6 10

PART	R.	DESCRIPTION.	QTY.		USED ON,		£	RIC AC s.	H
PROP	ST	rand.							
014715 014713 014139 000049 010843		Stand, prop. bare Bolt, hinge, for prop stand, $2\frac{1}{16}$ ins. by $\frac{7}{16}$ in, by 26 Nut, for prop stand hinge bolt Pin, split, for prop stand hinge bolt Spring, return, for prop stand	1	All All All All All	•••	•••	1	0	3 7 4 1 7
REAR	ST	- AND							
017107		Stand, rear, barc	ι		G3LC, G80C		1	12	2
010788 000008 000071 017131	•••	Bolt, fixing stand to fork end, $1\frac{13}{24}$ in. by ', in. by 26 Washer, plain, rear stand fixing bolt. Nut, rear stand fixing bolt. Spring, return, rear stand	2	ditto ditto ditto ditto				1	10 1 4 8
FRON 014957	IT 	MUDGUARD. Mudguard, front bare	1		G3LS,		,	•	,
013947	•••	Mudguard, front, bare		G80,	. GBOS C, G3L	CS.	ì	0	7
010795	•••	Bolt, fixing mudguard bridge to right fork slider, 3 in.			C, G800		I	13	10
		by $\stackrel{>}{\sim}$ in, by 22	. 2	AII AII		• • •			4
000192 010624	•••	Washer, spring, for bridge right fixing bolt Stud, fixing mudguard bridge to left fork slider, also retains brake anchor stay and bracket for brake cable) !	All		•••			
014117		adjuster, $1\frac{1}{32}$ in, by $\frac{1}{3}$ in, by 26 and 22	Z	All	•••	•			į
000004		Nut, for bridge left fixing stud	. 2		G3LS,	•••		4	3
013928		Stay, for front mudguard, forward position	. 1	G3L	G805 C, G3L			4	3
013929		Stay, for front mudguard, rear position	. 1	dicto	C, G800	-3		H	10
010795	•••	Bolt, fixing front mudguard stay to fork slider, ½ ln. by			. G3LS,				
010795		Bolt, fixing front mudguard stay to fork slider, ½ in. by			G805				٩
		3 in. by 22		G80	C, G3L C, G80	CS			4
000192	•••	Washer, spring, for stay to fork slider bolt		G80,	, G3LS, , G80S				1
000192		Washer, spring, for stay to fork slider bolt	4	G80	C, G3L C, G800	CS			ı
000070	•••	Bolt, fixing stay to front mudguard, $\frac{9}{16}$ in. by $\frac{1}{4}$ in. by 26			, G3LS, , G80S				3
000191		Washer, spring, for stay to front mudguard bolt Washer, plain, for stay to front mudguard bolt	. 2	ditto					
000005 012565		Nut, for stay to front mudguard bolt	. 2	ditto G3L	s C, G3L	cs.			3
000190 000039 000080	•••	Washer, spring, for stay to front mudguard bolt Washer, plain, for stay to front mudguard bolt Nut, for stay to front mudguard bolt	. 8		C, G806 > >				3

PART NUMBE	. DESCRIPTION.	QTY.	USED ON.	E	RIC ACI s.	Н
REAR	CARRIER.					
	Carrier, rear, bare	2	G3L, G80 G3LS, G80S G3L, G80 ditto ditto	1	1	4
014521	(Existing nuts and washers are used for above bolts.) Bolt, fixing carrier at front (replaces 018648 when carrier is fitted)	. 2	G3LS, G80S .		1	
	carrier is interest.	_				
REAR	MUDGUARD (G3L & G80).					
018131	Mudguard, rear, bare (includes both halves and the two binding bolts)	-	G3L, G80 ditto ditto	 1	17 2 14	
018058 015117 000346	Mudguard, rear, rear detachable portion only	2	ditto		174	
000191 000005 000342	by 26	2	ditto ditto			
000172 000005	by 26 Washer, plain, for oil tank bracket bolt Nut. for oil tank bracket bolt	[ditto ditto ditto	ı	4	
016883 000270	Arch, tubular, rear mudguard	2	ditto ditto ditto	٠	7	
000074 000213 000368	Nut (with collar), locking tubular arch and mudguard stay to fork end stud	2	ditto			
016887	by 26	2 	ditto ditto ditto		5 5	
000363 000192 000004	Bolt, fixing mudguard to stay, 4 in. by 1/2 in. by 26 Washer, spring, for 000368 and 000363 fixing bolts Nut, for 000368 and 000363 fixing bolts	4	ditto ditto ditto			
2542	MUDGUARD. (G3LS & G80S).					
018795	Rear mudguard (both portions with joint bolts)	. 1	G3LS, G80S	 3		
018797	Rear mudguard, forward portion only	٠.	ditto ditto	2	6 1	ļ
018799	Rear mudguard, rear portion only	4	ditto	•	'	
	Washer, for mudguard joint bolt	4	ditto			
018790		2	ditto			
018790 000166 014501 000342	Bolt, fixing bracket to rear mudguard, 🚼 in. by 🛊 in. by	٠ _	ditto			
000166 014501 000342	Bolt, fixing bracket to rear mudguard, 🚻 in. by 🚡 in. by	2	ditto ditto			
000166 014501 000342 000012	Bolt, fixing bracket to rear mudguard, 11 in. by 1 in. by 2 in. by 2 in. by 3 in	2 4 2	ditto ditto ditto			
000166 014501 000342	Bolt, fixing bracket to rear mudguard, 11 in. by 1 in. by 2 in. by 2 in. by 3 in. by	2 4 2	ditto ditto			
000166 014501 000342 000012 000005 000275	Bolt, fixing bracket to rear mudguard, 11 in. by 1 in. by 2 in. by 2 in. by 3 in	2 4 2	ditto ditto			
000166 014501 000342 000012 000005 000275	Bolt, fixing bracket to rear mudguard, \\ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	2 4 2	ditto ditto ditto ditto			
000166 014501 000342 000012 000005 000275	Bolt, fixing bracket to rear mudguard, 11 in. by 1 in. by 26 Washer, plain, for bracket fixing bolt. Nut, for bracket fixing bolt. Stud, fixing rear mudguard brackets to frame, 3 1 ins. by 12 in. by 26. Washer, plain, for bracket fixing stud. Nut, for bracket fixing stud. Bolt, fixing rear mudguard to frame loop bridge, 1 1 ins. by 1 in. by 26.	2 4 2 1 2 2	ditto ditto			
000166 014501 000342 000012 000005 000275 000011 000004	Bolt, fixing bracket to rear mudguard, \(\frac{1}{2}\) in. by \(\frac{1}{2}\) ins. by \(\frac{1}{2}\) in. by \(\frac{2}{2}\) ins. by \(\frac{1}{2}\) in, for bracket fixing stud. Nut, for bracket fixing stud. Bolt, \(\frac{1}{2}\) ins. by \(\frac{2}{2}\) in. by \(\frac{2}{2}\). Washer, \(\frac{1}{2}\) ins. by \(\frac{2}{2}\) in. by \(\frac{2}{2}\). Washer, \(\frac{1}{2}\) in, for \(\frac{1}{2}\) in. by \(\frac{2}{2}\). Washer, \(\frac{1}{2}\) in, for \(\frac{1}{2}\) for \(\frac{1}{2}\) ing for \(\frac{1}{2}\) ing bolt.	2 4 2 1 2 2 1 1 1	ditto ditto ditto ditto ditto ditto ditto ditto			
000166 014501 000342 000012 000005 000275 000011 000004 000346	Bolt, fixing bracket to rear mudguard, \(\frac{1}{2}\) in. by \(\frac{1}{2}\) ins. by \(\frac{1}{2}\) ins. by \(\frac{1}{2}\) in. by \(\frac{2}{2}\). Washer, spring, for bridge fixing bolt. Nut, for bridge fixing bolt. Bolt, fixing rear mudguard to oil tank, \(\frac{1}{2}\) in. by \(\frac{1}{2}\) in.	2 4 2 1 2 2 1 1 1 1	ditto ditto ditto ditto ditto ditto ditto ditto ditto			
000166 014501 000342 000012 000005 000275 000011 000004 000346 000191 000005 000362	Bolt, fixing bracket to rear mudguard, 1 in. by 1 in. by 26 Washer, plain, for bracket fixing bolt. Nut, for bracket fixing bolt. Stud, fixing rear mudguard brackets to frame, 3 ins. by 1 in. by 26. Washer, plain, for bracket fixing stud. Nut, for bracket fixing stud. Bolt, fixing rear mudguard to frame loop bridge, 1 ins. by 1 in. by 26. Washer, spring, for bridge fixing bolt. Nut, for bridge fixing bolt. Nut, for bridge fixing bolt. Bolt, fixing rear mudguard to oil tank, 1 in. by 1 in. by 26.	2 4 2	ditto			
000166 014501 000342 000012 000005 000275 000011 000004 000346 000191 000005	Bolt, fixing bracket to rear mudguard, \(\frac{1}{2}\) in. by \(\frac{1}{2}\) ins. by \(\frac{1}{2}\) ins. by \(\frac{1}{2}\) in. by \(\frac{2}{2}\). Washer, spring, for bridge fixing bolt. Nut, for bridge fixing bolt. Bolt, fixing rear mudguard to oil tank, \(\frac{1}{2}\) in. by \(\frac{1}{2}\) in.	2 4 2	ditto ditto ditto ditto ditto ditto ditto ditto ditto			

PART NUMBE	DESCRIPTION.	QTY.	USED ON.	PRIC EAC £ s.	H
REAR	MUDGUARD. (G3LC & G80C).				
015166	Mudguard, rear, bare	. 1	G3LC, G80C	2 19	0
000345	Bolt, fixing mudguard to frame top bridge, 13 in. b				
VV03 13	½ in. by 26	. 1	ditto		4
000346	Role fixing mudguard to frame bottom bridge, 1 🛧 💵				
	by ‡ in. by 26	.	ditto		4
000191	Washer, spring, for mudguard bridge bolts	. 2	ditto ditto		3
000005	Nut, for mudguard bridge bolts		ditto		•
000342	by 26by 26	· 1	ditto		3
000172	IAI	. ì	ditto		ī
000005	Nut, for oil tank bracket bolt	. 1	ditto		ż
015168	Stay, for rear mudguard, front position	. :	ditto	10	9
015170	Stay, for rear mudguard, rear position	. 1	ditto	10	9
000362	Bolt, fixing stays to fork end, 3 in. by $\frac{1}{12}$ in. by 26	. 2	ditto		4
000011	Washer, plain, for stay to fork end bolt	. 2	ditto		ļ
000192	Washer, spring, for stay to fork end bolt	. 2	ditto		1
000074	Nut, for stay to fork end bolt	. 2	ditto		3
012565	Bolt, fixing mudguard to stay 1 in, by 2.BA	. 7	ditto ditto		1
000190	Washer, spring, for mudguard to stay bolt	. 7	ditto		i
000039 000080	Washer, plain, for mudguard to stay bolt Nut, for mudguard to stay bolt		ditto		i
RFAR	MUDGUARD. (G3LCS & G80CS).				
		. 1	G3LCS, G80CS	3 14	4
015362 016352	Mudguard, rear, bare		ditto	,	5
000342	Bolt, fixing bracket to rear mudguard, 14 in. by 4 in. by 2	6 2	ditto		3
000012	Washer, plain, for bracket fixing bolt	. 4	ditto		3
000005	Nut. for bracket fixing bolt	. 2	ditto		3
000275	Stud. fixing rear mudguard brackets to frame, 31/2 int				
	by ♣ In. by 26	. 1	ditto		- 1
110000	Washer, plain, for bracket fixing stud	. 2	ditto		1
000004	Nut, for bracket fixing stud	. 2	ditto		3
000345	Bolt, fixing rear mudguard to frame loop bridge	. I	ditto		4
000101	1.1 in. by 1 in. by 26		ditto		i
000191	Washer, spring, for bridge fixing bolt	. i	ditto		3
000005 000070					
000070	by 26	I	ditto		3
000003	Nut, for oil tank bracket bolt	. 1	ditto		3
000172	Washer, plain, for oil tank bracket bolt		ditto		ļ
000191	Washer, spring, for oil tank bracket bolt	ļ	ditto		Ţ
015324	Tube, supporting rear mudguard	. I	ditto	17	9
000369	Bolt, fixing support tube at front, 12 in. by 1/2 in. by 2	62	ditto		4
000004	Nut, for support tube bolt	2	ditto		3
012565	Bolt, fixing mudguard to support tube, 1 in. by 2.8A.	. 6	ditto		3
000190	Washer, spring, for mudguard to tube bolt	. 6	ditto ditto		i
000039	Washer, plain, for mudguard to tube bolt	. 6	ditto		i
080000	Nut, for mudguard to tube bolt	0	ditto.		

WHEN ORDERING SPARES, IF IN DOUBT REGARDING THE NAMES AND PART NUMBERS OF THE PARTS YOU REQUIRE, PLEASE SEND THE OLD PARTS TO SERVE AS PATTERNS.

