This scan is explicit for non-commercial use and is not intended for financial or material gain by anyone

SPARES LIST

FOR

1955 MATCHLESS

350 MODEL G3L RIGID FRAME (TOURING)

350 MODEL G3LS SPRING FRAME (TOURING)

350 MODEL G3LC RIGID FRAME (COMPETITION)

350 MODEL G3LCS SPRING FRAME (COMPETITION)

500 MODEL G80 RIGID FRAME (TOURING)

500 MODEL G80S SPRING FRAME (TOURING)

500 MODEL G80C RIGID FRAME (COMPETITION)

500 MODEL G80CS SPRING FRAME (COMPETITION)

350 -- Bore 69 mm.

Stroke 93 mm.

Capacity 347 c.c.

500 -- Bore 82.5 mm,

Stroke 93 mm.

Capacity 498 c.c.



Compiled and Issued by the Manufacturers

MATCHLESS MOTOR CYCLES


(Proprietors: ASSOCIATED MOTOR CYCLES LIMITED)

Registered Offices:

PLUMSTEAD ROAD, PLUMSTEAD LONDON, S.E.18 . ENGLAND

Nearest Station: WOOLWICH ARSENAL (Southern Region Railway) Factories:
BURRAGE GROVE and MAXEY ROAD
PLUMSTEAD, S.E.18

Telegrams and Cables: "MATCHLESS, WOL-LONDON"
Telephone: WOOLWICH 1223 (7 Lines)
Codes: A.B.C. 5th and 6th Edition; Bentley's; and Private Codes

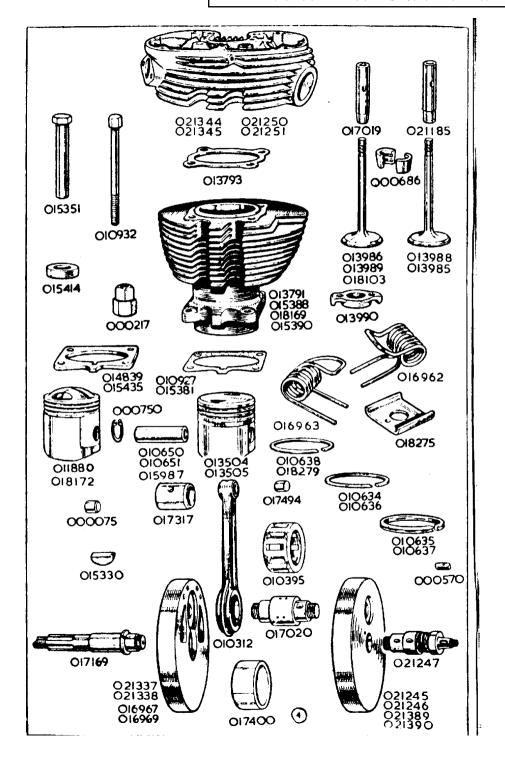

ENGINE SECTION.

| | | ENGINE SECTION. | | |
|---|--------|--|------|--------------------------------------|
| CYLINI | DF | R. | | |
| | | Barrel, cylinder | 1 | G3L, G3LS |
| | • • • | Darrei, cylinder | i | G3LC, G3LCS |
| | | Barrel, cylinder | • | |
| 018169 . | | Barrel, cylinder | ı | G80, G80S |
| 015390 . | | Barrel, cylinder | 1 | G80C, G80CS |
| | | Plate, compression, 14 in. thick, not Std. fitting (15) | i | G3LC, G3LCS |
| | • • • | Plate, Compression, 77 in. tinck, not see inting (15) | i | G80C, G80CS |
| | | Plate, compression, in, thick, not Std. fitting (15) | - | |
| 010927 . | | Washer, paper, cylinder base | ı | G3L, G3LS, |
| | | | | G80, G80S |
| 15381 . | | Washer, paper, cylinder base | 1 | G3LC, G3LCS, |
| /133 01 . | • • • | Vasier, paper, cylinder base:::::::::::::::::::::::::::::::::::: | | G80C, G80CS |
| | | 1 | | |
| 015381 . | | Washer, paper, compression plate | 1 | G3LC, G3LCS |
| | | | | G80C, G80CS |
| 000217 . | | Nut, retaining cylinder to crankcase | 4 | G3L, G3LS, |
| | | | | G80, G80\$ |
| 015351 . | | Nut, sleeve, retaining cylinder head and barrel to | | |
| | | crankcase | 4 | G3LC, G3LCS, |
| | | CHAIRCASE | • | G80C, G80CS |
| | | | | COCC, COCCS |
|)15414 . | | Spacer, & in. long, for cylinder head sleeve nut | 4 | G80C, G80CS |
| . 80000 | | Washer, plain, for cylinder head sleeve nut | 4 | G3LC, G3LCS |
| | | Compression plate used to obtain medium compression | | tio when high compressi |
| Note 15 | • • • | | | cio wilen men compicassi |
| | | piston is fitted. | | |
| | _ | PR LIPARE | | |
| CTLIN | וטו | R HEADS. | | |
| 21355 . | | Head, cylinder, with valve guides | 1 | G3L, G3LS |
| | | Head, cylinder, with valve guides | 1 | G3LC, G3LCS |
| | | Head, cylinder, with valve guides | Ĺ | G80, G80S |
| | • • • | Head, cylinder, with vaive goldes | | |
| | | Head, cylinder, with valve guides | | GBOC, GBOCS |
| 021344 . | | Head, cylinder, less valve guides | - | G3L, G3LS |
| | | Head, cylinder, less valve guides | 1 | G3LC, G3LCS |
| | | Head, cylinder, loss valve guides | 1 | G80, G805 |
| | | | - 1 | G80C, G80CS |
| | | Head, cylinder, less valve guides | ı | Good, Goods |
| 010643 . | | Screw, needle adjusting, inlet valve oil feed. (Screws | | |
| | | into cylinder head) | 1 | All |
| 011373 . | | Nut, lock, needle adjusting screw | 1 | All |
| | ••• | n to the death and a based 397 to be 3 to be 30 | - 2 | G3L, G3LS, |
| 01 0932 . | | Bolt, securing head to barrel, 31/4 ins. by 20 | 7 | |
| | | | | G80, G80S |
| . 010000 | | Washer, plain, for head securing bolt | 4 | G3L, G3LS, |
| | ••• | • | | G80, G80S |
| 012702 | | Carlos for culinder head | 1 | G3L, G3LS, |
| 013793 . | ••• | Gasket, for cylinder head | ٠ | |
| | | | _ | G80, G80S |
| 000291 . | | Stud, fixing carburetter, 2 ins. by \$\frac{5}{14}\$ in. by 22 and 26 | 2 | All |
| 000004 . | | Nut, for carburetter stud | 2 | All |
| | • • • | | _ | |
| ENGIN | Æ | VALVES. | | |
| EMOIM | 16 | | | |
| 13985 . | • | Valve, inlet | 1 | All 350 |
| | | Valve, inlet | ŧ | All 500 |
| | | Valve, exhaust | i | C21 C21 C |
| | • • • | | | |
| | | Valve, exhaust | ! | G3LC, G3LCS |
| 013989 . | | Valve, exhaust | 1 | All 500 |
| ***** | | Spring, for valve, wide prong | 2 | All |
| | | Spring, for valve, narrow prong. | 2 | All |
| | • • • | Called for value against | | A 11 |
| | • • • | Collar, for valve spring | 2 | A!! |
| 018275 . | | Seat, for valve spring | 2 | All |
| 000686 . | | Collet, for valve (each in two pieces) | 2 | Alt |
| | | Guide, for inlet valve | 1 | Ali |
| 41/012 | | Guide, for exhaust valve | i | A 14 |
| | | Outue, for Expanse valve | • | All |
| | | • | | |
| 021185 | N) F | 1 - | | |
| 017019 021185 PISTOI | NS | • | | 631 6316 |
| 021185 PISTO I | | | | GSL, GSLC. |
| 021185 PISTO I | NS | Piston, complete C.R.6'5 No compression plate | ' | G3L, G3LC, G3LS |
| 021185 PISTOI 018301 | ••• | Piston, complete C.R.6:5 No compression plate | | G3LS |
| 021185 PISTOI 018301 018925 | | Piston, complete C.R.6:5 No compression plate Piston, complete C.R.7:5 No compression plate | ! | G3FC2 |
| 021185 PISTOI 018301 018925 | ••• | Piston, complete C.R.6:5 Piston, complete C.R.7:5 Piston, complete C.R.9.4 No compression plate No compression plate | | G3LCS G3LCS All 350 |
| 021185 PISTOI 018301 018925 018304 | | Piston, complete C.R.6:5 No compression plate Piston, complete C.R.7:5 No compression plate | ! | G3FC2 |
| 021185 PISTOI 018301 018925 018304 016858 | | Piston, complete C.R.6:5 Piston, complete C.R.7:5 Piston, complete C.R.9.4 Piston, complete C.R.6:3 No compression plate No compression plate No compression plate | ! | G3LS G3LCS AH 350 G80, G80S |
| 021185 PISTOI 018301 018925 018304 016858 016858 | | Piston, complete C.R.6:5 Piston, complete C.R.7:5 Piston, complete C.R.9.4 No compression plate No compression plate | !!!! | G3LCS G3LCS All 350 |

| | <u> </u> | | | |
|------------------|--|--------------------|------------|-----------|
| PISIC | IN 5 (intree) | - | | - |
| 018927 | Piston, complete C.R.7-3 015435 Compression plate | Lonce | | |
| 018927 | Piston, complete C.R.8-3 No compression place | -G80CS | | |
| 018171 | Piston, complete C.R.8:3 No compression plate | G80, G80S | | |
| 018171 | Piston, complete C.R.8:3 015435 Compression plate | G80C, G80 | C\$ | |
| 018171 | Piston, complete C.R.98 No compression plate | G80C, G80 | C S | |
| 013504 | Piston, bare C.R.6.5 No compression plate | G3L, G3LC | | |
| | | G3LS | | |
| 018924 | Piston, bare C.R.7-5 No compression plate | G3LCS | | |
| 011880 | Piston, bare C.R.9.4 No compression plate | A# 350 | | |
| 0135 05 | Piston, bare C.R.6-3 No compression plate | G80, G 8 0S | | |
| 01.1505 | Tiscon pare | . G80C | | |
| 013505 | tiston, bare | ſ | • • • • | |
| 018926 | Piston, bare C.R.7-3 015435 Compression plate | | | |
| 018926 | 111 11111111111111111111111111111111111 | } | | |
| 018172 | Piston, bare C.R.8·3 No compression plate | | | |
| 018172 | Piston, bare C.R.8-3 015435 Compression plate | | | |
| 018172 | Piston, bare C.R.9'8 No compression plate | 7 | | |
| 018279 | Ring, compression, 233 ins. by is in. (chrome plated) | | • • • | |
| 010634 | Ring, compression, 211 ins. by 1 in. | | | |
| 010636 | Ring, compression, 3½ (ns. by ½ in | | | |
| 010638 | King, compression, 54 ms. by 11 m. temome placedy | | | |
| 010635 | 21 - 5.1 | All 500 | | |
| 010637 010650 | | A1/ 350 | | |
| 015987 | Pin, gudgeon Pin, gudgeon (special for H.C. piston) | | | |
| 010651 | | AII 500 | | |
| 000750 | Circlip, for gudgeon pin | IIA S | | |
| | New machines have the lowest C.R. specified a | bove. | | |
| | | | | |
| | The following oversize parts can be supplied | | | |
| 018302 | Piston, complete 020 O S For 018301 | | e as nor | rmal size |
| 018303 | Piston, complete 040 O S For 018301 | | ** | 1* |
| 018948 | Piston, complete '020 O S For 018925 | | •• | •• |
| 018949 | Piston, complete 040 O S For 018925 | | | •• |
| 018305 | Piston, complete 020 O S For 018304 | | • • | •• |
| 016938 016857 | D: | | ** | •• |
| 018950 | Piston, complete '020 O \$ For 018927 | | •• | |
| 0213 92 | Piston, complete '040 O S For 018927 | | | •• |
| 0+8856 | Piston, complete 020 O \$ For 018171 | | 11 | |
| 013621 | Piston, bare 020 O \$ For 013504 | | •• | •• |
| 014723 | Piston, bare -040 O.S. For 013504 | | | ** |
| 018929 | Piston, bare -020 O S For 018924 | | •• | •• |
| 018930 | Piston, bare 040 O S For 018924 | | 15 | |
| 013711 | Piston, bare -020 O S For 011880 | | •• | •• |
| 013622 | Piston, bare -020 O S For 013505 | | •• | •• |
| 015267 018732 | Piston, bare | | ** | •• |
| 021391 | Piston, bare 040 O S For 018926 | | •• | •• |
| 018857 | Piston, bare -020 O \$ For 018172 | | •• | " |
| 018280 | Ring, compression, 233 ins. plus '020 in. by 1/4 in. | | ** | •• |
| ***** | | I AII 350 | | |
| 016443 | Ring, compression, 23\(\frac{1}{2}\) ins. plus 020 in, by \(\frac{1}{4}\) in | 1 All 350 | | |
| 018281 | Ring, compression, 233 ins. plus 040 in. by 👍 in. | | | |
| | (chrome placed) | 1 All 350 | | |
| 016444 | | I All 350 | • • • | |
| 013661 | | I All 500 | | |
| 016447 | Ring, compression, 3½ ins. plus -040 in. by ½ in | I All 500 | • • • • | |
| 016449 | Ring, compression, 3½ ins. plus 020 in. by ½ in. (chrome plated) | I All 500 | | |
| 016450 | Ring, compression, 3½ ins. plus -040 in. by ½ in. | 1 211 300 | ••• | |
| 0,0,50 | (chrome plated) | I All 500 | | |
| 016445 | Ring, scraper, 243 ins. plus 020 in, by 1 in. | I All 350 | | |
| 016446 | Ring, scraper, 233 ins. plus 040 in. by 1 in | I All 350 | | |
| 013662 | Ring, scraper, 3½ ins. plus 020 in. by ½ in | I All 500 | | |
| 016448 | Ring, scraper, 3½ ins. plus -040 in, by ½ in | F All 500 | | |
| | "Piston, complete" includes—Piston, one ordinary compress | ion ring, one | hrome | |
| | plated compression ring, one scraper ring, gudgeon pin a | nd two circlip | s. | |

RE-BORING.

Cylinders may be re-bored to 020 in, or to 040 in, oversize and normal compression pistons (with rings) (one chrome plated) supplied to suit.

350 Model £2 11s. 8d. (New gudgeon pins and circlips 7s. 1d. extra). 500 Model £3 1s. 2d. (New gudgeon pins and circlips 7s. 6d. extra).

Cylinders sent for re-boring should be packed in stout cases which will be used by us for their return. Carriage is additional. If a complete machine, or engine, is sent to us for cylinder re-boring, there will be an additional charge, according to the time taken, for dismantling and assembly.

FLYWHEELS.

| 021337 | ••• | Flywheel, bare, driving side | 1 | Ail 350, | |
|--------|-----|---------------------------------|---|-------------------------------|-------|
| 021245 | ••• | Flywheel, bare, timing side | 1 | except G3L All 350, | C |
| 021338 | | Flywheel, bare, driving side | 1 | except G3L All 500, | C |
| 021246 | | Flywheel, bare, timing side | 1 | except G80 All 500, | C |
| 021247 | | Axle, timing side flywheel | | except G80 | C |
| 017169 | | Axle, driving side flywheel | i | All | |
| 015330 | | Key, driving side flywheel axle | ż | All | • • • |
| 021249 | | Nut, timing side flywheel axle | ī | Alf | • • • |
| 000234 | | Nut, driving side flywheel axle | i | A 11 | • • • |
| 021389 | | Flywheel, bare, timing side | i | G3LC | ••• |
| 016967 | | Flywheel, bare, driving side | 1 | | |
| 021390 | | Flyweeel, bare, timing side | : | | • • • |
| 016969 | | Flywheel hare driving side | | G80C | |
| 5,5707 | ••• | Flywheel, bare, driving side | ı | G80C | |
| | | | | | |

CONNECTING ROD.

| 010312 | | Rod, connecting with liner and bush | | A 11 | | |
|--------|-------|-------------------------------------|-----|-------------|-------|-------|
| 017400 | ••• | roat connecting with mer and bush | | All | | |
| 017400 | | Liner, for big-end bearing | | A ii | | |
| 01/31/ | | bush, for gudgeon pin | ı ı | ΔII | | |
| 000073 | | Roller, crankpin, 1 in, by 4 in | JU. | Δ11 | | |
| 010395 | | Cage, for crankpin rollers | 30 | - CII | | |
| 010373 | • • • | Cage, for Clarikpill roners | - 1 | All | | |
| 017020 | | Crankpin | - 1 | ΔII | | |
| 000233 | | Nut, for crankpin | ż | All | • • • | • • • |

The following oversize part can be supplied, but we recommend only skilled mechanics should fit same, because it is almost general that the big-end journals and sleeves require "lapping" to ensure a correct fit.

017494 ... Roller, crankpin, ¼ in. plus 001 in. diameter by ¼ in. long 30 All

CRANKCASE.

| | •••• | 7.102. | | | |
|------------------|-------|--|---|--------------------------|-------|
| 021956 | | Crankcase, complete (2) | 1 | G3L, G3LS, | |
| 021957 | | Crankcase, complete (3) | 1 | G80, G805 G3LC, G3L0 | CS, |
| 021958 | | Crankcase, driving side only (4) (6) | 1 | G80C, G80C G3L, G3LS | |
| 021959 | | Crankcase, driving side only (4) (6) | ı | G80, G80S G3LC, G3LC | CS, |
| 021960 | | Crankcase, timing side only (5) (6) | 1 | G80C, G80C G3L, G3LS, | :S |
| 021961 | | Crankcase, timing side only (5) (6) | ı | G80, G80S G3LC, G3LC | S, |
| 000575 | | Plug, drain, for timing side crankcase | 1 | G80C, G80C | :S |
| 000485 | • • • | Screw, plug, for crankcase oil holes ! in, by ! in, by 36. | 3 | A11 | |
| 000203 000576 | ••• | YYASher, fibre, for oil hole screws | 3 | All | |
| 010934 | ••• | Plug, for cylinder oil feed valve | ! | All | |
| 150000 | | | | Atl | • • • |
| 000701 | | Spring, for cylinder oil feed valve | ! | A.I , | • • • |
| 000300 | ••• | Stud, for cylinder base, 133 in, by 1 in, by 26 and 20 | 4 | G3L, G3LS. | ••• |
| | | - · | | G80, G80S | |
| | | | | | |

CRANKCASE--continued.


| 015350 | ••• | Stud, for cylinder base, 7 % in. by % in. with top end threaded % in. by 26 and bottom end threaded % in. by 18 | 4 | | C, G3L | | |
|--------|-------|--|--------------|------------------|--------------------|-----------|-----------------|
| 000577 | | Peg, dowel, locating timing gear cover | 2 | All | | | |
| 017182 | | | ĩ | All | | | |
| 010770 | | | i | All | | | |
| | • • • | Cover, timing gear, with busines | Ġ | All | | | |
| 000482 | | Screw, fixing timing gear cover, 11 in. by 1 in. by 26 | ĭ | All | | | |
| 000765 | ••• | Cap, in timing gear cover, for cam bush | | | | | |
| 021340 | | Cover, magneto chaincase | ı | | G3LS | | |
| | | | | | G80S | | |
| 016864 | | Cover, magneto chaincase | - 1 | | , G3CS | | |
| | | • | | | C, G800 | .5 | |
| 000455 | | Screw, fixing magneto chaincase cover, Hin. by 2.BA 7 | or 8 | All | | | |
| 021383 | | | 2 | G3L, | G3LS, | | |
| | ••• | | | G80, | G80S | | |
| | | | | | | | |
| Note 2 | • • • | Comprises items 021958 and 021960. | | | | | |
| Note 3 | | Comprises Items 021959 and 021961. | | | | | |
| Note 4 | | Comprises crankcase half and two cylinder base studs. | | | | | |
| Note 5 | ••• | Comprises crankcase half, bush for timing side flywhen bushes, cylinder oil feed valve assembled, two cylin pins for the timing cover. | el ax der | de wid base : | th peg, studs a | two cai | mshaft dowel |
| Note 6 | ••• | Halves of crankcases must be "matched" in the Fact to send the sound half of a crankcase when ordering to | tory. | The half. | refore | it is nec | essary |

CRANKCASE BEARINGS.


| 021962 | Bush, timing side flywheel axle | 1 | All | | |
|--------|--|---|-----|-------|--|
| 012233 | Peg, securing timing side bush | | | | |
| 021872 | Ball bearing, for driving side axle, 1 in. by $2\frac{1}{2}$ in by $\frac{3}{4}$ in. | 1 | All | | |
| 017191 | Ball bearing, for driving side axle, 1 in. by $2\frac{1}{4}$ ins. by $\frac{4}{8}$ in. | 1 | All | | |
| 021859 | Washer, spacing, between ball bearings | | Ail | • • • | |
| 000651 | Bush, for exhaust cam, in crankcase | | All | | |
| 000652 | Bush, for exhaust cam, in timing cover | 1 | All | | |
| 000651 | Bush, for inlet cam, in crankcase | | All | • · · | |
| 000651 | Bush, for inlet cam in timing cover | | All | | |

CRANKCASE BOLTS.

| 010824 | | Stud, front, top position, 6 1 ins. by 1 in. by 26 and 26 | ŧ | All | ••• | | |
|--------|-----|---|---|---------------|------------|-------------|------|
| 000278 | | Stud, front, centre position, $\frac{478}{18}$ ins. by $\frac{5}{18}$ in. by 26 and 26 | ı | All | | ••• | |
| 000277 | ••• | Stud, front, bottom position, 4% ins. by % in. by 26 and 26 | | Ali | | | |
| 000278 | | Stud, bottom, rear position, 4% ins. by % in. by 26 and 26 For the "Stud, bottom, front position" (which also unl | | All | | d : (| |
| | | see FRAME. | | | | | 162) |
| 000278 | ••• | Stud, rear, top position, 4% ins. by % in. by 26 and 26. For the "Stud, rear, centre position," see "000316 stu | 1 | All fixing | centre | of chaincas | ٠٠ ـ |
| | | in FRONT CHAINCASE. | | | | Or chances | -, |
| 014147 | | Bolt, rear, bottom position, 4表 ins. by 表 in. by 26 | ١ | All | | | |
| 000011 | | Washer, plain, for 1/4 in. studs and bolt | 8 | All | | | |
| 000004 | | Nut, 👬 in, by 26, for all 🏰 in, studs and bolt | ŧ | All | | | |

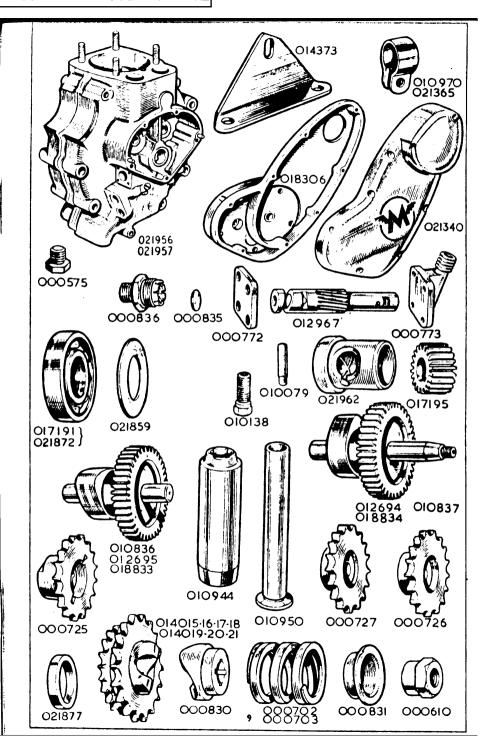

| OIL PUMP. | |
|--|---|
| | ROCKER BOX. |
| 012967 Plunger, oil pump All | 022142 Rocker box, assembled (10) I G3L, G3LS, G8D, G8DS |
| 010138 Screw, guide, oil pump plunger I All | |
| 010079 Pin, guide screw, oil pump plunger All All O00773 Cap, front end, oil pump | 022143 Rocker box, assembled (10) I G3LC, G3LCS, G80CC, G80CS |
| 000773 | |
| 000582 Washer, paper, pump end cap | 014364 Rocker box, with bushes (11) 1 G3L, G3LS, |
| 000015 Screw, fixing front end cap, oil pump, 3 in. by 3.BA 4 All | 000, 0000 |
| 000591 Bolt, fixing rear end cap, oil pump, $\frac{1}{16}$ in. by 3.BA 4 All | 015458 Rocker box, with bushes (11) 1 G3LC, G3LCS, G80C, G80CS |
| | |
| DELFACE VALVE | 013958 Rocker box, bare I G3L, G3LS, G80, G80S |
| RELEASE VALVE. | ו פור פור |
| 000836 Body, release valve [All | |
| 000835 Diaphragm, for release valve I All | 013984 Gasket, for rocker box |
| · · · · · · · · · · · · · · · · · · · | ALTION Buck for rocker hov |
| | 012000 Cover side for rocker box |
| TIMING GEAR. | G0V, G0V3 |
| 012694 Camshaft, exhaust | 015678 Cover, side, for rocker box 1 G3LC, G3LCS, G80C, G80CS |
| G80, G80S | |
| 010837 Camshaft, exhaust G3LC, G80C | 014229 Fillet, rubber, rocker box side total in hy 2 BA 3 All |
| 018834 Camshaft exhaust | |
| 016847 Washer, shim, 005 in. thick, for exhaust Camshaft R. All | conne Marker Chre for rocker box side cover stud J MII |
| 016848 Washer, shim, -010 in. thick, for exhaust Camshaft R. All | corre Union oil in rocker hay |
| 012695 Camshaft, inlet | nisses Role fixing rocker box, short, 142 ins. by 72 in. by 22 4 All |
| 010836 Camshaft, inlet | ALEXEA Role fixing rocker box, long, 244 Ins. by 1/2 Ins. by 44 4 O'' |
| 010836 Camshaft, inlet | negree Role fiving rocker box, long, 27 ins. by 1/2 in. by 22 with |
| 017195 Pinion, timing, on flywheel axle | extension A in. by 26 |
| 000570 Key, for timing pinion All | except G3LC |
| 000221 Nut, retaining timing pinion to axle (left hand thread) All | 021444 Bolt, fixing rocker box, with extension |
| , | 015356 Bolt, fixing rocker box, centre position $3\frac{1}{16}$ ins. by $\frac{1}{16}$ in. by 22 |
| | |
| | 000011 Washer, plain, rocker box fixing boits |
| TAPPETS. | |
| 010950 Tappet, bare | Note 10 Includes all parts listed in this paragraph (except gasket, fixing bolts and washers), and all those listed under "OVERHEAD ROCKERS" and "EXHAUST VALVE LIFTER." |
| 010950 Tappet, bare | and all those listed under "OVERHEAD ROCKERS" and EXHAUST VALVE |
| 010950 Tappet, bare | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. |
| 010950 Tappet, bare | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. |
| 010950 Tappet, bare | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note !! This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. |
| 010950 Tappet, bare 2 All 010944 Guide, for tappet 2 All PUSH RODS. 018314 Rod, long, push, complete (8) 2 All Touring and 350 Comp. 018315 Rod, long, push, complete (8) 2 Comp. 500 018168 Rod, long, push, bare 2 All Touring and | and all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 All, rocker 2 All |
| 010950 Tappet, bare 2 All 010944 Guide, for tappet 2 All PUSH RODS. 018314 Rod, long, push, complete (8) 2 All Touring and 350 Comp. 018315 Rod, long, push, complete (8) 2 Comp. 500 018168 Rod, long, push, bare 2 All Touring and 350 Comp. 015511 Rod, long, push, bare 3 Comp. 500 | and all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| 010950 Tappet, bare 2 All 010944 Guide, for tappet 2 All PUSH RODS. 018314 Rod, long, push, complete (8) 2 All Touring and 350 Comp. 018315 Rod, long, push, complete (8) 2 Comp. 500 018168 Rod, long, push, bare 2 All Touring and 350 Comp. 015511 Rod, long, push, bare 3 Comp. 500 | and all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note !! This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrimination of the purple | and all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note !! This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Dig Dig | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Dig Dig | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrimination of the property of the proper | and all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 |
| Discrete | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 Axle, rocker |
| Discrete | And all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 |
| Discrete | And all those listed under "OVERHEAD ROCKERS" and EARLOST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 |
| Diopsion Tappet, bare | and all those listed under "OVERHEAD ROCKERS" and EARAGST VALVE LIFTER." Note 11 This is a "bare" rocker box to which is fitted four 017103 bushes, two 012722 felt rings and oil metering plug 018890. OVERHEAD ROCKERS. 017192 |
| Diopsion Tappet, bare | Note 1 |
| Discording Dis | Note 1 |
| Discrete | Note 1 |
| Discription PUSH RODS. PUSH RODS. PUSH RODS. PUSH RODS. PUSH RODS. Push Rod long, push, complete (8) Push Rod long, push, bare Push Rod long, | Note 1 |
| Discrete | Note 1 |

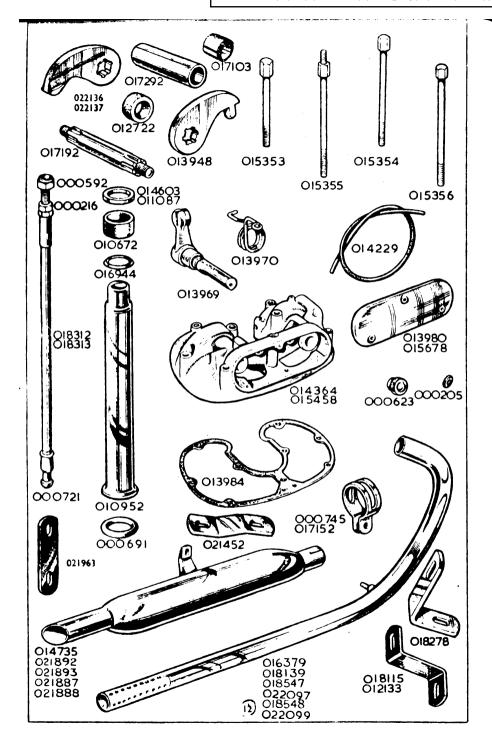

| ۵ | OCKER | BOY | STAY—continued. |
|---|-------|-----|-----------------|
| ĸ | OCKER | BUX | SIAI—continued. |


| 000364 | Bolt, for rocker box stay clip, 🚼 in. by 🚠 in. by 26 | - 1 | All | | |
|---------|--|-----|-----|-------------|--|
| 000011 | Washer, plain, rocker box stay clip bolt | - 1 | All | | |
| 000004` | Nut, rocker box stay clip bolt | 1 | All | | |
| 000011 | Washer, rocker box stay | R | All | • · · · | |

GASKETS.

Engine gaskets are supplied as separate spares and in complete sets. Single gaskets are listed in the groups to which they belong. Gaskets in sets are listed on page 61.

EXHAUST PIPE AND SILENCER SECTION.

| PART NUMBER. | DESCRIPTION. | ÇTY. | USED ON. | PRICE EACH |
|---|---|-------------|--|---------------|
| | | | | |
| EXHAUS | ST PIPES. | | | |
| 016379 | Pipe, exhaust, bare | ł | G3L, G3LS | |
| 018547 | Pipe, exhaust, bare | - 1 | G3LC | |
| 022097 | Pipe, exhaust, bare | i | G3LCS | |
| 018139 | Pipe, exhaust, bare | i | G80, G80S | |
| 018548 | Pipe, exhaust, bare | ŧ | G80C | |
| 022099 | Pipe, exhaust, bare | | G80CS | |
| 016467 | Pipe, extension, for exhaust pipe (12) | | G3LC, G3LCS | |
| • | | | G80C, G80CS | |
| 012133 | Stay, for exhaust pipe | 1 | G3L, G3LS | |
| 018115 | Stay, for exhaust pipe | | G80, G80S | |
| 014748 | Stay, for exhaust pipe | | G3LC. G80C | |
| 018278 | Stay, for exhaust pipe | | G3LCS, G80CS | |
| | Nut, fixing exhaust pipe to stay | | | |
| | | | A 11 | |
| 000174 | Washer, plain, exhaust pipe fixing nut | | Ali | |
| 000192 | Washer, spring, exhaust pipe fixing nut | | All | |
| Note 12 | This is an optional extra, and fits in place of the standa | erd til | PRCPT. | |
| | , , , , , , , , , , , , , , , , | | | |
| | • | | | |
| SILENCE | RS. | | | |
| SILENCE | • | | G3L | |
| SILENCE 021892 | RS. | ı | 63 1 | |
| SILENCE 021892 021887 | IRS. Silencer, bare | ! | G3L | |
| SILENCE 021892 021887 | ERS. Silencer, bare Silencer, bare | ! | G3L G3LS | |
| SILENCE 021892 021887 014735 | Silencer, bare Silencer, bare Silencer, bare | !!! | G3L G3LS G3LC, G80C, | |
| SILENCE 021892 021887 014735 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare | 1 1 | G3L G3LS G3LC, G80C, G3LCS, G80CS | |
| SILENCE 021892 021887 014735 021893 021888 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare | ; ! ! | G3L G3LS G3LC, G80C, G3LCS, G80CS | |
| SILENCE 021892 021887 014735 021893 021888 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare | ; ! ! | G3L G3LS G3LC, G80C, G3LCS, G80CS G80S, G80S, G80S, G80S, G80S, G3L, G3LS, | |
| SILENCE 021892 021887 014735 021893 021888 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare | ; ! ! | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G8US G3L, G3LS, G3LC, G3LCS, | |
| SILENCE 021892 021887 014735 021893 021888 017152 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe | 1 1 1 | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G80S G3L, G3LS, G3LC, G3LCS, G80C, G80CS | |
| SILENCE 021892 021887 014735 021893 021888 017152 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe | | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G80S G3LC, G3LCS, G3LC, G3LCS, G80C, G80CS | • |
| SILENCE 021892 021893 021893 021893 021893 017152 000745 000363 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 4 in. by 26. | 1 | G3L G3LS G3LC, G80C, G80CS G80CS G80 G3LC, G3LC, G3LC, G3LC, G3LC, G80C, G80 | |
| 021892 014735 021888 021888 017152 000745 000363 000174 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip ½ in. by ½ in. by 26 | 1 1 1 | G3L | |
| SILENCE 021892 021887 014735 021893 021888 017152 000745 000363 000174 000004 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip $\frac{3}{4}$ in by $\frac{3}{4}$ in by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt. | | G3L | |
| SILENCE 021892 014735 021893 021893 021898 017152 000745 000363 000174 000004 021963 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip \(\frac{3}{4} \) in. by \(\frac{1}{4} \) in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. | | G3L | |
| SILENCE 021892 021887 014735 021893 021888 017152 000745 000363 000174 000004 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip $\frac{3}{4}$ in by $\frac{3}{4}$ in by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt. | | G3L G3LS. G80C, G3LC, G80C, G3LCS, G80CS. G80 G80S. G3L, G3LS, G3L, G3LS, G3C, G3CS G80C, G80CS All All All G3LCS, G80CS All, except | |
| 021892 014735 021893 021893 021898 017152 000745 0000745 000174 000004 021963 000004 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3/2 in. by 3/2 in. by 26. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Nut fixing silencer to stay. | | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G80S G3LC, G3LCS, G80C, G3LCS, G80C, G80CS All All All G3LCS, G80CS All, except G3LS, G80S | |
| SILENCE 021892 021887 014735 021893 021888 017152 000745 000363 0000174 000004 000174 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 3 in. by 26. Washer, plain, for silencer clip bolt Stay, for silencer. Nut fixing silencer. Nut fixing silencer to stay. Washer, plain, for silencer fixing nut | | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G80S G3LC, G3LCS, G80CS G80, G80CS All All G3LCS, G80CS All G3LCS, G80CS All G3LCS, G80CS All, except G3LS, G80S | |
| SILENCE 021892 021887 014735 021893 021888 017152 000745 000363 000174 000004 000174 000174 000174 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 3 in. by 26. Washer, plain, for silencer clip bolt Nut, for silencer clip bolt Stay, for silencer. Nut fixing silencer to stay. Washer, plain, for silencer fixing nut Washer, spring, for silencer fixing nut | | G3L | |
| 021892 014735 021893 021893 021898 017152 000745 000363 000174 000004 021963 000004 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 3 in. by 26. Washer, plain, for silencer clip bolt Stay, for silencer. Nut fixing silencer. Nut fixing silencer to stay. Washer, plain, for silencer fixing nut | | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G80S G80C, G3LCS, G80C, G80CS G80, G80S All All G3LCS, G80CS All, except G3LS, G80S All, ditto All, ditto G3LS, G3LCS, | |
| SILENCE 021892 021887 014735 021893 021888 017152 000745 000174 000004 021963 000174 000174 000174 000174 000174 000174 000174 000174 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Clip, clamping silencer to exhaust pipe Bolt, for silencer clip $\frac{3}{4}$ in. by $\frac{26}{4}$. Washer, plain, for silencer clip bolt. Nut, for silencer clip bolt Stay, for silencer. Nut fixing silencer to stay. Washer, plain, for silencer fixing nut Washer, spring, for silencer fixing nut Bolt, fixing silencer stay to frame | | G3L G3LS G3LCS, G80CS, G3LCS, G80CS G80S G80S G3LC, G3LCS, G80C, G80CS G80, G80S All All G3LCS, G80CS All, except G3LS, G80S All, ditto G3LS, G80S All, ditto G3LS, G80CS | |
| SILENCE 021892 021887 014735 021893 021898 017152 000745 000363 000004 021963 000004 000174 000174 000174 | Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Silencer, bare Clip, clamping silencer to exhaust pipe Bolt, for silencer clip 3 in. by 3 in. by 26. Washer, plain, for silencer clip bolt Nut, for silencer clip bolt Stay, for silencer. Nut fixing silencer to stay. Washer, plain, for silencer fixing nut Washer, spring, for silencer fixing nut | | G3L G3LS G3LC, G80C, G3LCS, G80CS G80 G80S G80C, G3LCS, G80C, G80CS G80, G80S All All G3LCS, G80CS All, except G3LS, G80S All, ditto All, ditto G3LS, G3LCS, | |

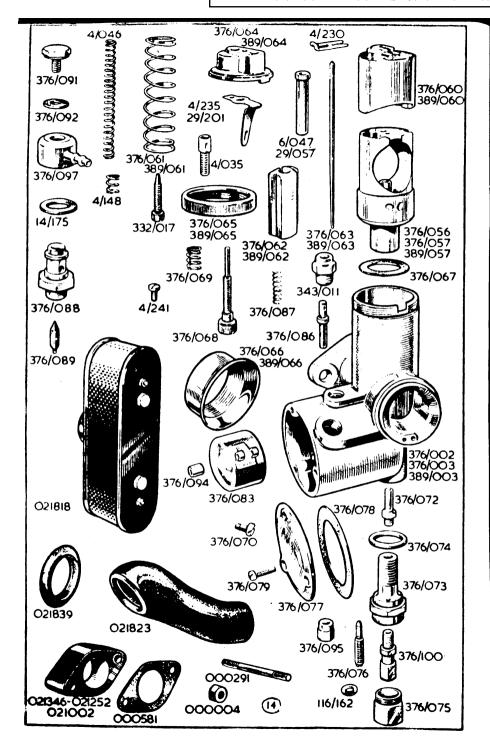

CARBURETTER SECTION.

| CARBUR | RETTER PARTS. | | |
|------------------|--|-----|--|
| 021873 | Carburetter, complete (less controls), type 376/1 | 1 | G3L, G3LS, G3LC |
| 021874 | Carburetter, complete (less controls), type 389/I | 1 | G80, G80S, |
| 018074 018881 | Carburetter, complete (less controls), type 10/TT | 1 | G3LCS |
| 018881 021346 | Spacer, for carburetter, $\frac{1}{4}$ in. wide, $\frac{1}{16}$ in. bore | i | G3L, G3LS |
| 021252 | Spacer, for carburetter, 를 in. wide, 1곳 in. bore Spacer, for carburetter, 를 in. wide, 1元 in. bore | 1 | G80, G80S G80C, G80CS |
| 021002 022103 | Spacer for carburetter, \$\frac{1}{2}\text{ in. wide, \$1\frac{1}{12} in. bore | i | G3LCS |
| | Gasket, for carburetter | i | A II |
| | Gasket, for carburetter spacer | - 1 | A II |
| | | i | G3L, G3LS, |
| 376-003 | Carburetter body | | G3LC |
| 389-003 | Carburetter body | ı | G80, G80S, G80C |
| 376-077 | Side cover | ı | G3L, G3LS, G3LC, G80, G80S, G80C |
| 376-078 | Side cover jointing washer | - 1 | ditto |
| 376-079 | Side cover screw | 3 | ditto |
| 376-083 | Float | ĭ | ditto |
| 376-094 | Float spindle bush | i | ditto |
| 376-089 | Float needle | i | ditto |
| 376-088 | Float needle seating | - ; | ditto |
| | Mixing chamber cap securing ring | i | G3L, G3LS, |
| | | • | G3LC |
| 389-065 | Mixing chamber cap securing ring | ı | G80, G805, G80C |
| 4-235 | Mixing chamber cap securing ring spring | 1 | G3L, G3LS, G3LC |
| 29-201 | Mixing chamber cap securing ring spring | ı | GEO, GEOS, G80C |
| 4-241 , | Screw fixing cap securing ring spring | ı | G3L, G3LS, G3LC, G80, G80S, G80C |
| 376-064 | Mixing chamber cap | ŧ | G3L, G3LS, |
| 389-064 | Mixing chamber cap | 1 | G80, G80S, |
| 4-035 | Control cable adjuster | 2 | G3L, G3LS, |
| | | | G3LC, G80, |
| 27/ 6/2 | Ata milio | | G80S, G80C |
| 376-062 | Air valve | ı | G3L, G3LS, |
| 300 0/3 | Atauntus | | G3LC |
| 389-062 | Air valve | ı | G80, G80S, G80C |

★ Price on application

29-057

Air valve guide

Air valve spring

Throttle valve

376-061 ... Throttle valve spring

G3L, G3LS,

G80, G80S, G80C

G3L, G3LS,

G80, G80S, G80C

G3L, G3LS, G3LC, G80,

G3L, G3LS,

G3LC ...

G80S, G80C ...


G3LC

G3LC


| CARBUI | RETTER PARTS continued. | |
|--------------------|---|--------------------------------------|
| 389-061 | Throttle valve spring | I G80, G80\$ |
| 374 040 | | G80C |
| 376-068 | Throttle stop screw | I G3L, G3LS, G3LC, G80, |
| | | G80S, G80C |
| 376-069 | Throttle stop screw spring | ditto |
| 332-017 | Pilot air adjusting screw | f ditto |
| 4-148 376-063 | Pilot air adjusting screw spring | l ditto I G3L, G3LS, |
| 370-003 | | G3LC |
| 389-063 | Taper jet needle | i G80, G80S, |
| 4 220 | To a second all all a | G80C |
| 4-230 | Taper needle clip | I G3L, G3LS, G3LC, G80, |
| | | G80S, G80C |
| 376-072 | Needle jet | 1 ditto |
| 376-100 | Main jet (specify size when ordering) | l ditto |
| 376-073 | Main jet holder | l ditto |
| 376-074 | Jet holder washer | ditto |
| 376-075 | Main jet cover | l ditto |
| 376-076 | Pilot jet | l ditto |
| 376-095 116-162 | Pilot jet cover nut | 1 ditto 1 ditto |
| 376-057 | Jet block complete | I G3L, G3LS, |
| 370-037 | Jet block complete,,,,,, | G3LC |
| 3 89 -057 | Jet block complete | I G80, G80\$, |
| | | G80C |
| 376-067 | Jet block washer | I G3L, G3LS, |
| | | G3LC, G80, |
| 377 070 | Landing on the teachers | G80S G80C |
| 376-070 | Locating peg for jet block | l ditto |
| 376-097 376-091 | Petrol pipe banjo | l ditto |
| 376-092 | Petrol pipe banjo bolt washer | I ditto |
| 14-175 | Banjo seating washing | I ditto |
| 343-011 | Tickler body | ditto |
| 376-0 86 | Tickler plunger | I ditto |
| 376-087 | Tickler spring | l ditto |
| 376-066 | Air intake venturi | I G3L, G3LS, |
| 389-066 | Air intake venturi | G3LC I G80, G80S, |
| 307-000 | The interest venture | G80C |
| The prices of | of parts of 10TT and 10TT/10 carburetters as fitted to 0 application ANER. (This is optional extra equipment | · |
| 021818 | Cleaner, air | I All except |
| | , | Competition |
| 022128 | Cleaner, air | I G3LC, G80C 🛖 |
| 022129 | Adaptor, for air cleaner |] G3LC — — — — — — — — — — — — — — — |
| 022130 | Adaptor, for air cleaner | I G80C 💃 |
| 021823 | Sleeve for air cleaner | I All except Competition |
| 021839 | Sealing ring, rubber | 1 ditto |
| 022075 | Stud to frame, 1 in. by in. | 2 ditto |
| 016983 | Set of air cleaner elements comprising filter element | |
| | and two fabric end gaskets | 1 All except |
| | • | Competition |
| | When an AIR CLEANER is fitted it is essential to :- | • |
| | Fit a smaller let, viz : | |
| | • • | |
| | for 350 use jet 376/100 (size 200) | |
| | for 500 use jet 376/100 (size 250) | |
| | ★ Price on application. | |
| | | |
| | 1.4 | |

TRANSMISSION SECTION.


| 014016 014018 014021 021877 000702 000703 000830 000831 012444 | Sprocket, engine, bare, 16 teeth Sprocket, engine, bare, 18 teeth Sprocket, engine, bare, 21 teeth Spacer, collar, for engine sprocket | I G | 3LC, G3L 3L, G3LS, 80C , G80 | | |
|--|--|-------|--|-------|--|
| 014018 014021 021877 000702 000703 000830 000831 000610 | Sprocket, engine, bare, 18 teeth Sprocket, engine, bare, 21 teeth Spacer, collar, for engine sprocket | I G | 3L, G3LS, | | |
| 014021 021877 000702 000703 000830 000831 | Sprocket, engine, bare, 21 teeth | G | | | |
| 021877 000702 000703 000830 000831 000610 | Spacer, collar, for engine sprocket | | ,00C, G60 | | |
| 021877 000702 000703 000830 000831 000610 | Spacer, collar, for engine sprocket | | 80, G80S | | |
| 000702 000703 000830 00083i | abasa, tames to colline abi ceres | İĂ | | • | |
| 000703 000830 000831 000610 | Spring, engine shock absorber | | 11 350 | ••• | |
| 000830 000831 | Spring, engine shock absorber | | ll 500 | ••• | |
| 000610 | Cam, engine shock absorber | İA | | ••• | |
| 010000 | | I A | •• | ••• | |
| | Cap, engine shock absorber spring | | ••• | ••• | |
| | Nut, lock, engine shock absorber | I A | | | |
| 012444 | Washer, felt, between engine sprocket and crankcase | | BLC, G3L | | |
| 021117 | Cage, for felt washer | | 80C, G80 itto | C3 | |
| | The following alternative engine sprockets can be supplied | ≀d. | | | |
| 014015 | Sprocket, engine, bare, 15 teeth | I AI | H | | |
| 014017 | Sprocket, engine, bare, 17 teeth | i Ai | | | |
| 014019 | Sprocket, engine, bare, 19 teeth | i Ai | | ••• | |
| 014020 | Sprocket, engine, bare, 20 teeth | ΪÂ | | ••• | |
| | • | 1 0 | " | *** | |
| MAGNET | O DRIVING SPROCKET. | | | | |
| 000727 | Sprocket, magneto, on engine camshaft | i Ai | | | |
| 000011 | Washer, plain, for camshaft sprocket | | | • • • | |
| 000004 | Nut retaining for complete annulus | ! 4! | | | |
| 200724 | Nut, retaining, for camshaft sprocket | I A | <u>"</u> | | |
| 000726 | Sprocket, magneto, on armature shaft | 1 G: | 3LC, G3L | CS, | |
| 40074 | 144 4 1 1 4 | G | 80C, G80 | CS | |
| 40074 | Washer, plain, for armature sprocket | I di | tto | | |
| 171284 | Nut, retaining, for armature shaft sprocket | I dit | tto | | |
| 021354 | Sprocket and automatic advance unit w/fixing bolt and | | | | |
| | washers (Lucas) | I GE | 80, G80S | ••• | |
| 021680 | Sprocket and Automatic advance unit w/fixing bolt and | | , | ••• | |
| | washers (Lucas) | 1 G3 | 3L, G3LS | | |
| DYNAMO | O SPROCKET. | | | | |
| 000725 | Sprocket, on dynamo shaft | I AI | 11 | | |
| 000572 | Key, for dynamo sprocket | i âi | 11 | ••• | |
| 010000 | Washer, plain, for dynamo sprocket nut | i ai | | ••• | |
| 000164 | Washer, lock, for dynamo sprocket nut | | | ••• | |
| 000708 | Ring, lock, for dynamo sprocket nut | | | ••• | |
| 000611 | Nur cetaining for dynama apporter | ! Al | | ••• | |
| | Nut, retaining, for dynamo sprocket | I AI | II | ••• | |
| GEARBO | х. | | | • | |
| 16708 | Gearbox, complete with four place clutch, foot gear | _ | | | |
| 016709 | lever and kick-starter lever | I G | 3L, G3L \$ | | |
| 40/010 | Gearbox, complete with five plate clutch, foot gear | | | | |
| | lever and kick-starter lever | I G | 80, G80S | | |
| 118001 | Gearbox, complete with five plate clutch, foot gear | | | | |
| 018981 | , , , , | | | | |
| 114744 | lever and kick-starter lever | 1 G3 | 3LC, G800 | C | |
| 018981 016711 | lever and kick-starter lever | | 3LC, G <mark>80</mark> (3LCS, G8(| | |

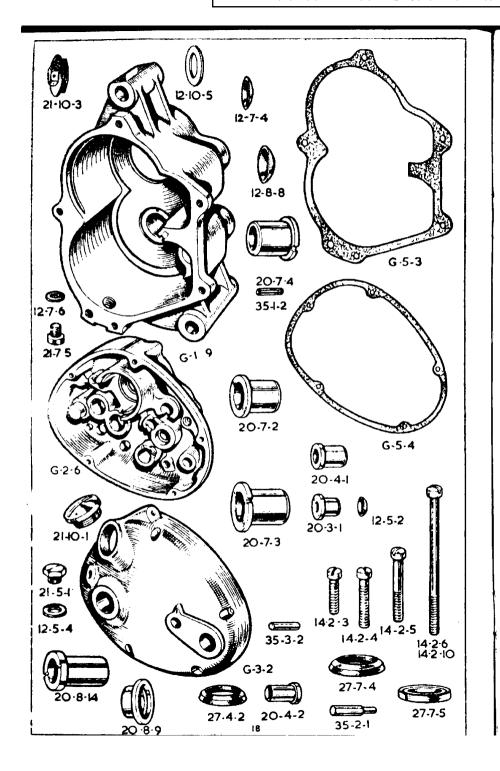

| CHAINS | • • • • • • • • • • • • • • • • • • • | | | | |
|----------------|---|-------|---------|----------|----------------|
| CHAINS. | | | | | _ |
| 017381 | Chain, front, 65 links, ½ In. by 305 in. (13) | - 1 | | :, G3LC | 2 |
| 017298 | Chain, front, 66 links, 1/2 in. by 305 in. (13) | - 1 | | G3LS, | |
| • | | | G80C | ., G80C | 5 |
| 017299 | Chain, front, 67 links. 1 in. by 305 in. (13) | - 1 | G80, | G805 | |
| | Chain, rear, 90 links, \(\frac{1}{2} \) in. by 380 in. (13) | 1 | G3LC | ; G80C | |
| 017380 | Chain, rear, 94 links, 5 in. by 380 in. (13) | i | G3L. | | |
| 017301 | Chain, real, 74 thtks, 5 in by 300 in (13) | i | G31.5 | , G3LC | S. |
| 017376 | Chain, rear, 98 links, & in. by 380 in. (13) | , | | , G80C9 | |
| | | - 1 | All | | |
| 017296 | Chain, dynamo, 49 links, 3 in. by 225 in. (14) | - i | All | | |
| 017294 | Chain, magneto, 46 links, # in. by 225 in. (14) | | All | | |
| 110046-26 | Link, connecting, for ½ in. chains | R | | | |
| 110056-26 | Link, connecting, for a in. chains | R | All | | *** |
| 110046-30 | Link, cranked, for \(\frac{1}{2} \) in, chains | R | All | | • • • |
| 110056-30 | Link, cranked, for a in, chains | R | Ali | | *** |
| 110046-27 | Clip, spring, for \(\frac{1}{2}\) in, connecting links | 3 | All | | * * * |
| 110056-27 | Clip, spring, for fin. connecting links | R | Ali | | |
| | | | | | |
| Note 13 | The prices of front and rear chains include spring conf | iecti | ing lin | ks, and | these are also |
| 11010 13 | included in the number of links per chain. We do no | ot se | bbo III | lengths | of chain. |
| | | | | | |
| Note 14 | Magneto and Dynamo chains are endless. We do not s | ello | onnec | ting and | cranked links |
| Note 14 | | | | • | |
| | for same. | | | | |
| | | | | | |
| | ALL CIVILLO DARTO | | | | |
| GEAR B | OX FIXING PARTS. | | | | |
| 010017 | Bolt, gearbox top fixing, $5\frac{1}{12}$ ins. by $\frac{7}{12}$ in. by $\frac{26}{12}$ | 1 | All | | |
| 010957 | Boit, gear box top fixing, 547 fins. by 12 in. by 26 | i | All | | |
| 000318 | Stud, gearbox bottom fixing, 4 ins. by 7 in. by 26 | - i | All | | *** |
| 012999 | Spacer, 16 in. wide, on top bolt, outside right | i | All | | |
| 000002 | Nut, for gearbox top fixing bolt | | | | *** |
| 000002 | Nut, for gearbox bottom fixing stud | 2 | All | | *** |
| 000009 | Washer, plain, for top fixing bolt, left side | 1 | All | | |
| 013987 | Eve-bolt, for front chain adjustment | 1 | Αli | | *** |
| 000215 | Nur for front chain adjustment eye-bolt | 2 | ΑH | | |
| | Crosshead, for front chain adjustment eye-bolt | - 1 | Ail | | |
| | Bolt, fixing crosshead to engine plate, on in. by it in. | | | | |
| 000361 | by 26 | - 1 | G31., | G3LC. | |
| | 0) 20 | | G80. | G80C | |
| 000011 | White a plain for exercised fixing bolt | 1 | | G3LC, | |
| 110000 | Washer, plain, for crosshead fixing bolt | | | G80C | |
| | | | Ç., | | |
| | • | | | | |
| GEAR R | OX SHELL. | | | | |
| GLAN D | | | 4.10 | | |
| G-1-9 | Shell, gearbox | 1 | All | | |
| 21-10-3 | Inspection plug | - 1 | All | | |
| 12-10-5 | Inspection bills washer | 1 | All | | |
| 21-7-5 | Plug, drain, for gearbox shell | - 1 | All | | *** |
| 12-7-6 | Washer, fibre, for gearbox shell drain plug | 1 | ΑII | | |
| 12-7-4 | Cap, in shell, covering bore for selector spindles | 2 | ΑII | | ••• |
| 35-3-2 | | 1 | ΑII | | |
| G-2-6 | | 1 | All | | |
| G-5-3 | Washer, paper, between shell and kick-starter case | - 1 | All | | |
| | | - 1 | All | | |
| G-3-2 | 144 - L Leaven Little starter case and cover | i | All | | |
| G-5-4 | Disea location between kick-starter case and cover | i | All | | |
| 28-12-45 | Piece, locating, between kick-starter case and cover | 2 | | | ••• |
| 35-1-1 | Pin, dowel, locating fixed cam-plate in kick-starter case | ĩ | All | | *** |
| 21-10-1 | Cap, filler, for kick-starter case cover | i | Ali | | |
| 21-5-1 | Plug, oil level, in kick-starter case cover | i | | | *** |
| 12-5-4 | Washer, fibre, for oil level plug | i | | | |
| 35 -2-1 | Pin, anchor, in cover, for kick-starter spring | | | ••• | ••• |
| 14-2-3 | Screw, 7 in. under head | | | ••• | ••• |
| 14-2-4 | Screw II in under head | 3 | | ••• | ••• |
| 14-2-5 | Screw, 12 in, under head | 2 | | • • • | ••• |
| 14-2-6 | Screw. 27 ins. under head | 1 | | | *** |
| 14-2-10 | Screw, 3½ ins. under head | - 1 | | | ••• |
| 12-2-5 | | 8 | IIA 8 | | *** |
| | | | | | |

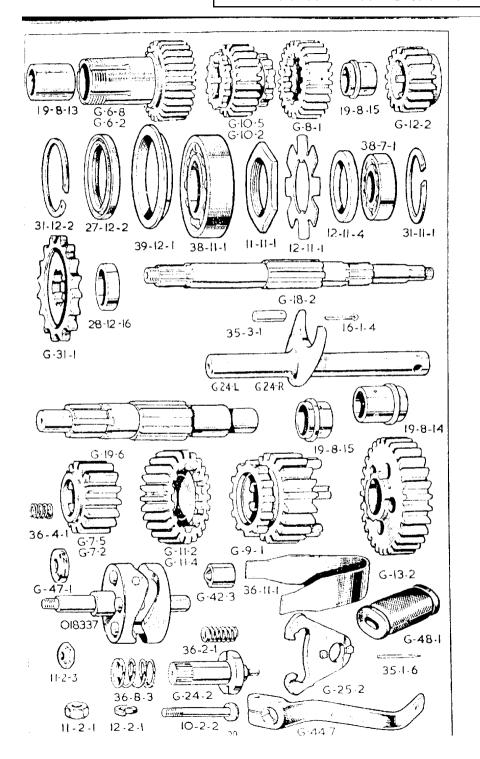

| | AND GEARS. | |
|---|--|---|
| G-18-2 | Mainshaft, for gearbox | 1 All |
| 5-19-6 | Layshaft, for gearbox (overall length 5\frac{1}{2} ins.) | I All |
| 5-6-2 | Gear, driving, mainshaft, with bushes, 28 teeth | I G3L, G3L5, |
| | | G3LCS, G80, |
| | | G80S, G80CS |
| 8-6-8 | Gear, driving, mainshaft with bushes, 30 teeth | I G3LC, G80C |
| 5-12-2 | Gear, first, mainshaft, 17 teeth | I All |
| -10-2 | Gear, second, mainshaft, 22 teeth | I G3L, G3LS, |
| | | G80, G80S, |
| | | G3LCS, G80CS |
| G-10-5 | Gear, second, mainshaft, 20 teeth | G3LC,G80C |
| G-8-! | Gear, third, mainshaft, 25 teeth | 1 All |
| 3-7-2 | Pinion, on layshaft, 18 teeth | I G3L, G3LS, |
| | | G80, G80\$, |
| | | G3LCS, G80CS |
| 3-7-5 | Pinion on, layshaft, 16 teeth | I G3LC, G80C |
| 3-13-2 | Gear, first, layshaft, with bush, 29 teeth | T All |
| i- 11-2 | Gear, second, layshaft, with bush, 24 teeth | I G3L, G3LS. |
| | | G3LCS, G80, |
| | | G80S, G80CS |
| 5-11-4 | Gear, second, layshaft, 26 teeth | I G3LC, G80C |
| i-9-1 | Gear, third, layshaft, 21 teeth | I All |
| 9-8-13 | Bush, for mainshaft driving gear | 2 All ~ |
| 9-8-15 | Bush, for mainshaft third gear | I All |
| 9-8-15 | Bush, for layshaft second gear | I All |
| 9-8-14 | Bush, for layshaft first gear | I All |
| 38-11-1 | Bearing, ball, 137 in. by 62 mm. by 16 mm. for driving gear on mainshaft | 1 A11 |
| | | I All |
| | Oil-seal, for driving gear bearing | I All |
| 9-12-1 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal | I All |
| 19-12-1 11-12-2 | Oil-seal, for driving gear bearing | I All |
| 19-12-1 11-12-2 | Oil-seal, for driving gear bearing | I All I All |
| 19-12-1 11-12-2 18-7-1 | Oil-seal, for driving gear bearing | All All ~ |
| 19-12-1 11-12-2 18-7-1 | Oil-seal, for driving gear bearing | A A A |
| 19-12-1 11-12-2 18-7-1 11-11-1 20-7-4 | Oil-seal, for driving gear bearing | A A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 10-7-4 15-1-2 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal | A A A A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 10-7-4 15-1-2 2-8-8 | Oil-seal, for driving gear bearing | A A A A A A A |
| 9-12-1 1-12-2 8-7-1 11-11-1 10-7-4 15-1-2 2-8-8 10-7-3 | Oil-seal, for driving gear bearing | A A A A A A |
| 9-12-1 1-12-2 8-7-1 11-11-1 10-7-4 15-1-2 2-8-8 10-7-3 15-1-2 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end) Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long) Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush | A A A A A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 2-8-8 0-7-3 5-1-2 0-7-2 | Oil-seal, for driving gear bearing | A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 2-8-8 0-7-3 5-1-2 0-7-2 0-7-2 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end) Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long) Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush | A A A A A A A A A A A A A A A A A A A A A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 0-7-3 5-1-2 0-7-2 0-7-2 0-7-3 | Oil-seal, for driving gear bearing | A A A A A A A A A A A A A A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 2-8-8 0-7-3 5-1-2 0-7-2 0-8-14 7-7-5 0-4-1 | Oil-seal, for driving gear bearing | A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 2-8-8 0-7-3 5-1-2 0-7-2 0-7-4 1-7-7-5 1-11-1 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing. Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end). Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long). Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in cover, for kick-starter spindle Bush, in kick-starter case, for cam spindle Bush, in kick-starter case, for cam spindle Bush, in kick-starter case cover | A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 0-7-3 5-1-2 0-7-2 0-8-14 7-7-5 0-4-1 0-4-2 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end) Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long) Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in cover, for kick-starter spindle Bush, in cover bush, for kick-starter spindle Bush, kick-starter case, for cam spindle Bush, kick-starter case cover Oil-seal, in cover bush, for cam spindle Bush, kick-starter case, for control quadrant spindle | A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 2-8-8 0-7-3 5-1-2 0-7-2 0-7-2 0-8-14 7-7-5 0-4-1 1-11-1 1-1 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end) Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long) Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in cover, for kick-starter spindle Bush, in cover bush, for kick-starter spindle Bush, kick-starter case, for cam spindle Bush, kick-starter case cover Oil-seal, in cover bush, for cam spindle Bush, kick-starter case, for control quadrant spindle | A A A |
| 9-12-1 1-12-2 8-7-1 1-11-1 0-7-4 5-1-2 2-8-8 0-7-3 5-1-2 0-7-2 0-8-14 7-7-5 0-4-1 0-4-2 7-4-2 7-4-2 | Oil-seal, for driving gear bearing | A A A |
| 9-12-1 1-12-2 8-7-1 10-7-4 10-7-4 10-7-3 10-7-3 10-7-2 10-7-2 10-8-14 17-7-5 10-4-1 10-4-2 10-4-2 10-3-1 12-5-2 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end) Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long) Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in cover, for kick-starter spindle Bush, in cover bush, for kick-starter spindle Bush, in kick-starter case, for cam spindle Bush, kick-starter case cover Oil-seal, in cover bush, for cam spindle Bush, in kick-starter case, for control quadrant spindle Cap, in kick-starter case, covering bore for control | A A A A |
| 89-12-1 31-12-2 38-7-1 31-11-1 20-7-4 35-1-2 12-8-8 20-7-3 35-1-2 20-7-2 20-8-14 27-7-5 20-4-1 20-4-2 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end) Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long) Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in cover, for kick-starter spindle Bush, in cover bush, for kick-starter spindle Bush, kick-starter case, for cam spindle Bush, kick-starter case cover Oil-seal, in cover bush, for cam spindle Bush, kick-starter case, for control quadrant spindle | A A |
| 9- 2- | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing. Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end). Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long). Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft. Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in kick-starter case, for kick-starter spindle Bush, in kick-starter case, for cam spindle Bush, in kick-starter case, for cam spindle Bush, in kick-starter case cover Oil-seal, in cover bush, for cam spindle Bush, in kick-starter case, for control quadrant spindle Cap, in kick-starter case, covering bore for control quadrant spindle | A A A |
| 19-12-1 11-12-2 18-7-1 11-11-1 10-7-4 15-1-2 12-8-8 10-7-3 13-1-2 10-7-2 10-7-2 10-8-14 10-7-5 10-4-1 10-4-2 10-4-2 112-5-2 10-8-9 10-8-9 10-7-4 10-8-9 10-8 | Oil-seal, for driving gear bearing Housing, for driving gear bearing oil-seal Ring, split, retaining driving gear bearing. Bearing, ball, 17 mm. by 40 mm. by 12 mm. for mainshaft (kick-starter end). Ring, split, retaining mainshaft ball bearing Bush, for layshaft (clutch end) ('968 in. long). Pin, dowel, locating layshaft bush Cap, in shell, covering bore, for layshaft Bush, for layshaft (kick-starter end) ('779 in. long) Pin, dowel, locating layshaft bush Bush, in kick-starter case, for kick-starter spindle Bush, in cover, for kick-starter spindle Oil-seal, in cover bush, for kick-starter spindle Bush, in kick-starter case, for cam spindle Bush, in kick-starter case, for control quadrant spindle Cap, in kick-starter case, for control quadrant spindle Bush, in cover, for control quadrant spindle Oil-seal, in cover bush, for control quadrant spindle Oil-seal, in cover bush, for control quadrant spindle Oil-seal, in cover bush, for control quadrant spindle | A A A A |
| 9- 2- 1- 2-2 8-7- 8-7- 8-7- 1- 1- 10-7-4 10-7-4 10-7-4 10-7-3 10-7-3 10-7-2 10-7-2 10-7-2 10-7-2 10-7-2 10-4-1 10-4-1 10-4-2 10-5-2 . | Oil-seal, for driving gear bearing | A A A |
| 39-12-1 11-12-2 18-7-1 18-7-1 19-11-1 10-7-4 12-8-8 12-8-8 12-8-8 12-8-8 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 12-8-1 13-1 | Oil-seal, for driving gear bearing | A A A |
| 39-12-1 11-12-2 18-7-1 18-7-1 20-7-4 25-1-2 12-8-8 20-7-2 20-7-2 20-7-2 20-7-2 20-8-14 27-7-5 20-4-1 20-4-2 20-4-2 20-4-3 12-5-2 20-8-9 27-7-4 GEARBC G-31-1 12-11-3 | Oil-seal, for driving gear bearing | A A A |
| 39-12-1 11-12-2 18-7-1 18-7-1 19-11-1 20-7-4 215-1-2 12-8-8 20-7-3 35-1-2 20-7-2 20-8-1 20-4-1 20-4-1 20-4-1 12-5-2 20-8-9 20-8-9 20-8-9 20-8-9 20-8-9 20-8-9 20-8-9 21-11-1 | Oil-seal, for driving gear bearing | A A A |
| 19-12-1 11-12-2 18-7-1 18-7-1 18-7-1 18-7-1 18-7-1 18-7-1 18-7-1 18-7-2 18-7-2 18-7-2 18-7-2 18-7-7-5 18-7-7-5 18-7-7-7-5 18-7-7-7-7-7-7-7-7-7-7-7-7-7-7-7-7-7-7-7 | Oil-seal, for driving gear bearing | A A A |

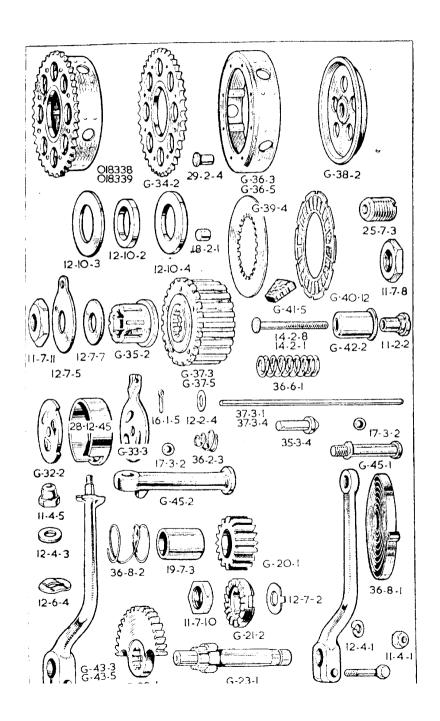

GEAR OPERATING PARTS

| G-29-4 | Spindle and fork, gear selection, left | 1 | All | |
|--------|---|-----|-----|------|
| G-29-6 | Spindle and fork, gear selection, right | 1 | AII | |
| 35-3-1 | Peg, for selector spindles | 2 | Alf | |
| 16-1-4 | Pin, cotter, for selector spindle pegs | 2 | Αll | |
| 018337 | Cam assembly | - 1 | All | |

The cam assembly comprises:

- 1-G-27-2 Spindle.
- I-G-28-1 Cam.
- 3---35-2-4 Pegs.
- 1-35-2-2 Locating pegs.
- 2--35-1-4 Cam stop pegs.

(Above parts not sold as separate spares)

| G-42-3 | | Plunger, locating cam assembly | 1 | All | | ` |
|---------|---|---|-----|-----|---------|------|
| 36-2-1 | | Spring, for cam assembly locating plunger | - 1 | Ali | | |
| G-25-2 | | Quadrant, for control spindle | i | All | | |
| 35-2-6 | | Peg, quadrant drive | 1 | All | | |
| G-24-2 | | Spindle, for gear control quadrant | i | All | | |
| 36-11-1 | - | Spring, primary, for control quadrant | - 1 | All | | |
| 36-8-3 | | Spring, secondary, for control quadrant | 1 | Αll | | |
| G-47-1 | | Indicator | - 1 | All | | |
| 36-4-1 | | Spring under indicator | - 1 | All | | |
| 11-2-3 | | Nut, retaining indicator | 1 | ΑĦ | | |
| G-44-7 | | Lever, foot, for gear control | 1 | Ail | Excep | t CS |
| G-48-1 | | Pad, rubber, for gear foot lever | -1 | HA | | |
| 35-1-6 | | Pin, fixing gear foot lever rubber pad | 1 | AH | | |
| 10-2-2 | | Bolt, clamping gear foot lever | 1 | All | | |
| 12-2-1 | | Washer, spring, for gear foot lever bolt | t | All | | |
| 11-2-1 | | Nut, for gear foot lever bolt | i | Αli | | |
| G-44-8 | | Lever, foot, gear control | 1 | G3L | .CS, G8 | OCS |
| • | | zorer, root, gear control | | | C | |

CLUTCH

| G-36-3 | Case, for five plate clutch | 1 | All | | |
|---------|---|---|---------|--------|--|
| 29-2-4 | | 8 | All | | |
| G-34-2 | Chainwheel, 40 teeth by 1/2 in. by -305 in | 1 | All | | |
| 018339 | Case and chainwheel, assembled | i | AIL | | |
| G-35-2 | Sleeve, for mainshaft. | i | All | | |
| 12-10-2 | Race, roller, for clutch bearing chainwheel | i | All | | |
| 18-2-1 | Rollers, for chainwheel bearing price per set of 2- | 4 | Ail | | |
| 12-10-3 | Washer, thin, chainwheel bearing | ì | All | | |
| 12-10-4 | Washer, thick, chainwheel bearing | i | AII | | |
| G-37-5 | Centre, for four plate clutch | i | G3L. C | | |
| G-37-3 | Centre, for five plate clutch | i | All ex- | | |
| 3.37 3 | contro, for five place content | • | G3LS | | |
| 12-7-7 | Washer, plain, for centre retaining nut | 1 | All | | |
| 12-7-5 | Washer, lock, for centre retaining nut | i | All | | |
| 11-7-11 | Nut retaining clutch centre | i | Ali | | |
| G-39-4 | Plate, clutch, plain, steel | 6 | All | | |
| G-40-12 | Plate, clutch, friction, with inserts. | 4 | G3L. C | | |
| G-40-12 | | Ś | G3LC | | |
| G 10-12 | race, crasen, mector, men made comment | - | | G80C | |
| | | | G80C | | |
| | | | J. 0C. | ., JJE | |

CLUTCH-continued. G-41-5 ... Inserts, fabric, for friction plate......price per dozen 96 G3L, G3LS ... G-41-5 ... Inserts, fabric, for friction plate......price per dozen 120 G3LC, G80. G80S, G80C, G80CS, G3LCS 25-7-3 ... Cup thrust, for spring pressure plate..... I All 11-7-8 ... Nut, lock, for pressure plate thrust cup...... I All 14-2-1 ... Stud, for clutch spring, 13 in, long (four plate clutch)... 5 G3L, G3LS ... Stud, for clutch spring, 2 ins. long (five plate clutch)..... 5 G3LC, G80, G80S, G80C, G80CS, G3LCS ... 11-2-2 ... Nut, adjusting, for clutch spring...... 5 All ... CLUTCH OPERATING PARTS 37-3-1 ... Rod, thrust, 10 1/4 ins, long (five plate clutch)...... 1 G3LC, G80, G80S, G80C. G80CS, G3LCS 17-3-2 ... Ball, - in., steel, for clutch thrust rod...... I All G-32-2 ... Cam-plate, fixed, actuating clutch..... ! All G-33-3 ... Cam-plate, moving, actuating clutch..... | All 35-3-4 ... Dowel, thrust (passes through both cam-plates)...... 1 · All 12-2-4 Washer, plain, for cam-plate dowel I All 36-2-3 Spring, for cam-plate dowel I All Pin, split, for cam-plate dowel..... I All 16-1-5 17-3-2 KICK-STARTER G-21-2 ... Ratchet, driving, kick-starter..... I All G-20-1 ... Pinion, ratchet, kick-starter..... I All 19-7-3 ... Bush, kick-starter ratchet pinion...... I All 36-8-2 ... Spring, kick-starter ratchet pinion..... I All 11-7-10 ... Nut, retaining ratchet driver to mainshaft...... I All 12-7-22 ... Washer, lock, for retaining nut...... I All G-23-1 ... Spindle, for kick-starter quadrant...... 1 All G-22-1 ... Quadrant, for kick-starter...... 1 All 018340 ... Kick-starter quadrant and spindle assembled....... I All 36-8-1 ... Spring, return, for kick-starter foot lever...... | All G-43-2 ... Lever, foot, kick-starter, bare..... 1 G3L, G3LS, G80, G80\$ G-43-3 ... Lever, foot, kick-starter, bare...... I G3LC, G80C ... G-43-5 ... Lever, foot, kick-starter, bare..... | G3LCS, G80CS G-45-1 ... Pin, pedal, rigid, for kick-starter lever...... 1 G3L, G3LS, G80, G80S G3LCS, G80CS 11-4-5 ... Nut, retaining folding pedal pin..... G3LC, G80C. G3LCS, G80CS 12-4-3 ... Washer, plain, for pin retaining nut...... G3LC, G80C, G3LCS, G80CS 1 G3LC, G80C. Washer, spring, for pin retaining nut..... 12-6-4 ... G3LCS, G80CS I All Bolt, clamping, kick-starter foot lever to spindle....... ... Washer, spring, for foot lever clamping bolt...... I All ... Nut, for foot lever clamping bolt...... I All

FRAME SECTION.

| 021704 | | Frame, front portion only, bare | į | G3LS, G80S |
|--------|---------|--|----|-----------------|
| 021703 | | m | | G3L, G80 |
| 021013 | | | 1 | G3LC, G80C |
| 022033 | ••• | Frame, front portion only, bare | 1 | G3LCS,G80CS |
| 000806 | | | 2 | All except |
| 000000 | | race, being to memoral and a second | | G3LC, G80C |
| 012594 | | Race, ball, for frame head, top | ŧ | G3LC, G80C |
| 012595 | ••• | | 1 | G3LC, G80C |
| 000072 | | m to a second for the second part of \$6. | 56 | All |
| | • • • • | Nipple, grease, for frame head lug | i | All |
| 000051 | | C. I C. as the Asternand de Al ing by Lin by 26 | i | G3L, G3LC, |
| 021767 | | Stud, for seat lug (below saddle), 41 ins. by 1 in. by 26 | • | G80, G80C |
| | | many and the second of the built in built. | ı | G3LS, G3LCS, |
| 021768 | ••• | Stud, for seat lug (below saddle), $4\frac{7}{16}$ ins. by $\frac{1}{2}$ in. by 26 | • | GBOS, GBOCS |
| | | | - | |
| 000008 | | Washer, plain, for seat lug stud | 2 | All Touring and |
| | | | _ | Scrambles |
| 100000 | | Nut for seat lug stud | 2 | All |
| | | | | |

021084 ... Stud, uniting front and rear frame, 6½ ins. by ½ in. by 26 1 G3L, G3LS,


021917 ... Stud, uniting front and rear frame, 62 ins. by 2 in, by 26 1 G3LC, G3LCS

G80C, G80CS

REAR FRAME.

FRONT FRAME.

| 02 | 1049 | | Frame, rear portion only | 1 | G3L, G80 |
|----|-------|-------|---|-----|--------------|
| 02 | 1050 | | Frame, rear portion only | 1 | G3LC, G80C |
| 01 | 7031 | | Bolt, adjusting rear chain, 211 ins. by 1 in. by 26 | 2 | GIL, GILC |
| | | ••• | | | G80, G80C |
| 00 | 0005 | | Nut, lock, for rear chain adjusting bolt | 2 | ditto |
| | 1665 | | Rail, frame, right side | ı | G3LS, G3LCS, |
| | | | , | | G80S, G80CS |
| 02 | 1664 | | Rail, frame, left side | t | ditto |
| | 1705 | | Loop, rear frame | 4 | G3LS, G80S |
| | 1769 | | Loop, rear frame | 1 | G3LCS, G80CS |
| | 1715 | | Stud, for rear loop at bottom, 10% ins. by 76 in. by 26 | | |
| • | | ••• | (Also passes through rear fork bridge and both frame | | |
| | | | rails) | - 1 | G3LS, G3LCS. |
| | | | 1010) | | G805, G80CS |
| 00 | 0410 | | Bolt, frame rail end | 2 | G3LS, G3LCS, |
| • | 0710 | ••• | OOK, ITEM CITY CITY | | G80S, G80CS |
| 00 | 0003 | | Nut, frame rail end bolt | 2 | ditto |
| | 0010 | | Washer, frame rail end bolt | 2 | ditto |
| | 00002 | | Nut, for rear loop bottom stud | 1 | ditto |
| | 0009 | | Washer, plain, for rear loop bottom stud | 2 | ditto |
| | 8617 | ••• | Tube, supporting rear of rear mudguard, right side | ī | G3LS, G80S |
| | 8616 | | Tube, supporting rear of rear mudguard, left side | i | ditto |
| | 0343 | ••• | Bolt, fixing mudguard to support tube | • | |
| O. | W3+3 | ••• | 13 in, by 1 in. by 26 | 2 | ditto |
| ~ | 00012 | | Washer, plain, for mudguard support tube bolt | Ž | ditto |
| | | • • • | Washer, spring, for mudguard support tube bolt | 2 | ditto |
| | 20191 | • • • | Nut, for mudguard support tube bolt | 2 | ditto |
| | 00005 | •-• | Bridge, for rear fork (includes bushes and studs for | _ | 4.110 |
| U | 5329 | ••• | Bridge, for fear fork (includes busines and study for | 1 | G3LS, G3LCS |
| | | | centre stand spring clip) | • | G80S, G80CS |
| | | | B. L. C C L. b d | 2 | ditto |
| - | 14672 | ••• | Bush, for rear fork bridge | 2 | ditto |
| O | 20250 | ••• | Stud, for rear fork bridge, 33 in. by 2.BA | - | Unito |
| | | | | | |
| | | | | | |

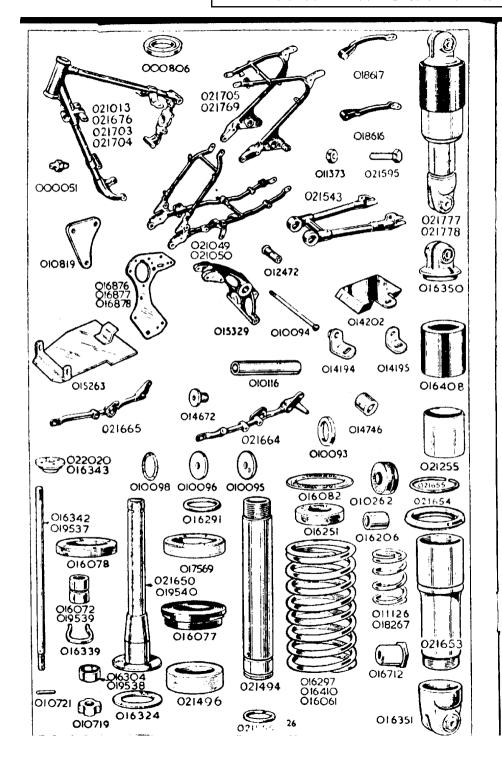

ENGINE PLATES AND BOLTS.


| 010819 010823 | | Plate, engine, front | 2 | Aii | | |
|------------------|-------|--|-----|----------------|--------|----------|
| 000010 | | 26 | 1 | All | | |
| 000003 | • • • | Washer, plain, for engine front plate stud | 2 | All | ••• | ••• |
| 016876 | | Nut, for stud fixing engine front plate | 2 | All | | |
| 0100/6 | • • • | Plate, engine, rear | 2 | | G3LS, | |
| 016877 | | Plate, engine, rear | 2 | G80, | C805 | |
| 016878 | | Plate, engine, rear | î | | ., G80 | |
| 000303 | | Stud, for seat tube bottom lug, 42 lns. by 2 in. by 26 | î | | G3LC. | |
| | ••• | True, for sear tode obttom lug, 42 ms. by 2 m. by 26 | • | | G80C | |
| 013826 | | Spacer, Ha in. long, for seat tube bottom stud, left | 1 | ditto | - | • • • • |
| 013827 | | Spacer, in thick, for seat tube bottom stud, right | i | ditto | | |
| 000003 | | Nut, for seat tube bottom lug stud | ž | ditto | | |
| 000303 | | Stud, passing through top of engine rear plates, lower | - | 00 | | |
| | | end of front frame seat tube and rear fork bridge, | | | | |
| | | 4½ ins. by ½ in. by 26 | | GHS | G3LC | ٠. |
| | | | • | | G80C | |
| 000003 | | Nut, for 000303 stud | 2 | ditto | | . |
| 000278 | | Stud, passing through rear fork bridge, and back ends | • | 41.10 | | |
| | | . of engine rear plates, 41 ins. by 1 in. by 26. (The | | | | |
| | | front chain adjusting eye-bolt block screws on the | | | | |
| | | right-hand end of this stud.) | | ditto | | |
| 110000 | | Washer, plain, for 000278 stud | - 1 | ditto | | |
| 000004 | | Nutator 000278 stud | - 1 | ditto | | |
| 015263 | | Shield, for crankcase | i | | . G3L0 | ٠. |
| | ••• | | • | | . G80C | |
| 000277 | | Stud, for engine plate extension, 4% ins. by % in. by 26 | 1 | ditto | , 0000 | ٠ |
| 017198 | | Spacer, 37 ins. long, for engine plate extension | 2 | | | |
| 000004 | | Nut, for 000277 studs | 3 | ditto ditto | | |
| 000277 | | Stud, engine rear plate crosshead, 4 ins. by & in. | 3 | aitto | | |
| | ••• | by 26 (only used if no dynamo fitted) | | 4:44 | | |
| 014202 | | Cover seen engine place | ! | ditto | | |
| 014194 | | Cover, rear engine plate | ! | All | • | ••• |
| 014195 | | Bracket, long, for horn | ! | All | | • • • |
| 000413 | ••• | Bracket, short, for horn | 1 | ΑH | • • • | ••• |
| 000413 | ••• | Bolt, fixing cover plate and brackets, in. by in. | | | | |
| 000010 | | by 26 | ! | All | ••• | • • • |
| ****** | ••• | Washer, plain, for cover plate bolt | ı | All | ••• | • • • |
| | | | | | | |

REAR FORK.

| 021543 | | Fork, rear | ı | G3LS, G3LCS, |
|--------------------------------------|-----|---|-------|-------------------------------|
| 021595 011373 014746 | ••• | Adjuster, rear chain Nut, lock, for chain adjuster Sleeve, assembly (bushed) | 2 2 2 | G80S, G80CS ditto ditto ditto |
| 010116 010095 010096 010093 | | Cap, for rear fork bearing, right side | ! | ditto ditto ditto |
| 010098 010094 012472 | | Washer, felt, for rear fork bearing. Gasket, for rear fork bearing caps. Spoke, for rear fork bearing (central tie bolt). Nipple, for rear fork bearing spoke. | 2 | ditto ditto ditto |
| 000485 000203 | ••• | Screw, plug, for oil, in end cap, \(\frac{1}{2}\) in. by \(\frac{1}{2}\) in. by \(\frac{1}{2}\) in. by 26 | - | ditto ditto ditto |

| TELEDRA | AULIC REAR LEG. | | |
|------------------|---|---|-----------------------|
| 021777 | Leg. TELEDRAULIC, rear complete assembly (no fixing bolts, washers and nuts) | 2 | G3LS, G805 |
| 021 778 | Leg. TELEDRAULIC, rear, complete assembly (no fixing bolts, washers and nuts) | 2 | G3LCS, G80CS |
| 016350 | Pivot, top, assembled (this assembly includes the next | 2 | G3LS, G3LCS, |
| | three items) | | G80S, G80CS |
| 016059 | Pivot, top, bare | 2 | ditto |
| 010262 | Bush, rubber, for top pivot | 4 | ditto ditto |
| 016206 | Spacer, for top pivot rubber bush | 7 | aitto |
| 016351 | Pivot, bottom, assembled (this assembly includes the | 2 | ditto |
| | next five items) | 2 | ditto |
| 016060 | Pivot, bottom bare | 4 | ditto |
| 010262 | Bush, rubber, for bottom pivot | 2 | ditto |
| 016206 | Spacer, for bottom pivot rubber busil | 2 | ditto |
| 016712 | Sleeve nut, for bottom pivot bolt | 2 | ditto |
| 016873 | Tube, inner (fits in top pivot recess) | 2 | ditto |
| 021494 016291 | Ring, sealing inner tube at top | 2 | ditto |
| ** * ** * | Bush, lower end of inner tube | 2 | ditto |
| 021555 | Circlip, retaining inner tube bush | 4 | ditto |
| | Tube, outer (screws into bottom pivot) | 2 | ditto |
| 01/33/ | Washer, sealing lower end of outer tube | 4 | ditto |
| 016324 | Bush, for outer tube | 2 | ditto |
| 017569 | Oil-seal, between inner and outer tubes | 2 | ditto |
| 016078 | Collar, retaining oil-seal | 2 | ditto |
| 021650 | Tube, for damper | 2 | G3LS, G80S |
| 019540 | Tube, for damper | 2 | G3LCS, G80CS |
| 016072 | Sleeve, plunger, for damper rod | 2 | G3LS, G805 |
| 019539 | Sleeve, plunger, for damper rod | 2 | G3LCS, G80CS |
| 016339 | Clip, locating plunger sleeve | 2 | All |
| 016342 | Rod, for damper | 2 | G3LS, G80S |
| 019537 | Rod, for damper | 2 | G3LCS, G80 CS |
| 016343 | Collar, for top end of damper rod | 2 | G3LS, G80S |
| 022020 | Collar, for top end of damper rod | 2 | G3LCS, G80CS |
| 000074 | Nut, locking collar top-end of damper rod | 2 | All |
| 016304 | Valve, for damper Valve, for damper | 2 | G3L S , G80S |
| 019538 | Valve, for damper | 2 | G3LCS, G80CS |
| 010721 | Pin, stop, for damper valve | 2 | All |
| 010719 | Seat, for damper valve | 2 | All |
| 000005 | Nut, retaining damper seat to damper rod | 2 | All |
| 019555 | Buffer spring distance piece | 2 | G3LCS, G80CS |
| 019626 | Damper valve assembled (Comprising following 6 items) | 2 | ditto |
| 019531 | Damper valve body | 2 | ditto ditto |
| 000072 | Damper valve ball | 2 | ditto |
| 019535 | Damper valve poins | 2 | ditto |
| 021280 019534 | Damper valve spring Damper valve plug | 2 | ditto |
| 019534 | Damper valve relief plunger | 2 | ditto |
| | | 2 | G3LS, G80S |
| 011126 | Spring, buffer | 2 | G3LCS, G80CS |
| 018267 016297 | Spring, buffer Spring, main (solo) | 2 | G3LS, G80S |
| | Spring, main (solo) | 2 | G3LS, G805 |
| 016061 | Spring, main | 2 | G3LCS, G80CS |
| 016082 | Washer, leather, at both ends of main spring | 4 | G3LS, G80S. |
| | · · · · · · · · · · · · · · · · · · · | | G3LCS, G80CS |
| 016408 | Tube, outer, covering top end of main spring | 2 | ditto |
| 021255 | Tube, outer, covering bottom end of main spring | 2 | ditto |
| 021654 | Collar, retaining bottom outer cover tube | 2 | ditto |
| 021655 | Circlip, retaining collar | 2 | ditto |
| 016251 | Buffer, for TELEDRAULIC leg | 2 | ditto |
| 018648 | Bolt, fixing top pivot, 3½ ins. by 2 in. by 26 | 2 | G3LS, G80S |
| 014521 | Bolt, fixing top pivot (replaces 018648 when carrier is | ~ | disso |
| 011272 | fitted) | 2 | ditto G3LCS, G80CS |
| 011273 | Bolt, fixing top pivot, $2\frac{1}{2}$ ins, by $\frac{3}{4}$ in, by 26 | 4 | G3LS, G80S, |
| 000010 | Washer, plain, for top pivot bolt | 4 | G3LCS, G80CS |
| | | | 33203,00003 |

| | AULIC REAR LEG continued. | | or feet company and a company of the |
|--|--|---|--|
| 016712 | Sleeve nut, for top pivot bolt | 2 | G3LS, G80S |
| 000003 | Nut, for top pivot bolt | 2 | G3LCS, G80CS |
| 01 6359 | Bolt, fixing bottom pivot, $2\frac{1}{32}$ ins. by $\frac{3}{8}$ in, by $\frac{26}{12}$ | 2 | All except G3L, G80 |
| 000010 | Washer, plain, for bottom pivot bolt | 2 | ditto |
| 000010 | vvasiler, plant, for bottom prvot bott | - | |
| | | | |
| FORK A | SSEMBLIES. | | |
| | The following fork assemblies are complete and include | ba. | Il races for the fork crown |
| | and top head lug (but not the two frame ball races) | 1 | G3L, G3LS |
| 021967 | Fork, assembly (TELEDRAULIC Front Fork, Solo) | • | G80, G805 |
| 021968 | Fork, assembly (TELEDRAULIC Front Fork, Sidecar) | ł | ditto · |
| 021969 | Fork assembly (TELEDRAULIC Front Fork, Solo) | 1 | G3LC, G80C |
| 021970 | Fork assembly (TELEDRAULIC Front Fork, Solo) | 1 | G3LCS, G80CS |
| | For ease of servicing, the inner tube unit and damper separate assemblies. This enables a complete assemb time. The Units are listed below. | uni ly to | t are listed and supplied as to be exchanged in minimum |
| 021971 | Cont Fork Inner tube assembly, Solo | 2 | G3L, G3LS, |
| | <i>U</i> | | G80, G802 |
| 021972 | Front Fork inner tube assembly, Sidecar | 2 | G80, G80S |
| 021973 | Front Fork inner tube assembly, Solo | 2 | G3LC, G80C |
| | The state of the s | L | |
| | The above assemblies comprise:—Inner tubes with rubl top bolts with washers and sealing rings, slider extens and washers. | ion: | s with oil seals, fork springs |
| 021974 | Front fork damper assembly | 2 | G3L, G3LS, |
| | • | | G3LC, G80, |
| | | , | G80S, G80C |
| 021975 | Front fork damper assembly | 2 | G3LC3, G80C3 |
| | The above assemblies comprise:— Rod and two nuts, da | | er tube with valve, seat and |
| | pin, sleeve and clip and bottom fixing bolt with wash | с. | |
| FRONT | FORK | | |
| ***** | · Onn. | | |
| 021927 | Crown assembly comprising crown, stem and circlip | | |
| | Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | 1 | G3L, G3LS. |
| | (these parts not sold separately) | 1 | G3L, G3LS, G80, G80S |
| 021928 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip | | G80, G80S |
| 021928 | (these parts not sold separately) | | G80, G80S G3LC, G3LCS |
| | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | | G3LC, G3LCS G80C, G80CS |
| 000805 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | ı | G80, G80S G3LC, G3LCS G80C, G80CS All All except |
| 000805 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | ı | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, |
| 000805 021 740 | (these parts not sold separately) | 1 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS |
| 000805 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | ı | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS |
| 000805 021 740 | (these parts not sold separately) | 1 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, |
| 000805 021740 021749 021841 | (these parts not sold separately) | 2 1 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S |
| 000805 021740 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) Race, ball, for fork crown | ! ! ! | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80, G80S |
| 000805 021740 021749 021841 012620 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) Race, ball, for fork crown | ! ! ! | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80, G80S All All All |
| 000805 021740 021749 021841 012620 000051 021741 021642 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, adjusting, for fork crown stem. Nut, lock (domed), for fork crown stem. | 1 1 2 1 1 1 1 1 1 1 1 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS All All All |
| 000805 021740 021749 012620 000051 021741 021642 021652 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | 1 2 1 1 1 1 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS All All All All All |
| 000805 021749 021841 012620 021741 021642 021642 021652 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) Race, ball, for fork crown | 1 1 2 1 1 1 2 6 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G80, G80S G3LCS, G80C, G80CS All All All All All All All |
| 000805 021749 021841 012620 020051 021741 021642 021652 021495 | (these parts not sold separately) Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) Race, ball, for fork crown | 1 1 2 1 1 1 2 6 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80, G80S All All All All All All All |
| 000805 021749 021841 012620 020051 021741 021642 021652 021911 021651 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, lock (domed), for fork crown stem. Tube, fork, inner | 1 1 2 1 1 1 2 6 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80G, G80S All All All All All All All All All |
| 000805 021749 021841 012620 020051 021741 021642 021652 021495 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately) | 1 1 1 1 1 2 6 2 2 2 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80, G80S All All All All All All All All All All All All All All All All All All All |
| 000805 021749 021841 012620 020051 021642 021642 021641 021651 021495 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, adjusting, for fork crown stem. Nut, lock (domed), for fork crown stem. Tube, fork, inner Buffer, rubber, for fork inner tube. Bush, bottom, for fork inner tube. Circlip, for fork inner tube bush Bolt, top, for fork inner tube top bolt. Ring, sealing, for fork inner tube top bolt. | 1 1 1 1 1 2 6 2 2 2 2 2 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS All |
| 000805 021740 021749 012620 000051 021642 021652 021911 021651 021830 021833 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, adjusting, for fork crown stem. Tube, fork, inner Buffer, rubber, for fork inner tube. Bush, bottom, for fork inner tube. Circlip, for fork inner tube bush. Bolt, top, for fork inner tube top bolt. Ring, sealing, for fork inner tube top bolt. Washer, plain, for fork inner tube top bolt. | 1 1 1 1 1 2 6 2 2 2 2 2 2 2 2 2 2 2 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80CS G3L, G3LS, G80, G80CS All |
| 000805 021749 021841 012620 020051 021741 021642 021652 021651 021495 021651 021830 021833 041355 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, adjusting, for fork crown stem. Nut, lock (domed), for fork crown stem. Tube, fork, inner Buffer, rubber, for fork inner tube. Bush, bottom, for fork inner tube. Circlip, for fork inner tube bush Bolt, top, for fork inner tube top bolt. Ring, sealing, for fork inner tube top bolt. | 1 1 1 1 1 2 6 2 2 2 2 2 2 2 2 2 2 2 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80, G80S All |
| 000805 021749 021841 012620 000051 021741 021642 021652 021652 021495 021495 021830 021833 021831 021399 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, adjusting, for fork crown stem. Nut, lock (domed), for fork crown stem. Tube, fork, inner. Buffer, rubber, for fork inner tube. Bush, bottom, for fork inner tube. Circlip, for fork inner tube bush. Bolt, top, for fork inner tube top bolt. Ring, sealing, for fork inner tube top bolt. Slider, fork, with cap, studs and nuts, left and right. | 1 1 2 1 1 1 1 2 6 2 2 2 2 2 2 2 2 2 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80CS G3L, G3LS, G80, G80CS All |
| 000805 021740 021749 012620 021741 011642 021652 021651 021830 021833 021833 | (these parts not sold separately). Crown, assembly, comprising crown, stem and circlip (these parts not sold separately). Race, ball, for fork crown. Screw, pinch, for fork crown Lug, for handlebar and steering head. Lug, for handle bar and steering head Race, ball, for handlebar lug. Nipple, grease, for handlebar lug. Nut, adjusting, for fork crown stem. Nut, lock (domed), for fork crown stem. Tube, fork, inner. Buffer, rubber, for fork inner tube. Bush, bottom, for fork inner tube. Circlip, for fork inner tube bush Bolt, top, for fork inner tube bush Bolt, top, for fork inner tube. Cap, fork, inner tube top bolt. Ring, sealing, for fork inner tube top bolt. Washer, plain, for fork inner tube top bolt. Slider, fork, with cap, studs and nuts, left and right. | 1 1 2 1 1 1 1 2 6 2 2 2 2 2 2 2 2 2 2 2 | G80, G80S G3LC, G3LCS G80C, G80CS All All except G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80, G80S All |

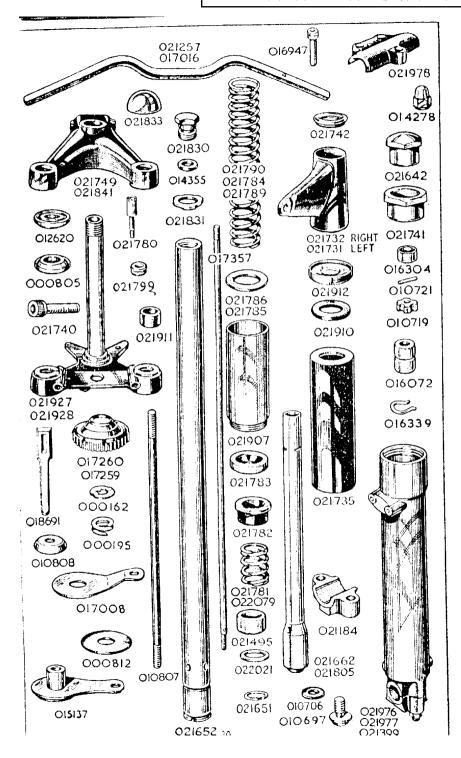

| | FRON | T I | FORK—continued. | | | | |
|---|----------------|-------|--|----|-------|--------------------|---------|
| ` | 021977 | | Slider, fork, with cap, studs and nuts, left | 1 | | G3LS, G80S | |
| | 021184 | | Cap, for fork slider | 2 | All | ••• | ••• |
| | •••• | | and 22 | 4 | All | | |
| | .021780 | ••• | Fork stop (acts also as pinch bolt) | 2 | | C, G3L0 C, G800 | |
| | 000003 | | Fork stop nut | 2 | ditto | | |
| | 000193 | | Fork stop nut spring washer | 2 | ditto | | |
| | 000011 | | Washer, plain, for fork slider cap stud | 4 | All | | |
| | 0000011 | ••• | Nut, for fork slider cap stud | 4 | All | | |
| | | ••• | Extension, for fork slider | 2 | All | ••• | |
| | 021907 | ••• | Bush, plastic, for fork inner tube | 2 | Aii | | ••• |
| ` | 021782 | • • • | Bush, plastic, for fork inner tube | 2 | All | • • • | ••• |
| | 021783 | •• | Oil-seal, for fork inner tube (rubber) | | | C31.5 | ••• |
| | 021784 | ••• | Spring, main, for front fork, Solo | 2 | G80. | G3LS, G80S | |
| | 021790 | ••• | Spring, main, for front fork, Solo | 2 | G800 | C, G3L0 C, G800 | |
| | 021789 | | Spring, main, for front fork, Sidecar | 2 | | G80S | • • • • |
| | 022079 | | Spring, buffer, front fork | 2 | Ali | | |
| | 022021 | | Collar, for buffer spring. | 2 | All | | |
| | 021786 | | Washer, leather, fork spring seating, bottom, | 2 | All | • · · • | ••• |
| | 021785 | | Washer, fork spring seating, top | 2 | ΑII | | |
| | 021732 | | Tube, fork cover, top, right, with lamp lug | 1 | All | | |
| | 021731 | | Tube, fork cover, top, left, with lamp lug | 1 | All | | |
| | 021742 | | Spigot, for top cover tube | 2 | All | | |
| | 021910 | | Seat (rubber), for cover tube | 2 | All | | |
| | 021912 | | Housing, for top cover tube | 2 | All | | |
| | 021735 | ••• | Tube, fork cover, bottom | Ž | All | | |
| | | • • • | Screw, plug, oil drain, for fork slider, \(\frac{1}{4}\) in. by \(\frac{1}{4}\) in. by 26 | 2 | All | | |
| | 000485 | ••• | | 2 | Ali | ••• | |
| | 000203 | • • • | Washer, fibre, for fork slider screw oil plug | 2 | | GILS, | |
| | 021662 | | Tube, fork damper | - | | C, G80. | |
| | | | | | | 5, G80C | |
| | 021005 | | Title foot desire | 2 | | | |
| | 021805 | ••• | Tube, fork damper | 2 | Gari | CS, G80 | |
| | 010697 | • • • | Bolt, fixing fork damper tube to slider, 7 in. by 👬 in. | ٠. | A 11 | | |
| | | | by 26 | 2 | All | • • • | • • • |
| | 010706 | ••• | Washer, fibre, for damper tube bolt | 2 | All | • • • | • • • |
| | 017357 | | Rod, for fork damper | 2 | All | • • • • | |
| | 000004 | | Nut, lock, top end of damper rod | 2 | AII | • • • | |
| | 016072 | ••• | Sleeve, plunger, for fork damper rod | 2 | All | | |
| | 016339 | | Clip, retaining damper rod sleeve | 2 | Ali | | |
| | 016304 | | Valve, for fork damper | 2 | ΑII | | |
| | 010721 | | Pin, stop, for fork damper valve | 2 | All | | |
| | 010719 | | Seat, for fork damper valve | 2 | ΑII | | |
| | 000005 | ••• | Nut, lock, for fork damper valve seat | 2 | All | | |
| | 018691 | | Steering locking bar (own padlock to be used) | Ī | Ali | | |
| | 6 10071 | ••• | Company of the control of the contro | · | | | |
| | HAND |)LE | BAR. | | | | |
| | 017016 | | Handlebar, bare | 1 | GN | CS, G 8 0 | ncs |
| | 021257 | | Handlebar, bare | i | | except | |
| | VZ123/ | ••• | ITANUICUAL, VALC | • | | CS, G8 | ncs |
| | 021978 | | Clin (half anly) for handlabor live | | All | C3, G0 | |
| | | ••• | Clip (half only), for handlebar lug | ı | Δ" | | ••• |
| | 016947 | ••• | Screw, for handlebar clip, 7 in. by 1 ln. by 26 (socket | 2 | All | | |
| | | | head) | 3 | All | • • • • | ••• |
| | | | | | | | |

FRONT STAND. G80, G805 ... 010694 ... Bolt, fixing front stand to slider, 1급 in. by 급 in. by 22 2 ditto ditto ditto 000342 ... Bolt, fixing front stand to front mudguard, 11 in. by ½ in. by 26...... ditto 000012 ... Washer, plain, for stand to mudguard bolt...... 2 ditto 000005 ... Nut. front stand to mudguard bolt...... 014278 ... Nut (domed), front stand to mudguard bolt...... ditto STEERING DAMPER. (This is an optional extra). 022060 ... Damper, steering, complete set of parts...... ... AΠ 010808 ... Cap, for top of steering stem..... 010807 ... Drawbolt, for steering damper..... 015137 ... Sleeve, assembly, lower end of drawbolt....... 000073 ... Nut, locking sleeve to drawbolt...... 000191 ... Washer, spring, for bolt 000342...... 000012 ... Washer, plain, for bolt 000342..... 017008 ... Plate, anchor, top position...... 000070 ... Bolt, fixing top anchor plate, 1/4 in. by 1/4 in. by 26..... 1 000191 ... Washer, spring, for bolt 000070...... 000812 ... Washer, friction, for steering damper 2 All 021811 ... Nut, lock, for fork crown stem (this replaces the domed lock-nut, 021642, when a steering damper is fitted) | All CENTRE STAND. G3LS, G3LCS, 016340 ... Stand, centre, bare..... G80S, G80CS... G3LS. G80S ... G3LCS, G80CS 014629 ... Stud, hinge, for centre stand, 815 ins. by 7 in. by 26..... 1 G3LS, G3LCS, G805, G80C\$... G3LS, G80S 014630 ... Spacer, central, for centre stand hinge stud, 4.2 ins. long 1 010924 ... Spacer, central, for centre stand hinge stud, 31 ins. long G3LCS, G80CS 014484 ... Spacer, outside right, for centre stand hinge stud. G3LCS, G80CS 180 in, thick...... G3LS, G3LCS 010912 ... Washer, spigot, for centre stand hinge stud....... 2 G80S, G80CS 000002 ... Nut, for centre stand hinge stud 2 ditto 016399 ... Spring, stop, for centre stand...... 1 ditto

MAINTENANCE MANUAL 1955 EDITION PRICE 2/6 18 THE APPROPRIATE MANUAL FOR THIS SPARES LIST

PROP STAND.

| 014715 014713 014139 000049 021261 REAR | | Stand, prop, bare Bolt, hinge, for prop stand, 2,½ ins. by ½ in. by 26 Nut, for prop stand hinge bolt Pin, split, for prop stand hinge bolt Spring, return, for prop stand | 1 | AII AII AII AII |
|--|--------------|--|-----------------------|---|
| 017107 010788 000008 000071 017131 | | Stand, rear, bare | 1 2 2 2 1 | G3L, G3LC, G80, G80C ditto ditto ditto ditto |
| FRON | T ! | MUDGUARD. | | |
| 021716 | ••• | Mudguard, front bare | ŧ | G3L, G3LS, |
| 013947 | | Mudguard, front, bare | I | G80, G80S G3LC, G3LCS, G80C, G80CS |
| 010795 000192 010624 | | Bolt, fixing mudguard bridge to right fork slider, ½ in. by ½ in. by 22 | 2 | All |
| 014117 000004 013928 | | adjuster, 13. in. by 3. in. by 26 and 22 Washer, lock, for bridge left fixing stud Nut, for bridge left fixing stud Stay, for front mudguard, forward position | 2 2 2 1 | All All G3LC, G3LCS, |
| 013929 010795 000192 012565 | | Stay, for front mudguard, rear position Bolt, fixing front mudguard stay to fork slider, ½ in. by 3 in. by 22 Washer, spring, for stay to fork slider bolt | 1 4 4 | ditto |
| 000190 000039 000080 | | Bolt, fixing stay to front mudguard, ½ in, by 2.BA | 8 8 8 | ditto ditto ditto ditto |

THE PRICES OF SPARES DO NOT INCLUDE THE COST OF CARRIAGE

BEFORE ORDERING SPARES
PLEASE NOTE THE INFORMATION GIVEN ON PAGES
TWO AND THREE

these nuts fit, are listed with the "REAR FORK

000080 ... Nut, for centre stand stop spring. (The studs, on which

000039 ... Washer, plain, for centre stand stop spring fixing nuts 2


| REAR | CARRIER. | | | |
|------------------|--|-----|----------------|-----|
| 016418 | Carrier, rear, bare | 1 | G3L, G80 . | |
| | Carrier rear bare | 1 | G3LS, G80\$. | |
| 000368 | Role fixing 016418 carrier at rear | 2 | G3L, G80 . | |
| 000364 | Role fixing ()16418 carrier, right side, at front | 1 | ditto | |
| 000363 | Role fixing 016418 carrier, left side, at Iront | i | ditto | |
| 014521 | Bolt, fixing carrier at front (replaces 018648 when | _ | C31 C C005 | |
| •, | carrier is fitted) | 2 | G3LS, G80S . | ••• |
| | Existing nuts and washers are used for above bolts.) | | | |
| REAR | MUDGUARD. (G3L & G80). | | | |
| 021979 | Mudguard, rear, bare (includes both halves and the two | | C11 C00 | |
| | binding bolts) | ł | G3L, G80 | ••• |
| 021755 | Mudguard, rear, forward fixed portion only | , | ditto ditto | |
| 021032 | Mudguard, rear, rear detachable portion only | ż | ditto | |
| 015117 | Bolt, clamping halves of rear mudguard | - | dicto | |
| 000346 | Bolt, fixing mudguard to frame bridges, 174 in. by 4 in. by 26 | 2 | ditto | |
| 000101 | tat () to the first and builded bolte | Ž | ditto | |
| 000191 | | 2 | ditto | |
| 000005 016883 | i a (.) (. " | ī | ditto | |
| 000270 | e. I i f li and fan aufulum auch falen cocurae lower | | | |
| 000270 | end of mudguard stay), 1 to in. by 1/8 in. by 26 | 2 | ditto | |
| 000074 | Nut, locking stud in fork end | 2 | d.t.o | |
| 000213 | Nut (with collar), locking tubular arch and mudguard | | | |
| 000213 | stay to fork end stud | 2 | ditto | |
| 000368 | Bolt, fixing mudguard to tubular arch, 11in. by 15 in. | | | |
| 000300 | by 26 | 2 | ditto | |
| 016887 | Stay, for rear mudguard, left side | - 1 | ditto | |
| 016886 | Stay, for rear mudguard, right side | 1 | ditto | |
| 000363 | Bolt fixing mudguard to stay, ₹ in, by Æ in, by 26 | 2 | ditto | |
| 000192 | Washer, spring, for 000368 and 000363 fixing bolts | 4 | ditto | |
| 000004 | Nut, for 000368 and 000363 fixing bolts | 4 | ditto | |
| 000342 | Bolt, fixing mudguard to oil tank | - ! | ditto | |
| 000172 | Washer, plain, mudguard to oil tank bolt | 2 | ditto | |
| 000005 | Nut, for mudguard to oil tank bolt | 1 | ditto | |
| REAR | MUDGUARD. (G3LS & G80S). | | | |
| 021981 | Rear mudguard (both portions with joint bolts) | 1 | G3LS, G80S | ••• |
| 021708 | Rear mudguard, forward portion only | ! | ditto | |
| 021710 | Rear mudguard, rear portion only | Ţ | ditto | |
| 021098 | Bolt, for mudguard joint | 3 | ditto | |
| 021099 | Washer, for mudguard joint bolt | 3 | ditto | |
| 014501 | Bracket, for bottom of rear mudguard | 2 | ditto | |
| 000342 | Bolt, fixing bracket to rear mudguard, # in. by 1/4 in. by 26 | 2 | ditto | |
| 000012 | | 4 | ditto | |
| 0000012 | Washer, plain, for bracket fixing bolt | 2 | ditto | |
| 000075 | | | | |
| 0001,3 | by $\frac{1}{4}$ in. by 26 | - 1 | ditto | |
| 000011 | Washer, plain, for bracket fixing stud | 2 | ditto | |
| 000004 | Nut. for bracket fixing stud | - 4 | * ditto | |
| 000346 | Bolt, fixing rear mudguard to frame loop bridge, | | | |
| | $1\frac{7}{14}$ in. by $\frac{1}{4}$ in. by 26 | • | ditto | |
| 000191 | Washer, spring, for bridge fixing bolt | | ditto | |
| 000005 | Nut, for bridge fixing bolt | | ditto | |
| 000342 | Bolt, fixing rear mudguard to oil tank | - 1 | ditto | |
| 000191 | Washer, spring, for mudguard to oil tank bolt | ! | ditto | |
| 000172 | Washer, plain, for mudguard to oil tank bolt | . ! | ditto | |
| 000005 | Nut, for mudguard to oil tank bolt | . ! | ditto | |

| REAR | MUDGUARD. (G3LC & G80CS). | | a. |
|------------------|---|---|-----------------------------|
| 015166 | Mudguard, rear, bare | 1 | GBLC, G80C |
| 000345 | Bolt, fixing mudguard to frame top bridge, I is in. by | | |
| | in. by 26 | ļ | ditto |
| 000346 | Bolt, fixing mudguard to frame bottom bridge, 17 in. | , | J |
| | by ¼ in. by 26 | 2 | ditto |
| 000191 | Washer, spring, for mudguard bridge bolts | | ditto ditto |
| 000005 | Nut, for mudguard bridge bolts | 2 | uitto |
| 000342 | Bolt, fixing mudguard to oil tank bracket, 12 in. by 1/4 in. by 26 | 1 | ditto |
| 000173 | Most an able for all table beating half | i | ditto |
| 000172 | Washer, plain, for oil tank bracket bolt | i | ditto |
| 000005 | | ì | ditto |
| 015168 015170 | | i | ditto |
| 000363 | | 2 | ditto |
| 110000 | tage to the contract of the latest terms of the contract terms of | 2 | ditto |
| 000111 | Washer, plain, for stay to fork end bolt | 2 | ditto |
| 000074 | Nut, for stay to fork end bolt | 2 | ditto |
| 012565 | Bolt, fixing mudguard to stay \(\frac{1}{2}\) in. by 2.BA | 7 | ditto |
| 000190 | Washer, spring, for mudguard to stay bolt | 7 | ditto |
| 000039 | Washer, plain, for mudguard to stay bolt | 7 | ditto |
| 000080 | Nut, for mudguard to stay bolt | 7 | ditro |
| REAR | MUDGUARD. (G3LCS & G80CS). | | CM CC CMCC |
| 021773 | Mudguard, rear, bare | 1 | G3LCS, G80CS |
| 016352 | Bracket, for bottom of rear mudguard | 2 | ditto |
| 000342 | Bolt, fixing bracket to rear mudguard, 11 in. by 1 in. by 26 | 2 | ditto |
| 000012 | Washer, plain, for bracket fixing bolt | 4 | ditto |
| 000005 | Nut, for bracket fixing bolt | 2 | ditto |
| 00027 5 | Stud, fixing rear mudguard brackets to frame, 3% ins. | 1 | direc |
| 000011 | by $+\frac{1}{5}$ in. by 26 | 2 | ditto ditto |
| 000011 | Washer, plain, for bracket fixing stud | 2 | ditto |
| 000004 000345 | Nut, for bracket fixing stud | - | 3 11.0 |
| 000343 | Bolt, fixing rear mudguard to frame loop bridge, $1\frac{1}{3}$ in, by $\frac{1}{4}$ in, by 26 | 1 | ditto |
| 000191 | | i | ditto |
| 000005 | | i | ditto |
| 015324 | Nut, for bridge fixing bolt | i | ditto |
| 000369 | | 2 | ditto |
| 000004 | Boit, fixing support tube at front, In in by 75 in by 25 Nut, for support tube bolt | 2 | ditto |
| 012565 | Bolt, fixing mudguard to support tube, $\frac{1}{2}$ in. by 2.BA | 6 | ditto |
| 000190 | Washer, spring, for mudguard to tube bolt | 6 | ditto |
| 000039 | Washer, plain, for mudguard to tube bolt | 6 | ditto |
| 000080 | Nut, for mudguard to tube bolt | 6 | ditto |
| | | | |
| FRUN | T NUMBER PLATE. | | |
| 011835 | Plate, number, front | 1 | G3L, G3LS, G80, G80S |
| 011698 | Plate, number, front | 1 | G3LC, G3LCS, G80C, G80CS |
| 011836 | Stud, fixing front number plate | 2 | All |
| 000012 | Washer, plain, front number plate stud | 2 | All |
| 000005 | Nut. front number plate stud | 2 | AN |
| 000861 | Screw, fixing from number plate to stud, $\frac{5}{16}$ in. by 2.BA. | 2 | All |
| 011889 | Fillet, rubber, front number plate | 1 | G3L, G3LS, |
| | • | | G80, G80S |
| | | | |


WHEN ORDERING SPARES, IF IN DOUBT REGARDING THE NAMES

AND PART NUMBERS OF THE PARTS YOU REQUIRE, PLEASE

SEND THE OLD PARTS TO SERVE AS PATTERNS.

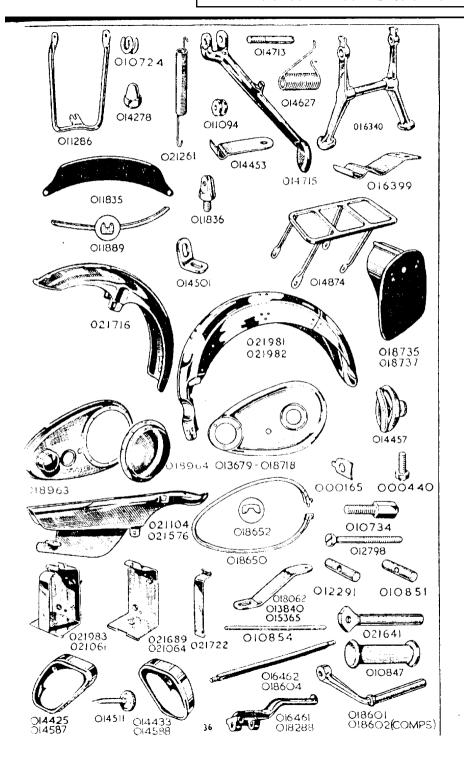

| REAR | N | UMBER PLATE. | | | | |
|----------------------------|-------|--|-----|---|----------------------------|------|
| 018735 018737 021881 | | Plate, number, rear, 8 ins. wide | 1 | GJLO | i, G80 C, G31 | .CS, |
| 021880 | | Rear lamp support | ŀ | G3L0 | ī, G80 ī, G31 ī, G80 | LCS, |
| 000738 | | Screw, rear lamp support | 2 | G3L0 | I. G3I | CS, |
| 000739 | | Nut, rear lamp support screw | 2 | G3L0 | 2, G80 2, G31 2, G80 | .CS, |
| 000364 000070 | | Bolt, fixing rear number plate, $\frac{18}{6}$ in. by $\frac{3}{18}$ in. by 26 Bolt, fixing rear number plate, $\frac{9}{18}$ in. by $\frac{3}{6}$ in. by 26 | 2 | G3L. G3L0 | | .CS, |
| 000363 000192 | | Bolt, fixing rear number plate, $\frac{3}{4}$ in. by $\frac{5}{16}$ in. by 26 Washer, spring, rear number plate bolt | 2 | G3L9 G3L, | G3LS G80S | s |
| 000012 | ••• | Washer, plain, rear number plate bolt | 4 | | C, G30 C, G80 | |
| 000005 | | Nut, rear number plate boit | 2 | ditto | | |
| 015298 | | Bracket, for rear number plate | ! | ditto | | |
| 000363 | | Bolt, fixing number plate bracket, 2 in. by 16 in. by 26 | - [| ditto | | |
| 000192 | | Washer, spring, for number plate bracket bolt | 1 | ditto ditto | | |
| 000011 000004 | | Nut, for number plate bracket bolt | i | ditto | | |
| VVVVV | ••• | True, for number place or acree ook | · | | | |
| | | | | | | |
| FRON | T | CHAINCASE. | | | | |
| 021374 | ••• | Chaincase, complete. (Comprises both halves, metal and rubber bands, clamping screw and inspection caps —NO FIXING BOLTS, SPACERS, WASHERS, AND NUTS ARE INCLUDED) | ı | Alf ex | | |
| | | | | GB0C | | |
| 021375 | | Chaincase, complete and sliding seal | ı | G3LC G80C | , G3L(| CS, |
| 013679 | | Chaincase, back half, bare | ı | All ex G3LC | cept | |
| | | | | G80C | G80 | CS. |
| 021036 | ••• | Chaincase, back half, bare | 1 | G80C | , G3L | CS, |
| 018963 | | Chaincase, front half, bare | 1 | All | | |
| 018650 | • • • | Band, metal, for chaincase | ! | All | ••• | |
| 000453 | • • • | Screw, clamping chaincase metal band, I in, by 2.BA. | 1 | All All | • • • | |
| 018652 018964 | ••• | Band, rubber, for chaincase | i | All | ••• | |
| 018966 | ••• | Washer, cork, for clutch cap | i | All | | |
| 000450 | | Screw, in. by 2.BA., round head for clutch cap screw | 8 | All | | |
| 014457 | | Cap, assembly, chaincase inspection (components not | | All | | |
| 000580 | | Washer, cork, chaincase inspection cap | į | All | | ••• |
| 000440 | ••• | Bolt, fixing chaincase to engine, \(\frac{1}{2}\) in. by 0.8A | ż | Aii | | |
| 000165 | | Washer, lock, chaincase engine bolt | 3 | All | | |
| 000316 | | Stud, fixing centre of chaincase, 7 1/4 ins. by 1/4 in. by 26 (to | • | • | | |
| 010953 | | be fitted with the longer thread on left side) Spacer, 1½ in, long, for centre bolt, between chaincase | ı | All | ••• | ••• |
| _ | | and engine plate | ŀ | Ali | • • • | |
| 021230 000166 | • • • | Wide nut, for centre bolt, inside chaincase | 1 | All GULC | , G80 | c |
| 000009 | ••• | Washer, plain for chalnease centre bolt behind case Washer, plain, for chalnease centre bolt | 2 | | . G80 | |
| 000009 | | Washer, plain for chaincase centre bolt | 3 | | G3LS, | |
| | ••• | Transcription for chamicase tentre solt | , | C80 | | · |
| 000002 | | Nut, for chaincase centre bolt | 3 | All | | |
| 021038 | | Chaincase sliding seal | i | | , G3L | |
| | | | | G80C | . G80 | C2 |
| | | • | | | | |

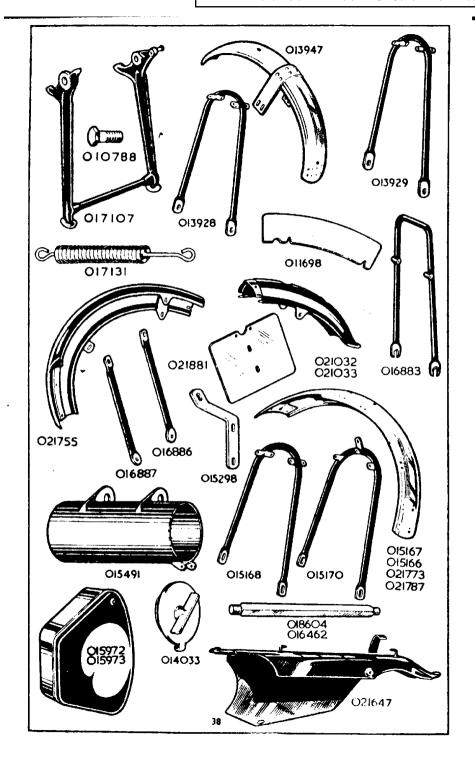

REAR CHAINGUARD.

| 021104 021576 | | Chainguard, rear, bare | 1 | G3L-G80 G3LS, G3LCS, G90S, G89CS |
|------------------|---------|---|--------|--|
| 021647 017094 | | Chainguard, rear, bare | l l | G3LC, G80C G3L, G3LC, G80, G80C |
| 000350 | | Bolt, fixing chainguard in front, $2\frac{1}{16}$ ins. by $\frac{1}{4}$ in, by 26 | 1 | G31.5, G31 C5, G805, G80C5 |
| 000070 | ••• | Bolt, fixing bottom of chainguard, in front, 🔏 in. by 🖫 in. by 26 | ł | GHL, GHC, G80. G80C |
| 000012 000012 | | Washer, plain, chainguard, front fixing bolt | 2 | ditto G3LS, G3LCS, G80S, G80C5 |
| 000005 000362 | | Nut, for chainguard front fixing bolt Bolt, fixing rear of chainguard $\frac{5}{4}$ in, by $\frac{5}{16}$ in, by 26 | 1 | All G3L, G3LC, G80, G80C |
| 000349 | | Bolt, fixing rear of chainguard H_n^2 ins. by $\frac{1}{4}$ in. by $\frac{1}{4}$ in. | 1 | G3LS, G3LCS, G80S, G80CS |
| 000011 021579 | | Washer, plain, for chainguard rear fixing bolt | l I | All G3LS, G3LCS, G80S, G30CS |
| 021578 | • • • • | Spacer, (located inside chainguard), on bolt 000349 | 1 | ditto |

BATTERY CARRIER.

| 021983 . | . Carrier, battery, complete | 1 | G3L, G80, G3LS, G3LCS, G80S, G80CS |
|---------------|--|-----|---|
| 021061 | . Carrier, battery, complete | 1 | G3LC, G80C |
| | The above complete carriers include the binding bolt with its seat and nut. | | |
| 021689 | . Carriers, battery, back portion only | 1 | G3L, G80. G3LS, G3t CS, G80S, G80CS |
| 021064 | . Carrier, battery, back portion only | i | G3LC, G80C |
| | . Carrier, battery, front portion only | i | All except |
| | The state of the s | | G3LC, G80C |
| 012581 | . Carrier, battery, front portion only | 1 | G3LC, G80C |
| 010854 | . Pin, hinge, battery carrier front | i | All |
| 012798 | | i | All |
| 012291 | . Seat, battery carrier clamping bolt | ì | All |
| 128010 | | i. | All |
| 000004 | . Nut, fixing battery carrier to oil tank stud | 2 | All |
| 000174 | . Washer, plain, for battery carrier and oil tank fixing nut | 2 | A!I |
| 013840 | | - 1 | G3LS, G3LCS, |
| | | | G80S, G80C5 |
| 018062 | | - 1 | G3L, G80 |
| 015365 | | į. | GHC, GECC |
| 000040 | | - 1 | Atı |
| 000012 | | 1 | All . |
| 010734 | | | |
| | by 🔒 in. by 26 | 1 - | G3LS, G3LCS, |
| 000011 | l NAC I I I I I I I I I I I I I I I I I I I | | G805, G 80C 5 |
| | Washer, plain, for 010734 carrier bracket bolt | 2 | ditto |
| 000004 | . Nut, for 010734 carrier bracket bolt. | i | ditto |

FOOTRESTS. 016461 ... Arm, for footrest, left side. | I ditto G80. G80S ... G805, G80C ... 016462 ... Rod, for footrests, overall length 10g ins..... 1 010924 ... Spacer, 31 ins. long, for footrest rod, between engine rear plates 1 Spacer, 34 ins. long, between engine plates...... | G3LC, G80C ... 013837 ... Spacer, 1 in, long, for footrest rod, outside right plate 1 G3L, G3LS. G80S, G80C ... 010911 ... Spacer, 13 in. long, for footrest rod, outside left plate 1 G3L, G3LS, G3LC, G80. G80S, G80C ... 010911 ... Spacer, 13 in, long, for footrest rod, additional 2 G3LC, G80C ... G3LC, G80, G805, G80C ... 000009 ... Washer, plain, for secondary footrest rod......... 2 G3LC, G80C ... PILLION FOOTRESTS. (This is optional equipment). 011599 ... Bolt, hinge, for pillion footrest spindle, 1 1 in, by 3 in. by 25 2 All SADDLE. 013784 ... Saddle, complete, with rear springs...... 1 G3L, G80 021376 ... Saddle, complete, with rear springs..... G3LC, G80C ... 013873 ... Saddle, less springs 1 G3L, G80 ... 2 G3LC, G80C ... 014151 ... Saddle, spring 017523 ... Cover (or top), for saddle...... 1 G3L, G80 ... 012880 ... Stud, for lower end of spring, 2½ ins. long...... 2 G3L, G80 G80, G80C ... 000376 ... Bolt, for saddle front hinge..... 1 G3LC, G80C ...

| SADDI | LEcontinued. | | G3LC, G80C |
|--------|---|----------------|--|
| _ | C-4dla augment spacer | 2 | disto |
| | Saddle, support frame bolt | 2 | ditto |
| 000004 | Saddle, support frame bolt nut | $\overline{2}$ | ditto |
| 0000 | Saddle, support frame boit washer | 1 | G3LS, G80S |
| OZ. | T | 1 | G3LCS, G80CS |
| 0.211 | T is a see a morney for back | 2 | Ail |
| O 2. 1 | D. L. C | 2 | G3LS, G80S |
| 02 | | 2 | G3LCS, G80CS |
| 0000 | the total format Guing hole | 2 | G3LS, G80S |
| 000012 | | 2 | G3LCS, G80C S |
| 000172 | | 2 | G3LS, G80S |
| 018160 | Nut, for above | | |
| 511.16 | ON SEAT. (Mudguard Fitting) (This is opti | ona | al equipment). |
| PILLIC | | i | G3L, G80 |
| 011291 | Seat, pillion, with fixing bolts, washers and nuts | 4 | ditto |
| 000070 | Bolt, fixing pillion seat, $\frac{9}{16}$ in. by $\frac{1}{4}$ in. by 26 | 4 | ditto |
| 000191 | Washer spring, for billion seat coll | 4 | ditto |
| 000012 | Washer, plain, for pillion seat bolt | | ditto |
| 000005 | Nut, for pillion seat bolt | 7 | dicto |
| | | | |
| TOOL | BOXES. | | C31 C00 |
| 015972 | Box, tool, bare (with lid but no other fitting) | 1 | G3L, G80 |
| 014587 | Pow tool have (with lid but no other littings), lett side | ! | G3LS, G80S |
| 014588 | Box, tool, bare (with hid but no other fittings), right side | ı | G3LS, G3LCS, |
| •••• | | | G80S, G80CS G3LC, G80C |
| 015491 | Box, tool, bare (does not include lid) | - 1 | and the second s |
| 014033 | 114 for hard tool box | - 1 | ditto ditto |
| 013936 | Dia selle for tool box ltd | ļ | |
| 014511 | Carana konsolad (or tool box lid | 1 | G3LCS, G80CS G3LS, G80S |
| 014511 | Seems knueled for tool hox lid | 2 | G3L, G80 |
| 014511 | Second legisled for tool hox lift | I I | G3L, G3LCS, |
| 000189 | Washer, spring, for tool box lid screw | | G80, G80C5 |
| 000100 | Washer, spring, for tool box lid screw | 2 | G3LS, G80S |
| 000189 | At a feeded box lid corow | 2 | G3L, G3LCS |
| 000005 | | | G80, G80C5 |
| 000005 | Nut, for tool box lid screw | 4 | G3LS,G805 |
| 016367 | Diagonal how fixing | | G3LCS, G80CS |
| 000070 | Pale 6 ving tool box plate | 4 | ditto |
| 000012 | ANTALA MININ MINTO TIXING DOIT | -1 | ditto |
| 000005 | Nine when fiving holf | - 4 | ditto |
| 000342 | Date long fixing fool box. \longleftrightarrow in. by $=$ iii. by 20 | | G3LS, G805 |
| 000345 | Bolt, long, fixing tool box, 1 in. by 1 in. by 26 Bolt, short, fixing tool box, 1 in. by 1 in. by 26 | 1 | G3LCS, G80CS |
| 000070 | Bolt, short, fixing tool box, in by in by 26 | 2 | G3LCS, G80CS |
| 014577 | Bolt, short, fixing tool box, $\frac{7}{16}$ in. by $\frac{1}{4}$ in. by $\frac{26}{16}$ | 2 | G3LS, G80S |
| 000639 | Spacer 11 in thick for tool box long fixing polts | 4 | G3LS, G80\$ G3LCS, G80\$ |
| 016948 | Conser 7 in thick for tool box lixing cold accommon | , | |
| 000012 | Washer plain for tool box fixing poit | 1 4 | G3LS, G80S G3LCS, G80CS |
| 000012 | Washer plain for tool box fixing polis | 0 | G3LS, G80S |
| 000005 | Not forted hox fixing holts | . 0 | G3LCS, G80CS |
| 000005 | No. for each boy fixing holts | . , | G3L, G80 |
| 000342 | Pole fiving tool box at bottom, it is, by a in, by 20 | , . | ditto |
| 000639 | Charge II in thick for foot box bottom manis botto | | |
| 000012 | Wacher plain tool box bottom fixing polts | . 7 | ditto ditto |
| 000005 | Not for tool boy bottom fixing bolts | . 4 | ditto |
| 000361 | Bale fixing tool box at too, of in, by the in-by 40 | | ditto |
| 000011 | Wather Diain, for tool box, top lixing bottom | | |
| 900004 | Nut, for tool box top fixing bolt | ' | |
| | | | |

 000011
 ...
 Washer, for hinge bolt
 1 ditto


 021214
 ...
 Saddle, support channel
 1 ditto

TRANSFERS.

| | | and the second second second second second | | A 11 | | |
|--------|-------|--|-----|-------|---------|-------|
| 009198 | | Transfer, for side of oil tank (top level indicator) | 1 | All | • | |
| 209183 | | T f . f == -: d = af ail tank flow level indicator) | 1 | Ali | | |
| 009184 | | Transfer, for top of oil tank (service instruction) | 1 | Ail | | |
| | | Transfer, for top or on tank (service indicator) | i | AII | | |
| 009186 | : | | ÷ | | | |
| 009187 | | Transfer, for front chaincase (patent) | | All | | |
| 009188 | | Transfer, for tool box (monogram) | 1 | G3L, | G80, | |
| 007700 | , | , , , , , , , , , , , , , , , , , , , | | G3LC | :S, G80 | CS |
| 009188 | | Transfer for tool box (monogram) | 2 | G3LS | , G80S | |
| | | Transfer, for rear mudguard ("MATCHLESS") | 1 | ЫA | | |
| 009189 | | Transfer, for feat medgoard (TiAT Citeess) | 1 | All. | | |
| 009199 | | Transfer, for front forks (patent) | : | | *** | |
| 009195 | | Transfer, for petrol tank (reserve) | i | All | | |
| 009200 | | Transfer, for forks (" Made in England ") | - 1 | Αlŧ | | |
| | | Transfer, for rear fork hinge (patent) | 1 | G3LS | . G80S. | |
| 009197 | - • • | transfer, for rear fork imige (pacene) | • | | S. G80 | |
| | | | | | | |
| 018499 | | Complete set of transfers | 1 | G3L, | | |
| 018500 | | Complete set of transfers | - 1 | G31.S | , G80S | |
| | • • • | Complete set of transfers | 1 | G3LC | . G800 | |
| 102810 | | | i | | S. G80 | |
| 018502 | | Complete set of transfers | , | CILC | اهی, دے | · - 3 |
| | | | | | | |

CONTROL LEVER AND CABLE SECTION.

| PART NUMBER. | | description. | | Y. | ON. | |
|-----------------|-----|---|-----|-----|-------|---------|
| TWIS | T (| GRIP. | | | | |
| 16-117 | | Twist grip, complete assembly | 1 | All | | |
| 16-070 | | Grip, rubber, for twist grip | | All | | |
| 16-091 | | Rotor, and sleeve, for twist grip (does not include | | | | |
| | | rubber grip) | . 1 | Ali | | |
| 16-060 | | Body, twist grip, top (plain clip) | . 1 | ΑII | | • • • |
| 16-061 | | Body, twist grip, bottom (for friction spring) | . ! | All | | |
| 11-013 | | Screw, long, clamping twist grip body | . ! | ΑII | • • • | • • • • |
| 11-014 | | Screw, short, clamping twist grip body | . 1 | All | | • • • |
| 16-008 | | Spring, friction, for twist grip | | Ail | | • • • |
| 16-009 | | Screw, for twist grip friction spring | | AH | | • • • • |
| 16-010 | | Nut, for twist grip friction spring screw | | All | | |
| 16-011 | ••• | Stop, for twist grip (throttle) cable | . ' | All | | ••• |
| DUM | MY | GRIP. | | | | |
| 16-069 | | Grip, rubber, dummy | . 1 | Ail | | |
| | | 411 | | | | |

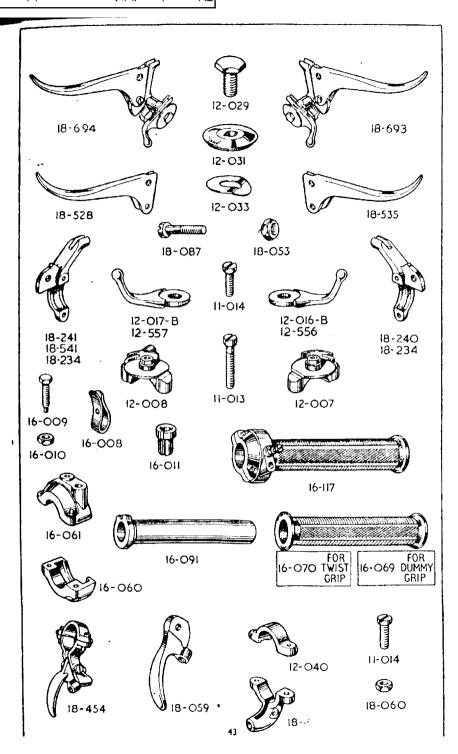

BRAKE AND AIR CONTROL LEVERS.

| 18-693 | • · · | Lever, assembly, brake and air | 1 | G3L, G3L\$, G80, G80\$ |
|--------|-------|---|-----|---------------------------|
| 18-535 | | Lever, only, brake | 1 | ditto |
| 12-556 | | Lever, only, air | i | ditto |
| 18-240 | | Bracket, for brake lever | 1 | ditto |
| 12-007 | | Bracket, for air lever | ì | ditto |
| 11-013 | | Screw, long, clamping brake and air brackets | - 1 | ditto |
| 11-014 | | Screw, short, clamping brake and air brackets | - 1 | ditto |
| 18-087 | | Pin, fulcrum, for brake lever | -1 | ditto |
| 18-053 | | Nut, brake lever fulcrum pin | - 1 | ditto |
| 12-029 | | Bolt, central, for air lever | - 1 | ditto |
| 12-031 | | Cap, for air lever | -1 | ditto |
| 12-033 | | Washer, spring, for air lever | 1 | ditto |

CLUTCH CONTROL LEVER.

| 18-709 | Lever, assembly clutch | - (| | | |
|------------------|---|-----|--------------------------|-------|-----|
| 18-696 | Lever, assembly clutch | 1 | G80, (G3LC, G80C. | G3L0 | CS, |
| 18-528 18-541 | Lever, only clutch | | All G3L, 0 G80, 0 | 53LS, | |
| 18-234 | Bracket, clutch lever | 1 | | G3LC | CS, |
| 12-040 | Clamp, clutch lever bracket | 1 | All | | |
| 11-014 | Screw, clutch lever bracket clamp | 2 | All | | |
| 18-087 | Pin, fulcrum, clutch lever | f | All | | , |
| 18-053 | Nut, clatch lever fulcrum pin | ļ | All | | |
| 70-016 | Washer, lock clutch lever fulcrum pin nut | 1 | All | | |
| | | | | | |

FRONT BRAKE CONTROL LEVER.

| 18-695 | Lever, assembly, brake | 1 | G3LC, G3LC |
|--------|---|-----|------------|
| | | | G80C, G80C |
| 18-535 | Lever, only, brake | - 1 | ditto |
| | Bracket, brake lever | | |
| | Clamp, brake lever bracket | | |
| 11-014 | Screw, brake lever bracket clamp | 2 | ditto |
| | Pin, fulcrum brake lever | | |
| 18-053 | Nut, brake lever fulcrum pin | i | ditto |
| | Washer, lock, brake lever fulcrum pin nut | | |
| | | | |

AIR CONTROL LEVER.

| 12-161 | Lever, assembly, air | i | G3LCs, G80Cs G3LCs, G80Cs |
|--------|----------------------|---|------------------------------|
| | Lever, only, air | | |

THE MAINTENANCE MANUAL AND INSTRUCTION BOOK HAS NINETY-TWO PAGES AND THIRTY-EIGHT ILLUSTRATIONS

IGNITION CONTROL LEVER.

| 12-171 | Lever, assembly, ignition | ı | G3LC, G80C, G3LCS, G80CS |
|--------|--|---|-----------------------------|
| | Lever, only, ignition. Bracket, ignition control lever. | | |

FITTINGS FOR AIR AND IGNITION CONTROL LEVERS.

| 12-040 | Clamp, air, or ignition lever bracket | 2 | G3LC, G80C, G3LCS, G80CS |
|------------------|---|---|-----------------------------|
| 12-029 12-031 | Screw, air or ignition lever bracket clamp Bolt, central, air or ignition lever Cap, air or ignition lever Washer, spring, air or ignition lever | 2 | ditto ditto |

EXHAUST LIFTER CONTROL LEVER.


| | Lever, assembly, exhaust lifter | | | |
|--------|---|---|-----|--------|
| | Bracket, exhaust lifter lever | | | |
| | Clamp, exhaust lifter lever bracket | | | |
| | Screw, exhaust lifter lever bracket clamp | | | |
| | Pin, fulcrum, exhaust lifter lever | | | |
| 18-060 | Nut, exhaust lifter lever fulcrum pin | 1 | All | ٠. |

FRONT BRAKE CABLE.

| 013178 | Cable, complete, assembled, front brake | ı | All | |
|------------|---|----|-----|------|
| 000530-402 | Wire, inner, front brake, 40% ins. finished length | -1 | ΑII | |
| 18-689 | Nipple, brake end, for brake inner wire | -1 | ΑII | |
| 18-689 | Nipple, handlebar end, for brake inner wire | -1 | ΑĦ | |
| 18-690 | Nipple, roller adaptor, handlebar end, for inner wire | 1 | All | |
| 000529-26 | Casing, outer, front brake, 26 ins. long | -1 | Αll | |
| 000531 | Ferrule, front brake outer casing | 2 | A1! | |
| 011348 | Adjuster, front brake cable | i | All | |
| 017217 | Nut, lock, front brake cable adjuster | ı | All | |
| 017049 | End, yoke, front brake cable | ş | Αli | |
| 000736 | Pin, for yoke end, front brake cable | i | ΑII | |
| 000014 | Pin, split, for front brake cable yoke end pin | i | All | |
| 012478 | Sleeve, rubber, for front brake cable inner wire | ı | All | |

CLUTCH CABLE.

| VALVE LIFTER CABLE. | | |
|---|---|--|
| 000579-71 Casing, outer, exhlust micer, 21 ms, long | * | All All All All All All All All All All All |
| IGNITION CONTROL CABLE. | | |
| 022132 Cable, complete assembled ignition | ŧ | G3LC, G3LCS, |
| 000527-294 Wire, inner, ignition 294 ins., finished length 017266 Nipple, Handlebar end, ignition inner wire 000526-26 Casing, outer, ignition, 26 ins. finished length 000528 Ferrule, ignition, outer casing 022133 Set of control cable parts (Lucas 457117) | 1 1 2 1 | G80C, G80CS ditto ditto ditto ditto ditto |
| THROTTLE CONTROL CABLE. | | |
| 022019 Cable, complete, assembled, throttle | i | G3L, G3LS, G3LC |
| 022134 Cable, complete, assembled, throttle | | G80, G80S, G80C |
| 018997 Cable, complete, assembled, throttle | 1 | G3LCS, G80CS G3L, G3LS, G3LC |
| 000535-40-16 Wire, inner, throttle, 40-32 ins. finished length | 1 | G80, G80S, G80C, G3LCS, |
| 017242 Nipple, carburetter end, throttle inner wire | 1 | G80CS G3L, G3LS, G3LC, G80, G80S, G80C |
| 018996 Nipple, carburetter end, throttle inner wire 017266 Nipple, handlebar end, throttle inner wire 021408 Casing, outer, throttle, with oil nipple adaptor 000528 Ferrule, throttle outer casing 000051 Nipple, oil, for casing. | 7 | G3LCS, G80CS All All All All |
| AIR CONTROL CABLE. | | |
| 022022 Cable, complete, assembled, air | ļ | G3L, G3LS, G3LC |
| 022023 Cable, complete, assembled, air | | G80, G80S, G80C |
| 021003 Cable, complete, assembled, air | İ | G3LCS, G80CS G3L, G3LS, G3LC |
| 000527-38 3 Wire, inner, air, 38 3 ins. finished length | . 1 | G80, G80S, G80C, G3LCS, |
| 017242 Nipple, carburetter end, air, inner wire | . 1 | G3L, G3LS, G3LC, G80, G80S, G80C . |
| 018996 Nipple, carburetter end, air, inner wire | . [| All |

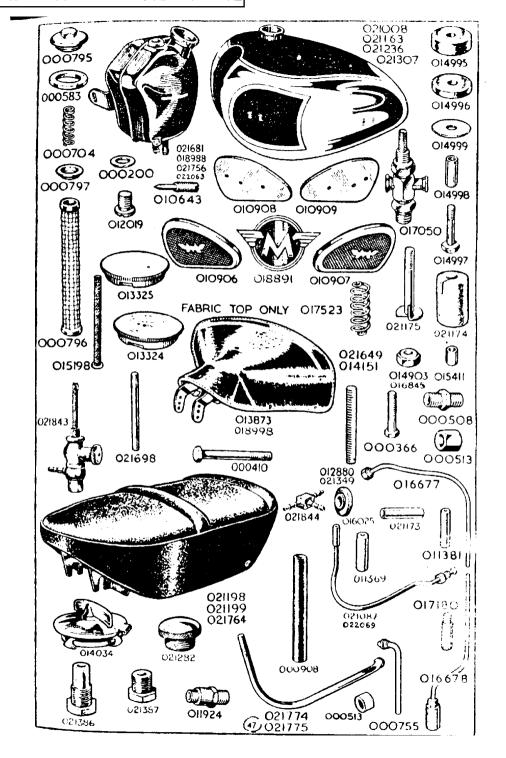

000526-3217 Casing, outer air, 3218 ins. finished length

TANK SECTION.

| PETROL | TANK. | | |
|--|---|--|--|
| 021163 | Tank, petrol, bare, chrome and panelled | 1 | G3L, G3LS G80, G80S |
| 021307 | Tank, petrol, bare, enamelled and lined | 1 | G3L, G3LS |
| 021008 | Tank, petrol, bare, enamelled and lined | ŀ | G3LC, G80C |
| 021236 | Tank, petrol, bare, enamelled and lined | i | G3LCS, G80CS |
| 018891 | Tank, motif, for enamelled or plated tank | ż | G3L, G3LS, |
| 010077 | Tank, moch, for chancing of places and | _ | G80, G805 |
| 018896 | Tank, motif, seating (rubber) | 2 | G3L, G3LS, G80, G80S |
| 000153 | Tank, motif, screw | 4 | All except C and CS |
| 014997 | Bolt, fixing tank, all positions | 4 | ditto |
| 014999 | Washer, for tank fixing bolt | 4 | ditto |
| 014995 | Pad, rubber, thick | 4 | ditto |
| 014996 | Pad, rubber, thin | 4 | ditto |
| 014998 | Sleeve, metal, for tank fixing bolt | 4 | ditto |
| 015411 | Sleeve, metal, for tank fixing bolt | 2 | G3LCS, G80CS |
| 017051 | Wire, copper, 5 ft. by 20 S.W.G | ī | All except C and CS |
| 021175 | Bolt, tank, fixing front | 2 | G3LC, G3LCS, G80C, G80CS |
| 000273 | Bolt, tank, fixing rear | 1 | G3LC, G80C |
| 000365 , | Bolt, tank, fixing rear | 2 | G3LCS, G80CS |
| 021174 | Rubber, tank, front fixing | 2 | All C and CS |
| 014903# | Nut, tank, rear fixing | 2 | G3LC, G80C |
| 016025 | Rubber, tank, rear fixing | 2 | ditto |
| 021173 | Spacer, tank, rear fixing | Ī | ditto |
| 000174 | Spacer, tank, rear fixing | 2 | All C and CS |
| 016845 | Nut, tank, front fixing bolt | 2 | ditto |
| 0000010 | Washer, tank, front fixing bolt | 2 | ditto |
| | · | | |
| PETROL | TANK FITTINGS. | | |
| PETROL 014034 | TANK FITTINGS. Cap, filler | ı | G3LC, G3LCS, |
| | Cap, filler | i 1 | G3LC, G3LCS, GB0C, GB0CS G3L, G3LS, |
| 014034 | Cap, filler | | G3LC, G3LCS, G80C, G80CS |
| 014034 013325 | Cap, filler | ı | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS G3LCS, G80CS |
| 014034 013325 013936 | Cap, filler | 1 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS G3LCS, G90CS G3LC, G3LC, G3LS, G80, |
| 014034 013325 013936 017050 021843 | Cap, filler | 1 1 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS G3LCS, G80CS G3LS, G80, G3LS, G80, G80C, G80S |
| 014034 013325 013936 017050 021843 | Cap, filler | 1 1 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS G3LC, G3LC, G3LS, G80, G80C, G80S All |
| 014034 013325 013936 017050 021843 | Cap, filler | 1 1 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS G3LCS, G80CS G3LS, G80, G3LS, G80, G80C, G80S All G3L, G3LS, G3LC, G80, |
| 014034 013325 013936 017050 021843 000200 022110 | Cap, filler | 1 1 2 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LCS, G80CS G3LCS, G80CS G3LS, G80, G3LS, G80, G80C, G80S All G3LS, G80, G3LS, G80, G3LS, G80, G80S |
| 014034 013325 013936 017050 021843 000200 022111 | Cap, filler | 1 1 2 2 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LC, G3LCS, G80C, G80CS G3LS, G80C, G3LS, G80, G80C, G80S All G3L, G3LS, G3LC, G80, G80S, G80C |
| 014034 013325 013936 017050 021843 000200 022110 | Cap, filler | 1 1 2 2 2 2 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LCS, G80CS G3LCS, G80CS G3LC, G3LCS, G3L, G3LC, G3LS, G80, G80C, G80S All G3L, G3LS, G3LC, G80, G80S, G80C ditto |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 022112 | Cap, filler | 1 1 2 2 2 2 2 4 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LCS, G80CS G3LCS, G80CS G3LS, G80, G3LS, G80, G80C, G80S All G3LS, G80, G8CC, G80S All G3LS, G80, G80C, G80S ditto |
| 014034 013325 013936 017050 021843 000200 022110 | Cap, filler | 1 1 2 2 2 2 2 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LCS, G80CS G3LCS, G80CS G3LS, G80, G80C, G80S All G3L, G3LS, G3LC, G80, G80S, G80C ditto ditto |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 022112 | Cap, filler | 1 1 2 2 2 2 2 4 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LCS, G80CS G3LCS, G80CS G3LC, G3LCS, G3LS, G3LC, G3LS, G3LS, G3LS, G3LS, G3LC, G80, G80S, G80C ditto ditto ditto G3L, G3LS, G3LC, G80, G80S, G80S |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 010906 | Cap, filler Cap, filler Pin, split, for filler cap Tap, for petrol feed with filter Tap, for petrol feed with filter and banjo Washer, fibre for petrol taps Banjo, for petrol feed pipe Nut, dome, retaining banjo Washers, fibre for banjo Cork, for petrol feed tap Grip, knee, left hand side Grip, knee, right hand side | 1 1 2 2 2 2 2 4 2 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80S G3LCS, G80CS G3LCS, G80CS G3LS, G80, G80C, G80S All G3L, G3LS, G3LC, G80, G80S, G80C ditto ditto |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 02112 010906 | Cap, filler Cap, filler Pin, split, for filler cap Tap, for petrol feed with filter Tap, for petrol feed with filter and banjo Washer, fibre for petrol taps Banjo, for petrol feed pipe Nut, dome, retaining banjo Washers, fibre for banjo Cork, for petrol feed tap Grip, knee, left hand side Plate, for left hand grip. Plate for right hand grip. | 1 1 2 2 2 2 2 4 2 1 | G3LC, G3LCS, G80C, G80C, G80C, G80C, G80C, G80CS, G3LCS, G80CS, G3LCS, G80C, G |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 022112 010906 | Cap, filler Cap, filler Pin, split, for filler cap Tap, for petrol feed with filter Tap, for petrol feed with filter and banjo Washer, fibre for petrol taps Banjo, for petrol feed pipe Nut, dome, retaining banjo Washers, fibre for banjo Cork, for petrol feed tap Grip, knee, left hand side Plate, for left hand grip. Plate for right hand grip. | 1 1 2 2 2 2 2 1 1 | G3LC, G3LCS, G80C, G80C, G80C, G80CS, G3LS, G3LCS, G80CS G3LCS, G80CS G3LS, G80, G80C, G80 |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 010906 010907 010908 010909 | Cap, filler Cap, filler Pin, split, for filler cap Tap, for petrol feed with filter Tap, for petrol feed with filter and banjo Washer, fibre for petrol taps Banjo, for petrol feed pipe Nut, dome, retaining banjo Washers, fibre for banjo Cork, for petrol feed tap Grip, knee, left hand side Plate, for left hand grip | 1 1 2 2 2 2 2 1 1 1 | G3LC, G3LCS, G80C, G80C, G80C, G80S, G3LC, G3LCS, G80C, G80CS, G3LCS, G80C |
| 014034 013325 013936 017050 021843 000200 022110 022111 022056 022112 010906 010907 010908 010908 010909 | Cap, filler Cap, filler Pin, split, for filler cap Tap, for petrol feed with filter Tap, for petrol feed with filter and banjo Washer, fibre for petrol taps Banjo, for petrol feed pipe Nut, dome, retaining banjo Cork, for petrol feed tap Grip, knee, left hand side Plate, for left hand grip Plate for right hand grip Bolt, for knee grip plate Petrol tap adaptor, long | 1 1 2 2 2 2 2 4 2 1 1 1 4 | G3LC, G3LCS, G80C, G80C, G80C, G80S G3LCS, G80C, G80CS G3LCS, G80C, G80C, G80C, G80C, G80C, G80C, G80C, G80C, G80C, G80C, G80C, G80S All G3L, G3LS, G3LC, G80, G80S, G80C ditto |
| 014034 013325 013936 017050 021843 000200 022111 022111 022112 010906 010907 010908 010909 010909 | Cap, filler Cap, filler Pin, split, for filler cap Tap, for petrol feed with filter. Tap, for petrol feed with filter and banjo Washer, fibre for petrol taps Banjo, for petrol feed pipe Nut, dome, retaining banjo Washers, fibre for banjo Cork, for petrol feed tap Grip, knee, left hand side Grip, knee, right hand side Plate, for left hand grip Plate for right hand grip Bolt, for knee grip plate | 1 1 2 2 2 2 2 4 2 1 1 1 4 1 | G3LC, G3LCS, G80C, G80CS G3L, G3LS, G80, G80CS G3LC, G3LCS, G80C, G80CS G3LCS, G80CS G3LS, G3LC, G3LS, G80C G80C, G80S MI G3L, G3LS, G3LC, G80, G80S, G80S ditto |

| OIL | AN | IX. | | | | |
|--|--------------------|--|---|---|--|---------|
| 022063 | | Tank, oil, bare | ı | G3L, | G80 | |
| | | Tank, oil, bare | 1 | G3LS | , G80S | |
| | | Tank, oil, bare | 1 | | , G800 | |
| | | Tank, oil, bare | - | | .S, G80 | |
| | ••• | Tank, Oll, U415 | i | | | , C3 |
| 013324 | ••• | Cap, filler, oil tank | ' | | G3LS, | |
| | | | | | G805 | |
| 021282 | | Cap, filler, oil tank | - 1 | G3FC | :, G3L0 | IS. |
| | | | | G80C | , G800 | :s |
| 021698 | | Stud, oil tank fixing | 2 | | G3LS, | |
| 021070 | ••• | Stud, on tank name the | _ | | G805. | |
| | | | | | | |
| | | | | | S. G80 | |
| 021329 | ••• | Washer, filler cap | - 1 | GJLC | , G3L0 | cs. |
| | | • | | G80C | , G80C | :S |
| 012019 | | Plug, drain, for oil tank | 1 | All | | |
| | | Washer, fibre, oil tank drain plug | i | All | | |
| | ••• | | - ; | | ••• | • • • |
| 000796 | ••• | Filter, felt, for oil tank | ! | All | | |
| 000704 . | ••• | Spring, for oil tank felt filter | 1 | All | | |
| 000797 | ••• | Cap, metal, dished, for oil tank felt filter | 1 | All | | |
| | | Cap, screwed, oil tank filter compartment | 1 | All | | • |
| | | | i | All | | |
| 000583 | ••• | Washer, cork, filter compartment cap | • | ~" | | • • • |
| | | | | | | |
| PETRO |)L | PIPE. | | | | |
| 000908-2 | _ | Flexible tubing, short, 2 ins | 1 | G3L | G3LS, | |
| 000700-2 | | HEXIDIE COUNTY, SHOTE, & MISSING | • | | , G80, | |
| | | | | | | |
| | | | _ | | G80C | |
| 000908-5 | ŧ | Flexible tubing, long, 5g ins | 2 | G3L, | G3LS, | |
| ·- | _ | • • | | G3LC | , G80, | |
| | | • | | | G80C | |
| 012020 | | Flexible pipe | 2 | | S, G80 | |
| 013829 | ••• | | ī | | | |
| 021844 | • | Petrol pipe "T" piece | • | | G3LS, | |
| | | | | | , G80, | |
| | | | | G80S, | , GBOC | |
| | | | | | | |
| | | | | | | |
| OII PI | IPF | s | | | | |
| OIL PI | | | | GN | GB0 | |
| 021774 | | Pipe, oil feed | • | G3L. | | |
| 021774 | | | 1 | G3LS | , G80S | |
| 021774 | | Pipe, oil feed | i | G3LS | | |
| 021774 021775 | | Pipe, oil feed | 1 | G3LS | , G80S | CS |
| 021774 021775 021283 | | Pipe, oil feed | | G3LC G3LC | , G80S S, G80 S, G800 | CS |
| 021774 021775 021283 011369 | | Pipe, oil feed | | G3LS G3LC All | , G80S S, G80 S, G800 | CS |
| 021774 021775 021283 011369 011924 | | Pipe, oil feed | | G3LS G3LC G3LC All All | , G80S S, G80 S, G800 | CS |
| 021774 021775 021283 011369 011924 011925 | | Pipe, oil feed | | G3LS G3LC G3LC All All All | , G80S S, G80 S, G800 | CS C |
| 021774 021775 021283 011369 011924 011925 015198 | | Pipe, oil feed | | G3LS G3LC G3LC All All All | , G80S S, G80 S, G800 | CS |
| 021774 021775 021283 011369 011924 011925 015198 | | Pipe, oil feed | | G3LS G3LC G3LC All All All | , G80S S, G80 S, G800 | CS C |
| 021774 021775 021283 011369 011924 011925 015198 015528 | | Pipe, oil feed | | G3LS G3LC G3LC All All All All | , G80S S, G80 S, G8 00 | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 | | Pipe, oil feed | | G3LS G3LC G3LC All All All All G3L, | , G80S S, G80 C, G800 | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 | | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Unlon, oil feed pipe (engine end). Nut, union for oil feed pipe. Filter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. | 1 1 1 1 | G3LS G3LC G3LC All All All All G3L, G80, | G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 | | Pipe, oil feed | | G3LS. G3LC All All All G3L, G80, G3LS | G3LC G3LC G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 | | Pipe, oil feed | 1 1 1 1 | G3LS G3LC AII AII AII G3L, G80, G3LS | G3LC G3LC G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 | | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed Pipe, oil feed pipe. Pipe, oil feed pipe Piter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. Pipe, oil, return. Connection, rubber, for oil return pipe. | 1 | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S All | G3LC G80C G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 | | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Union, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe Washer, fibre, for engine end oil feed union. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. | 1 1 1 1 | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S All All | G3LC G3LC G3LC G80C | OCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016677 | | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Union, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe Washer, fibre, for engine end oil feed union. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. | 1 | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S All | G3LC G80C G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 | | Pipe, oil feed | 1 | G3LS G3LC G3LC All All All G3L, G80, G3LS G80SAII All | G3LC G80C G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 | | Pipe, oil feed | | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S All All All | G3LC G80C G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016677 016677 016381 000513 | | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Union, oil feed pipe (engine end). Nut, union for oil feed pipe. Filter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. | | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S. All All All All | G3LC G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016677 016677 016381 000513 | | Pipe, oil feed | | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S All All All | G3LC G80C G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 | | Pipe, oil feed | | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S. All All All All | G3LC G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 | | Pipe, oil feed | | G3LS G3LC G3LC All All All G3L, G80, G3LS G80S. All All All All | G3LC G3LC G80C | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 | | Pipe, oil feed | | G3LS G3LC G3LC All All All G3L, G3LS G80S All All All All All | G3LC G3LC G3LC G80C | OCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016678 011381 000513 017180 | | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed pipe. Pipe, oil feed pipe (engine end). Nut, union for oil feed pipe. Pilter, metal gauze, for oil feed pipe. Pipe, oil, return. Pipe, oil, return. Pipe, oil, return. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. | | G3LS G3LC AII AII AII G3L, G80, G3LS G80S AII AII AII AII | G3LC G3LC G3LC G3LC | OCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016677 016678 011380 000513 017180 | EN | Pipe, oil feed | | G3LS G3LC AII AII AII G3L, G80, G3LS G80S AII AII AII AII AII | G3LC G3LC G80C , G80C , G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 0151598 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V | | Pipe, oil feed | | G3LS G3LC All All All All G3L, G80, G3LS G80S All All All All All All All All All Al | G3LC G3LC G80C , G80C , G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016677 016677 016381 000513 017180 OIL V | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed pipe. Pipe, oil feed pipe (engine end). Nut, union for oil feed pipe. Pilter, metal gauze, for oil feed pipe. Pipe, oil, return. Pipe, oil, return. Pipe, oil, return. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe. Extension, for release pipe extension. | | G3LS G3LC G3LC All All All G3L, G80S All All All All All All All All All Al | G3LC G3LC G3LC G3LC G3LC G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed pipe (engine end). Pipe, oil feed pipe (engine end). Pipe, oil feed pipe (engine end). Pipe, oil, return. Pipe, oil, return. Pipe, oil, return. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe. Rubber, for release pipe extension. Clin, for release pipe extension. | | G3LS G3LC All All All All G3L, G80, G3LS G80S All All All All All All All All All Al | G3LC G3LC G3LC G3LC G3LC G3LC | OCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed pipe (engine end). Pipe, oil feed pipe (engine end). Pipe, oil feed pipe (engine end). Pipe, oil, return. Pipe, oil, return. Pipe, oil, return. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe. Rubber, for release pipe extension. Clin, for release pipe extension. | | G3LS G3LC G3LC G3LC All All All G3L, G80, G3LS G80S. All All All All All All All All All Al | G3LC G3LC G80C , G80C , G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V 000755 000513 018742 018743 018744 018188 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed pipe (engine end). Pipe, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe Washer, fibre, for engine end oil feed union. Pipe, oil, return. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe Extension, for release pipe extension. Clip, for release pipe extension. Pipe, vent (rubber), for oil tank, 12 ins. long. | | G3LS G3LC G3LC G3LC All All All G3L, G80, G3LS G80S. All All All All All All All All All Al | G3LC G3LC G80C , G80C , G3LC | OCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V 000755 000755 0007513 018742 018743 018744 018188 015498 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed Pipe, oil feed pipe (engine end). Nut, union for oil feed pipe. Pilter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. Pipe, oil, return. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, top portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe. Rubber, for release pipe extension. Clip, for release pipe extension. Pipe, vent (rubber), for oil tank, 12 ins. long. Pipe, vent (rubber), for oil tank, 12 ins. long. | | G3LS G3LC All All All G3L, All All All All All All All All All Al | G80S, G80S, G80S, G80S, G80C | CCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V 000755 000513 018744 018188 018744 018189 0181498 015119 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe Unlon, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe Washer, fibre, for engine end oil feed union. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe extension. Clip, for release pipe extension. Clip, for release pipe extension. Pipe, vent (rubber), for oil tank, 12 ins. long. Pipe, vent (rubber), for oil tank, 13 ins. long. Pipe, vent (rubber), for oil tank, 13 ins. long. Pipe, vent (rubber), for oil tank, 13 ins. long. | | G3LS G3LC AH AH AH AH AH AH AH AH AH G3L, GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB0, G3LS GB1, G3LS GB1, GB1, GB1, GB1, GB1, GB1, GB1, GB1, | G80C G80C G80C G80C G80C G80C G80C G80C | CCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V 000755 000513 018742 018743 018744 018188 015129 015120 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Union, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe extension. Clip, for release pipe extension. Pipe, vent (rubber), for oil tank, 12 ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (metal insertion), for oil tank rubber vent pipe | | G3LS G3LC All All All All All All All All All Al | G80S, G80S, G80S, G80S, G80C, | CCS |
| 021774 021775 021283 011369 011924 011925 015128 021087 022069 011369 016677 016677 016677 016677 016381 000513 017180 011381 000513 018744 018744 018744 018749 015129 015129 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed pipe (engine end). Pipe, oil, return oil feed pipe Pipe, oil, return Pipe, oil, return Pipe, oil, return Pipe, oil, return Pipe, rocker box oil feed, top portion Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe Extension, for release pipe extension. Clip, for release pipe extension Clip, for release pipe extension Pipe, vent (rubber), for oil tank, 12 ins. long Pipe, vent (rubber), for oil tank, 12 ins. long Pipe, vent (rubber), for oil tank, 13 ins. long Pipe, vent (metal insertion), for oil tank rubber vent pipe Pipe, vent (rubber), for oil tank, 5% ins. long | | G3LS G3LC All All All All All All All All All Al | | CCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 018742 018743 018744 018188 015498 015119 015120 014936 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Union, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe extension. Clip, for release pipe extension. Pipe, vent (rubber), for oil tank, 12 ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (rubber), for oil tank, 8; ins. long. Pipe, vent (metal insertion), for oil tank rubber vent pipe | | G3LS G3LC All All All All All All All All All Al | | CCS |
| 021774 021775 021283 011369 011924 011925 015198 015528 021087 022069 011369 016677 016677 016677 016677 016742 011381 000513 017180 018744 018743 018744 018749 015120 014936 015120 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe Union, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe Washer, fibre, for engine end oil feed union. Pipe, oil, return Connection, rubber, for oil return pipe. Pipe, oil, return Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end T PIPES. Pipe, oll discharge, for release valve. Nut, union, oil discharge pipe Extension, for release pipe Extension, for release pipe extension Clip, for release pipe extension Pipe, vent (rubber), for oil tank, 12 ins. long Pipe, vent (rubber), for oil tank, 8½ ins. long Pipe, vent (rubber), for oil tank, 8½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long | | G3LS G3LC All All All All All All All All All Al | G80S G80S G80C | CCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V 000755 000513 018744 018188 015498 015119 015119 015120 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe. Union, oil feed pipe (engine end). Nut, union for oil feed pipe. Filter, metal gauze, for oil feed pipe. Washer, fibre, for engine end oil feed union. Pipe, oil, return. Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion. Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end. T PIPES. Pipe, oil discharge, for release valve. Nut, union, oil discharge pipe. Extension, for release pipe. Rubber, for release pipe extension. Clip, for release pipe extension. Pipe, vent (rubber), for oil tank, 12 ins, long. Pipe, vent (rubber), for oil tank, 8½ ins. long. Pipe, vent (metal insertion), for oil tank rubber vent pipe. Pipe, vent (metal), for oil tank, 5½ ins. long. Pipe, vent (metal), for oil tank, 5½ ins. long. Pipe, vent (metal), for oil tank, 5½ ins. long. Pipe, vent (metal), for oil tank, 5½ ins. long. Pipe, vent (metal), for oil tank, 5½ ins. long. Pipe, vent (metal), for oil tank, 5½ ins. long. Pipe, vent (metal), for oil tank, 5½ ins. long. | | G3LS G3LC All All All All All All All All All Al | G805 G805 G806 G3LC G3LC G3LC G80C . | CCS |
| 021774 021775 021283 011369 011925 015198 015528 021087 022069 011369 016677 016678 011381 000513 017180 OIL V 000755 000513 018744 018188 015498 015119 015119 015120 | EN | Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Pipe, oil feed. Connection, rubber, for oil feed pipe Union, oil feed pipe (engine end). Nut, union for oil feed pipe Filter, metal gauze, for oil feed pipe Washer, fibre, for engine end oil feed union. Pipe, oil, return Connection, rubber, for oil return pipe. Pipe, oil, return Connection, rubber, for oil return pipe. Pipe, rocker box oil feed, top portion Pipe, rocker box oil feed, bottom portion. Connection, rubber, for rocker box oil feed pipe. Nut, union, rocker box pipe, top end. Nut, union (extended type), rocker box pipe, bottom end T PIPES. Pipe, oll discharge, for release valve. Nut, union, oil discharge pipe Extension, for release pipe Extension, for release pipe extension Clip, for release pipe extension Pipe, vent (rubber), for oil tank, 12 ins. long Pipe, vent (rubber), for oil tank, 8½ ins. long Pipe, vent (rubber), for oil tank, 8½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long Pipe, vent (rubber), for oil tank, 5½ ins. long | | G3LS G3LC All All All All All All All All All Al | G80S G80S G80C | CCS |


SOUT MILEEL BEADINGS

WHEEL AND BRAKE SECTION.

FRONT WHEEL. THE COMPLETE WHEELS LISTED BELOW COMPRISE :-Rim, spokes, nipples, hub, hub disc, grease nipple, all bearings, and all brake parts including cover plate and expander lever, but does not include the tyre. 021986 ... Wheel, front, complete with all fittings, chrome rimred centre (Export only) G3L, G3LS, G80, G80S ... 021987 ... Wheel, front, complete with all fittings, chrome rim-black centre...... ditto When front, complete with all fittings, chrome rim ... ! G3LC, G3LCS, G80C, G80C5 .. THE BARE WHEELS LISTED BELOW COMPRISE :--Rim, spokes, nipples, and hub. 021989 ... Wheel, front, bare, less all fittings, chrome rim-red centre (Export only) G3L, G3LS, G80, G80S ... 021990 ... Wheel, front, bare, less all fittings, chrome rim black centre 1 G3LC, G3LCS, Wheel, front, bare, less all fittings, chrome rim G80C, G80CS... 021876 ... Rim, front, 19 in. by $2\frac{1}{2}$ ins., chrome—red centre (Export only) (A.M.C. 23)..... G3L, G3LS. G80, G805 ... Rim, front, 19 ins, by 2½ ins., chrome (AMC 23)— 012220 ... 021151 ... Rim, front, 21 ins. by 21 ins., chrome....... G3LC, G3LCS, G80C, G80CS... G80, G80S G80C, G80CS... 021461 ... Hub, front wheel, shell only with brake drum 1 All 000051 ... Nipple, grease, for front wheel hub..... G80. G80S G80C, G80C5... ditto Bolt, security, for front wheel 021464 .. Disc, for R.H. side of hub....... G3LC, G3LCS 021550 ... Grommet, rubber for disc...... G80C, G80CS...

| FRON | IT | WHEEL BEARINGS. | | | | | |
|---------|---------|---|------|------------------|--------|------|--|
| 012825 | | Spindle, with roller bearings, for front wheel | 1 | All | | | |
| 010579 | | Oil-seal, for front hub bearings | 2 | All | | | |
| 017219 | | Ring, spring, locating front hub bearings | i | ΑII | | | |
| 018093 | | Cup, for front hub bearing oil-seal | 2 | ΑH | | | |
| 018096 | | Ring, retaining front hub bearing oil-seals | 2 | All | | | |
| 021279 | | Nut, lock, for front hub bearing adjusting ring | F | All | | | |
| 021161 | | Ring, adjusting, for front hub bearing | 1 | AIL | | | |
| 021931 | | Nut, locating front brake cover plate | 1 | All | | | |
| | | Nut, outside, securing front brake cover plate | i | Ali | | | |
| 018071 | | Nut, front wheel spindle, left side | i | All | | | |
| 000001 | | Washer, plain, front wheel spindle, left side | i | Aii | | ••• | |
| 000008 | ••• | Trainer, plant, from whice spinale, fele side | • | 7111 | ••• | ••• | |
| REAR | V | VHEEL. | | | | | |
| | | THE COMPLETE WHEELS LISTED BELOW COMPRIS Rim, spokes, nipples, hub, grease nipple and all bear include the centre solid spindle, washers, spacers, i brake drum, speedometer drive and tyre. | ings | assemb | | | |
| 021994 | | Wheel, rear, with all fittings, chrome rim- red centre | | | | | |
| | | (Export only) | i | G3L, C | | | |
| 021995 | | Wheel, rear, with all fittings, chrome rim-black centre | 1 | ditto | | ••• | |
| 021997 | | Wheel, rear, complete, with all fittings, chrome rim | i | G3LC, | G3LC | S. | |
| | | | | G80C, | | | |
| | | THE BARE WHEELS LISTED BELOW COMPRISE:—Rim, spokes, nipples and hub. | | | | | |
| 021998 | | Wheel, rear, bare (less fitting) chrome rim-red centre | | | | | |
| | | (Export only) | I | G3L, C G80, C | | | |
| 021999 | • • • | Wheel, rear, bare (less fittings) chrome rim black | | | | • | |
| •••• | ••• | centre | 1 | ditto | | | |
| 022001 | | Wheel, rear, bare, less all fittings, chrome rim | i | GILC. | care | c | |
| | • • • • | | | G80C. | | | |
| 021815 | | Rim, rear, chrome rim red centre (Export only) | | G00C, | GOUC. | J | |
| | • • • • | (A.M.C. 24) | 1 | CH (| 731.0 | | |
| | | (A.11.C. 27) | ٠. | -, | | | |
| 021814 | | Dim year chrome sim black contro (A M C 34) | | G80, C | 2002 | | |
| 021817 | • • • | Rim, rear, chrome rim black centre (A.M.C. 24) | ! | ditto | C 31 C | , | |
| 021017 | ••• | Rim, rear, 19 ins. by 3 ins., chrome (A.M.C. 25) | i | GILC, | | | |
| 021691 | | Combination of the Aller A. 10.0 | 40 | G80C, | | ۵ | |
| V2.071 | ••• | Spoke, rear, left or right, $6\frac{13}{16}$ ins. by 10 G | 40 | G3L, C | | | |
| 021692 | | S | | G80, C | | | |
| 021872 | • • • | Spoke, rear, left or right, 612 ins. by 8 G | 40 | G3LC, | | | |
| 021693 | | Allerda 1.6 . 1. 200 . 1. 10.0 | | G80C, | | ۵ | |
| 02.073 | ••• | Nipple, rear, left or right, -250 in. by 10 G | 40 | G3L, C | | | |
| 021694 | | Alberta 1.6 (1. ann) 1. ann | | G80, C | | ··· | |
| 021074 | ••• | Nipple, rear, left or right, 300 in. by 8G | 40 | G3LC. | | | |
| 021580 | | that is a first or a | | G80€, | | S | |
| -21.500 | ••• | Hub, rear wheel, shell only | 1 | G3L, | | | |
| 021695 | | | | G80, C | | | |
| 1073 | ••• | Hub, rear wheel, shell only | ı | G3LC. | | | |
| 021550 | | | | G80C, | GB0C | š.,. | |
| 021582 | ••• | Grommet, rubber for disc | | ditto | | | |
| 000051 | ••• | Disc, for right hand side of hub | | All | | | |
| 011090 | ••• | Nipple, grease, for rear wheel hub | ı | All | | | |
| 011707 | ••• | Tape, for 19 ins, rear rim | 1 | All | | | |
| 4,170/ | ••• | Bolt, security, for rear wheel | 2 | G3LC, G80C, | | | |
| | | | | | | | |

WHEN IN DOUBT REGARDING THE NAMES AND PART NUMBERS OF THE PARTS YOU REQUIRE, PLEASE SEND THE OLD PARTS TO SERVE AS PATTERNS.

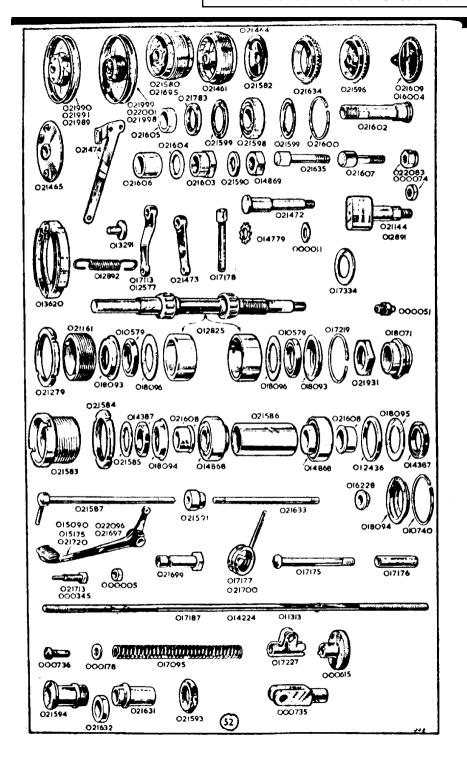

| REAR | WHEEL BEARINGS. | | | | |
|--------|--|-----|-------|----------------------------|----------|
| 014868 | Bearings, roller, for rear hub (only sold as a complete | | | | |
| | bearing) | | All | | |
| 014387 | Oil-seal, for rear hub bearings | | All | | |
| 016740 | Ring, spring, locating rear hub bearings | 1 | AII | | |
| 018094 | Cup, for rear hub bearing oil-seal | 2 | All | | |
| 021585 | Ring, retaining rear hub bearing oil-seals, small | | All | | |
| 018095 | Ring, retaining rear hub bearing oil-seals, large | 2 | All | | • • • |
| 012436 | Collar, spacing, between bearing and rear hub bearing | | 711 | | |
| 012130 | oil real | | | | |
| 021586 | oil-seal Spacer, $2\frac{\pi}{18}$ ins. long between the two bearings of rear | | Ali | | |
| | hub | - 1 | All | | |
| 021583 | Ring, adjusting, for rear hub bearing | 1 | All | | ••• |
| 021584 | Nut, lock, for rear hub bearing adjusting ring | - 1 | All | | |
| 021587 | Spindle, centre, solid, for rear wheel | 1 | | 5, G3L0 5, G80C | |
| 021633 | Spindle, centre, solid, for rear wheel | - 1 | GN | G3LC, | |
| | · · · · · · · · · · · · · · · · · · · | • | CON | G80C | |
| 021608 | Spacer, on spindle, for oil-seals | ٠. | | | |
| 021594 | | 2 | Ali | | ••• |
| 021377 | Spacer, on rear wheel solid spindle, for speedometer | | | | |
| | gearbox (carries nut) | - 1 | All | • • • | |
| 021593 | Nut, locking speedometer gearbox | - 1 | All | | |
| 014704 | Sleeve, on rear wheel solid spindle, locating brake cover | | | | |
| | plate | 1 | All | | |
| 021591 | Spacer, rear wheel solid spindle (abuts against fork end) | • | • | ••• | • • • • |
| | speedo side | 1 | Care | 6, G3L0 | ~c |
| | speeds side | • | | | |
| 016228 | Collegian management and districtly following the first | | Geog | , C80C | 3 |
| 010220 | Collar, on rear wheel solid spindle (abuts against fork | _ | | | |
| | end) | 2 | G3L, | G3LC, | , |
| | | | G80, | G80C | |
| 014869 | Nut, for rear wheel solid spindle | 2 | ditto | | |
| 014869 | Nut, for rear wheel solid spindle | Ī | | . G3LC | ٠, |
| | | | | . G80C | |
| 021590 | Washer, for solid spindle | 2 | | | |
| | The second spinote statement stateme | - | | G3LC. | |
| 021590 | Weeken for selld and the | | | G80C | |
| 021370 | Washer, for solid spindle | 1 | | i, G3L0 i, G8 00 | |
| ERON | T 3RAKE. | | | | |
| - | | | | | |
| 021744 | Drum, front brake (must be fitted at works) | 1 | Αll | | • • • |
| | . Screw, fixing front brake drum to hub shell | 5 | All | | |
| 011846 | Locknut for brake drum screw | 5 | All | | |
| 021465 | Plate, cover, front brake | Ī | Att | | |
| 021474 | Stay, front brake cover plate anchor | i | All | | |
| 014807 | Bolt, fixing anchor stay to front cover plate, # in. by | | , | ••• | |
| | \$ in hy 76 | 1 | All | | |
| 014119 | in, by 26 | | | • • • | • • • |
| 021472 | Washer, special, for anchor stay bolt | ! | All | ••• | ••• |
| | Pin, fulcrum, for brake shoes | - 1 | All | | |
| 000010 | Washer, plain, (inner for pin) | 1 | All | | |
| 110000 | Washer, plain, (outer for pin) | ı | All | | |
| 000004 | Nut, for brake fulcrum pin | i | All | | |
| 013620 | Shoes, pair of, for front brake, with brake linings and | • | | | • • • |
| | thrust pins (only supplied in pairs)per pair | ı | All | | |
| 013291 | Pin, thrust, brake expander adjusting | | | • • • | *** |
| | | 2 | All | | • • |
| 010440 | Washer, plain, for thrust pin | R | All | | |
| 000113 | Linings, brake, per pair of, less rivets | - | All | | |
| A | Kivets, for brake liningsper set of | 12 | All | | |
| | Spring, for brake shoes | 2 | All | | |
| | Expander, for brake shoes. | Ĩ | All | | |
| 017334 | Washer, packing for expander bush | i | Ali | | |
| 031475 | Lever, for front brake shoe expander | ï | | • • • • | ••• |
| 000051 | The state and expended | • | All | | ••• |
| 000174 | | ı | All | ••• | ••• |
| | Washer, plain, for brake shoe expander | 1 | All | | ••• |
| | Nut, for brake shoe expander | - 1 | All | | ••• |
| | 51 | | | | |

| 1 | RFAR | R BRAKE. | | REAR BRAKE OPERATING PARTS continued. | |
|--|--------|---|--------------------|---|----------------------------|
| Section Sect | | Sprocket, and brake drum, for rear wheel, 42 | teeth I G3L, G3LC, | | 1 GHS GHGS |
| Month September Septembe | | Bolt, retaining sprocket to rear hub, 33 in. by 3 in. | 1. by 26 5 ditto | | G805, G80C5 1 G3L, G3LC |
| | | ht a fee coor sprocket retaining bolt | 3 01110 | 000005 Nut. for rear brake, foot pedal adjusting hale | G80, G80C |
| Display | | | 1 (3)(3), (3)((3), | 011313 Rod, bare, rear brake | I All |
| | 021370 | • | 9003, 90003 | | C 00 |
| 1 | 021607 | Pin, driving in hub | 5 ditto | UI/18/ Rod, bare, rear brake | |
| | 022083 | Nut, for driving pin | 1 6315 631 65 | DITER NOU, DATE, FEAT DIAKE | 1 031.00 |
| Files, cover, rear brake GSL, GSLC GSD, GSDC GS | 021609 | | | 999/33 Eliu, Yoke, lor iront end of hrake rod | |
| 1917/17 Solic packer, rate Prake cover plate, [1] int. by [1] in. by [2] | | | | OOO 30 FIR. 10F Drake rod voke end | 1 4 11 |
| Doll anchor, fram brike cover plate, [4] int. by Gil., GILC, O00772 College | 016004 | Plate, cover, rear brake | | ****** *** Fift, Split, for Drake rod voke and nin | 1 40 |
| Solt, school, raw phase wheel of the place, "yet may a plan" Gil. Gil.C. (Gil.C. (| * | | 300, 3000 | orions Spring, for prake rod | |
| Composition | 017178 | Bole, anchor, rear brake cover plate, 199 ins. by t | 110. DY | OUT Collar, for brake rod, spring | 1 4.0 |
| Mut. for rear brake cover plate ancher bold | | 26, with square head | | V1/44/ CID. 2010Sting, for rear and of brake and | |
| Description Common Commo | | , the table | | VVVI V III. TOT DEAKE FOR admission clip | |
| | 000003 | Nut, for rear brake cover plate anchor bott | I ditto | TOTAL | |
| | 000006 | Pin, split, for rear brake anchor bolt | | 000613 Nut, adjusting, for rear brake rod | 1 An |
| 101106 Spacer, for brake cover plate, outer | 021632 | Spacer, for rear brake cover plate, outer | J GILLO | | |
| 10,100 10,000 1 | 021631 | Spacer, for rear brake cover plate, inner | | | |
| Display Specific for brake down Specific for brake drum Specific for Brake for Brake for Brake for Specific for Specific for Brake for Specific for Brake for Specific for Brake for Specific for Brake for Specific for Brake for Specific for Specific for Specific for Brake for Specific for Specifi | 021606 | Spacer, for brake cover plate, outer | | | |
| Part | | • | G603, G60C3 | | |
| | 021605 | Spacer, for brake cover plate, inner | 1 ditto | | |
| Circling, for brake drum bearing | 021598 | Bearing, ball, for brake drum | | | |
| 201602 201602 201603 201603 201604 201605 | 021599 | Washer, for brake drum bearing | 2 ditto | FI FCTDICAL | |
| 201602 201602 201603 201603 201604 201605 | 021600 | Circlip, for brake drum bearing | 1 0100 | ELECTRICAL SECTION. | |
| Octool Octoo Oct | 021783 | 3 Oil seal, for brake drum bearing | 1 ditto | | |
| Mills Mather, for dummy spindle. ditto DESCRIPTION. QTY ON. EACH | 021602 | 2 Dummy, spindle, for bearing | | DADT | |
| DESCRIPTION DESCRIPTION OTY ON EACH | 021603 | 3 Nut, for dummy spindle | I ditto | hii Marea | LICED PRICE |
| Shoes, pair of, for rear brake, with brake linings and thrust, brisk gonly supplied in pairs) All | 021604 | 4 Washer, for dummy spindle | I ditto | NUMBER. DESCRIPTION. O | TO 11106 |
| thrust pins (only supplied in pairs). per pair All All | 013620 | Shoes, pair of, for rear brake, with brake linit | ngs and | * | LACH. |
| 100-040 Linings, brake, per pair of (est sivets All | | thrust pins (only supplied in pairs) | perpair I All | | L S. d. |
| 101440 Linings, brake, per pair of, less rivets All | 013291 | Pin, thrust, brake expander adjusting | | | |
| October Color C | 000174 | 4 Washer, plain, for thrust pin | K All | | |
| Occupant Company Court | 010440 | n liminge heake nor nair of less rivets | I All | 015487 Magneto, type NR-1 (Lucas No. 421705) | _ |
| 021352 Spring, for brake shoes All Call | 000113 | 3 Biver for heaks linings | erset of 14 All | (Cocas 140, 421/7E) | G3LC, G3LCS, |
| Color Colo | 012892 | Soring, for brake shoes | 2 All | 021352 Magneto tyne SR-1 | |
| Cab | 012891 | Expander, for brake shoes | | 7,70 | |
| G80, G80C G | 017113 | 3 Lever, for rear brake shoe expander | | For components and social for OLE 407 | G3L, G3LS 🛖 |
| G80, G80C G | | | | and service for orsher magneto apply to nearest Li | JCAS SERVICE STATION. |
| Misple, grease, for brake shoe expander All | 012577 | 7 Lever, for rear brake snoe expander | G80 G80C | 458019 Cover, bakelite, for SR-1 magneto | 621 621 - |
| Mil. | | s ser s access for banks abou averander | | | |
| Mut. for brake shoe expander | | | 1 All | 458194 Gasket, for cover | |
| ## ## ## ## ## ## ## ## ## ## ## ## ## | | 4 Washer, blain, for brake snoe expander | I All | | |
| REAR BRAKE OPERATING PARTS. | 000004 | 4 Mut, for brake snoe exhanger | | | |
| REAR BRAKE OPERATING PARTS. 021720 Pedal, foot, for rear brake. G3LS, G80S G80C, G80CS G80C, G80CS G80C, G80CS G80CS G80C, G80CS G80CS G80CS G80CS G80C, G80CS | | | | | |
| REAR BRAKE OPERATING PARTS. 021720 | | | | 015488 Pipe, vent, rubber, for magneto | |
| 021720 Pedal, foot, for rear brake | | | | | |
| 021720 Pedal, foot, for rear brake | REAL | R BRAKE OPERATING PARTS. | | 021194 Pipe, vent, metal, for magneto | G80C' C80C2 |
| O15090 | | | | 458053 Contact set for magneto SR-1 | |
| District Pedal, foot, for rear brake 1 G3LC, G80C | Pedal foot for rear brake | | | |
| Pedal (soot, for rear brake foot pedal G3LS, G3LCS, G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80C G80S, G80CS G80 | | Pedal foot for rear brake | I G3LC, G80C | | |
| G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G30S, G80CS G80C, G8 | | M Padal (not for rear brake | 1 G31.C3, G80C3 | Auto-control unit with sprocket | |
| Color Colo | | Fulcrum for rear brake foot pedal | | | G1L, G1L\$ 💥 |
| GBO, GBOC GBO, GBO, GBOC GBO, GBO, GBO, GBO, GBO, GBO, GBO, GBO, | 021077 | | C302, G80C2 | MAGNETO SIVING BARTS | • |
| Comparison of the comparison | 017174 | 74 Bush for rear brake foot pedal | | DIMON PARIS, | |
| Octobe Color Col | 017176 | Dusni, for real orang tool production | G80, G80C | 00020 Platform, for magneto | A.U |
| O17175 Spring, rear brake foot pedal G80, G80C | none i | Ningle grease, for rear brake foot pedal | | Monra Bolt, fixing magneto, left, short, 1 in, by 1 in, by 20 | All |
| 000009 Washer, plain, rear brake pedal spindle | | Spindle rear brake foot pedal | 1 G3L, G3LC, | Otopa Washer, plain, magneto front fixing bolt | All |
| Octoo Octo | Q1/1/3 | to Spinstic teat at any taxa bases | G80, G80C | 010024 Stud, fixing platform at rear, 64 inc by 1 in bunder | All |
| Octoo Octo | ****** | Washee plain rear brake pedal spindle | | Otomon Stud, fixing platform at front, 63 inc. by 2 in bu 2/ | All |
| Octoo Octo | | Wisher spring rear brake heads springle | | Spacer, It ins. long (3 in internal) alsele | Alf |
| G80S, G80CS G80S, | | 77 France, apring, real brake pedal aprilule | *********** | | • |
| 017177 Spring, return, rear brake foot pedal | | Of Corine cetters rear brake foot nodal | I G3LS, G3LCS, | Spacer, It ins. long (2 in internal) places t | AII |
| 017177 Spring, return, rear brake foot pedal | 921/0 | ou Spring, recorn, rear brake look pedar | | fixing stud fixing stud fixing stud | . |
| G80, G80C Price on application, | 61717 | 77 Spring return, rear heake foot pedal | | Shield, for magneto | All |
| A conse on oppinion, | 91/1/ | 11 Shime i section i set at eve toor beganning | | * Price on application | G3L, G3LS |
| | | | | м стор он орупсицан, | |

| DYNAMO. | TO LAMO COMPETITION |
|--|---|
| 014599 Dynamo, tyne F3N-1-Q (Lucas No. 20028-A) All | REAR LAMP COMPETITION. |
| 200727 Set of brushes for F3N Dynamo | 021879 Lamp, rear, with bulb (Lucas 529) I All |
| 200826 Cover assembly 1 All | 526404 Window cover, red I All |
| | 526406 Window cover, White I All |
| | 133551 Screws, for red window cover |
| | 526408 Seat, rubber, for lamp I All |
| DYNAMO FIXING PARTS. | 554719 Bulb holder and cable I All |
| 010962 Strip, dynamo, locating I All | 526410 Screw, securing lamp to plate |
| 000044 Screw fixing locating strip to dynamo, I in. by I BA 2 All | 166103 Nut, for securing screw |
| 000075 Washer, plain, for locating strip screw | 188412 Washer, for nut |
| 017197 Strap, clamping dynamo All | |
| 010963 Pin, hinge, for dynamo clamping strap All | REAR LAMP TOURING (early models) |
| 017145 Sleeve, threaded, for eye of dynamo strap I All | 018760 Lamp, rear (Lucas 525, No. 53269A) |
| 018002 Bolt, tightening dynamo strap, 21 ins. by 15 in. by 26 All | 573819 Window cover, red, for rear lamp All |
| 010926 Crossbar, squara, for dynamo clamping strap All | 573814 Rubber gasket, for window cover |
| | 572072 Screw, retaining lamp window cover 2 All |
| • | 166014 Nut, retaining body to rear number plate |
| VOLTAGE REGULATOR. | 188330 Spring washer, for body to rear number plate |
| | 860428 Rear lamp cables with contact disc All |
| 015070 Regulator, complete unit, type MCR 2 (Lucas No. | 573825 Rubber cap, covering cable entry I All |
| 37144-A) | |
| 000342 Bolt, fixing regulator unit, 11 in. by 11 in. by 26 | BEAD I AMD WITH INTEGRAL BEFLECTED TOLLOWS |
| 000346 Bolt, fixing regulator unit | REAR LAMP WITH INTEGRAL REFLECTOR, TOURING (later models) |
| 000012 Washer, plain, for regulator fixing bolt | 022126 Rear lamp, complete (Lucas L-564) |
| 018160 Nut, for regulator fixing bolt | 3/3837 Window cover, red, for rear lamp |
| 000639 Spacer, for regulator fixing bolt | 575200 Window cover, white, for rear lamp All |
| | 575208 Rubber gasket for window cover All |
| | 552928 Screw, retaining window cover 2 All |
| | |
| BATTERY. | 575209 Bulb holder I All 860428 Rear lamp wires, with Paxoline washer I All |
| 4080157 Battery, with lid, dry and uncharged. This is a battery | \$7393\$ Pubbon and 11 |
| that has NOT been filled with electrolyte (acld) and is, | 166014 Nut, retaining body to rear number plate |
| of course, not charged. It requires no special packing, | 19033U Spring washer for fixing put |
| and can safely be packed with other goods. (Lucas | 2 80 |
| No. PU-7E-9.) (We do not supply charged batteries—for such apply to nearest Lucas Service | STOP LICUT PARTS (O |
| Station) I All | STOP LIGHT PARTS (Optional Extra) |
| 4159062 Lid, only, with rubber pads, for battery I All | 018654 Complete kit of stop light parts I Rigid |
| 1137002 Ela, 5.117, 1141 13000, p.137, 10. | VZZVVZ Complete kit of stop light parts |
| | 900269 Snap connector |
| | 022085 Competition |
| HEAD LAMP. | |
| 021802 Lamp, head, with bulb, ammeter, switch, no cable | |
| harness (not Europe) I Touring | 022031 Stop fight amint |
| 021803 Lamp, head, with bulb, ammeter, switch, no cable | Y19767 FULL Off spring for equiech |
| harness (Europe, except France) | 710/02 Bracket, for switch |
| 021804 Lamp, head, with ammeter, switch, less cable harness | Bracket, for switch |
| and bulb (France only) I ditto | 018764 Clip, for pull off spring |
| 014963 Lamp, head, type MU42, with bulbs, ammeter, switch | Competition |
| and socket, no cable harness | Screw, securing switch and spring clip |
| and the second state of th | The securing switch and spring clip 2 1 |
| Table | Annual to spring this color |
| 553248 Rim, bare, for head lamp | AAA |
| 553925 Light unit, reflector and glass (all except Europe) I Touring | 011907 Rubber cable clo |
| 553948 Light unit, reflector and glass (Europe, except France) Touring | |
| 553940 Light unit, reflector and glass (France only) Touring | A. A. Ruoder cable clin |
| 550875 Glass, only, for headlamp Competition | 014453 Metal cable clip |
| 553147 Reflector, only, with bulb holders ditto | Competition |
| 555005 Adaptor (bulb holder) (except France) | · |
| 186131 Screw, fixing panel to head lamp | SIDE LAMP. |
| 112201 Bolt, fixing lamp to bracket 2 ditto | [990] |
| 137141 Washer, plain, head lamp fixing bolts | Civata Total Lamp Complete, type 516 |
| See ELECTRICAL SUNDRIES for Ammeter, Switch, Cable Harness and Bulbs. | 573615 Rubber Grummet, for side lamp |
| See ECECINICAL SUINDRIES for Ammeter, Switch, Cause Harness and Bulos. | Example Of Side 13mh |
| | 373646 Rim and bead, for side lamp 2 ditto |
| 56 | |

HORN.

| 015257 | | Horn, electric, with bracket, type HF. 1234 (Lucas No. | | | | |
|--------|---|--|-----|-----|----------|--|
| | _ | 70039-A) | | | *** | |
| 011569 | | Horn, bulb | - 1 | Com | petition | |
| 015245 | | Bracket, only, for electric horn (Lucas No. 701686) | ı | Ali | | |
| 000402 | | Bolt, securing electric horn, 3 in. by 3 in. by 26 | ı | AII | | |
| 015706 | | Washer, rubber, for horn fixing bolt | 2 | Αli | | |
| 015707 | | Washer, plain, for horn fixing bolt, rubber washer | ! | All | | |
| 000193 | | Washer, spring, for horn fixing bolt | 1 | ΑIJ | | |
| 000010 | | Washer, plain, for horn fixing bolt | ı | All | | |
| 015705 | | Nut sleeve for horn fixing bolt | | | | |

ELECTRICAL SUNDRIES.

| 36084 | | Ammeter, for head lamp | | | | |
|--------|---------|---|-----|---------|-------------|---------|
| 351551 | | Switch, main lighting, for head lamp | Ţ | | | |
| 351567 | | Handle, with screw, for main lighting switch | 1 | | | |
| 380521 | | Switch, dipping, for handlebar | ı | Comp. | | |
| 021301 | | Switch, dipping, for handlebar | ł | All To | aring | |
| 330459 | | Rubber packing, for dip switch | 1 | ditto | | |
| 021299 | | Screw, securing dip switch | 2 | ditto | | |
| 016427 | | Switch, horn, for handlebar (Lucas No. 76209) | 1 | All | | |
| 997831 | | Cable harness, main lighting (no dip switch wire, no horn | | | | |
| | | wire, no regulator wires) | 1 | Tourin | g | |
| 014964 | | Cable harness, main, lighting and horn, with socket | | | • | |
| | ••• | (Lucas No. 994521) | Ŧ | Compe | tition | • |
| 858795 | | Cable harness, triple, for dipping switch | i | | | |
| 860595 | | Cable harness, for regulator | i | All | | |
| 359218 | | Cable, for horn | i | Tourin | 0 | |
| 016681 | | Sheath, for horn cable | i | | • | |
| 000543 | | Cable, high tension, for sparking plug, price per foot | Ŕ | All | • • • • | ••• |
| 809793 | ••• | Plug, for head lamp | ï | Compe | etition | |
| 809795 | | Socket, for main harness | i | ditto | | • • • |
| 000541 | | Terminal, for high tension cable | i | All | | |
| 900269 | | Connector, snap, for rear lamp cable | i | Ali | | |
| 900269 | ••• | Connector, snap, for regulator to ammeter cable | i | All | | ••• |
| 011094 | • • • | Bush, rubber, fits in rear mudguard, for rear lamp cable | • | Tourin | | • • • |
| 312 | | Bulb, head lamp, main, 6 volt, 30 by 24 watts (not | • | 1001111 | E. | • • • |
| 312 | • • • • | EL ope) | ı | ditto | | |
| | | Plus Purchase Tax | • | dicto | | |
| 988 | • | Bulb, head lamp, pilot, 6 volt, 3 watts | 2 | ditto | - | |
| 700 | ••• | Plus Purchase Tax | - | ditto | • • • • | ••• |
| 384 | | Bulb, rear lamp, 6 volt, 18 and 6 watt Double Contact | ī | ditto | | |
| 304 | ••• | Plus Purchase Tax | ٠ | ditto | | ••• |
| 951 | | Bulb, rear lamp, 6 volt, 6 watts, S.B.C. Single Contact | ī | · | | |
| 731 | ••• | Disc Breed on Torr | • | Compo | etition | • • • • |
| 200 | | Plus Purchase Tax. | _ | | _ | |
| 200 | • • • | Bulb, head lamp, pilot, 6 volt, 3 watts, S.B.C. Single | | 41 | | |
| | | Contact | ı | ditto | • • • | |
| 168 | | Plus Purchase Tax | | ´ ~ | | |
| 100 | • • • | Bulb, head lamp main, 6 volt, 24 by 24 watts | 1 | Compe | tition | |
| 015538 | | Plus Purchase Tax | _ | Atl | - | |
| 015399 | | Plug, sparking, KLG, type FE-80 | - ! | | | • • • |
| 015399 | • • • | Cover, waterproof, for sparking plug | 1 | Compe | noitit | • • • |
| 021310 | • • • | Cover for dyanamo terminals | 1 | All | • • • | ••• |
| | | | | | | |

BEFORE ORDERING PLEASE NOTE THE INFORMATION GIVEN ON PAGES TWO AND THREE

ACCESSORY SECTION.

| | | 7.00200011. 0201.011. | | | |
|---|----------|--|-----|--------------|-------------|
| COMI | PI F | TE TOOL KITS. | | | |
| 022026 | | Tool kit, complete, with tyre inflator | ı | G3L, G31 | .S. |
| | | · | | G80, G80 | |
| 022027 | | Tool kit, complete, less tyre inflator | - 1 | ditto | |
| 022028 | | Tool kit, complete, with tyre inflator | - 1 | G3LC, G | BLCS. |
| | | | | G80C, G8 | 30CS |
| 022029 | ••• | Tool kit, complete, less tyre inflator | 1 | ditto | |
| | | . • | | | |
| TOOL | .S. | | | | |
| 017253 | . | Bag, for tools | - 1 | AII | |
| 021265 | | Screwdriver | - 1 | All | ••• |
| 017248 | | Pliers, side cutting. | - 1 | All | *** |
| 881110 | | Pliers, for gudgeon pln circlips | - 1 | All | *** |
| 017246 | | Gun, grease | | All | |
| 017114 | | Inflator, tyre | | AII | |
| 017007 | | Lever, tyre | | All | |
| 017052 | ••• | Spanner, double end, A in. by I in | | All | ••• |
| 17053 | ••• | Spanner, double end, $\frac{5}{16}$ in. by $\frac{8}{8}$ in | | All | ••• |
| 18176 | ••• | Spanner, double end, 1-010 in. by 1-2 in | i | All | ••• |
| 17257 | | Spanner, double end, $\frac{3}{16}$ in. by -375 in | i | All | ••• |
| 17252 | | Spanner, box, with tommy, for sparking plug | i | All | *** |
| 17254 | | Spanner, single end, dynamo chain and clutch adjustment | i | All | |
| 17249 | | Wrench, adjustable | | Atl | |
| 15023 | | Spanner, double end, with gauge, for contacts (Lucas | • | **** | • • • • |
| | | No. 415116) | - 1 | G3LC, G | ai cs |
| | | , | • | G80C, G8 | |
| 21889 | • | Scrawdriver, magneto | | G3L, G3L | |
| | ••• | | • | G80, G80 | |
| 15213 | | Spanner, box. 3 in | 1 | All | |
| 18153 | • • • | Spanner, for petrol taps | | G3LCS, | GROCS |
| 18055 | | Key, for handlebar clip screw | i | | |
| | | trey, for namerous cup screw | ' | G3L, G3L | |
| 18667 | | Key, for fork crown pinch screw | 1 | G80, G80 | |
| ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, | ••• | Key, for fork crown pinch screw | • | G3L, G3L | |
| 000174 | | Brake thrust pin packing washer | ٥ | G80, G80 | 3 |
| | ••• | orace circust pin packing wasner | 8 | All | ** |
| | | | | | |
| | | TOOLS. | | | |
| 017482 | ••• | Holder, valve, for valve grinding | -1 | All | |
| 18276 | • | Compressor, for valve spring removal | - 1 | All | *** |
| 22011 | ••• | Disc, timing (see Instruction Book) | 1 | 11A | |
| | | The above tools are NOT INCLUDED in the equipm "complete" tool kit. | ent | of a new | motor cycle |
| √ARI0 | วบร | S EQUIPMENT. | | | |
| 18691 | | Bar, locking, for fork crown | i | All . | • • • |
| | ••• | Set of Pannier bags, with frames and fixing bolts, washers and nuts. | | C11 C C C | ^ |
| | | Plut Purchase Tay | 1 | G3LS, G8 | US . |
| 16866 | | Plus Purchase Tax. | | _ | |
| | ••• | Set of Pannier bags, with frames and fixing bolts, | | CN | |
| | | Washers and nuts | ١ | G3L, G80 | • • • |
| 11957 | | Plus Purchase Tax | | - | |
| 11958 | ••• | "TEKALL" Rust preventative ! pint "TEKALL" Rust preventative ! pint | R | All | |
| | ••• | Instruction Manual | R | Ali | • • • |
| -M-H | | Instruction Manual Badge monogram Myrchler for hurran hal- | R | All | |
| -M.T | ••• | Badge, monogram, Marchless, for button hole | | All | |
| ⊱M.B | ••• | Badge, monogram, Matchless, for tie | R | All | * * * |
| | | Badge, monogram, Matchless, for brooch fixing | R | All | |

SPEEDOMETERS.

| 022003 | | Speedometer, trip, 80 M.P.H. complete | í | | • • |
|----------------|---------|--|-----|-----------------|-------|
| 022004 | | Speedometer, trip, 80 M.P.H. complete | ! | | • • |
| 002205 | | Speedometer, trip. 120 M.P.H. complete | 1 | | • • |
| 022006 | | Speedometer, trip. 120 M.P.H. complete | ı | | ٠. |
| 022007 | | Speedometer, trip, 140 K.P.H. complete | ı | G3L | |
| | | Speedometer, trip, 140 K.P.H. complete | 1 | G3LS | |
| 022008 | | Speedometer, trip, 180 K.P.H. complete | i | G80 | |
| 022009 | • • • | Speedometer, trip, 180 K.P.H. complete | 1 | G80S | |
| 022010 | ••• | Speedometer, trip, 120 M.P.H. complete | i i | G3LC, G80C | |
| 021447 | • • • | Speedometer, trip, 120 M.P.H. complete | i | G3LCS, G80CS | Ś |
| 021 448 | | Speedometer, trip. 120 M.P.H. complete | : | G3LC, G80C | • |
| 021 449 | | Speedometer, trip, 180 K.P.H. complete | ; | G3LCS, G80C | è |
| 021450 | | Speedometer, trip, 180 K.P.H. complete | | | 3 |
| 021792 | | Head, only, speedometer, trip, 80 M.P.H | • | G3L, G3LS . | • • • |
| 021793 | | Head only speedometer, trip, 120 M.P.H | 1 | | |
| 021794 | | Head only speedometer, trip, 140 K.P.H | 1 | G3L, G3LS | |
| 021795 | | Head only speedometer, trip, 180 K.P.H | ŧ | G80, G80\$ | |
| 491/3 | | Head, only, speedometer, trip, 120 M.P.H. | 1 | G3LC, G3LCS | |
| 771/3 | ••• | Tibed; Om/, specialist, trip | | G80C, G80CS | |
| 401.7 | | Head, only, speedometer, trip, 180 K.P.H | ŧ | ditto | |
| 491 7 | ••• | Set of bulb holding parts for head | 1 | All | |
| 53279-1 | | Bulb, 6 volts, 1-8 watts, M.B.C. for head | i | | |
| 53205 | ••• | Plus Purchase Tax | _ | | |
| | | Plus Purchase 12x | 2 | All | |
| N-1253 | ••• | Nut, fixing speedometer head to bracket or lamp | 2 | All Competition | |
| 000012 | • • • | Washer, plain, spacing, for head | 2 | All | ٠., |
| W-7216 | | Washer, spring, speedometer bracket nut | 4 | | |
| 53395-1- | -65 | Cable, speedometer drive, complete | , | G3L, G3LS, | |
| | | | | G3LCS, G80, | |
| | | | | G80S, G80CS | |
| 53395-1- | -54 | Cable, speedometer drive, complete | 1 | G3LC, G80C | |
| 52108-1 | | Cable, speedometer drive, inner only | 1 | G3L, G3LS, | |
| 32100-1 | | | | G3LCS, G80. | |
| | | | | G80S, G80CS | |
| r2400 I | E 4 | Cable, speedometer drive, inner only | | G3LC, G80C | |
| 52108-1 | | Cable, speedometer drive, outer only | i | G3L, G3LS, | |
| 53398-1 | -65 | Cable, speedonieter drive, outer only | • | G3LCS, G80, | |
| | | | | G80S, G80CS | |
| | | | 1 | G3LC, G80C | |
| 53398-1 | -54 | Cable, speedometer drive, outer only | 1 | | • • • |
| 52283-5 | | Gearbox, speedometer, complete | ! | All | |
| 016945 | | Brac' et, for speedometer head | 1 | Competition | • • • |
| 000362 | | Bolt fixing speedometer bracket to forks, in. by 冷 in. | _ | | |
| | | hv 26 | 2 | Competition | |
| 000011 | | Washer, plain, speedometer bracket bolt | 2 | Competition | |
| 000192 | | Washer, spring, speedometer bracket bolt | 1 | ditto | |
| 022057 | | Bracket, retaining speedometer head in headlamp | ı | G3L, G3LS, | |
| 022037 | | Gracker resuming specialists | | G80, G805 | |
| A31700 | | Grommet, rubber for speedometer head in headlamp | 1 | ditto | |
| 021798 | • • • • | Washer, outside speedometer gear box | i | Ali | |
| 021454 | • • • | wasner, outside speedometer gear oux | ì | | ••• |
| 021799 | | Grommet, rubber, for speedometer cable in fork crown | ' | All | • • • |
| | | | | | |

CABLE CLIPS.

| 011907 | Clip, rubber, 1# inch | 4 | All | | |
|--------|---|---|-----|-------|-------|
| 011908 | Clip, rubber, 3½ inch | 3 | All | • • • | |
| 018320 | Clin rubber 42 inch | 5 | All | | • • • |
| 014453 | Clip, metal, holding rear lamp wire inside mudguard | ı | Ali | • • • | • • • |

GASKETS.

| Gaskets are supplied as separate spares | and in complete sets. | Single gaskets are listed |
|---|------------------------|---------------------------|
| in the groups to which they belong. | Complete sets are list | ed below. |

| | | the are in the street and seconds. |
|--------|-----|--|
| 018355 | | Decarbonising gasket set |
| 018357 | ••• | Decarbonising gasket set |
| 021384 | ••• | Complete gasket set |
| 021385 | | Complete gasket set |
| | | Each "Decarbonising gasket set "contains:— |
| | | 1 Cylinder base washer. |
| | | I Compression plate washer (competition sets only). |
| | | I Cylinder head gasket (not in competition sets). |
| | | 2 Cover tube bottom glands. 2 Cover tube top gaskets. |
| | | 1 Rocker box side cover rubber fillet. |
| | | I Rocker box gasket. |
| | | 3 Rocker box cover fibre washers. |
| | | Carburetter gasket. |
| | | Carburetter packing piece gasket. |
| | | Each " Complete gasket set " contains the above items and : |
| | | 1 Timing gear cover washer. |
| | | 2 Petrol tap fibre washers. |
| | | 1 Oil tank drain plug fibre washer. |
| | | Oil tank filter compartment cap washer. Chaincase inspection cap washer. |
| | | Clutch dome cork gasket. |
| | | 2 Fork oil drain screw fibre washers. |
| | | 2 Pump cap paper washers. |
| | | Oil tank filler cap washer (Comp. and C/S). |

SERVICE

The Service and Repair Department is situated in Burrage Grove, Plumstead, London, S.E.18. Burrage Grove is the first turning on the left from Burrage Road when entering Burrage Road from the Plumstead Road. (See final paragraph below.)

The nearest Railway Station is WOOLWICH ARSENAL, SOUTHERN REGION RAILWAY. This Station is five minutes' walk from our Service Depot in Burrage Grove. There is an excellent service of electric trains from Charing Cross, Waterloo, Cannon Street and London Bridge Stations, Southern Region Railway.

Bus routes 53, 54, 163, 99, 122, 122a, 177 and Trolleybus routes, 696 and 698, pass the end of Burrage Road (one minute from the Service Depot).

Bus routes 186, 75 and 161 serve Beresford Square which is three minutes' walk from the Service and Repair Department.

Visitors from the North can pass into Woolwich via the Free Ferry between North Woolwich and Woolwich. North Woolwich is a British Railways terminus and is also served by Bus and Trolleybus routes 101, 569, 669 and 685. There is also a tunnel under the River Thames at this point for foot passengers. The Free Ferry accommodates all types of motor vehicles and there is a very frequent service. The Southern landing stage is less than a mile from the Service Depot.

Visitors arriving by road, if they are strangers to the locality, should enquire for Beresford Square, Weolwich. Upon arrival there, the road skirting the Royal Arsenal should be followed in an Easterly direction for about four hundred yards, and Burrage Road is the second turning on the right after leaving the square. Burrage Grove is then the first turning on the left.