ial gain by anyone

his scan is explicit for non-commercial use and is not intended for financial or r

This publication combines Spares List CE828 and incorporates NVS2082 and 2098 which should be destroyed



LUCAS

QUALITY EQUIPMENT AND SPARE PARTS

1964 - A.M.C.

(A.J.S. — MATCHLESS — NORTON FRANCIS BARNETT — JAMES)

JOSEPH LUCAS (Sales & Service) LIMITED
BIRMINGHAM 18 · ENGLAND

This publication combines Spares List CE828 and incorporates NVS2082 and 2098 which should be destroyed



QUALITY EQUIPMENT AND SPARE PARTS

1964 - A.M.C.

(A.J.S. — MATCHLESS — NORTON FRANCIS BARNETT — JAMES)

JOSEPH LUCAS (Sales & Service) LIMITED BIRMINGHAM 18 · ENGLAND

Compiled and issued by Parts Publications, Technical Records Department, Joseph Lucas (Sales and Service) Ltd., Great Hampton Street, Birmingham 18

(C) Printed in England

his scan is explicit for non-commercial use and is rot intended for financial or man al gain by anyone



EQUIPMENT SPECIFICATIONS AND PAGE INDEX

A.J.S. & MATCHLESS MOTOR CYCLES

	UNIT				See Page	A.J.S. 350 c.c. '16C' Experts' Matchless 350 c.c. 'G3C' 'Maestro'		A.J.S. 350 c.c. '16' 'Sceptre' 500 c.c. '18' 'Statesman' Matchless 350 c.c. 'G3' 'Mercury' 500 c.c. 'G80' 'Major'		Competition Models A.J.S. 500 c.c. '18CS' 'Southerner' Matchless 500 c.c. 'G80CS' 'Marksman'				
									Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR								4			RM19	¶54021023	RM19	†¶54021027 47162A
Stator		•••	•••	•••	•••	•••	•••	1 1	-	<u> </u>	I =	47181 A 54213901	_	54213901
Rotor	•••	•••	•		•••	•••	•••	1 :			2AR	36296A	2AR	†36296A
	***	•••	•••	•••	•••	•••			1		PUZ7E-11	24082087	MLZ9E	†54028263
BATTERY	•••	•••	•••	•••	• • • •	• • • •	•••	-	_	_	POZ/E-11	29082087	FILZ7E	734020203
CABLE HARNESS			•••	•••				7	_	–	_	54932308	 	†54932304
COIL, IGNITION							•••	4	-		MA6	45152A/B	_	_
CONTACT BREAKER	, 500 d	r.c.	•••	,,,		•••		4	_	`	4CA	47615A	_	-
CONTACT BREAKER	, 350 (c. c .						4	_		4CA	47618A	_	_
								6	_	l _	811	70163A/B	8H	170163A/B
HORN HORN PUSH & DIPI	PER S	witc	ΗÏ		•••			8	_	! =	25SA	31563D	255A	†31563D
LAMPS								l	i		1		Ĭ .	
Head														
Home and Export	•••] 5	_	. –	MCH61 MCH61	59171 A 59172 A	SS700P	†58829A/B
Export Europe, not F		•••	•••	•••				5 5		1 –	MCH61	59173A		
Export France		el	•••	•••				1 3	_	_	564	53432B	564	:I53432B
Stop tail, number plate Stop tail, number plate				***		***	***	Ιź			1 ==		679	\$53972A/B
Stop tall, number place	and re	Trex	•••	•••				1 ′	_		<u> </u>		1 2//	•==
MAGNETO							•••	6	NC1	*42347E (42371)	-	1 -	NC1	*42347E (42371)
RECTIFIER						•••	•••	4	-	(-12571)	2DS506	49072A	2DS506	†49072A
SWITCHES									l .					
Lighting							•••	8	_	-	88SA	34289A	BBSA	†34289A
Knob (supplied separ	ately)							8	1 –			54330934	_	54330934
Ignition				•••	•••	•••	•	В	_	l –	88SA	34427B		
Cover (supplied sepa	racely)			•••	•••	•••	•••	8	_	-	220	54336178	22B	*31384B
Stop lamp						***	•••	8	_	! —	22B	31383A/B	1 48	(54033235)
Spring		•••	•••					8	-	-				315543
REAR SUSPENSION (Serviced by Girling Lt		r 			•••			-		4493(SB4)		4493(SB4)	_	4392(SB4)

UNIT	See	Competition Models A.J.S. 650 c.c. '31CSR' 'Hurricane' Matchless 650 c.c. 'G12CSR' 'Monarch' 12 Volt		'Majestic' 2 Volt		A.J.S. 650 c Matchless Ma	igneto Ignition .c. '31' 'Swift' 650 c.c. 'G12' jestic' Volt	Matchless 750 c.c. 'G15CS and G15 MkII Export only 12 Volt	
	Page	Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	1 1 1 1	RM19 — 2AR	¶54021027 47162A 54213901 36296A	RM19 2AR	¶54021023 47181A 54213901 36296A	RM19 — 2AR	¶54021027 47162A 54213901 36296A	RM19 2AR	¶54021027 47162A 542139 01 36296A
BATTERY (2 off)	-	MKZ9E-2	540 28050	MKZ9E-2	5 4 028050	MKZ9E-2	54028050	MKZ9E-2	54028050
CABLE HARNESS CABLE HARNESS COIL, IGNITION (2 off) CONTACT BREAKER	7 7 4 4	<u>-</u>	54935009 §54935167 —	— MA12 4CA	54934821 45110A/D 47617A	= =	54935009 — —	= =	54935167 — —
DIODE, ZENER	4	ZD715	49345A	ZD715	49345A	ZD715	49345A	ZD715	49345A
HORN HORN PUSH & DIPPER SWITCH	6 8	6H 25SA	70159B/D 31563D	6H 255A	70159B/D 31563D	6H 25\$A	70159B/D 31563D	6H 25SA	70159B/D 31563D
LAMPS Head Home and Export	5555776 4	MCH61 SS700P MCH61 	59252A 59251A 59254A 59254A 53973A/B 42264D 42413) 49072A	MCH61 MCH61 MCH61 564 — 2DS506	59237A 59238A 59239A 53454B	MCH61 — 564 K2F 2DS506	59252A ———————————————————————————————————	SS700P MCH61 679 K2F 2DS506	59281 A 59254 A 53973 A / B *42264 D (42413) 49072 A
SWITCHES Cut-out	888888	4A 88SA — — 22B	76204D 34289A 54330934 — 31383A/B	88SA 88SA 	34289A 54330934 34427B 54336178 31383A/B	4A 885A — — 22B	76204D 34289A 54330934 — 31383A/B	4A 88SA — — — 22B	76204D 34289A 54330934 — 31383A/B
REAR SUSPENSION UNIT (Serviced by Girling Ltd.)		_	4493(SB4)	_	4493(SB4)		4493(SB4)	_	4590(SB4)

[🖁] For reference only, serviced by Rotor and Stator. 🎤 When ordering quote part number shown in brackets. \dagger Optional for Home. 🐧 Export. 🔃 Home.



EQUIPMENT SPECIFICATIONS AND PAGE INDEX

NORTON MOTOR CYCLES

UNIT	See		. 'Jubilee' 'Navigacor'	Electr	ES 400 1 Home ra1 U.S.A. Volt	497 c.c. 'Dominator 885S' 647 c.c. 'Dominator 650SS 12 Volt		I2 Volt	
	Page	Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
Stator	4444 - 777468 5557 76666644 888		70163A/B	564 679	70164A/B	RM19	*54021027 47162A 54213901 36296A 54028050 °54932248 °°54934995 49345A 70159B/D 31563D 59252A 59254A 59253A 59254A 59253A 53454B 42368D 42379B/D 42453A 47508D 49072A — 34289A †54204D	RM19	**************************************
Stop lamp Solenoid, starter	8	=	=	2ST	76464E		31383B		
REAR SUSPENSION UNIT (Serviced by Girling Ltd.)	- - -		‡3939(SB3) ▼4359(SB3)	_	3939(SB3) —	_	4423(SB3)	_	4423(SB3) —

Norton 750cc 'N15' Export only -- Equipment same as Matchless G15CS and G15 Mk11

FRANCIS-BARNETT MOTOR CYCLES

	UNIT		See	'Plover'		'Fulmar' 'Sports Fulmar' 'Trials' and 'Scrambler'		'Cruiser' and 'Sports Cruiser'		'Falcon'		
				Page	Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
BATTERY HORN		•••		 	PUZ5E-10	24082044		=	MLZ9E 8H	54028263 70163A/B	MLZ9E 8H	54028263 70163A/B
Stop tail REFLECTOR SUPPRESSOR				 7 8 8	 W511		 WS11	— 78118A	** 52 9 **RER25 WS11	53331A/B 57124A 78118A	52 9 RER25 WS11	53331 A/B 57124A 78118A
Stop lamp				 8	-		_	-	** 22B	31511A/B	22B	31511A/B
REAR SUSPE (Serviced by C				 _	_	D3/201B	_	§ 4402(D4)	_	4060(SB3)		SB3/235AB

JAMES MOTOR CYCLES

	UNIT		'Comet' 'Commando' See and 'Cotswold'		*Cadet*		'Captain' 'Sports Captain' and 'Sports Superswift'		Scooter		
			Page	Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
BATTERY HORN SUPPRESSOR SWITCH Dip		:::	- 6 B	<u></u> WS11 99	78118A ++*31549A/B (31482)	PUZ5E-10 WS11	24082044 78118A —	MLZ9E 8H WS11	54028263 70163A/B 7811BA	MLZ9E 8H WS11	54028263 70163A/B 78118A
	NSION UNIT Girling Ltd.)		-	<u>-</u>	††D3/201 5B4/253A/D	_ _	D3/201	<u>-</u>	‡‡4198(SC3·8) \$\display 4258(SC3·8)		\$4331 (D4) 4266 (SC3-8)

[¶] For reference only, serviced by Rotor and Stator. ° Europe and France. °° Home and Export. || 'Atlas' only. † Order separately. † 'Jubilee' only. † 'Navigator' only. § Front Suspension unit. † 'Captain' and 'Sports Captain'. * When ordering quote part number shown in brackets. †† 'Comet' only * 'Cruiser' only. * 'Sports Superswife' only.

This scan is ex



ALTERNATORS AND RECTIFIERS

Part No Model	• • • • • • • • • • • • • • • • • • • •		 		 ¶54021023 RM19	¶54021027 RM19
Rotor			 		 54213901	54213901
Stator		***	 	***	 47181A	47162A
Rectifier		***	 		 49072A	49072A
Fixing	nut		 		 156594	156594

AMMETER

Part No. Model			 		 	36296A 2AR
Nut, terminal			 	***	 	166043
Washer, term	inal	***	 ***		 	185040

COILS, IGNITION

Part No Model	***	***	***	***		45110A/D MA12	45152B MA6
Grommet, rubb	er					421554	421554
Clip, cable cont	act	***		***	***	421863	421863
Nut, terminal	***		***	***		166043	166043
Connector, Luc	ar					54190108	54190108

CONTACT BREAKER UNITS


Part No. Model					47615A 4CA	47617A 4CA	47618A 4CA
Contact Se	t				54415803	54415803	54415803
Nut, fixing	cond	lenser a	ingle	plate	169194	169194	169194
Condenser		***		***	425377	425377	425377
Cam			***	***	54440029	54441729	54440029
Springs, au	to adv	ance (s	et of 2	2)	54415640	54413020	54413020
Weights, a	uto ac	lvance			54440031	425359	54440031
Sleeve, and	actio	n plate			54415749	425354	54416205


STARTING MOTOR

Part No.				***	***			26509A
Model	***	***	***	***	***		***	M3
Bolt, through	fixing				***			54254142
Brushes, set	***				***			54252361
Bracket or fr	ame, co	mmut	ator		***		***	54254127
Bushing, be	earing		***		***			261233
Liner, insu	I C.E.		***	222	***	***	***	54251728
Plate, with b	rushes,	boxes	and sp	rings				54251740
Springs, se	t, brush	tensi	on	***		***		54252360
Bracket D.E.			***	***			***	54255890
Bushing, D	.E. brac	ket	***	***			***	54255274
Armature			***	***	***	***		54255281
Coils, field, s	et			***	***	***		54251462
Sundry parts	set,	***	***	***		***	***	54252417


[¶] For reference only, serviced by Rotor and Stator.




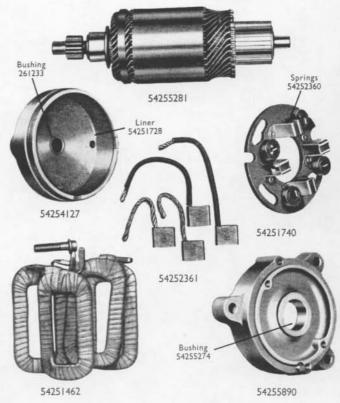


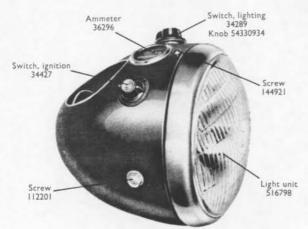

MODEL MCH61

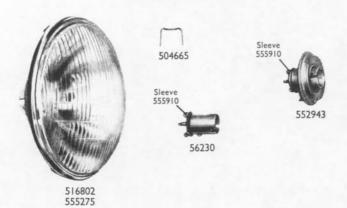

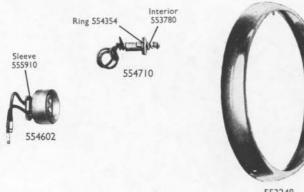

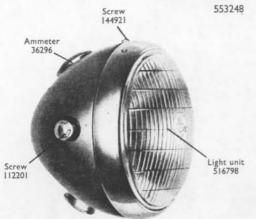

MODEL SS700P



HEADLAMPS

Part No.		***	***	***	59171A	59172A	59237A 59252A
Model					MCH61	MCH61	MCH61
Rim or door					553248	553248	553248
Wire, fixing					504665	504665	504665
Screw, fixing		***			144921	144921	144921
Ammeter (see					36296	36296	36296
Switch, lightin					34289	34289	34289
Knob, with					54330934	54330934	54330934
Screw, fixin				***	101371	101371	101371
Switch, ignitio	n (see				34427	34427	*34427
Key, ignitio			101 00		54336176	54336176	*54336176
		***			516798	555275	516798
Light unit Bulbholder, m			***		554602	554602	554602
Sleeve, tern		***	***		555910	555910	555910
			***		554710	554710	554710
Bulbholder, pi		- ***	***	***	553780	553780	553780
Interior, bu			1111	***	554354	554354	554354
Ring, seatin			***	***	516285	516285	516285
Washer, cable		***	***	***	505980	505980	505980
Bush, rubber	***	***	***	***	199001	199001	199001
Grommet, tri		***	***	***	112201	112201	112201
Screw, fixing	amp	***	***	444			446
Bulb, main	***	***	***	***	312	403	
Bulb, pilot	***	***	***	***	988	988	989

Part No.		***	***	***	59238A 59254A	59173A	59239A 59253A
Model			***		MCH61	MCH61	MCH61
Rim or door					553248	553248	553248
Wire, fixing	light u	nit			504665	504665	504665
Screw, fixing ri			***		144921	144921	144921
Ammeter (see			tails)	***	36296	36296	36296
Switch, lighting	(see	page 8	for de	tails)	34289	34289	34289
Knob, with s					54330934	54330934	54330934
Screw, fixing					101371	101371	101371
Switch, ignition	1 (see			tails)	±34427	34427	+34427
Key, ignition		h-0		***	154336176	544336176	+544336176
			***	***	555275	516802	516802
Bulbholder, ma					554602	_	_
Sleeve, term					555910	-	-
Backshell					_	552943	552943
Bulbholder					_	562303	562303
Sleeve, term				***	_	555910	555910
		100			554710	554710	554710
Bulbholder, pil Interior, bull		****	***		553780	553780	553780
			***		554354	554354	554354
Ring, seating			***		516285	516285	516285
Washer, cable	-	***		***	505980	505980	505980
		***	***	***	199001	199001	199001
Grommet, trip		***	***	***	112201	112201	112201
Screw, fixing la	ımp	***	***	***	370	112201	112201
	-:::	***	***	***	350	100	155
Bulb, main (59)	254A)	***	***	***		988	989
Bulb, pilot	***	***	***		989	700	707

Part No	***	***				58829B	59281A
Model		***	***		***	SS700P	SS700P
Rim or door						553248	553248
Wire, fixing		***	***	***	***	504665	504665
Screw, fixing rim	***		***	***	***	144921	144921
Ammeter (see pag	e 4 for c	details)	***		***	36296	36296
Light unit	***	***			***	516798	516798
Bulbholder, main		***		***	***	554602	554602
Sleeve, terminal		***	***	***	***	555910	555910
Bulbholder, pilot	***		***	***	***	554710	554710
Interior, pilot	***	***	***	***	***	553780	553780
Ring, seating bu	bholder		***	***	***	554354	554354
Screw, fixing lamp	***	***	***		***	112201	112201
Grommet, cable	***	***	***	***	***	199002	_
Connector, single	***	***	***	***	***	900288	_
Screw, fixing plug	***	***	***	***	***	133303	_
Nipple, cable	***	***	***	***	***	900269	-
Bulb, main	***	***	***	***		312	446
Bulb, pilot		***		***	***	988	989

‡59238A Only

†59239A Only

*59237A Only



MAGNETOS

Part No	o.					42264D	42347E	42368D
Model	***			***		K2F	NC1	K2FC
Pick-up						_	456794	458876
Pick-up.						458367		
Pick-up	100000000000000000000000000000000000000					458368		_
Brush						451260	451260	451260
		ed, high		n cable		410600	410600	410600
						458619	459199	459205
Cover, c						430017	437177	455190
		pring, ig				492854	492854	492854
Contact		er	***	***	***	54440888	54440888	54440888
Conta		***	•••		***	TO THE SCHOOL	No. of Concession Control of	34440888
Control						463107	459305	402744
Plate, ho				er	***	458726	459313	493716
	nsulati	ng brea	ker	***	***	451379	463932	463932
Cam	***	***	***	***	***	458725	459321	459130
Armatur	e e	***	***	***	***	459004	493176	459376
Slip ri	ng		***	***	***	455361	464277	456727
Nut, sec	uring	gear to	shaft	***	***	170109	170109	170109
Bearing,	conta	ct break	cer end	d		189291	189294	189294
Bearing,	drive	end				189244	189294	189244
Seal, oil,						459002	459033	459002
Cup, ins	ulatin	g drive	end be	aring		459005	463932	459005
		holder				455191	455191	455191
						455400	155100	455400
	and s	pring ea	rthing			455190	455190	455190
Brush						455190	454697	458675
Brush Sundry p	parts,					458675 42379D	454697 42452A	458675 42453A
Brush Sundry p	parts,	set				458675	454697	458675
	o.	set				458675 42379D	454697 42452A	458675 42453A
Brush Sundry p Part No Model Pick-up,	o	set				458675 42379D K2F	454697 42452A K2F	458675 42453A K2F
Part No Model Pick-up, Pick-up,	o. right left h	set hand and				458675 42379D K2F 458865	454697 42452A K2F 458367	458675 42453A K2F 458367
Part No Model Pick-up, Pick-up, Brush	right left h	set hand and				458675 42379D K2F 458865 458866	454697 42452A K2F 458367 458368	458675 42453A K2F 458367 458368
Part No Model Pick-up, Pick-up, Brush Nut,	right left h	hand and pring ed, high		 on cable		458675 42379D K2F 458865 458866 451260 410600	42452A K2F 458367 458368 451260 410600	458675 42453A K2F 458367 458368 451260 410600
Part No Model Pick-up, Pick-up, Brush Nut, r	right left h and s mould contact	hand and pring ed, high t breake		 on cable		458675 42379D K2F 458865 458866 451260	454697 42452A K2F 458367 458368 451260	458675 42453A K2F 458367 458368 451260 410600 459269
Part No Model Pick-up, Brush Nut, r Cover, c Brush	right left h and s mould contact and s	hand and pring ed, high t breake pring, i	tensicer	 on cable		42379D K2F 458865 458866 451260 410600 459269 455190	42452A K2F 458367 458368 451260 410600 458619	458675 42453A K2F 458367 458368 451260 410600 459269 455190
Part No Model Pick-up, Pick-up, Brush Cover, c Brush Contact	right left h and s mould contact and s break	hand and pring ed, high t break pring, ig	tensicer	 on cable		42379D K2F 458865 458866 451260 410600 459269 455190 492854	42452A K2F 458367 458368 451260 410600 458619 492854	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Brush Contact	right left h and s mould contact and s breakett set	hand and pring ed, high t break pring, ig	tensider	 on cable		42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888	42452A K2F 458367 458368 451260 410600 458619 492854 54440888	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888
Part No Model Pick-up, Pick-up, Srush Nut, r Cover, c Brush Contact Contact	right left h and s mould contact and s break act set ousing	hand and pring ed, high t break pring, ij cer		 on cable		42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 54440096	42452A K2F 458367 458368 451260 410600 458619 492854 54440888 458726	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 54440986
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Brush Contact Contact Contact Cup in	right left h and s mould contact and s breaket set ousing nsulat	hand and pring ed, high t breake pring, ij eer	tension	on cable		458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 5444096 451379	454697 42452A K2F 458367 458368 451260 410600 458619 — 492854 54440888 458726 451379	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 54440888 54440984
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Brush Contact Contact Contact Cam	right left h and s mould contact and s break act set ousing nsulat	hand and pring ed, high t break pring, in cer 	tensicer gnition breakker	 cut-ou 	 	42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 54440996 451379 459130	42452A K2F 458367 458368 451260 410600 458619 492854 54440888 458726 451379 459130	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 5444096 451379 459130
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, co Brush Contact Contact Contact Contact Cam Armatur	right left h and s mould contact and s break lett set cousing nsulat	hand and pring ed, high t break pring, ij er contact ing brea	tensicer gnition breakker	 on cable cut-ou		42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 5444096 451379 459130 459004	42452A K2F 458367 458368 451260 410600 458619 492854 54440888 458726 451379 459130 459004	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 5444088 5444096 451379 459130 459004
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Contac Contac Plate, hc Cup in Cam Armatur Slip ri	right left h and s mould contact and s breaket set ousing nsulat	hand and pring ed, high t breaks pring, ij cer contact ing brea	tensicer gnition :: break ker	on cable	 	42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 54440996 451379 459130	42452A K2F 458367 458368 451260 410600 458619 	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 5444096 451379 459130
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Brush Contact Contact Contact Cup in Cam Armatur Nut, sec	right left hand s mould cand s break act set ousing nsulat	hand and pring ed, high t breake pring, ig cer contact ing brea	tensicer gnition tbreak ker	cut-ou	 	458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 5444088 5444096 451379 459130 459004 455361	454697 42452A K2F 458367 458368 451260 410600 458619 — 492854 54440888 458726 451379 459130 459004 455361 170109	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440096 451379 459130 459004 455361
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Brush Contact Contact Contact Cam Armatur Slip ri Nut, see Bearing,	right left h and s break contact set ousing nsulat	hand and pring ed, high t break pring, in the contact ing break contact ing break contact ing break contact break	tensicer gnition break ker	cut-ou		458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 54440096 451379 459130 459004 455361 — 189291	454697 42452A K2F 458367 458368 451260 410600 458619 — 492854 54440888 458726 451379 459130 459004 455361 170109 189291	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 54440888 54440884 5445361 — 189291
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, contact Contact Contact Cam Armatur Slip ri Nut, sec Bearing, Bearing, Bearing,	right left h and s b break ct set rengular rengular contact co	hand and pring ed, high t break pring, ij cer contact ing brea gear to act brea	tensicer gnition break ker	cut-ou	 	458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 5444096 451379 459004 455361 189291 189244	42452A K2F 458367 458368 451260 410600 458619 	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 5444088 5444096 451379 459130 459004 455361 189291 189244
Part No Model Pick-up, Pick-up, Brush Nut, Cover, co Brush Contact Contact Cam Armatur Slip ri Nut, see Bearing, Bearing, Seal, oil,	right left h and s break ct set pousing nsulatre ing control contr	hand and pring ed, high t break, pring, igcer contacting brea	tensicer gnition tbreak ker shaft ker en	on cable		458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 5444096 451379 459130 459004 455361 189291 189291 189244 459002	42452A K2F 458367 458368 451260 410600 458619 492854 54440888 458726 451379 459130 459004 455361 170109 189291 189244 459002	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 5444096 451379 459130 459004 455361 — 189291 189244 459002
Part No Model Pick-up, Pick-up, Brush Nut, r Cover, c Brush Contact Contact Contact Cam Armatur Nut, sec Bearing, Bearing, Seal, oil, Cup, ins	right left h and s mould contact and s break bre	hand and pring ed, high t break pring, ij cer contact ing brea gear to act brea e end ing g drive	tensicer gnition break ker shaft ker en	cut-ou	 	458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 54440096 451379 459130 459004 455361 189291 189244 459002 459005	42452A K2F 458367 458368 451260 410600 458619 — 492854 54440888 458726 451379 459130 459004 455361 170109 189291 189244 459002 459005	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 5444096 451379 459130 459004 455361 — 189291 189244 459002 459005
Part No Model Pick-up, Pick-up, Brush Nut, Cover, Contact Contact Contact Cup in Cam Armatur Slip ri Nut, see Bearing, Bearing, Cup, inis Brush, s	right left h and s mould do not contact set ousing nsulaturing contact set on the set of	hand and pring ed, high t breake pring, ij ter contact ing breake end ing g drive tholder	tensice of tensice			458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 5444088 5444096 451379 459130 459004 455361 189291 189244 459002 459005 455191	454697 42452A K2F 458367 458368 451260 410600 458619 — 492854 54440888 458726 451379 459130 459004 455361 170109 189291 189291 189244 459002 459005 455191	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440988 5444099 451379 459130 459004 455361 — 189291 189244 459002 459005 455191
Part No Model Pick-up, Pick-up, Brush Nut, Cover, Contact Contact Contact Cup in Cam Armatur Slip ri Nut, see Bearing, Bearing, Cup, inis Brush, s	right left h and s mould contact and s break ct set ousing mulaturing curing curing curing curing curing and s	hand and pring ed, high t break pring, in contact ing break end ing g drive, holder pring es	tensice of tensice			458675 42379D K2F 458865 458866 451260 410600 459269 455190 492854 54440888 54440096 451379 459130 459004 455361 189291 189244 459002 459005	42452A K2F 458367 458368 451260 410600 458619 — 492854 54440888 458726 451379 459130 459004 455361 170109 189291 189244 459002 459005	458675 42453A K2F 458367 458368 451260 410600 459269 455190 492854 54440888 5444096 451379 459130 459004 455361 — 189291 189244 459002 459005

AUTO ADVANCE UNIT

Part No.		 		 	 	47508D
Spring, set	***	 	***	 	 	498157

HORNS

Part No.	***			***	***	***	70159B/D	70163A/B
Model	***	***	***	***	***	***	6H	70164A/B 8H
Bracket	***		***		***		_	54680850
Sundry parts	set	***		***	***	***	-	54681085





573828

380

54571677

his scan is e

573828

384

54571677

STOP TAIL, REFLEX AND **NUMBER PLATE LAMPS**

Part No. Model					53331A/B 529	53432B 564	53454B 564
Lens					526404	54576001	54576001
Window		***			526406	_	_
Screw, fixing	ng lens		***	***	133551	-	_
Nut, barre	-		***		-	575219	575219
Gasket, sea	ating le	ens			_	575208	575208
Grommet,					_	575207	575207
Bulbholder					526418	575209	575209
Interior,	bulbh	older		***	573828	573828	573828
Grommet,					_	573825	573825
Bulb	•••				352	384	380
Part No. Model			***	***		53972A/B 679	53973A/B 679
Troder		***	***				
Lens			***	***			54572932
Screw, fixi	ng len:	S					572289
Bulbholder	with	reflec	tor			54574348	54574348

...

...

...

...

...

Interior, bulbholder ...


... ...


Gasket, seating lamp


art No.	Volt	Watts	Description
312	6	30/24	Transverse, vertical dip
350	12	35/35	Transverse, vertical dip
352	6	18/3	Transverse, offset pin
370	12	45/40	Transverse, vertical dip
380	12	21/6	Transverse, offset pin
384	6	18/6	Transverse, offset pin
403	6	35/35	Bow, hooded axial
446	12	50/40	Transverse, vertical dip
988	6	3	Coil, miniature bayonet cap
989	12	6	Coil, miniature bayonet cap
			I.


CABLE HARNESSES

Part No	54932248 54932304 54932308	54934821 54934995 54935009 54935167	5493517
Nipple	. 900269	900269	900269
Lucar connector (17-5 amp)	. 54942078	900288	900288
Lucar connector (17.5 amp double	54942747	54942078	5494207
Lucar connector (35 amp)		54942747	5494274
Connector tube (2-way)	. 900288	54942079	5494207
Connector tube (4-way)		850641	850641

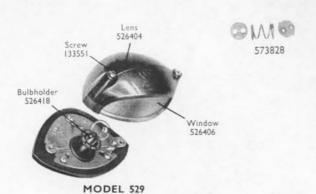

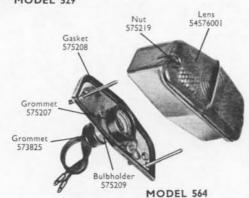

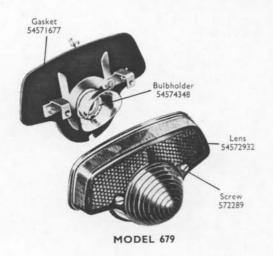

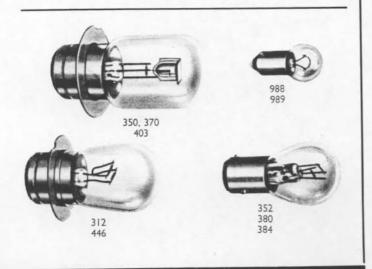

MAGNETO CUT-OUT SWITCH

Part No. Model	***		***						76204D 4A
Screw, tern	ninal								119520
Screw, fixin			***	***	***	***	***	***	135480
Nut, fixing		***	***	***	***	***	***	444	153491

LIGHTING SWITCH

***		***						34289A 88SA
screw								+54330934
king		***	***	***		***	***	319333
cables	***		***	***	***	***	***	+54930007
		screw	screw	screw xing	screw	screw	screw	screw

HORN PUSH AND DIPPER SWITCH

Screw, tern	ninal				***		***		120610
Model	***	***	***	***	***	***	***	***	255A
Part No.	***	***		***		***		***	31563D 25SA

IGNITION SWITCH

Part No. Model		 			***			34427B 88SA
Key		 						54336176
Cover, nut	fixing	 	***			***	***	54336178
Socket with	cables	 ***	***	***	***	***	***	†54930008

STOP LAMP SWITCH

Part No.	 	***		 	31384B	31383B 31511B
Model	 	***	***	 	22B	22B
Spring	 ***			 	315543	_

DIPPER SWITCH

Screw, fixing									121964
Model	***	***	•••	***	***	***	***	***	99
Part No.				***	***	***	***		31549A/B

STARTER SOLENOID SWITCH

Part No. Model					:::	:::	:::		76464A/E 2ST
Nut, terminal					***				166019
Washer, sp	ring, t	terminal	***	***	***	***	***	***	185040
Cap, end ru		***	***	***	***	***		***	763119

REFLEX REFLECTOR

Part No. Model	 :::	 	:::	:::	:::	 57124A RER25
Rim, reflex	 	 				 54570241

† Order separately









54930007 54930008







Cap 763119











57124